


## Operating the tumble dryer

### Control panel

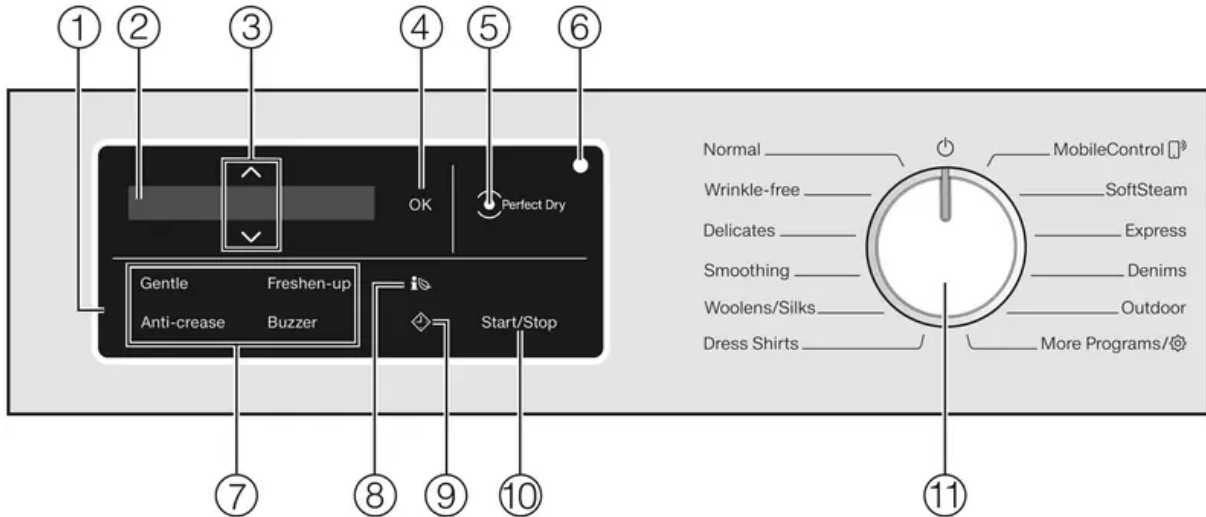

#### 1. Control field




The control field consists of a display and various sensor buttons. The individual sensor buttons are explained in the following sections.

#### 2. Display

The following values are displayed and/or selected on the display:

1. The program names, the drying level, and the duration of the selected program
2. The individual values of the selection lists for the settings

#### 3. Sensor buttons

The values in the display can be changed with the  sensor buttons. The  sensor button increases the value or moves the selection list up; the  sensor button decreases the value or moves the selection list down.

#### 4. OK sensor button

Confirm the selected values with the OK sensor button.

After selecting the program, you can confirm your selection with the OK button or wait until OK goes out by itself.

#### 5. Perfect Dry indicator

With programs with a selectable drying level, the Perfect Dry system calculates the residual moisture present in the laundry to ensure a precise drying result.

The Perfect Dry indicator. . .



. . . will flash after the program has started and go out when the program duration appears in the display.

. . . will light up again when the selected drying level is reached and remain on until the end of the program.

. . . will remain dark with the following programs: Woolens/Silks, Time Dry, Cold Air.

## 6. Optical interface


This is used by Miele service technicians as a transmission point.

## 7. Sensor buttons for extra options


You can select extra options to augment the wash programs.

If a drying program has been selected, the sensor buttons for the possible extra options light up dimly.

### 8. **Sensor button**

You can use the  sensor button to call up an energy consumption forecast for the selected drying program.

### 9. **Sensor buttons**


The sensor button  starts the delay start function. With the delay start function, you can delay the start of the program. The start of the program can be delayed from 15 minutes up to a maximum of 24 hours. This allows you to make use of night-time economy electricity rates, for example.

Please see “Delay start” for more information.

## 10. Start/Stop sensor button

Touching the Start/Stop sensor button starts the selected program or cancels a program that has already been started. The sensor button flashes slowly as soon as it is possible for a program to be started and then lights up constantly after the program has started.

## 11. Program selector

For selecting programs and for switching off. The tumble dryer is switched on when you select a program, and switched off by turning the program selector to the  position.

## Operating the sensor buttons

The sensor buttons react to fingertip contact. Selection is possible as long as the respective sensor button is illuminated.

If a sensor button is brightly lit, this means: currently selected

If a sensor button is dimly lit, this means: selection possible

## Display

The basic display shows the following for a drying level program:



- The selected drying level and the expected program duration
- The drying level reached after the start of the program and the remaining program duration

The basic display shows only the program duration for a time-controlled program:





## Examples on how to operate the appliance

### Scrolling through a list



The scroll bar in the display indicates that a selection is available.



Touching the  sensor button scrolls down the list to the next option and touching the  sensor button scrolls up the list to the next option. The OK sensor button is used to activate the option in the display.

### Identifying the selected option



An option which has been activated will have a tick ✓ next to it.

### Setting numerical values



The numerical value is highlighted in white. Touching the ▼ sensor button decreases the value and touching the ▲ sensor button increases it. The OK sensor button is used to activate the value in the display.

### Leaving a sub-menu

Select Back ↶ to exit a sub-menu.

## Energy saving tips

This dryer with heat-pump technology is designed for energy-saving drying cycles. However, you can save a little more energy with the following measures as the drying time is not extended unnecessarily.

- Make sure your laundry is spun at the maximum spin speed before drying. The higher the spin speed, the greater the savings that can be made in energy and time during drying, e.g., approx. 20% energy can be saved if spun at 1,600 rpm instead of 1,000 rpm.
- Load according to the optimum amount of laundry recommended for the program being used. This will mean that the energy consumption for the amount of laundry is at its most economical.
- Make sure that the room temperature is not too high. If there are other heatproducing appliances in the room in which the dryer is located, make sure the room is well ventilated and switch the other appliances off, if possible.
- Clean the lint filters in the door opening after every drying cycle.

## Functioning of the heat-pump dryer

Two separate circuits ensure that the laundry is dried:

### Dry air circuit

The drying air flows through a heat exchanger, the drum, and several filters. This is ensured by a blower in the dryer.

- The drying air flows through the heat exchanger in the longitudinal direction and is heated in the rear area.
- The drying air is then blown into the drum, where it absorbs the moisture of the laundry.
- The damp drying air is blown back through the heat exchanger via several filters in the fill area and the plinth area of the dryer.
- The drying air cools down in the front, cool area of the heat exchanger, and loses its moisture.
- The circuit begins anew.

### Refrigerant circuit

The refrigerant circuit regulates the heating and cooling of the drying air through the heat exchanger. The heat pump is the central component: This is a compressor that is connected to a pipeline system which is filled with refrigerant.

- The pipeline system surrounds the heat exchanger in several bends.
- The compressor draws in the gaseous refrigerant and compresses it, causing the temperature to rise.
- The hot refrigerant is passed through the pipeline system to the rear of the heat exchanger. The heat is released into the drying air, which flows through the heat exchanger.
- The refrigerant liquifies by dissipating the heat.
- The liquid refrigerant then flows through a capillary tube (a very thin tube) to the front area of the heat exchanger. This changes the pressure of the refrigerant.
- The refrigerant cools and reverts to its gaseous state. This in turn cools the front area of the heat exchanger and dehumidifies the drying air.
- The circuit begins anew.

## Notes on correct laundry care

### Points to note regarding washed laundry

- When washing very heavily soiled items, ensure that you use sufficient detergent and select a high temperature. If in doubt, wash the items several times.
- Do not load the drum with items that are still soaking wet. Make sure your laundry is spun at the maximum spin speed before drying. The higher the spin speed, the greater the savings that can be made in energy and time during drying.
- New dark colored garments should be washed and dried separately from light colored garments. There is the risk of colors running and discoloring other garments or even plastic components in the dryer. Dark colored fibers can also settle on light colored garments and vice versa.
- Starched laundry can be tumble dried. To achieve the usual finish, double the amount of starch should be used.

### Preparing the laundry before drying

**WARNING:** Damage due to foreign objects which were not removed from the laundry.

Foreign objects can melt, burn, or explode.

Ensure that any foreign objects (e.g., detergent dispensing balls, lighters, etc.) have been removed from the laundry.




**WARNING:** Risk of fire due to incorrect use and operation.





The laundry can burn and destroy the dryer and the surroundings. Read and observe "IMPORTANT SAFETY INSTRUCTIONS".

- Sort the laundry according to the type of fiber and weave, size, garment care label symbol, and the drying level required.
- Check seams and stitching to ensure that padding and linings are intact. This way you will avoid the danger of fillings coming out. These could catch fire when being dried.
- Untangle the laundry.
- Tie together textile belts and apron ties.
- Fasten duvet covers and pillow cases to prevent small items from being rolled up inside them.
- Fasten hooks and eyes.
- Leave jackets open and undo any long zippers so that textiles dry evenly.
- Sew in or remove underwiring from bras.

- If necessary, reduce the size of the load for these types of fabric. Easy care fabric tends to crease more, the larger the load. This is particularly the case for garments made from very fine weave fabric, such as dress shirts or blouses.

### Understanding the care label symbols

<b>Drying</b>	
	Normal/higher temperature
	Low temperature*
	* Select <i>Gentle</i>
	Do not tumble dry

<b>Ironing</b>	
 Very hot	 Hot
 Warm	 Do not iron

### Drying

**Tip:** See the “Program chart”.

This describes the programs and gives their maximum load.

- Always observe the maximum recommended load for each program. This will mean that the energy consumption for the amount of laundry is at its most economical.
- Down-filled garments have linings which have a tendency to shrink, depending on the quality of the item. Only use the Smoothing program for these items.
- You should only tumble dry pure linen if it is specified as suitable by the manufacturer on the care label, as the surface of the fabric may otherwise become rough. Only use the Smoothing program for these items.
- Woolens and wool blends tend to become matted and shrink if tumble dried. Only use the Woolens/Silks program for these items.


- Jersey fabrics (e.g., T-shirts, underwear) tend to shrink when they are washed for the first time. Therefore, do not over-dry the fabrics to prevent them from shrinking further. Buy jersey fabrics that are one or two sizes bigger.
- Select the extra Gentle option for fabric which is particularly heatsensitive or susceptible to creasing.

### **Selecting the right drying level**

- Extra dry or Normal Plus if you want to fold the laundry after drying and put it in the closet.
- Normal or Slightly dry for textiles that can shrink. Or for light cotton or jersey textiles.
- Hand iron or Machine iron if you want to iron the laundry after drying.

### **Selecting a program**

#### **Switching on the tumble dryer**

The tumble dryer is switched on when you select a program, and switched off by turning the program selector to the  position.


- Turn the program selector to a program.

When a program is selected, the program name and the maximum load (weight of dry laundry) possible for the program will appear in the display for a few seconds.

#### **Selecting a program**

There are three possible ways to select a program.

**1. Selecting the standard programs with the program selector dial**

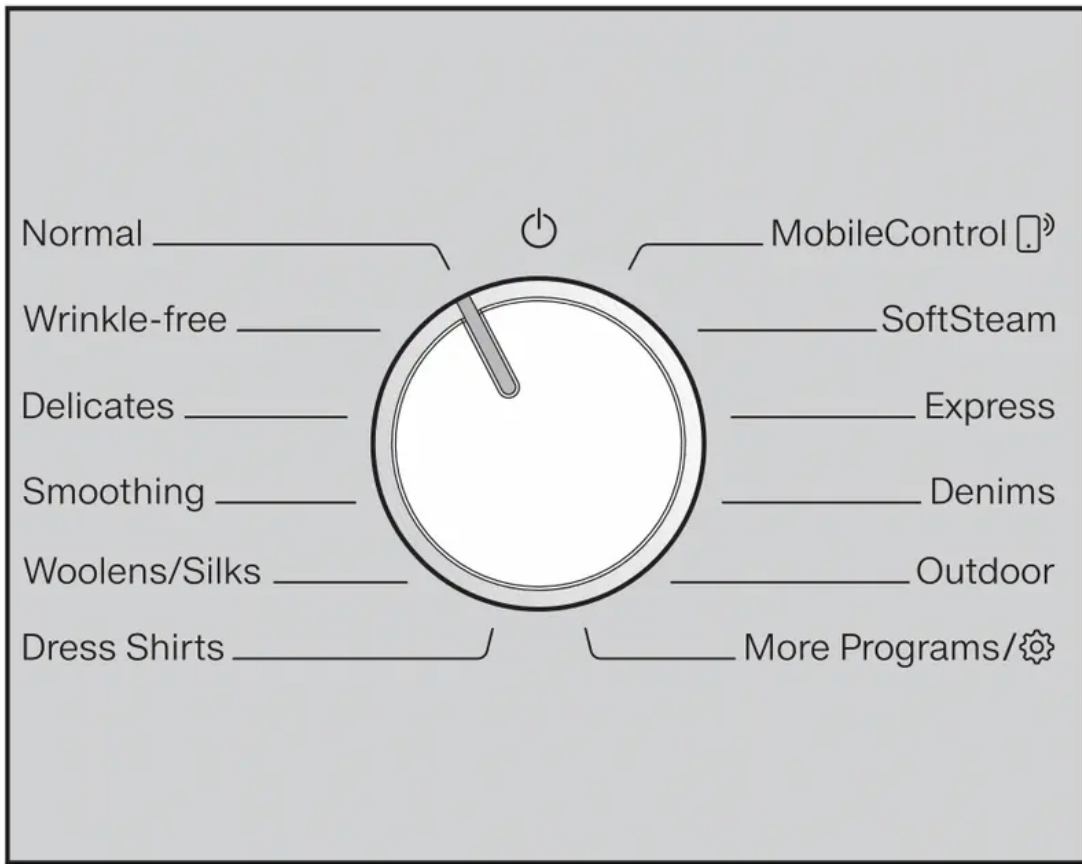


Turn the program selector.

The selected program will be shown in the display. This will then be replaced by the standard display.



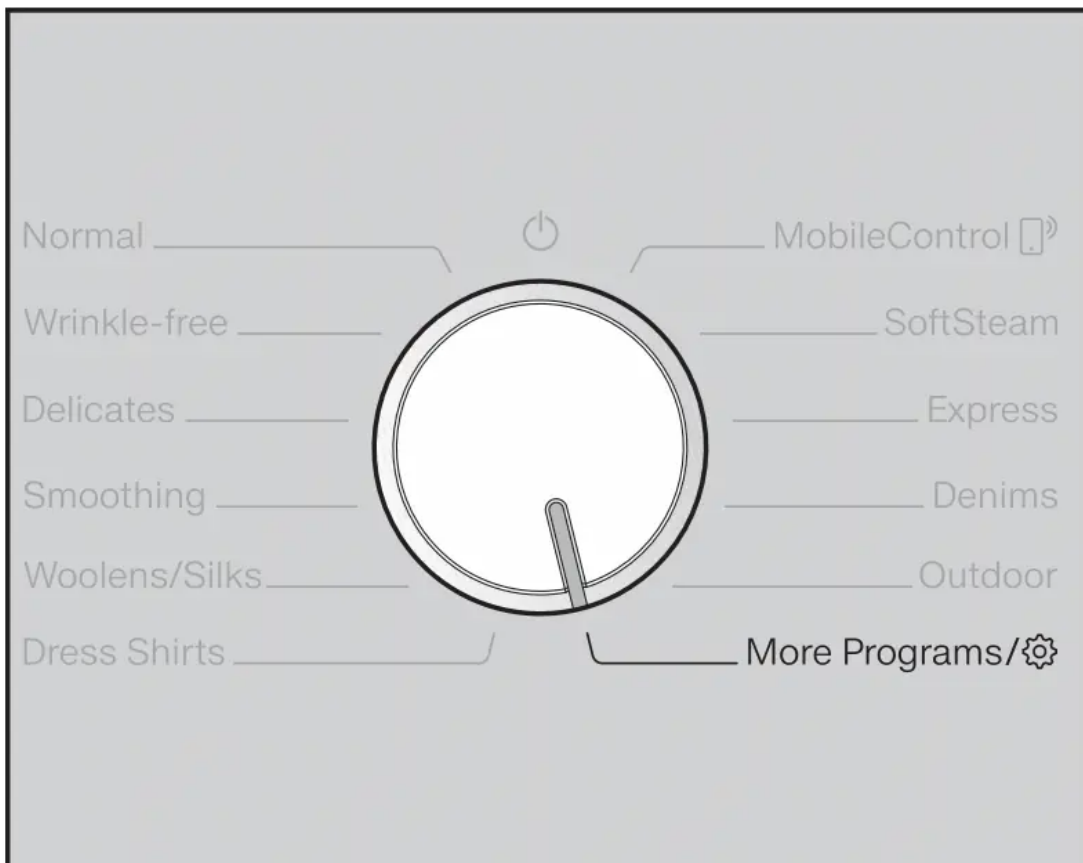

2. **Selecting further programs via the “More programs/  ” position and the display:**



Turn the program selector.

The following appears in the display:




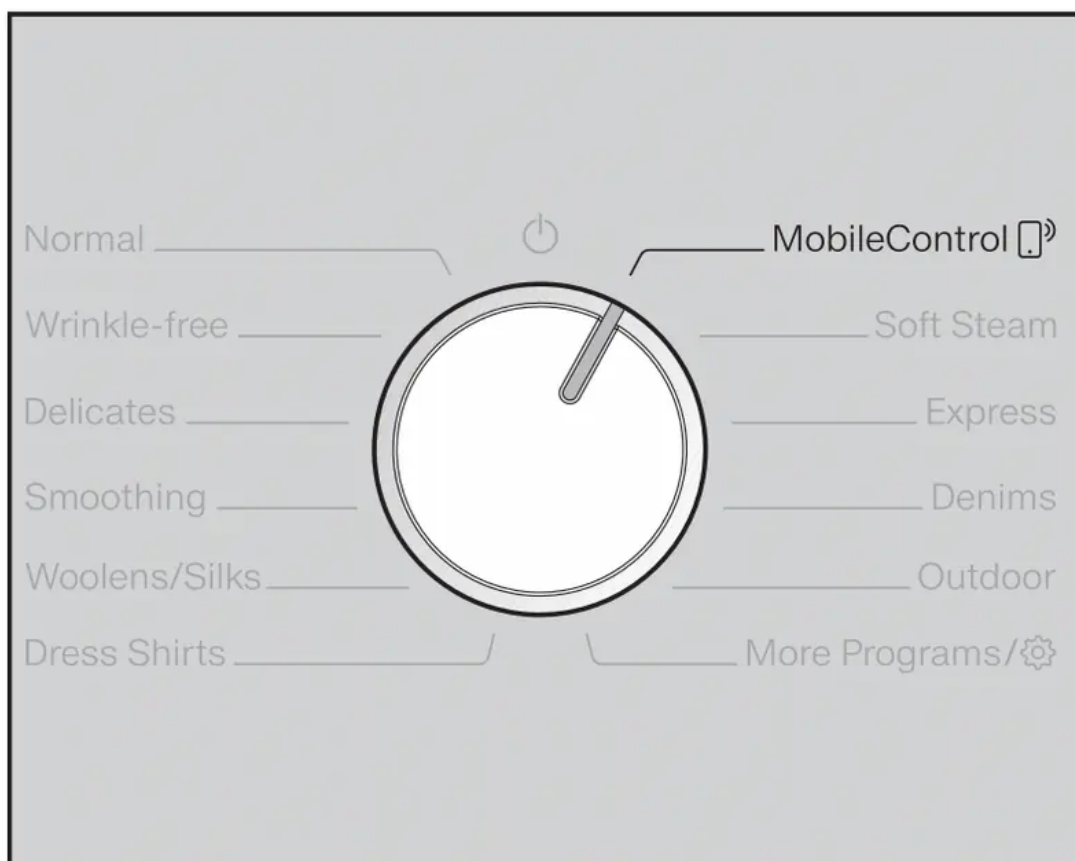
Touch the   sensor buttons until the program you want appears in the display.

Confirm the program with the OK sensor button.

The selected program will be shown in the display. This will then be replaced by the standard display.

3. **Selecting the programs via the MobileControl  and the Miele@mobile app**

**Tip:** In order to use MobileControl , the dryer must be logged on to the WiFi network and remote control must be switched on.



Turn the program selector.

Follow the instructions in the display.

Touch the Start/Stop sensor button.


The dryer can now be operated via a mobile device together with the Miele@mobile app.

## Loading the tumble dryer

**WARNING:** Please see “1. Notes on correct laundry care” first.

This prevents damage to textiles or the dryer.


## Opening the door

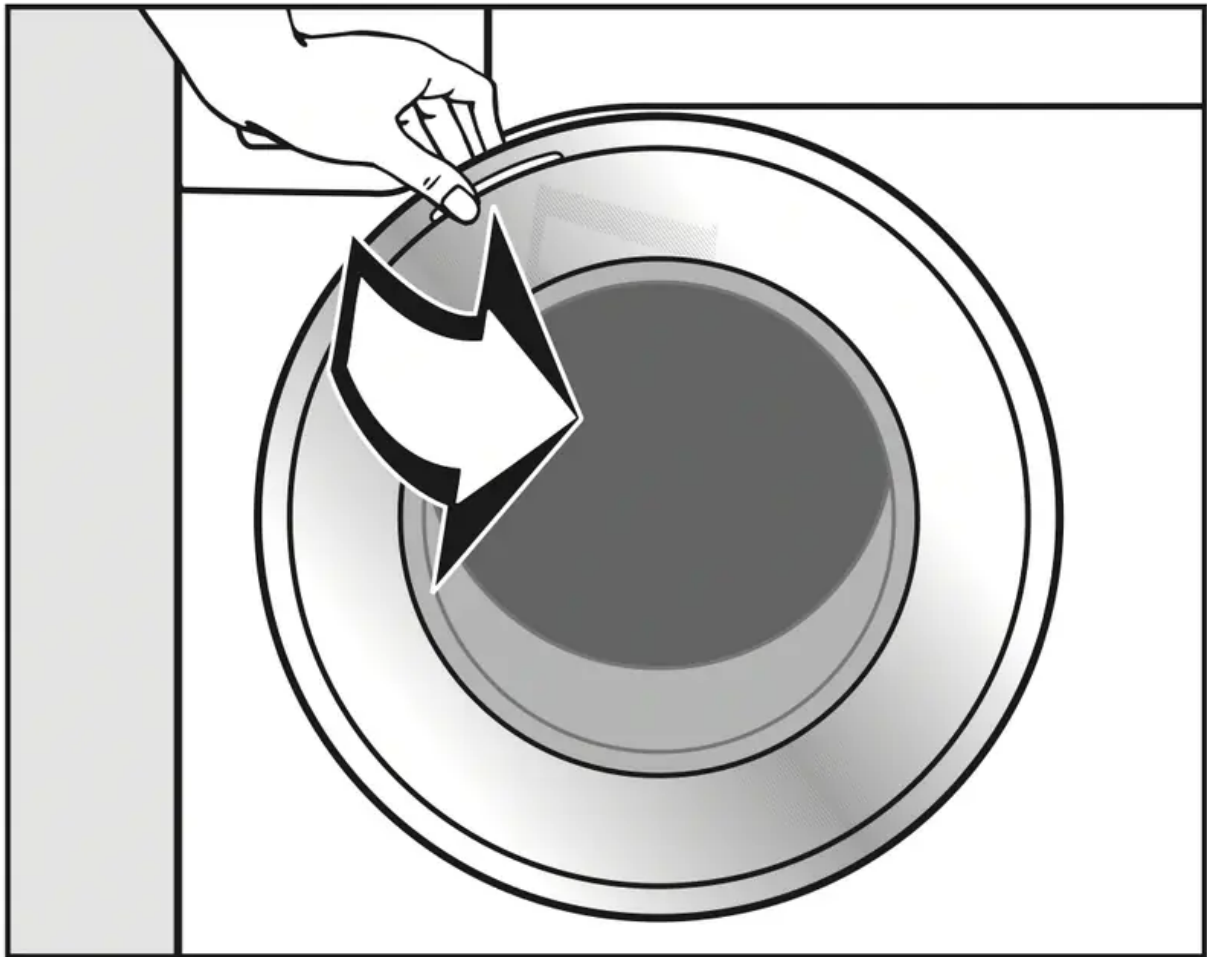

- Pull the door open at the side with the orange marker.
- Unfold the laundry and load loosely into the drum.


**WARNING:** Do not overload the drum. Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.

**WARNING:** When closing the door, make sure that laundry does not get trapped in the door opening. This could damage the laundry.

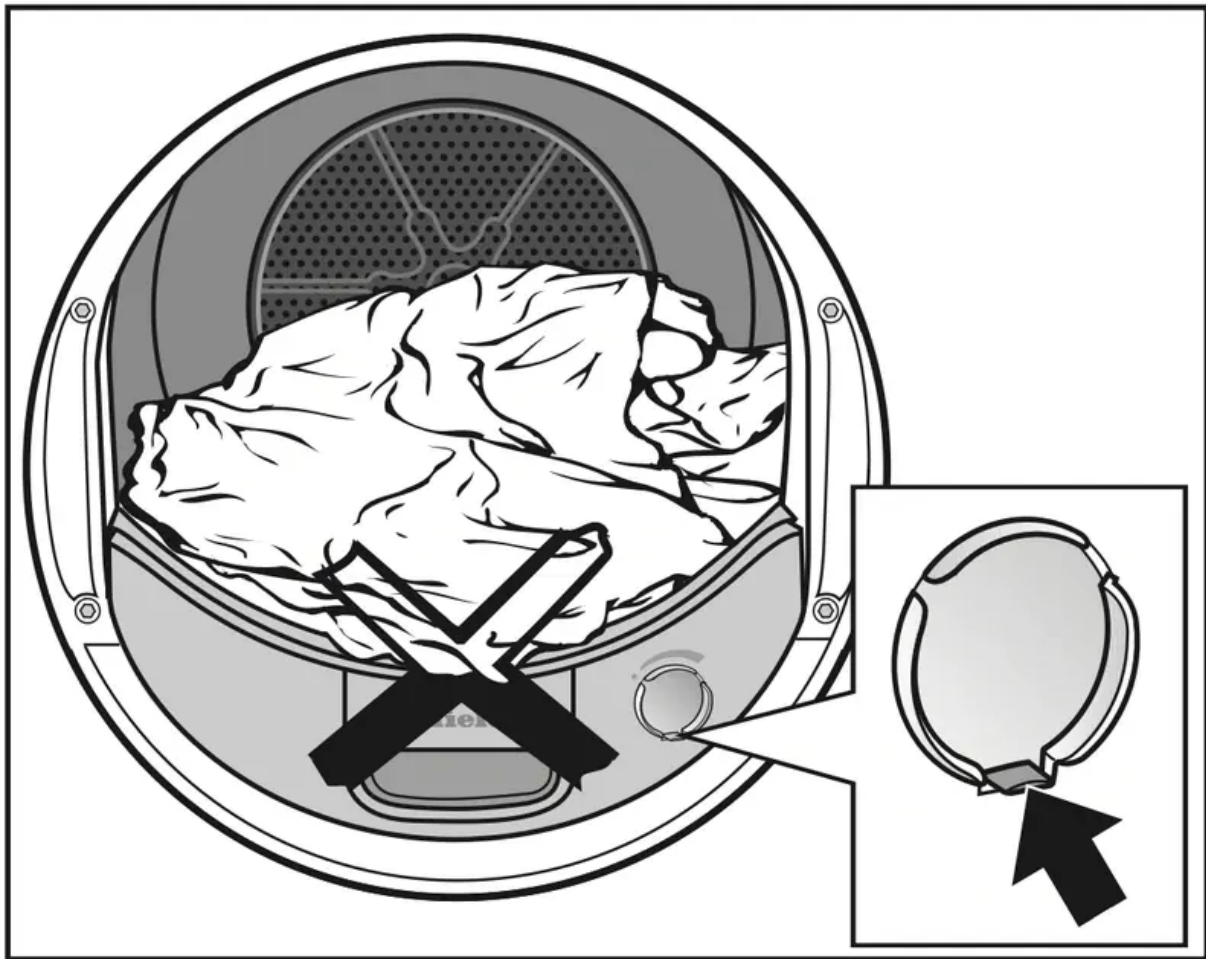

If you are not using a fragrance capsule: The tab must be pushed down completely (see arrow).

### **Closing the door**

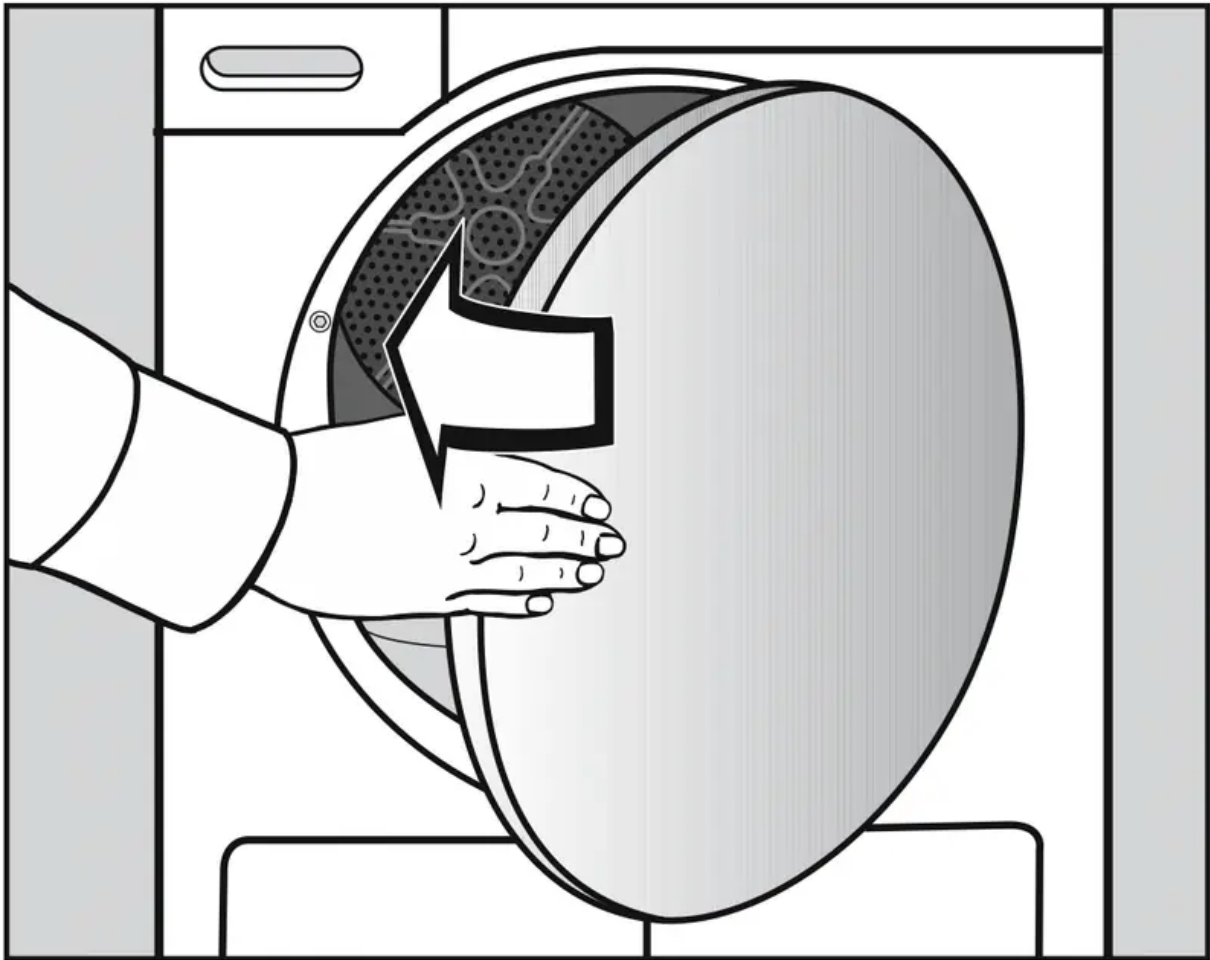

Shut the door with a gentle swing.

## Selecting program settings



### Program settings

### Selecting drying levels during drying level programs

Normal, Wrinkle-free, Delicates, Smoothing, Dress Shirts, Express, Denims, Outdoor, Sportswear, Soft Steam, Table Linens/Drapes, Bed Linens

The pre-set drying level can be changed if required.



Touch the  or  sensor buttons to select a drying level.

Any drying level can be selected for the Normal and Express programs. A more limited range is available when using the other programs.

**Important:** When selecting the Soft Steam program, you must make sure that the condensed water container has been filled as described in these operating instructions (see “Condensed water container”).

### Time-controlled and other programs

#### Time Dry, Cold Air, Basket

You can change the duration in 10minute increments.

Cold Air: 20 min – 1:00 h

Time Dry: 20 min – 2:00 h

Basket: 40 min – 2:30 h




Touch the ^ or v sensor buttons to select a duration.

#### Woolens/Silks, Pillows, Proofing

The drying result is preset by the dryer and cannot be altered.

### Selecting an extra option

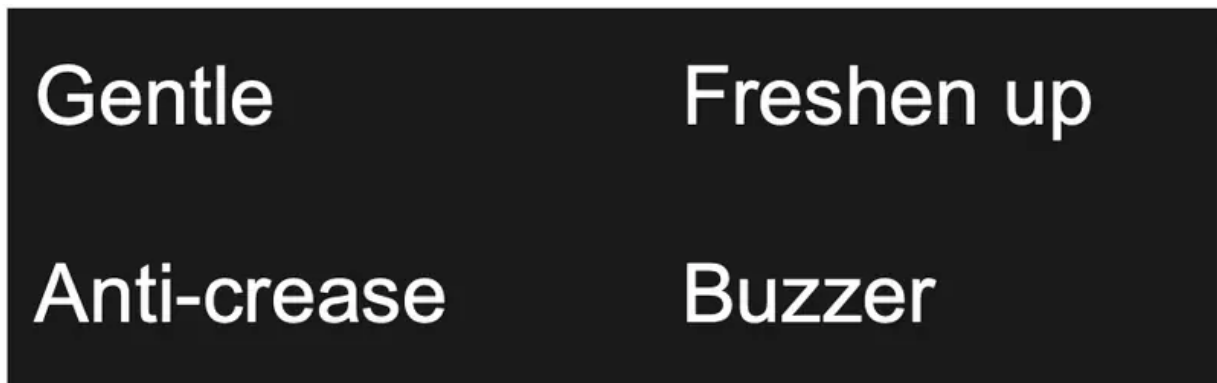


Touch a sensor button to select the desired extra option.

The relevant sensor button will light up brightly.

Freshen up and Gentle cannot be combined, see “Extra options” for additional notes.




EcoFeedback

You can use the  sensor button to call up an energy consumption forecast for your dryer.

- Touch the  sensor button.

The estimated energy consumption levels will be displayed as a bar chart.

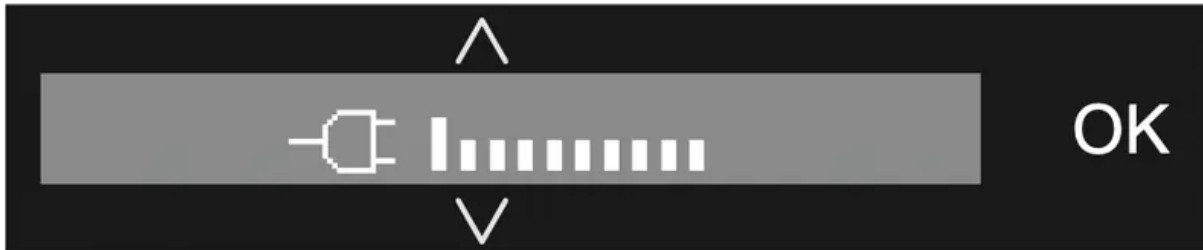

The more bars visible (I), the higher the energy consumption.

- Touch the OK sensor button or wait until the display automatically returns to the standard display.



### Delay start/SmartStart

With the delay start function, you can delay the start of the program.

This function is active when the setting SmartGrid is switched off.



The hours can be set in the values from 00 to 24. The minutes can be set in 15minute increments from 00 to 45.

### Setting the delay start time

- Touch the  sensor button.



The following will appear in the display:





Set the hours with the  and  sensor buttons. Confirm with the OK sensor button.

The display will change:





Set the minutes with the  and  sensor buttons. Confirm with the OK sensor button.

**Tip:** The values will count upwards and downwards automatically if you keep your finger on the  or  sensor button.





### Changing delay start

The selected delay start time can be changed before the program start.

-  sensor button.  
Touch the  sensor button.
- If desired, change the specified time and confirm with the OK sensor button.

### Canceling delay start

The selected delay start time can be canceled before the program start.

-  sensor button.  
Touch the  sensor button.  
The selected delay start time will appear in the display.
- Set a time value of 00:00 h with the   sensor buttons. Confirm with the OK sensor button.

The selected delay start time has been canceled.

After the program start, the selected delay start time can only be changed or deleted by interrupting the program.

### SmartStart

The SmartStart function lets you define a time period during which your dryer will start automatically. The start takes place via a signal, e.g., from your energy supplier, that indicates that the electricity rate is particularly economical. Please check with your local utility provider for availability.

This function is active when the SmartGrid setting is switched on.





The time period can be defined between 15 minutes and 24 hours. During this period, the dryer waits for the signal from the energy supplier. If no signal is sent during the defined period, the dryer starts the drying program.

## Setting the timeframe

If you have activated the SmartGrid function in Settings, SmartStart instead of Start in will

appear in the display when you press the  sensor button (see “Settings – SmartGrid”).

The procedure for setting this is the same as for setting the time for delay start.

- Use the   sensor buttons to enter the hour and confirm your entry with the OK sensor button.  
The hour will be saved and the minute number pad will be highlighted.
- Use the   sensor buttons to enter the minutes and confirm your entry with the OK sensor button.
- Press the Start/Stop sensor button to start the drying program with SmartStart.

The following will appear in the display:



## Starting a program

- Touch the flashing Start/Stop sensor button.

The Start/Stop sensor button will light up and Drying appears in the display.

### Notes

If a delay start time has been selected, then this will count down on the time display. At the end of the delay start time or immediately after the program has started (if no delay start time has been selected), the program duration will appear on the time display.

With a longer delay start time, the drum will rotate occasionally to untangle the laundry. This is not a fault.

- The Perfect Dry indicator will only flash/light up with programs with selectable drying levels (see also “Operating the tumble dryer”).
- This dryer measures residual moisture content in the laundry to ensure perfect drying results. However, if you load the dryer with little or dry laundry, it will be dried/ aired for a set duration. In this case, Perfect Dry does not light up at the end of the program.

**WARNING:** Avoid overdrying items of laundry and garments. Otherwise they can wear out!

- The drying level reached for the selected drying level program will light up in the display.
- If End/Cooling down appears, the laundry has cooled down, but the program is not yet finished.

### **Energy savings**

After 10 minutes, the indicators dim and the Start/Stop sensor button starts flashing.

- Touch the Start/Stop sensor button to switch the indicators on again (this does not have any effect on a running program).

The drum lighting switches off once the program has started.

### **Program end – removing the laundry**

#### **Program end**

The program is finished when End/Anti-

Crease or End appears in the display.


The Start/Stop button light goes out.


The dryer will switch off automatically 15 minutes after the end of the Anticrease phase (with programs without an Anti-crease phase it will switch off 15 minutes after the end of the program).

#### **Removing the laundry**

Only open the door when the drying process has finished. Otherwise, the laundry will not be properly dried through and cooled down.

- Pull the door open at the side with the orange marker.

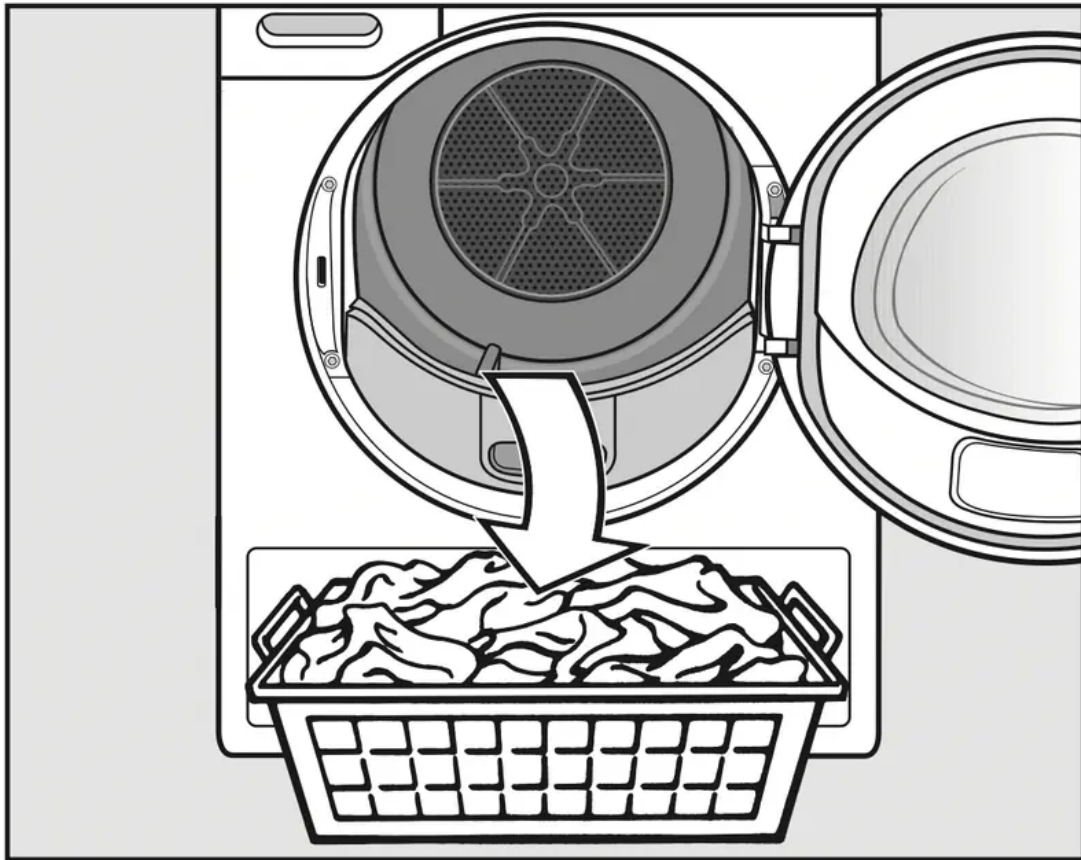


- Remove the laundry.  
Items left in the dryer could be damaged by over-drying when the dryer is used the next time. Always remove all items from the drum.
- Turn the program selector to  .
- Remove the lint from the 2 lint filters in the door opening: see the “Cleaning and care – Lint filters”.  
**WARNING:** You must remove the fragrance capsule (if present) beforehand. See “Fragrance capsule”.
- Shut the door with a gentle swing.
- Empty the condensed water container, if used.


### Drum lighting


The inside of the drum lights up so that you don't forget any items of laundry when you empty it. The drum lighting switches off automatically (energy saving).

## Program chart


All weights marked with \* are based on the weight of dry laundry.

<b>Normal</b>		<b>Full load (17.6 lb/8 kg)*</b>
<b>Extra dry, Normal plus, Normal, Slightly dry</b>		
Items	Single and multi-layered cotton items. For example, T-Shirts, underwear, baby clothes, workwear, jackets, covers, aprons, overalls, hand towels, bath towels, bathrobes, and flannelette/bed linen.	
Tip	<ul style="list-style-type: none"> <li>– Select <i>Extra dry</i> for multi-layered and very thick fabrics.</li> <li>– Do not use <i>Extra dry</i> for jersey fabrics (e.g., T-shirts, underwear, baby clothes) because they can shrink.</li> </ul>	
<b>Hand iron<math>\Delta</math>, Hand iron<math>\Delta\Delta</math>, Machine iron</b>		
Items	All cotton or linen fabrics requiring further processing. For example, table linen, bed linen, or starched laundry.	
Tip	To prevent laundry from drying out it should be rolled up until you are ready for ironing.	
<b>Wrinkle-free</b>		<b>Half load (8.8 lb/4 kg)*</b>
<b>Normal plus, Normal, Slightly dry, Hand iron<math>\Delta</math>, Hand iron<math>\Delta\Delta</math></b>		
Items	For minimum iron items made of cotton, synthetic, or mixed fiber. For example, workwear, overalls, pullovers, dresses, pants, pantyhose, and table linen.	
<b>Delicates</b>		<b>Small load (5.7 lb/2.5 kg)*</b>
<b>Normal plus, Normal, Slightly dry, Hand iron<math>\Delta</math>, Hand iron<math>\Delta\Delta</math></b>		
Items	Delicate items with the  symbol on the care label made of synthetic fiber, mixed fiber, rayon, and easy care cotton. For example, dress shirts, blouses, lingerie, and appliquéd garments.	
Tip	The load should be reduced further for a particularly crease-free drying process.	

<b>Smoothing</b>		<b>Very small load (2.2 lb/1 kg)*</b>
<b>Normal, Hand iron<sup>Δ</sup></b>		
Items	<ul style="list-style-type: none"> <li>– Cotton and linen fabric.</li> <li>– For minimum iron items made of cotton, mixed, or synthetic fiber. For example, pants, jackets, and shirts.</li> </ul>	
Tip	<ul style="list-style-type: none"> <li>– This program smoothes out creasing caused during the spin cycle in the washing machine.</li> <li>– This program is also suitable for dry fabrics.</li> <li>– Please remove the garments as soon as the program has finished.</li> </ul>	
<b>Woolens/Silks</b>		<b>Small load (4.4 lb/2 kg)*</b>
Items	<ul style="list-style-type: none"> <li>– For woolen garments and fabric containing wool blends. For example, pullovers, knitted jackets, and pantyhose.</li> <li>– Silk garments which are suitable for tumble drying, e.g., blouses and shirts.</li> </ul>	
Tip	<ul style="list-style-type: none"> <li>– Woolen garments are loosened and fluffed up in a short amount of time.</li> <li>– The program reduces the amount of creases in silk garments that are suitable for tumble drying.</li> <li>– The items are not dried completely in this program.</li> <li>– Please remove the garments as soon as the program has finished.</li> </ul>	
<b>Dress Shirts</b>		<b>Small load (4.4 lb/2 kg)*</b>
<b>Normal plus, Normal, Slightly dry, Hand iron<sup>Δ</sup>, Hand iron<sup>ΔΔ</sup></b>		
Items	For all shirts and blouses.	
<b>MobileControl </b>		
The Miele@mobile app is used to select the programs and operate the appliance.		

<b>SoftSteam</b>		<b>Very small load (2.2 lb/1 kg)*</b>
<b>Normal, Hand iron<sup>Δ</sup></b>		
Items	<ul style="list-style-type: none"> <li>– All items made of cotton or linen fabric.</li> <li>– For minimum iron items made of cotton, mixed, or synthetic fiber. For example, pants, anoraks, and shirts.</li> </ul>	
Tip	<ul style="list-style-type: none"> <li>– For dampening the items before ironing.</li> <li>– For smoothing items that are creased.</li> <li>– Select <i>Hand iron</i> if the items are to be ironed after drying.</li> </ul>	
Note	<ul style="list-style-type: none"> <li>– At the beginning of the program, the condensed water collected in the condensed water container is sprayed into the drum via a spray jet. The condensed water container must therefore be filled with water to at least the <b>–min–</b> marker.</li> </ul>	
		
	<ul style="list-style-type: none"> <li>– You can hear a humming noise during the spraying process.</li> </ul>	
<b>Express</b>		<b>Half load (8.8 lb/4 kg)*</b>
<b>Extra dry, Normal plus, Normal, Slightly dry, Hand iron<sup>Δ</sup>, Hand iron<sup>ΔΔ</sup>, Machine iron</b>		
Items	Suitable for resistant garments for the <i>Normal</i> program.	
Note	The program duration is shortened.	
<b>Denims</b>		<b>Small load (6.6 lb/3 kg)*</b>
<b>Normal plus, Normal, Slightly dry, Hand iron<sup>Δ</sup>, Hand iron<sup>ΔΔ</sup></b>		
Items	All the denim garments, e.g., jackets, jeans, shirts, and skirts.	
<b>Outdoor</b>		<b>Small load (5.5 lb/2.5 kg)*</b>
<b>Normal, Hand iron<sup>Δ</sup></b>		
Items	Outdoor which is suitable for drying in a tumble dryer.	


<b>Time Dry</b>		<b>Full load (17.6 lb/8 kg)*</b>
Items	<ul style="list-style-type: none"> <li>– For multi-layered fabric whose layers have different drying characteristics, e.g., jackets, pillows, sleeping bags, and other voluminous items.</li> <li>– For drying individual items, e.g., bath towels, swimwear, dish cloths, and towels.</li> </ul>	
Tip	Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time.	
<b>Table Linens/Drapes</b>		<b>Half load (8.8 lb/4 kg)*</b>
<b>Normal, Hand iron<math>\Delta</math>, Hand iron<math>\Delta\Delta</math></b>		
Items	For resistant garments made of cottons, linens, or polycottons, e.g., table linen, curtains, and drapes.	
<b>Cold Air</b>		<b>Full load (17.6 lb/8 kg)*</b>
Items	Any item which only needs airing.	
<b>Proofing</b>		<b>Small load (5.5 lb/2.5 kg)*</b>
Items	For drying microfiber fabrics, skiwear, outdoor wear, fine, closeweave cotton garments (poplin), and table linen which are suitable for drying in a tumble dryer.	
Note	<ul style="list-style-type: none"> <li>– Items are dried to a <i>Normal</i> level only.</li> <li>– This program includes a proofing fixing phase.</li> <li>– Only use proofing agents which are stated by the manufacturer as being “suitable for use on membrane textiles”. These agents contain fluorochemical compounds.</li> <li>– <b>Risk of fire!</b> Do not dry items which have been treated with proofing agents containing paraffin.</li> </ul>	
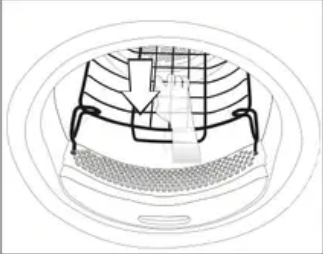
<b>Basket</b>		<b>Load for basket (7.7 lb/3.5 kg)</b>
Note	<ul style="list-style-type: none"> <li>– This program may only be used with the Miele dryer basket (optional accessory).</li> <li>– You must follow the operating instructions for the dryer basket.</li> </ul>	
		
Fabric type/Items	<ul style="list-style-type: none"> <li>– You must follow the operating instructions for the dryer basket.</li> <li>– Only use this program to dry or air items which are suitable for drying in a tumble dryer but should not be physically tumbled.</li> <li>– Do not place shoes inside the drum for drying. Placing shoes inside the drum for drying can cause the belt to tear. You must always use the dryer basket when drying/airing shoes.</li> </ul>	
<b>Sportswear</b>		<b>Small load (6.6 lb/3 kg)*</b>
<b>Normal plus, Normal, Slightly dry, Hand iron<math>\Delta</math>, Hand iron<math>\Delta\Delta</math></b>		
Items	For sportswear which is suitable for drying in a tumble dryer.	
<b>Pillows</b>	1–2 pillows 15 3/4" (40 x 80 cm) or 1 pillow 31 1/2" (80 x 80 cm)	
Items	Pillows suitable for drying in a tumble dryer, with feather, down, or synthetic fillings.	
Note/tip:	<ul style="list-style-type: none"> <li>– Items are dried to a <i>Normal</i> level only.</li> <li>– Pillows can still feel damp after being dried. You can use this program several times until the pillow feels dry.</li> </ul>	


<b>Bed Linens</b>		<b>Half load (8.8 lb/4 kg)*</b>
<b>Extra dry, Normal plus, Normal, Slightly dry, Hand iron<math>\Delta</math>, Hand iron<math>\Delta\Delta</math>, Machine iron</b>		
Items	Bed Linens	
Tip	<ul style="list-style-type: none"> <li>– Select <i>Extra dry</i> for multi-layered and very thick fabrics.</li> <li>– To prevent laundry from drying out it should be rolled up until you are ready for ironing.</li> </ul>	

## Extra options

The drying programs can be augmented with various extra options. However, Freshen up and Gentle cannot be combined.

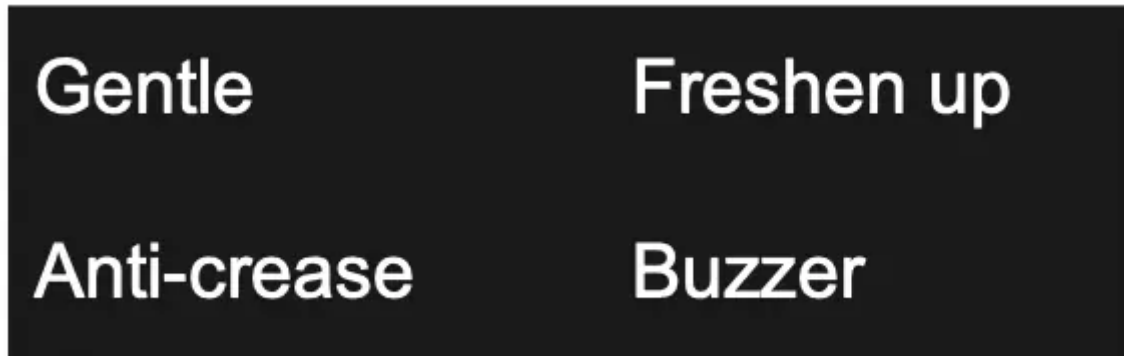

### Gentle

Delicate fabrics (with the  symbol on the care label, e.g., acrylic garments) are dried at a lower temperature and the program duration is longer.

### Freshen-up

You can use the Freshen up option to help remove or reduce odors in clean (dry or damp) clothing.

The drying air is heated up for a specific length of time. After this, the garments are aired to the Normal drying level without any more heat being added. The drying level cannot be altered.

The option will be more effective if you dampen the garments a little beforehand, use a fragrance capsule, and reduce the load. Please note that odors will not be removed as effectively from parts of garments made of synthetic fibers.

### Anti-Crease

After the program has finished, the drum will continue to rotate in a certain rhythm for 2 hours, depending on the selected program. This "Anti-crease rhythm" helps to prevent creasing, if the laundry is not removed immediately after the end of a program.

### Buzzer

A buzzer sounds to let you know the program has finished. The continuous buzzer which sounds during error messages is independent of this setting.

### Selectable extra options

These extra options can be selected in addition to the program.

	Gentle <sup>1</sup>	Freshen up <sup>1</sup>	Anti-crease	Buzzer
Normal	X	X	X	X
Wrinkle-free	X	X	X	X
Delicates	O	-	X	X
Smoothing	O	-	X	X
Woolens/Silks	-	-	-	X
Dress Shirts	X	X	X	X
SoftSteam	-	-	X	X
Express	-	-	X	X
Denims	X	X	X	X
Outdoor	O	-	X	X
Time Dry	X	-	X	X
Table Linens/Drapes	-	-	X	X
Cold Air	-	-	X	X
Proofing	-	-	X	X
Basket	-	-	-	X
Sportswear	X	-	X	X
Pillows	-	-	X	X
Bed Linens	-	-	X	X

<sup>1</sup> = These extra options cannot be combined with one another


**X** = Can be selected


**O** = Cannot be changed/Always active

**-** = Cannot be selected

## Changing the program sequence

You cannot change to another program once a program has started (this prevents unintentional alterations).

If you try to change a program,  Change not possible lights up until the original program is reset.

**Exception:** The dryer is switched off by turning the program selector to the  position.


You will need to cancel the current program before you can select a new one.

## Canceling a program

- Touch the Start/Stop sensor button.  
Cancel Program lights up.
- Confirm with the OK sensor button.

End/Cooling down will light up in the display, depending on the drying duration and the drying temperature reached.

If Program Canceled appears:

- Turn the program selector to .

## Selecting another program

- Close the door.
- Turn the program selector to another program.
- Touch the Start/Stop sensor button.

## Adding or removing laundry

**WARNING:** Risk of burns when touching hot laundry of the dryer drum.

You could burn yourself.

Let the laundry cool down and remove it carefully.

- Pull open the door.
- Add or remove items.
- Close the door.
- Touch the Start/Stop sensor button.

The program starts.

## Program duration


Altering the program sequence can cause the program duration shown in the display to be adjusted.


# Condensed water container

## Emptying the condensed water container

The condensed water is collected in the condensed water container.

Empty the condensed water container after every drying program.


The Empty container See  indicator will light up if the maximum level of the condensed water container is reached. To turn the indicator light off: open and close the door while the dryer is switched on.

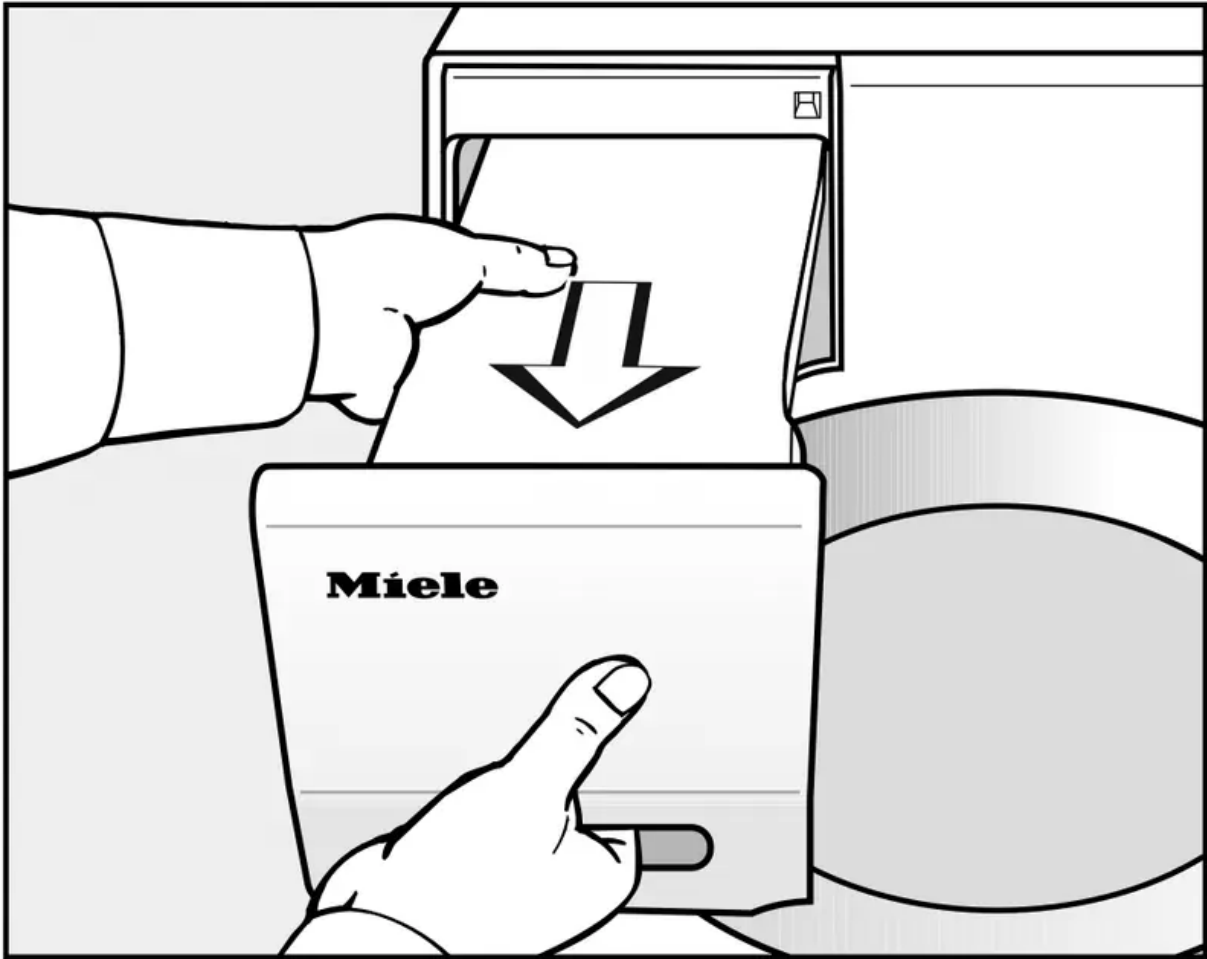

- Remove the condensed water container.



- To prevent water from running out, keep it in a horizontal position when carrying it. Hold the condensed water container at the front and towards the back.

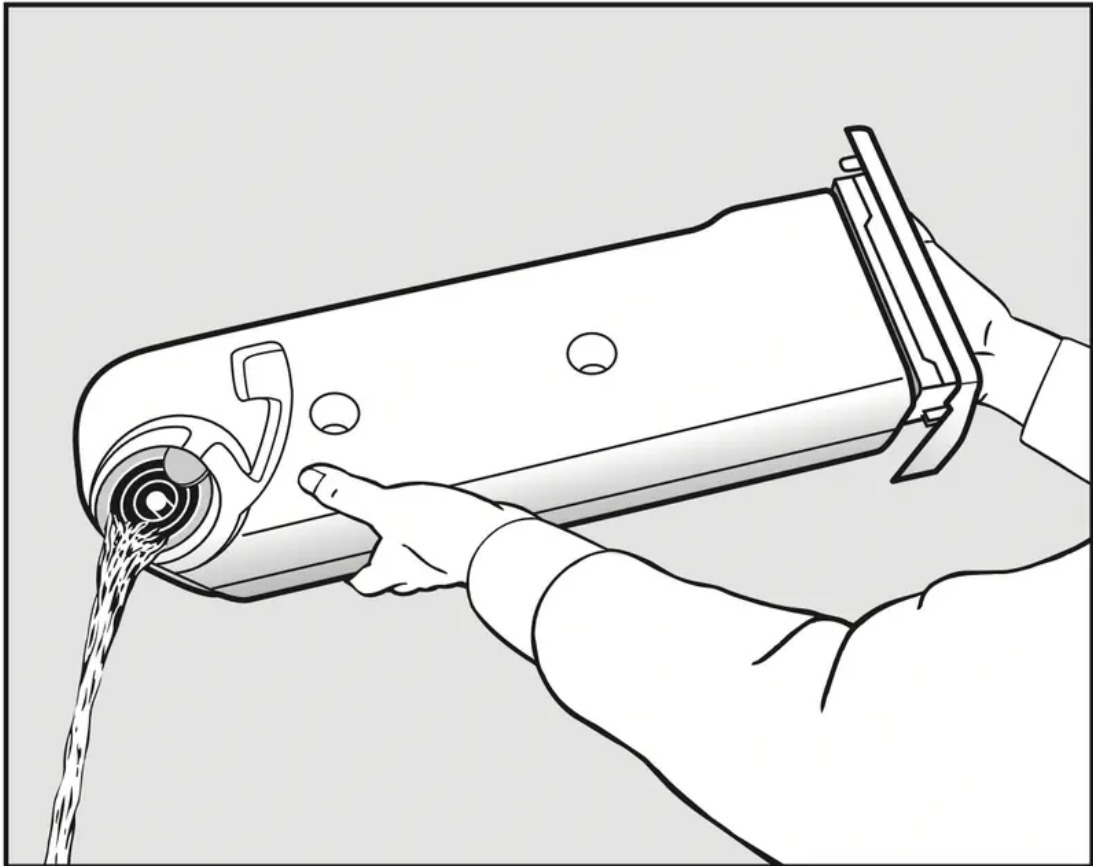

- Empty the condensed water container.
- Replace the condensed water container in the dryer.

It can cause health problems in people and animals.

Do not drink condensed water.

The condensed water can be used for the Soft Steam program. The condensed water container must be filled to use this program (see the following section).

### **Preparing the condensed water container for the Soft Steam program**

**WARNING:** During the Soft Steam program, the condensed water collected in the condensed water container is sprayed into the drum via a spray jet. The condensed water container must therefore be filled with water to at least the –min– marker.

Otherwise, this could cause a fault.

The –min– marker is at the front left-hand side of the container.




Make use of the condensed water which collects during the drying process.

**If the condensed water container is empty**

- You can fill the condensed water container with commercially available condensed water (ironing water).

You should only use tap water in exceptional circumstances. If tap water is used frequently, however, the spray jet (in the door opening) can become calcified.

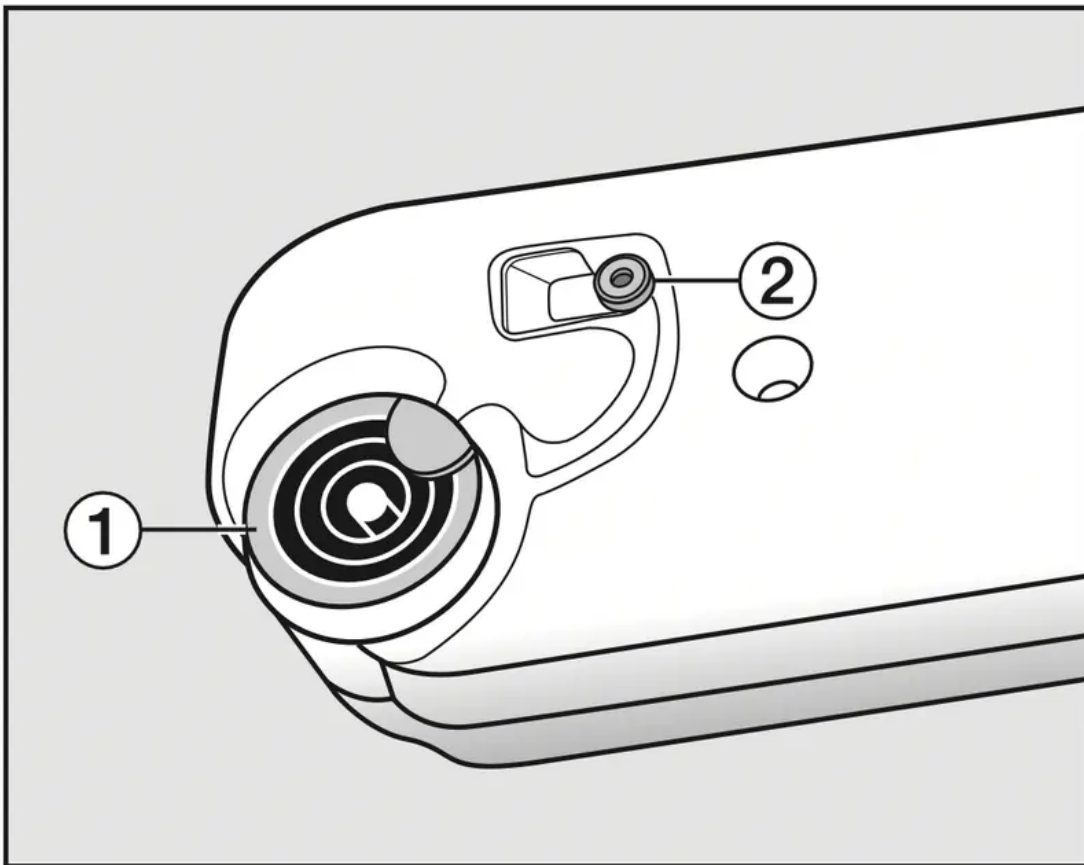

1 spout, 2 rubber seal

- Pour the water in through the rings of the spout 1.

**WARNING:** Only use clean water. The water must not contain any fragrance, detergent, or other substances.

**Check the rubber seal from time to time.**

If tap water is used frequently, white limescale deposits can build up on the rubber seal 2.

- Use a damp cloth to carefully remove any limescale deposits from the rubber seal 2.
- After cleaning the rubber seal, push the condensed water container fully into the dryer.


## Fragrance flacon

Using a fragrance capsule (optional accessory) will add a pleasant fragrance to your laundry.

**WARNING:** Before using a fragrance capsule, please read “Important safety instructions – Using a fragrance capsule (optional accessory)”.

### Inserting a fragrance capsule


Only hold the fragrance capsule as illustrated. Do not hold it at an angle or tip it as the fragrance will run out of the capsule.

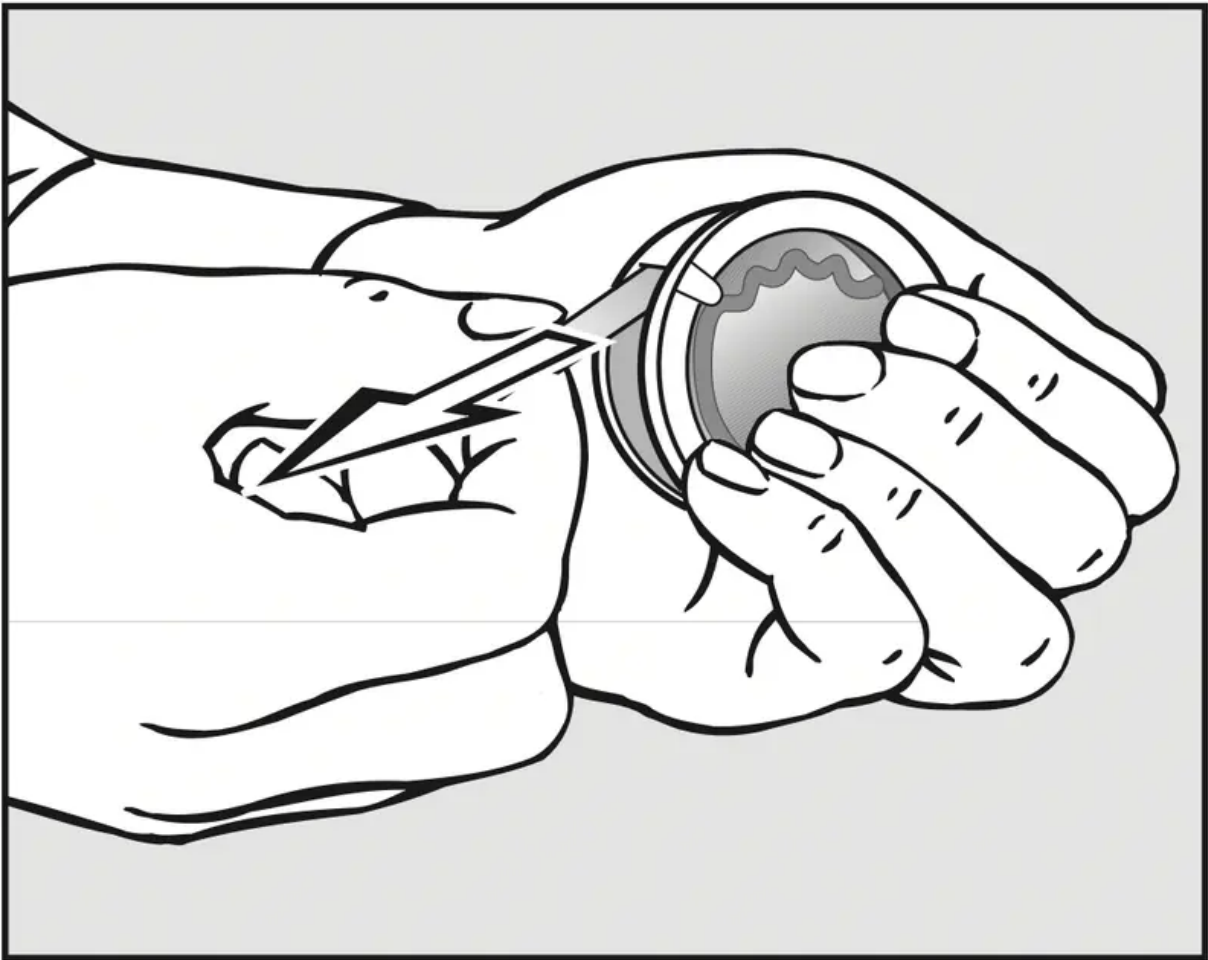


- Hold the capsule securely to prevent opening it by mistake.
- Pull off the protective seal.
- Open the door of the tumble dryer.

The fragrance capsule is inserted in the upper lint filter. The opening for this purpose is on the right-hand side beside the grip.


**WARNING:** If you are not using a fragrance capsule: the cover must always remain closed (push the cover down completely with the tab).

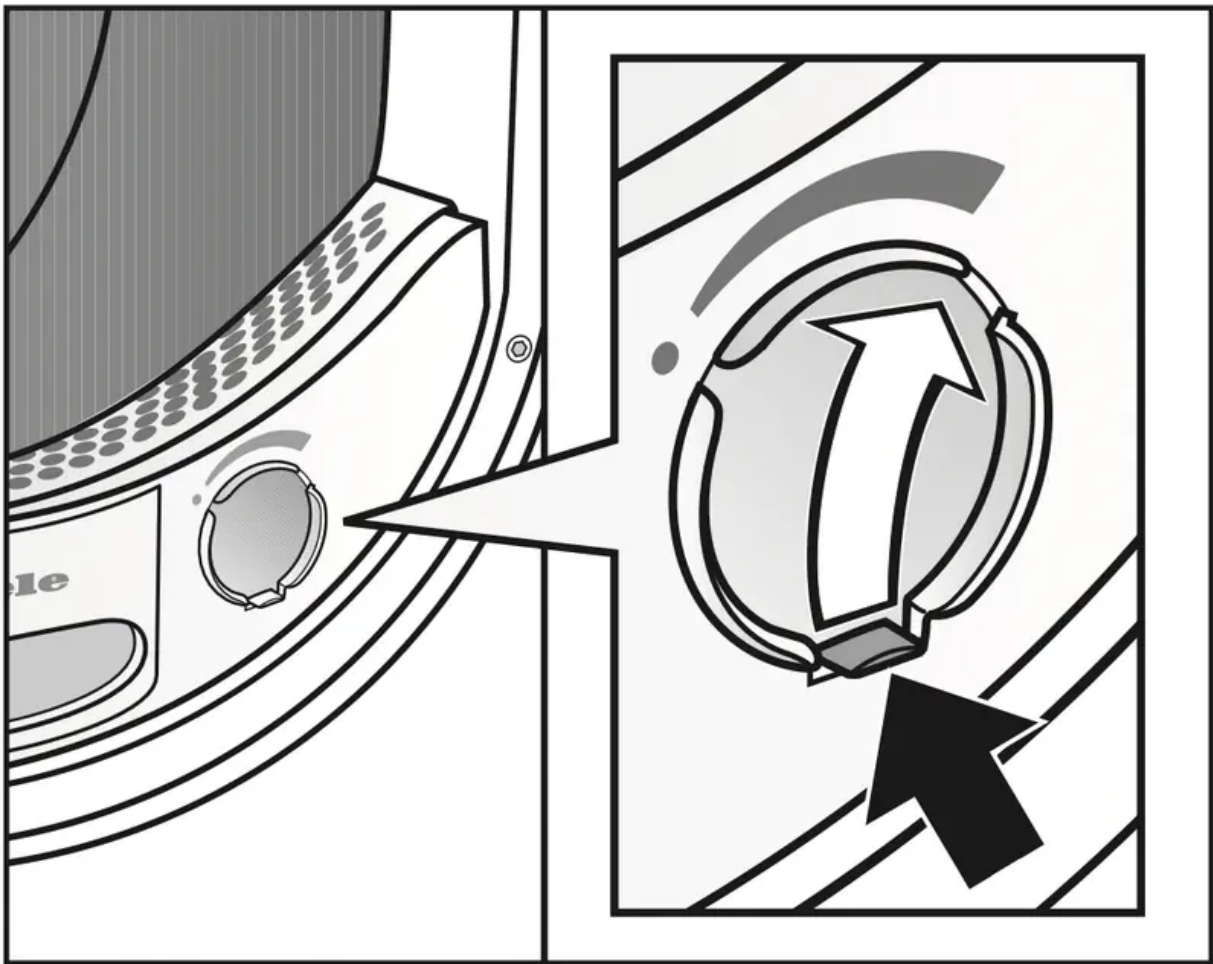


Open the cover using the tab until the tab is at the top right-hand side as shown.

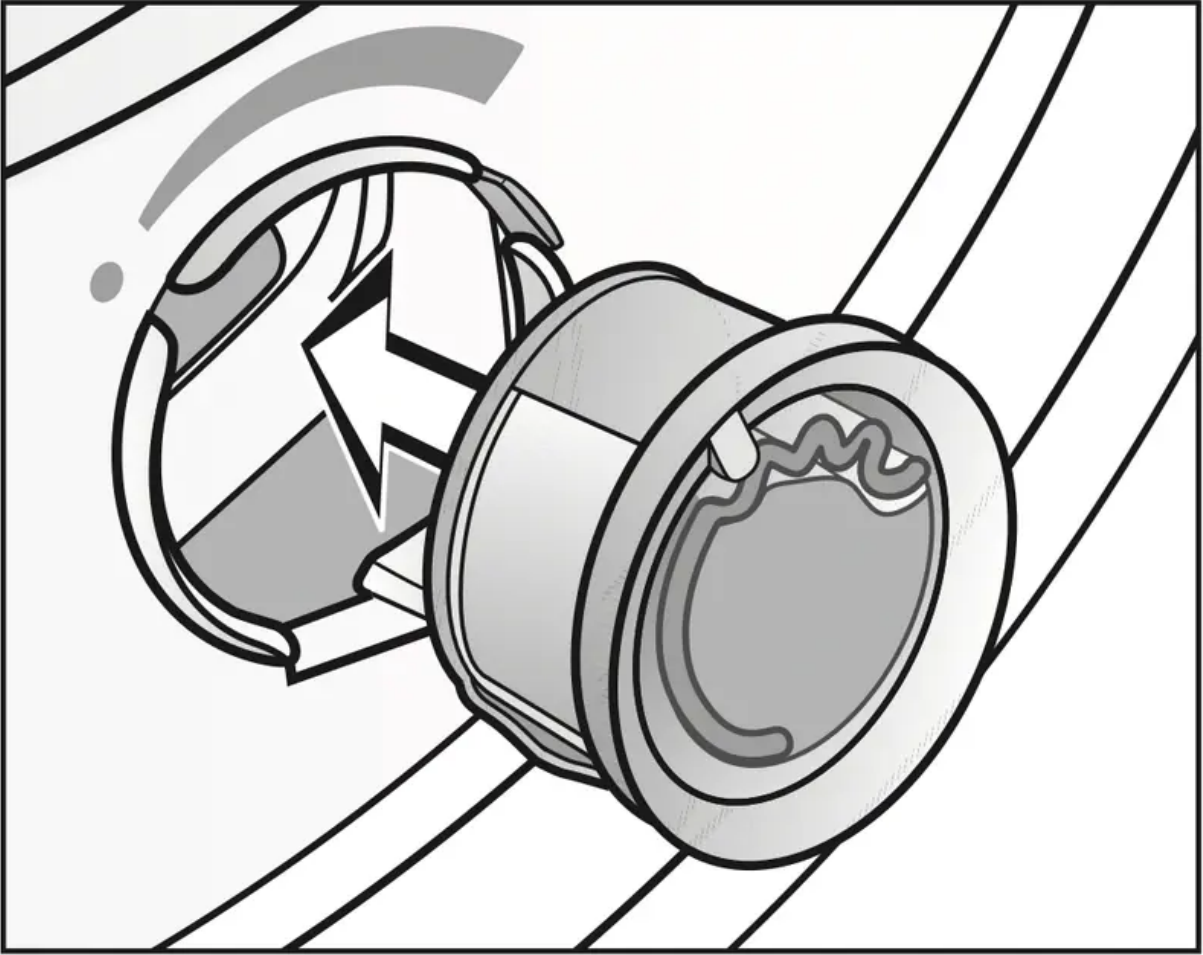


Insert the capsule in the opening as far as it will go.

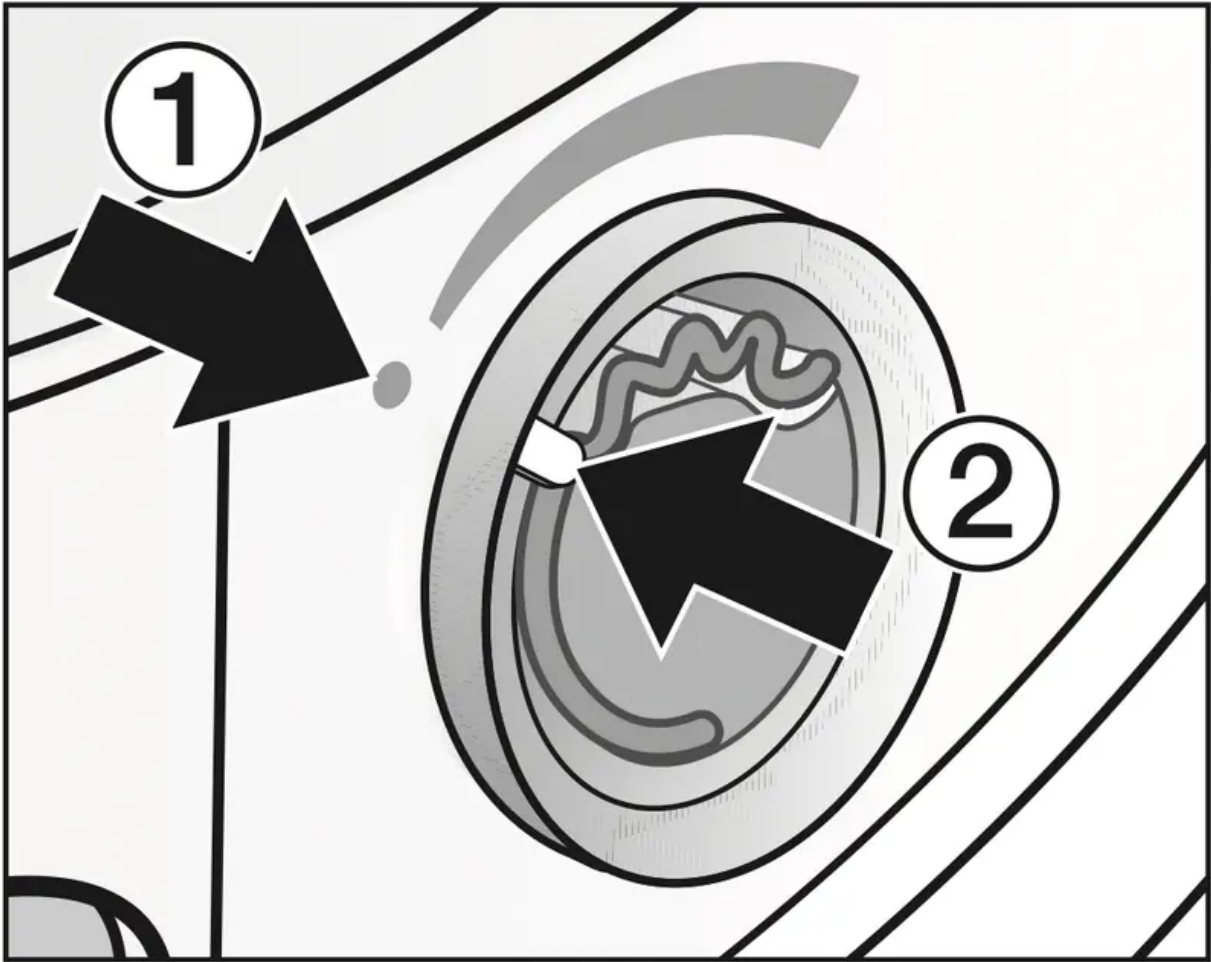

Markers **1** and **2** must line up with one another.

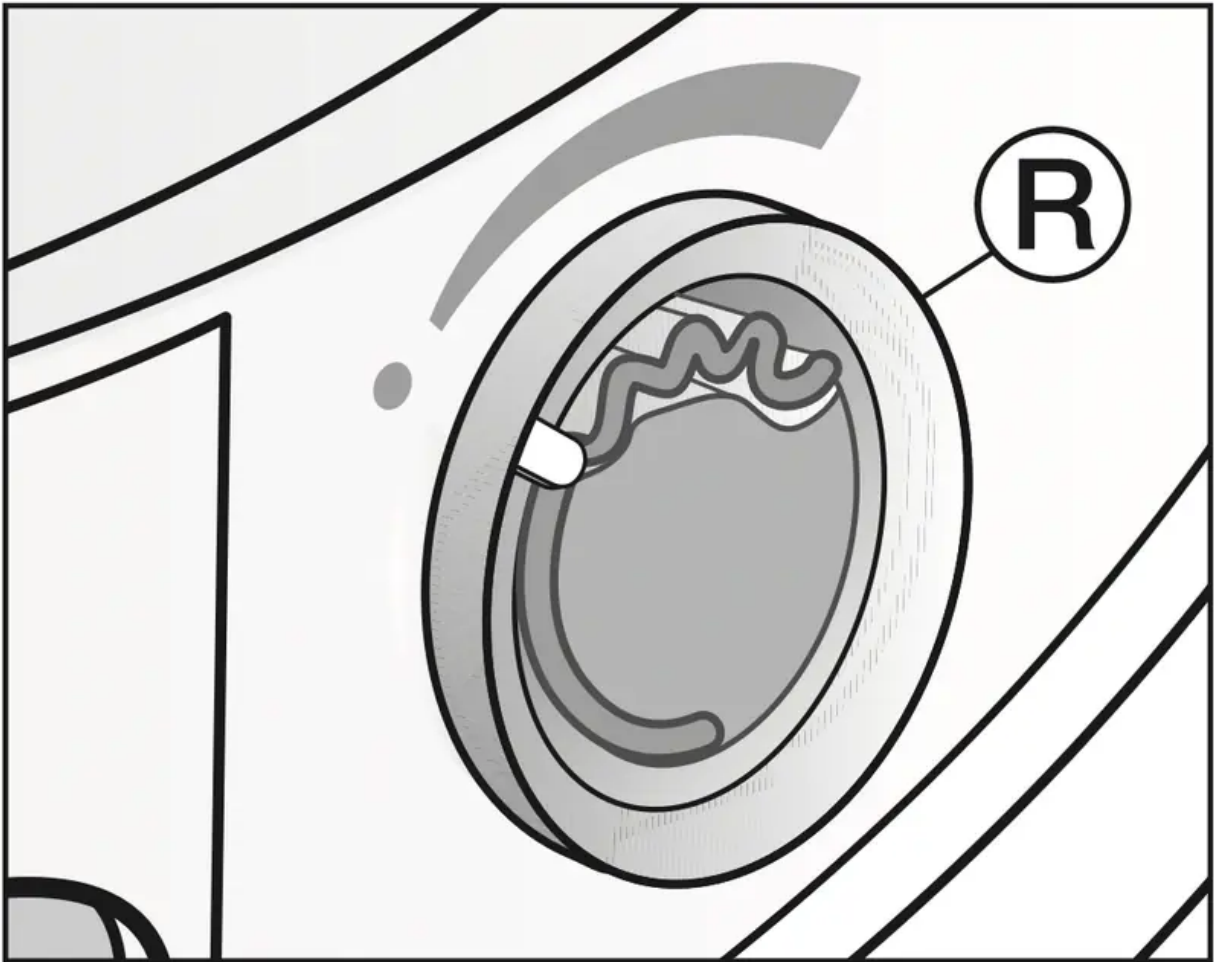

Turn the outer ring R clockwise a little.

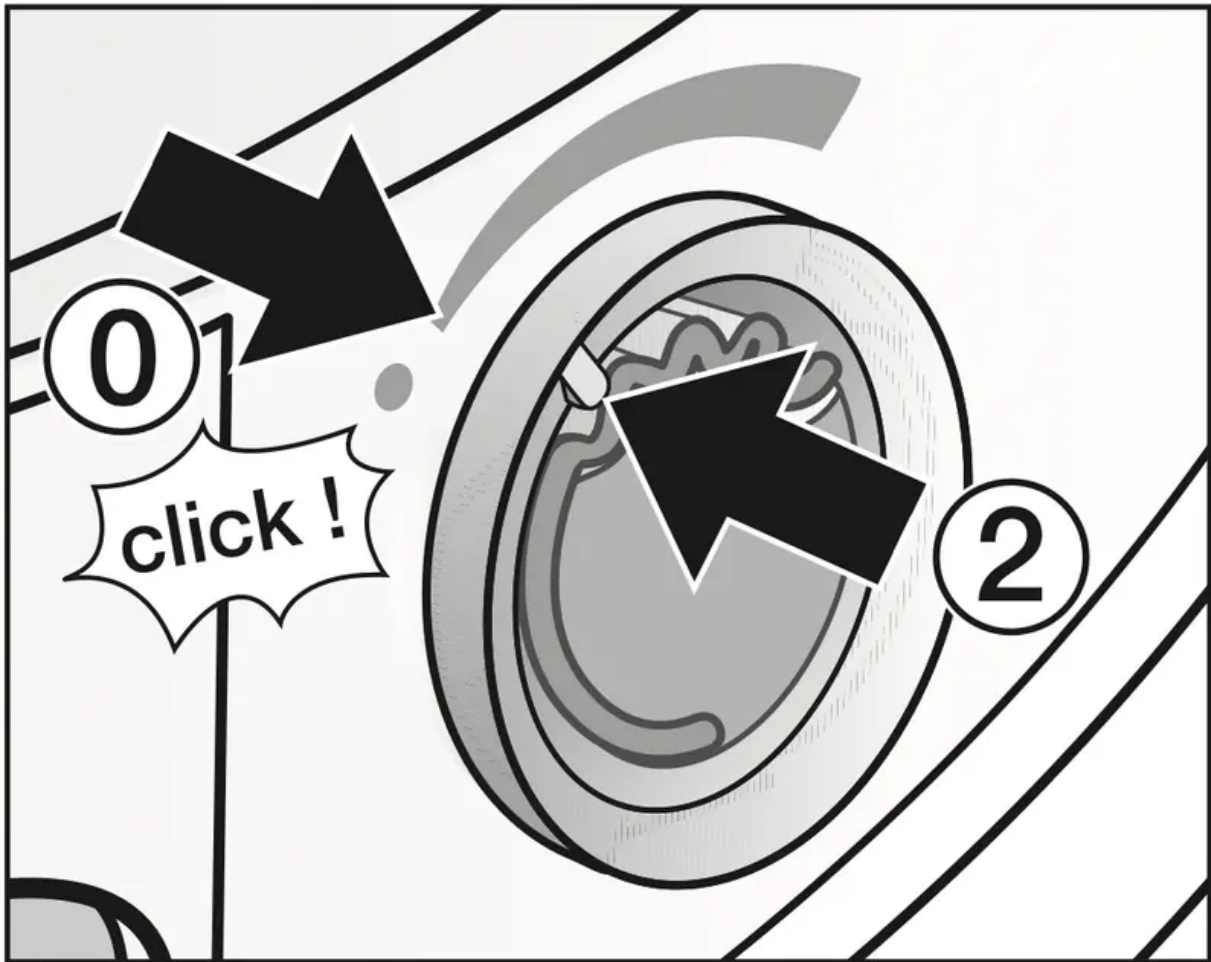


You will feel a slight resistance and hear a soft click.

Marker 2 must be in position 0: this is the position at which you can feel a resistance.

### **Before drying**

You can select the intensity of the fragrance.

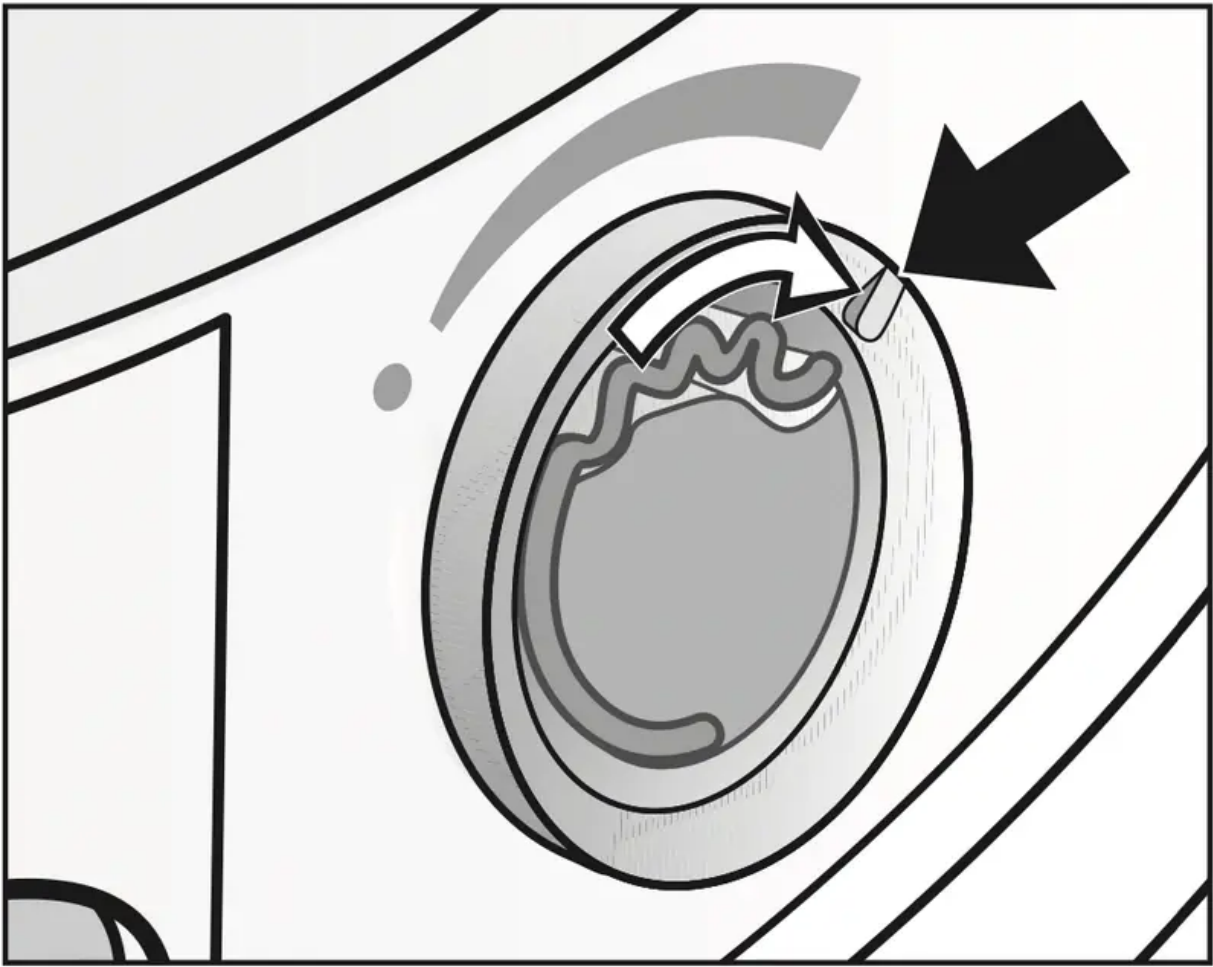


Turn the outer ring clockwise a little.

The further you open the capsule, the more intense the fragrance.

Damp laundry and longer drying durations with sufficient heat transfer are needed for the fragrance to be released into the laundry effectively. The fragrance will also be noticeable in the room air during the process. The Cool Air program will not generally apply fragrance.

### **After drying**

To avoid the fragrance escaping needlessly:

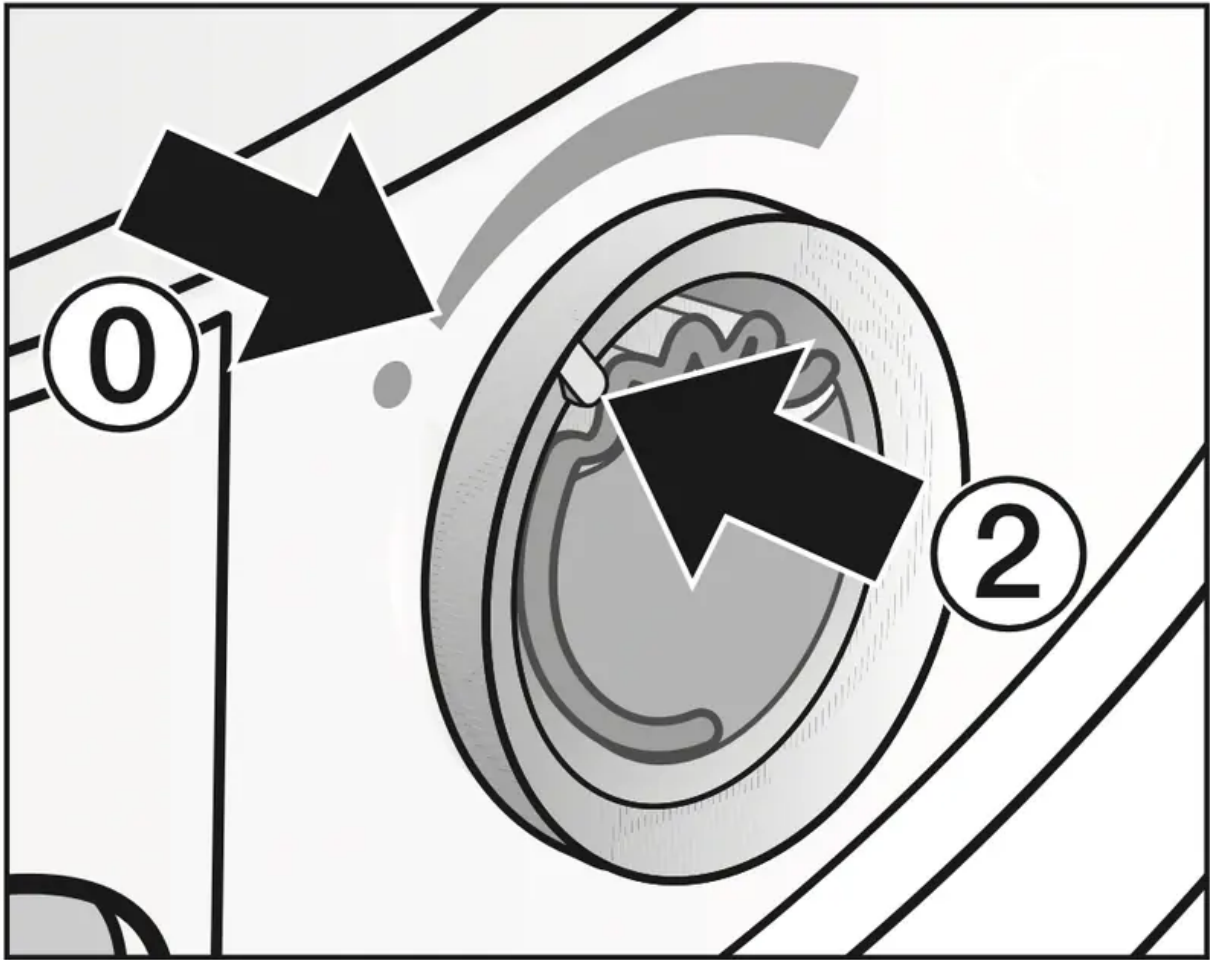

Turn the outer ring counterclockwise until marker 2 is in position 0.


You will feel a slight resistance.

If you want to run the drying cycle without the fragrance capsule from time to time


- Remove the fragrance capsule and store it in its original packaging.

### **Replacing the fragrance capsule**

When the fragrance is no longer sufficiently intense:

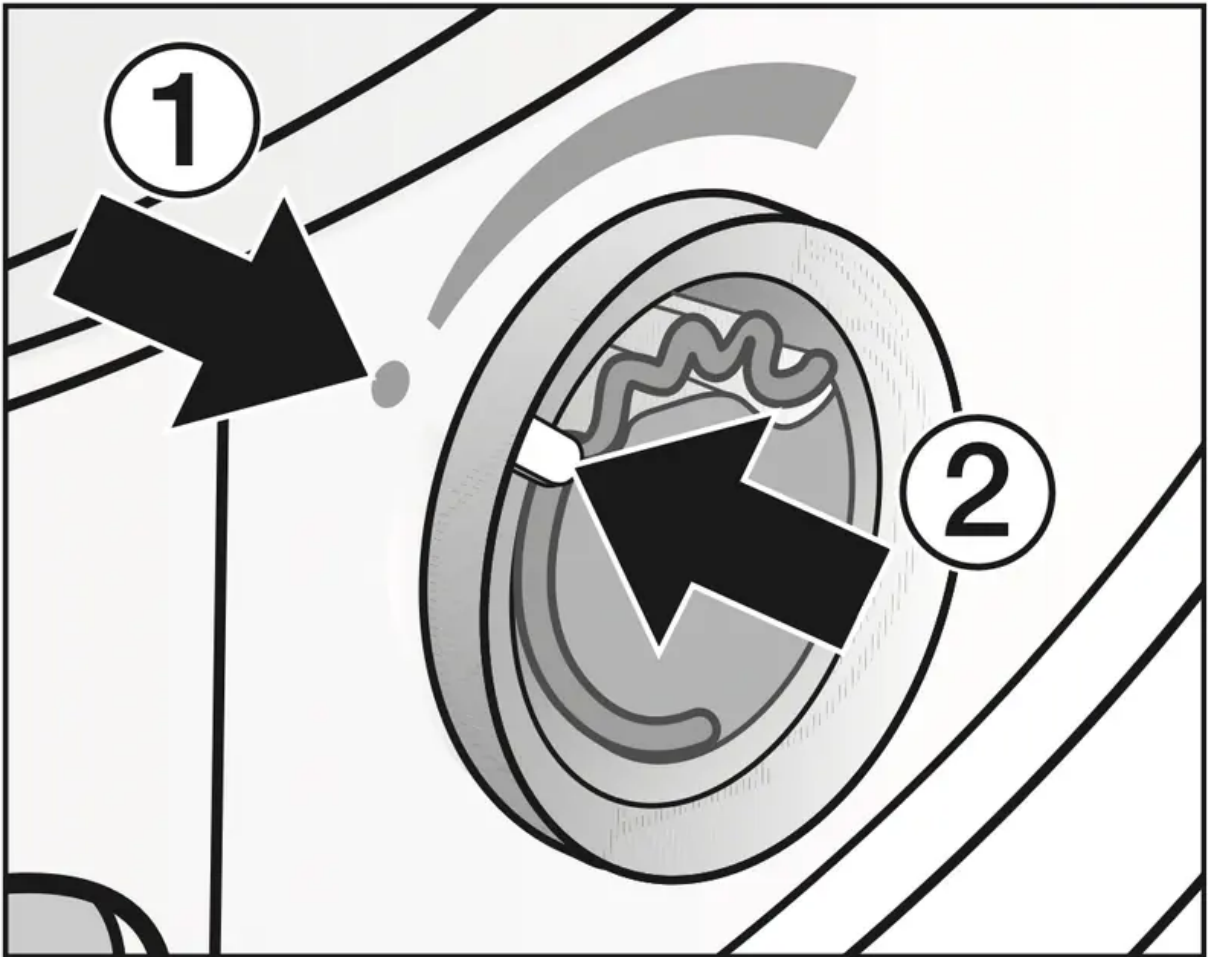


Turn the outer ring counterclockwise until markers **1** and **2** line up.

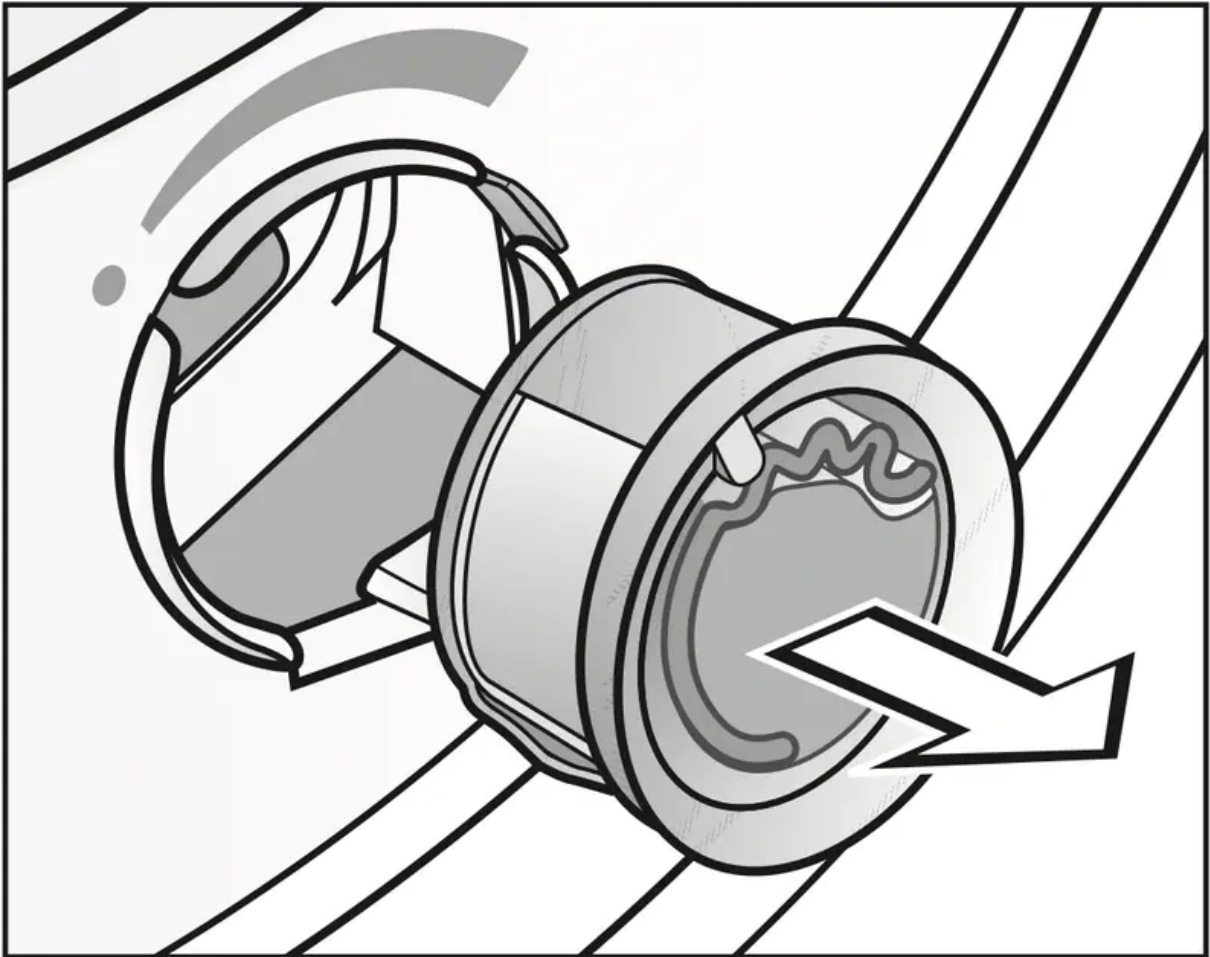


Replace the fragrance capsule with a new one.

Fragrance capsules are available to order from Miele dealers or online.

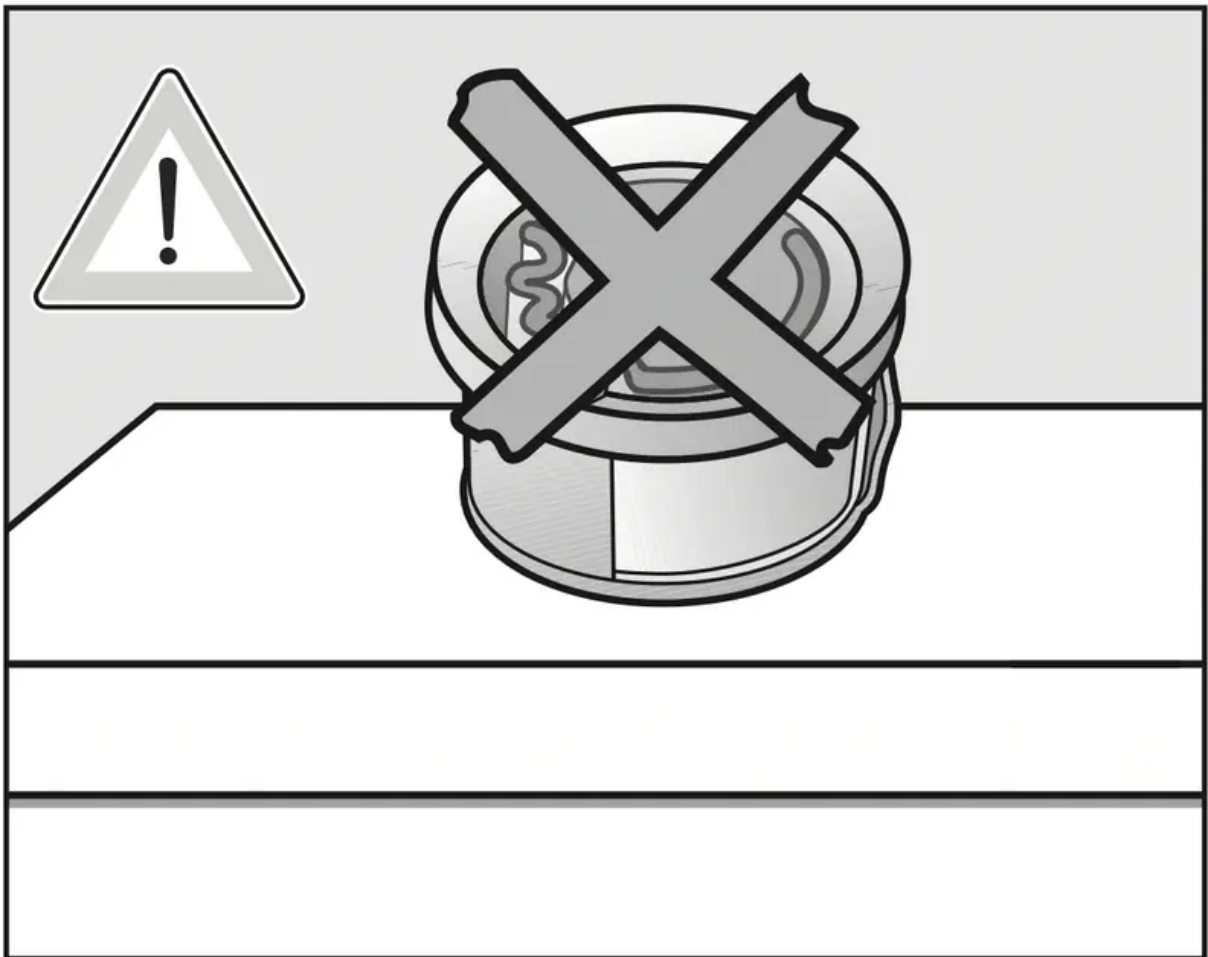

**WARNING:** Never lay the fragrance capsule down on any surface as the fragrance will run out.

**Only store the fragrance capsule in its original packaging**

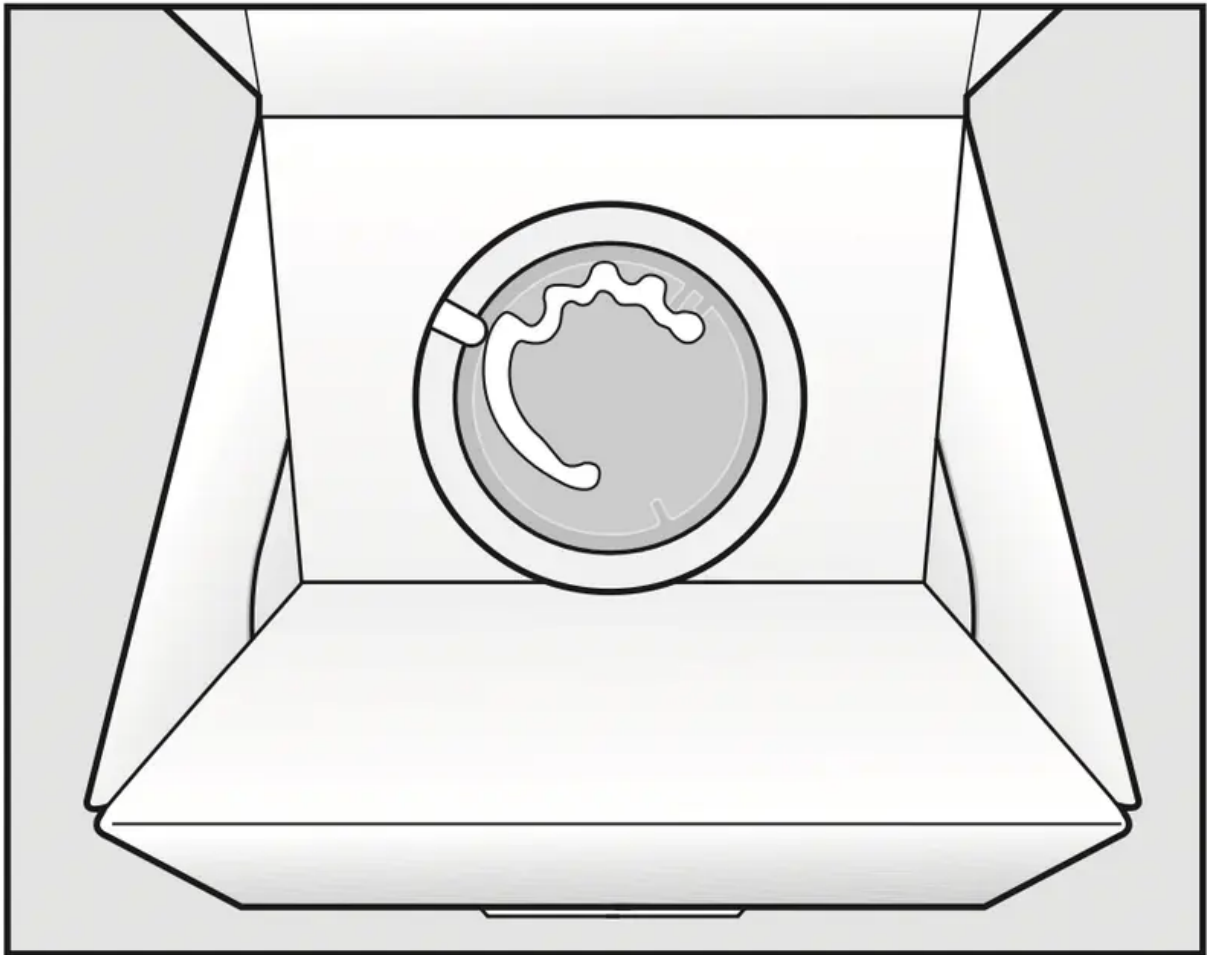

- When storing the fragrance capsule in its original packaging while you are not using it, e.g., while cleaning the tumble dryer: To prevent the fragrance running out, do not store the packaging upright on its edge or upside down.
- Store in a cool, dry place
- Store away from direct sunlight
- When purchasing new fragrance capsules: Only remove the protective seal just before use

### **Cleaning the lint filters**

The intensity of the fragrance will be diminished if the lint filters and the plinth filter are not cleaned.

**WARNING:** The fragrance filter must be removed before cleaning the lint filter.

**WARNING:** To prevent any fragrance running out of the capsule:

When not in use, the fragrance capsule must only be stored in its original packaging as illustrated.

- Clean the lint filters and the plinth filter: see “Cleaning and care”.

## Cleaning and care


### Lint filters

This tumble dryer has 2 lint filters in the door opening: the upper and lower lint filters trap lint produced during the drying process.

**WARNING:** Clean the lint filters after each drying program.

This prevents an extension of the program duration.



**WARNING:** Also clean the lint filters when Clean plinth filter. See  lights up.


To turn the indicator light off: Switch the dryer off and then on again / if necessary, confirm with OK.

### Removing visible lint


**Tip:** You can also use a vacuum cleaner so that you can remove the lint without touching it.

- Open the door.


**WARNING:** You must remove the fragrance capsule (if present) beforehand. See “Fragrance capsule”.

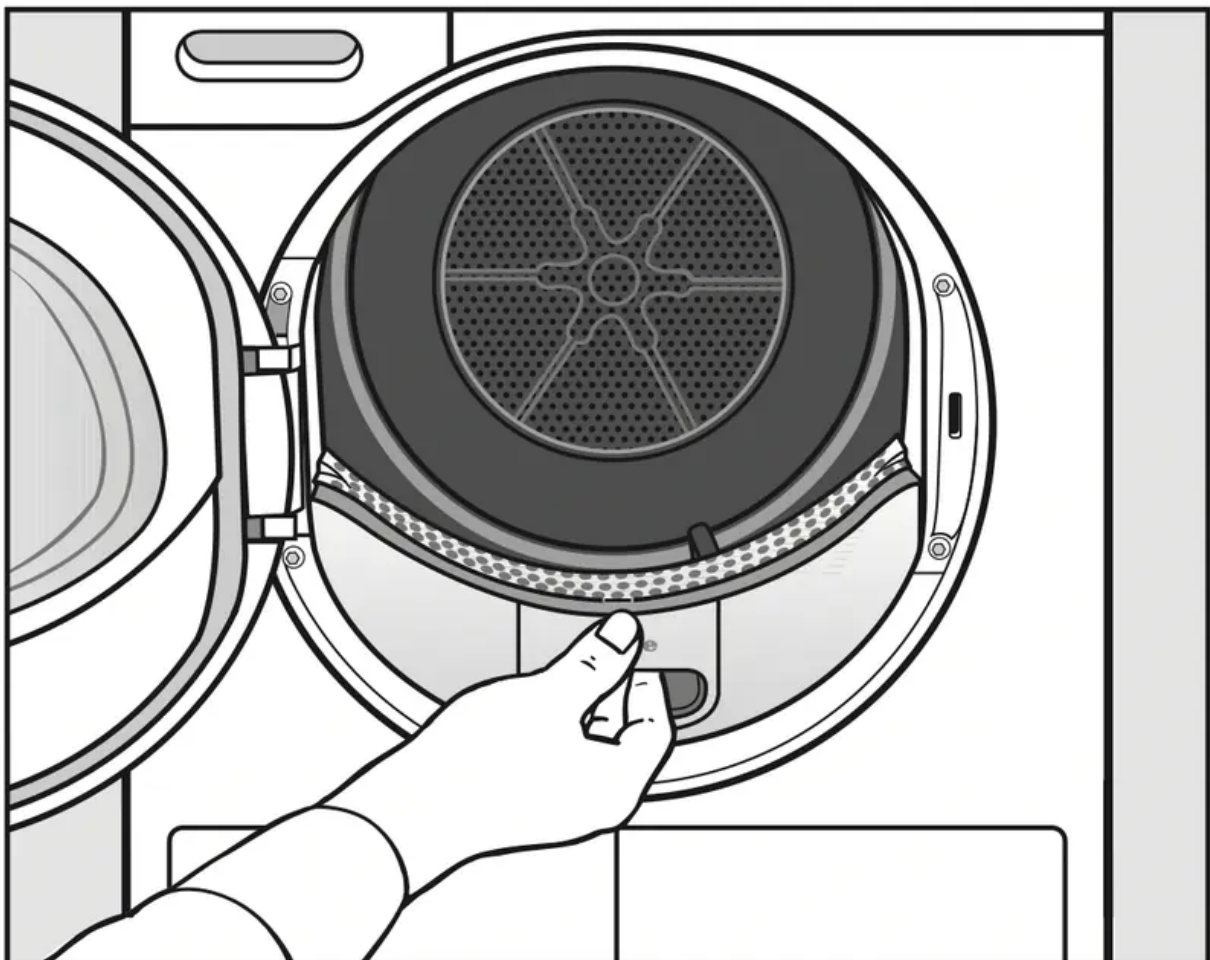

Pull the upper lint filter forward to remove it.

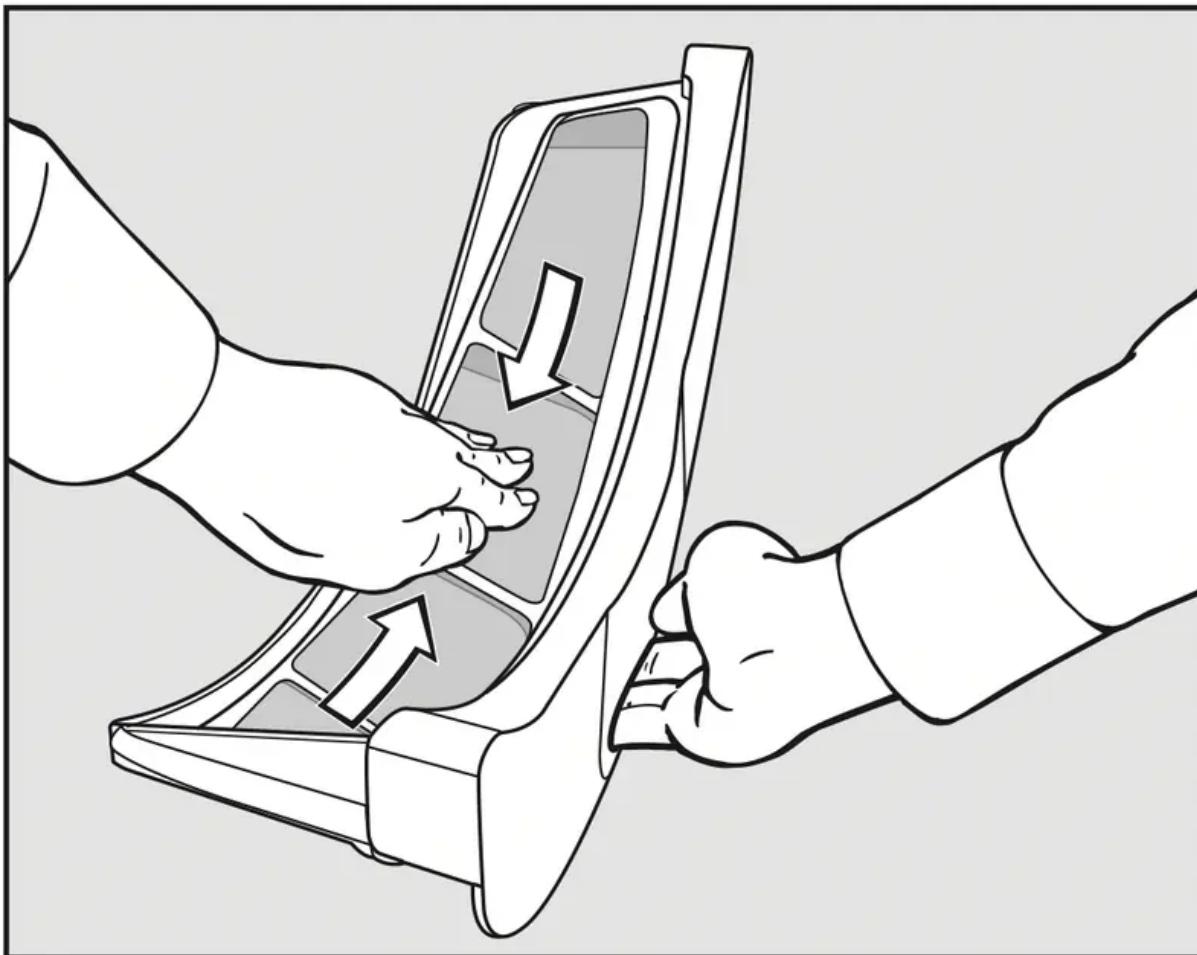

Remove the lint (see arrows).

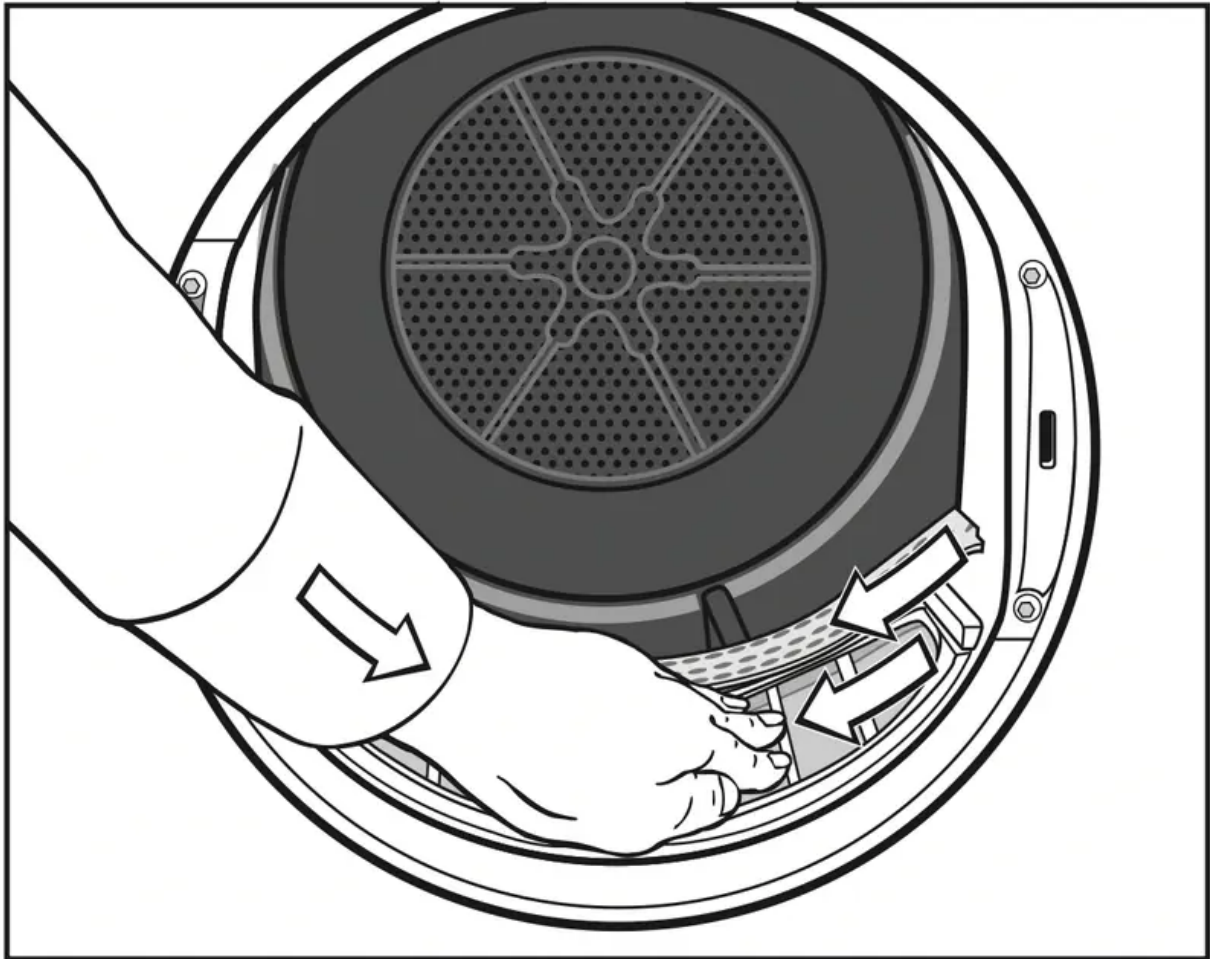


- Remove the lint (see arrows) from the filter surface of all the lint filters and the perforated laundry deflector.
- Push the upper lint filter back into position until it clicks.
- Close the door.

### **Cleaning the lint filters and air flow openings thoroughly**


If the drying duration has become longer or the surface of the filters is visibly compacted with lint, you should carry out the following cleaning procedure.

- Remove the fragrance flacon. See “Fragrance flacon”.


- Pull the upper lint filter forward to remove it.

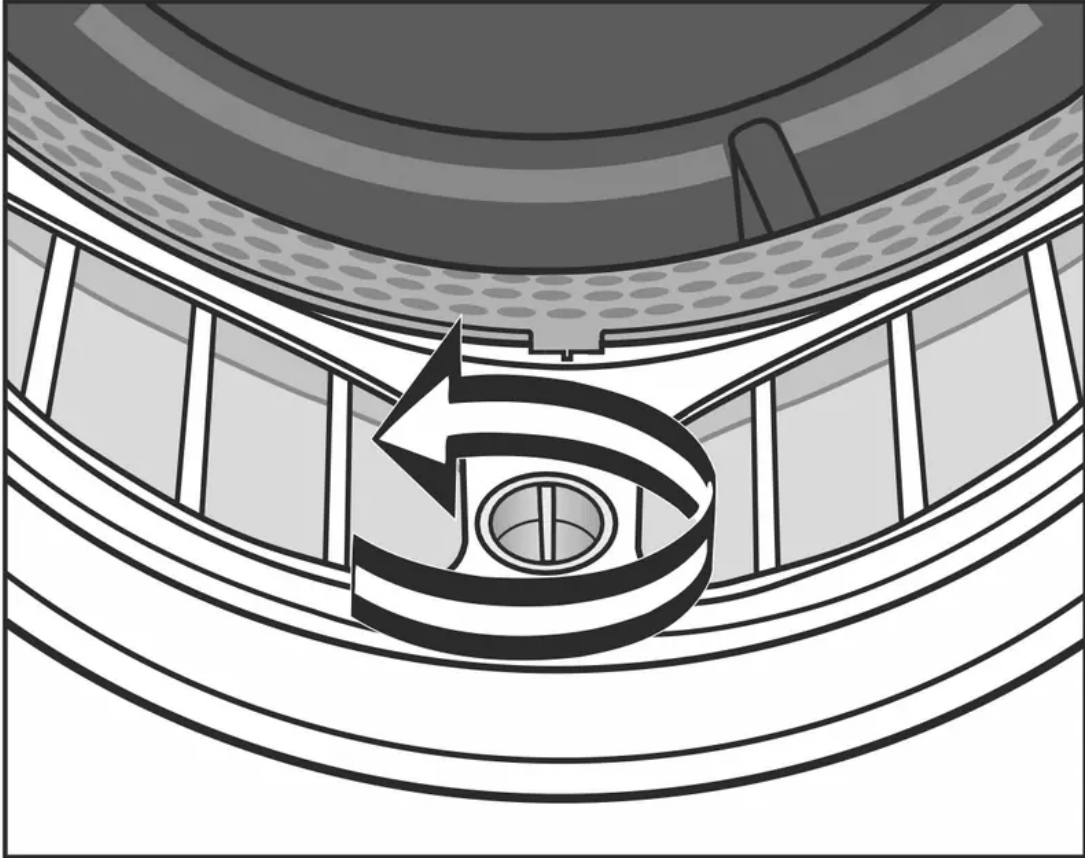

- Turn the yellow dial on the lower lint filter in the direction of the arrow (until you hear it click).

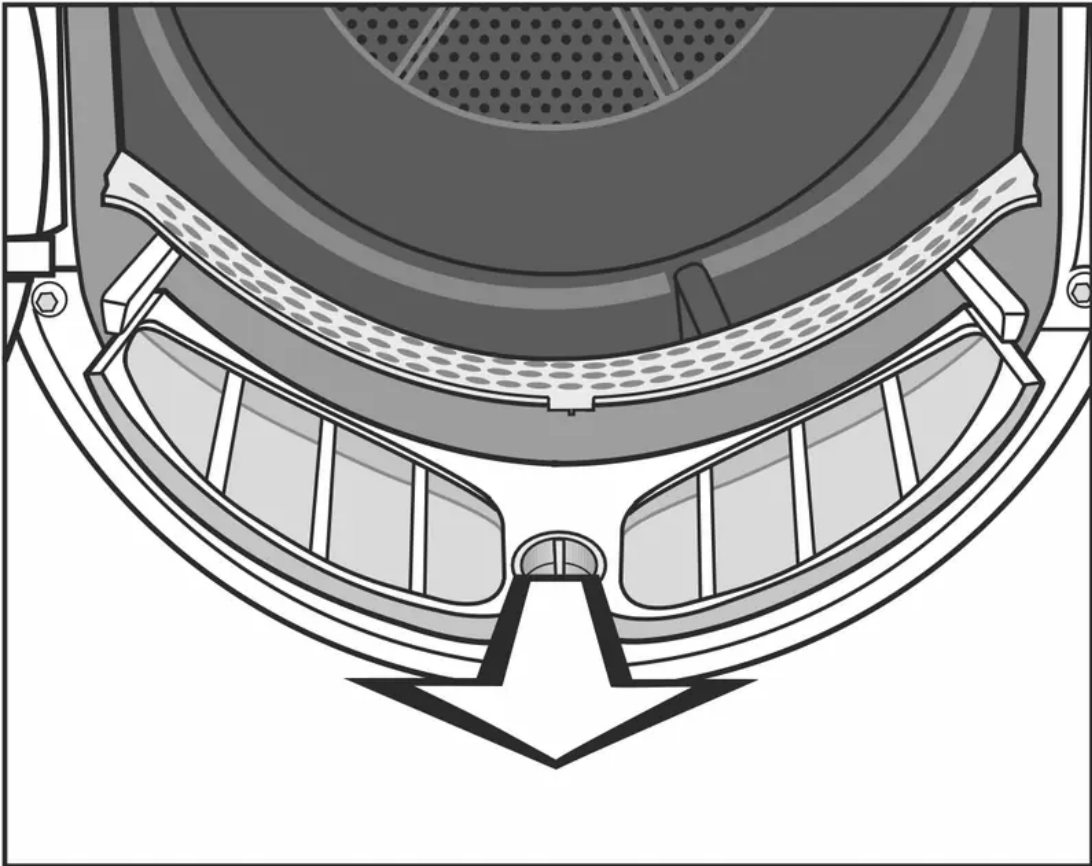

- Hold the dial and pull the lint filter forward to remove it.

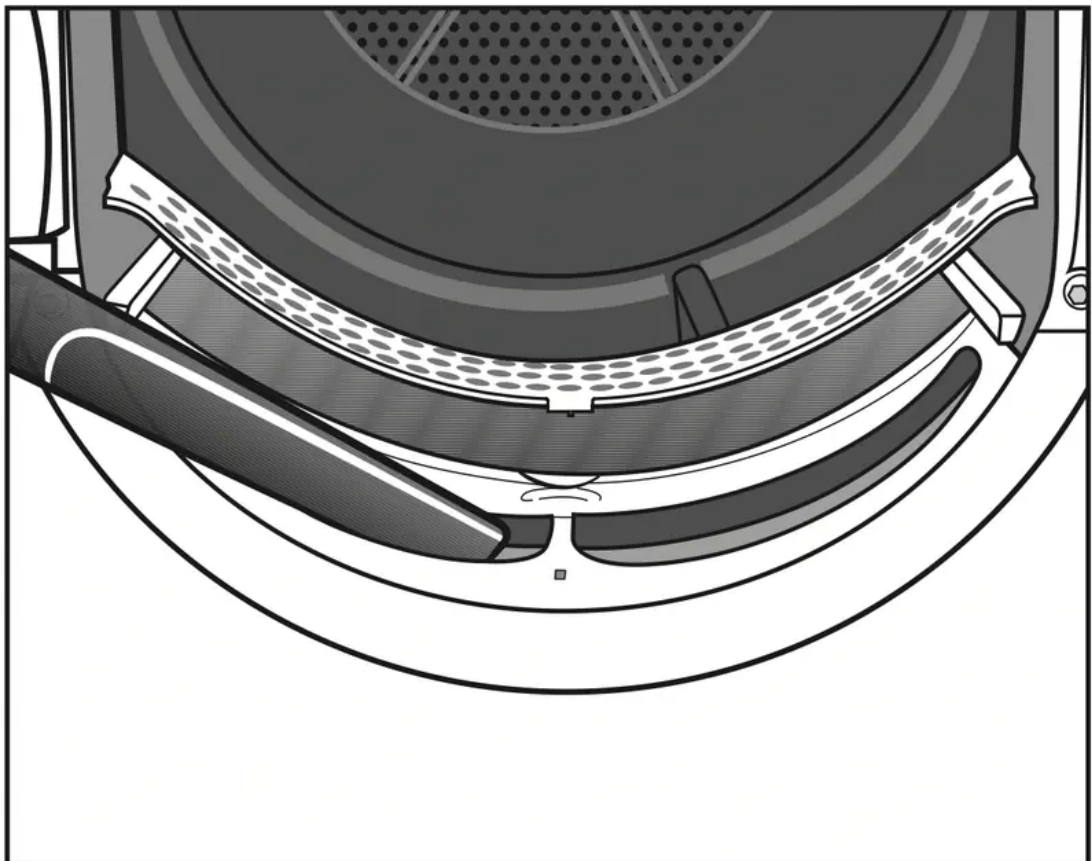

- Use a vacuum cleaner with a long crevice nozzle attached to remove any visible lint from the upper air flow openings.

Finally, clean the lint filters with water.

#### Cleaning the lint filters with water

- Wipe the smooth plastic surfaces of the lint filters with a damp cloth to clean them.
- Flush the lint filters through with warm running water.
- Shake the lint filters thoroughly and then dry them carefully.

Ensure the filters are dry before replacing them. Wet filters could cause operational faults.

- Push the lower lint filter in completely and lock it with the yellow dial.
- Push the upper lint filter in completely.
- Close the door.

#### **Cleaning instructions when using fabric softener sheets**

If you are using fabric softener sheets, please follow these warnings and instructions.

**WARNING:** First, clean the filters as described in “Cleaning the lint filters with water”.

If the surfaces of the lint filters are still strongly compacted with lint, then follow these measures. Please note the plastic and surfaces of the lint filters can be damaged by the cleaning process described below.

**WARNING:** If the surfaces of the lint filters are not cleaned, this can extend the drying time and increase the energy consumption.

Try the following 3 cleaning instructions to determine the one that achieves the best results.

#### Option 1

- Wipe the surfaces of the lint filters several times with a cleaning cloth with an alcohol base until you have removed the impurities/obstructions.

**WARNING:** Risk of fire! Then rinse the filter surfaces thoroughly with warm water to remove all residues.

#### Option 2


- Clean the lint filters in the dishwasher without any other dishes. Use a hightemperature program.

#### Option 3

- Wet the surfaces of the lint filters with a liquid color detergent (e.g., Miele Ultra Color Liquid Laundry Detergent).
- Leave it on for approx. 2 hours.


**WARNING:** Risk of fire! Then rinse the filter surfaces thoroughly with warm water to remove all residues.

## Cleaning the plinth filter

**WARNING:** Clean the plinth filter whenever the Clean plinth filter. See  lights up or when the program duration is longer than usual.


To turn the indicator light off: Switch the dryer off and then on again / if necessary, confirm with OK.

## Removing the plinth filter

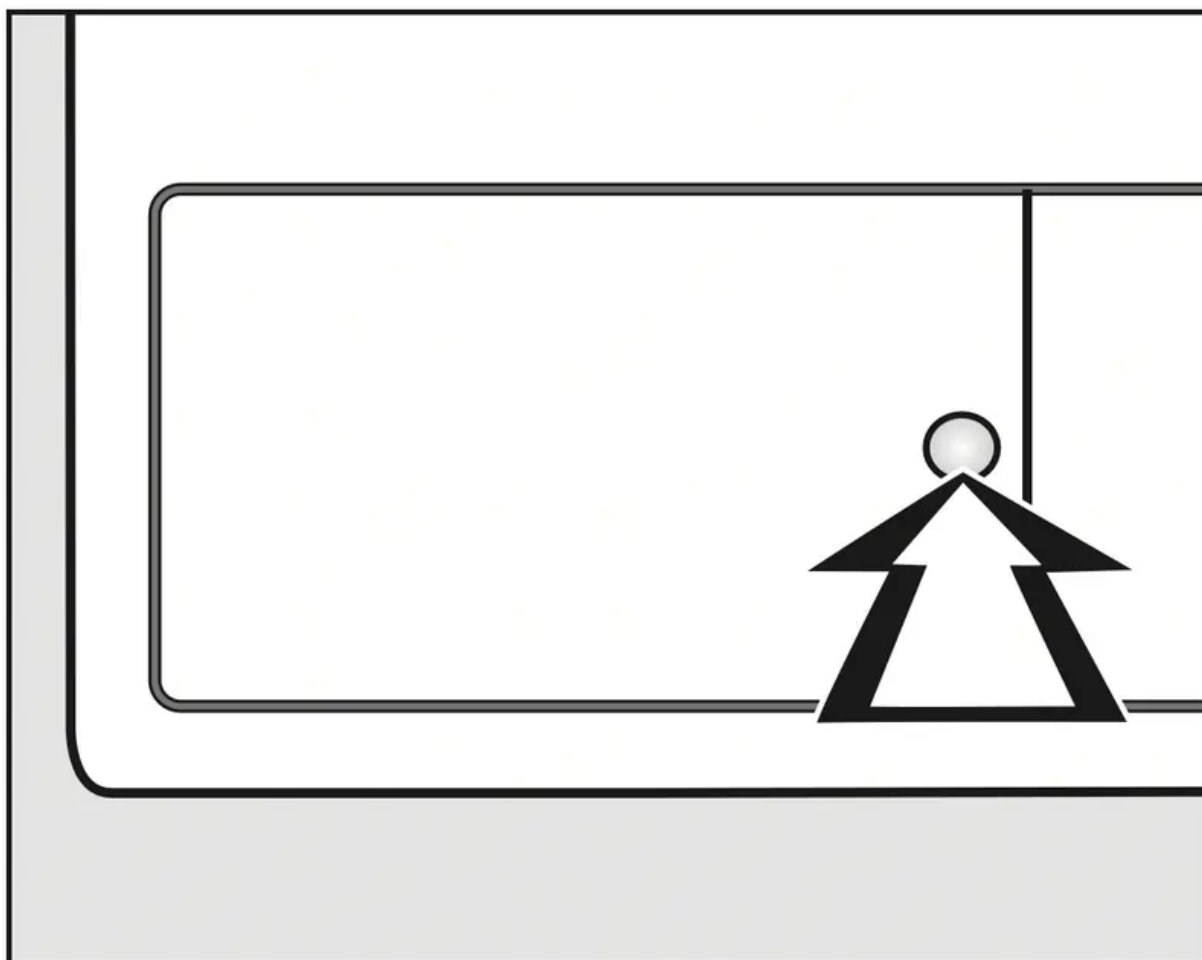

Press the round, indented area on the heat exchanger access panel to open it.


The panel will spring open.

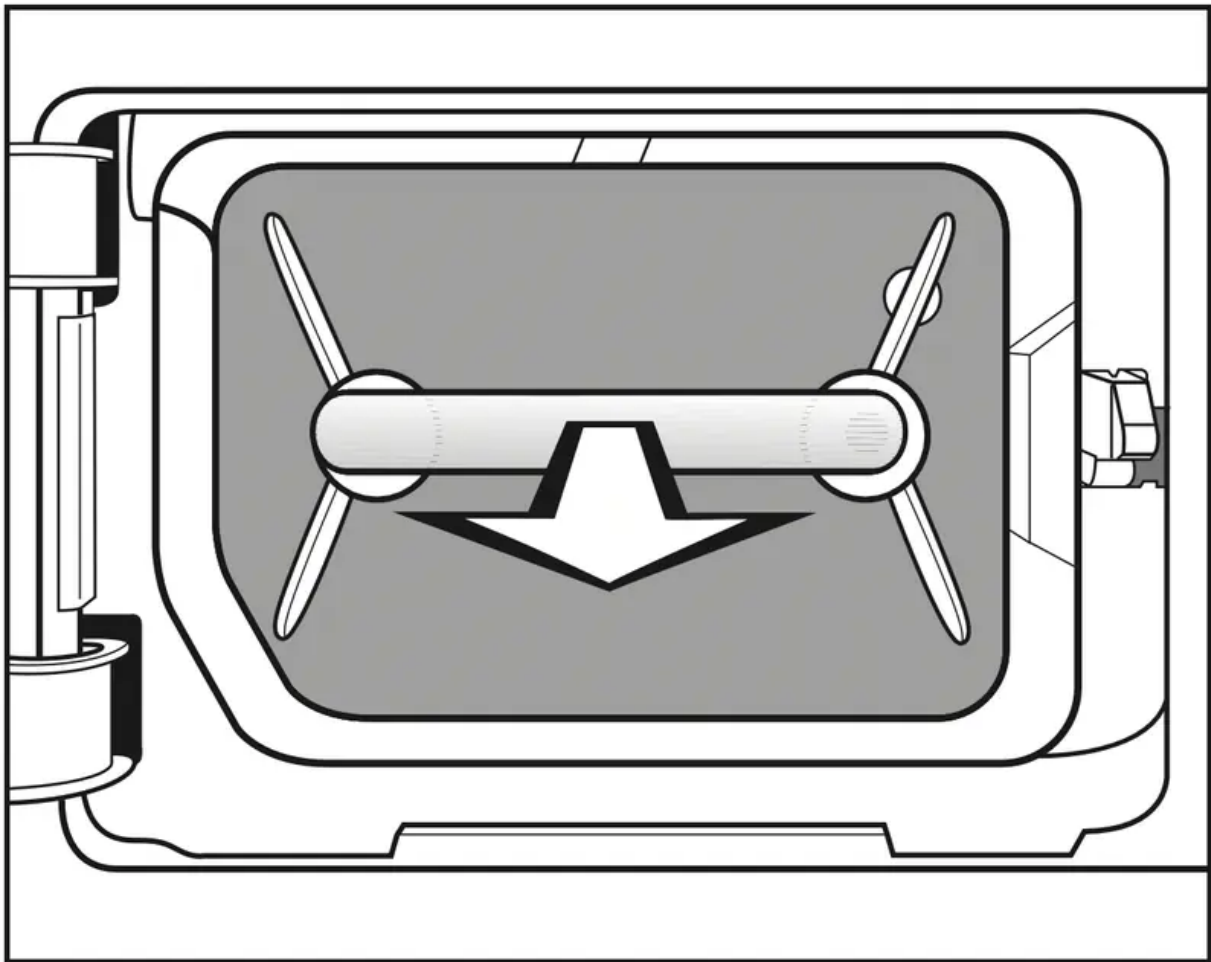

Pull the plinth filter out by the handle.

This causes the right-hand guide pin in the dryer to come out. This pin ensures that the heat exchanger access panel can only be closed if the plinth filter is inserted the right way round.

### **Cleaning**

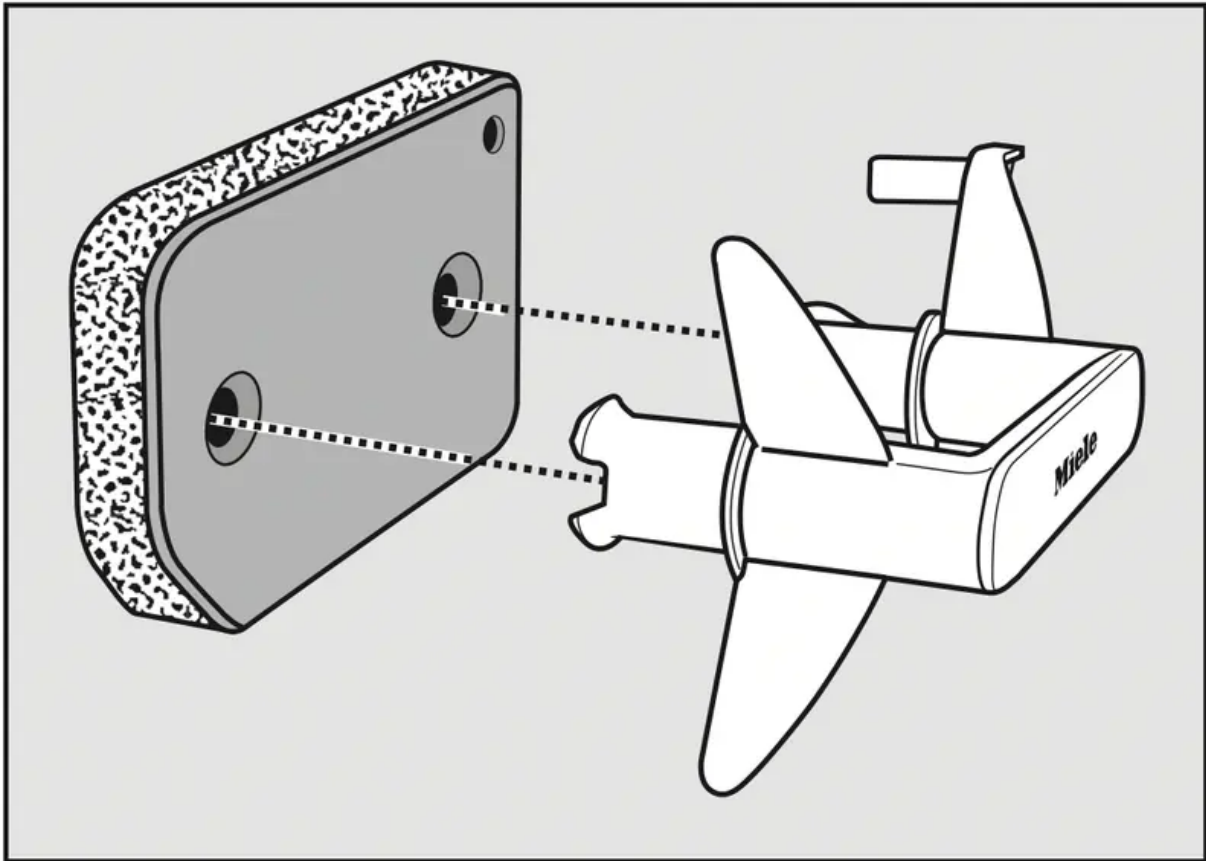


- Pull the handle out of the plinth filter.
- You can brush off a heavy build-up of lint on the plinth filter or remove it with a vacuum cleaner.
- Clean the plinth filter thoroughly under clear, running water.

**WARNING:** Do not add any chlorinecontaining cleaning agents or detergents to the water. In the long run, these detergents could damage the plinth filter material and make it brittle.

**WARNING:** The plinth filter must not be replaced dripping wet. This can cause a fault.

- Carefully squeeze the water out of the plinth filter.
- Use a damp cloth to remove any lint from the handle.

#### **Cleaning the plinth filter flap**

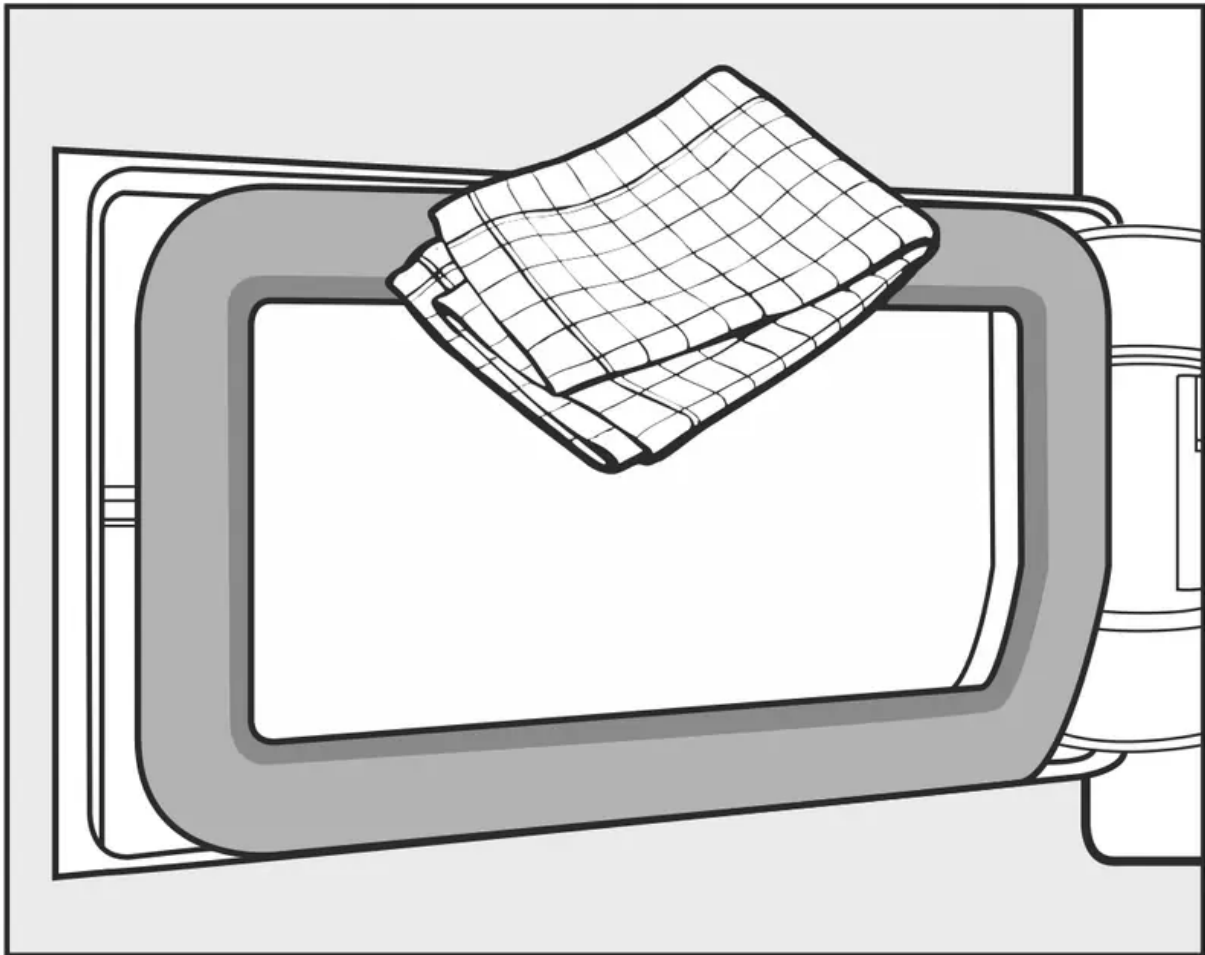

- Use a damp cloth to remove any lint. Make sure that you do not damage the rubber seal when doing this.
- Check whether the cooling fins are blocked with lint (as follows).

### Checking the heat exchanger unit

**WARNING:** Risk of injury from sharp cooling fins.

You could cut yourself.

Do not touch the cooling fins with your hands.


- Look to see if lint has accumulated.

If there is visible soiling:

**WARNING:** Damage due to incorrect cleaning of the heat exchanger.


The dryer will not dry if the cooling fins are damaged or bent.

Use a vacuum cleaner with a dusting brush attached to clean the cooling fins. Only pass the vacuum cleaner brush over them lightly, without applying any pressure.

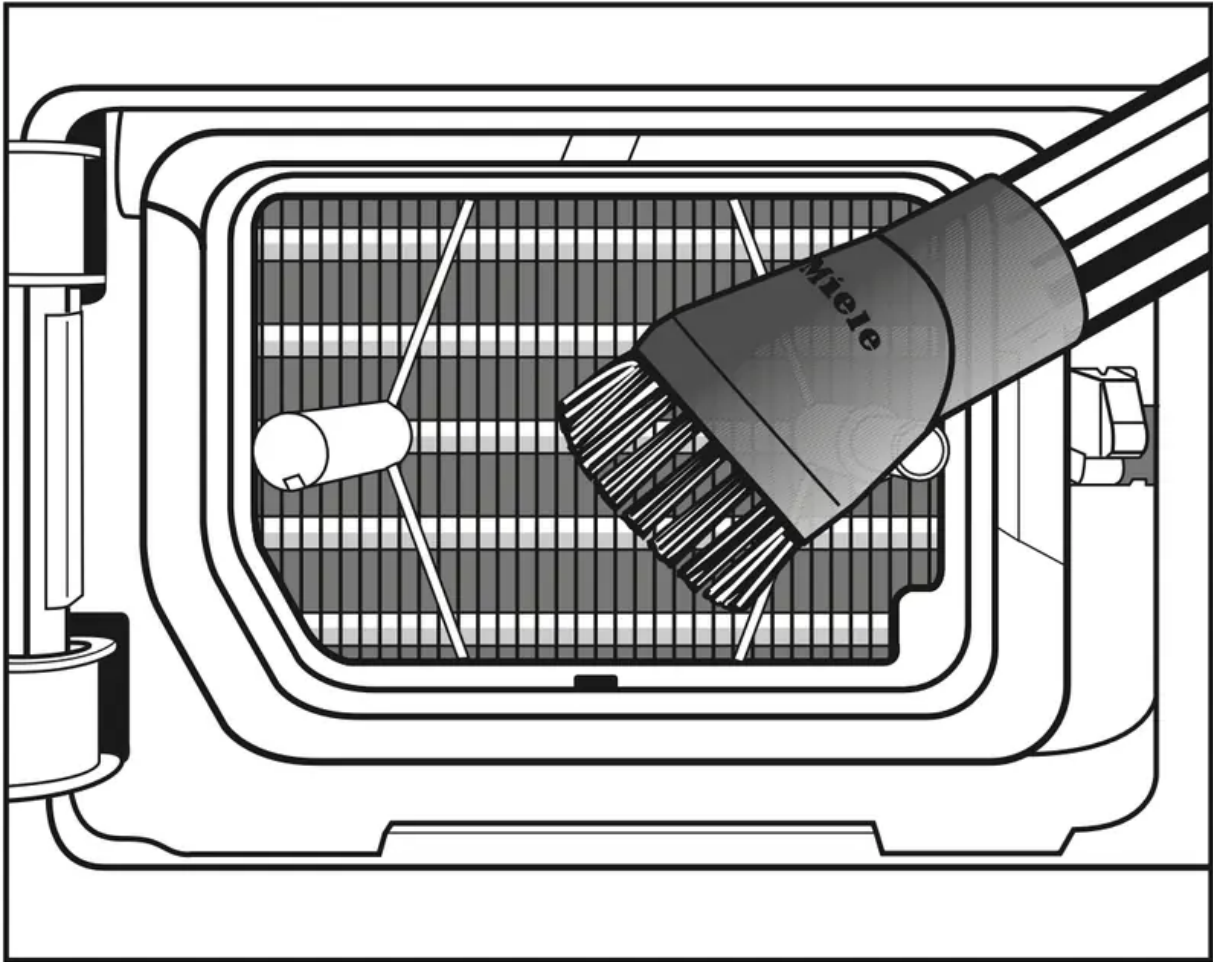


Carefully vacuum up any visible lint or dirt.

**Inserting the plinth filter**

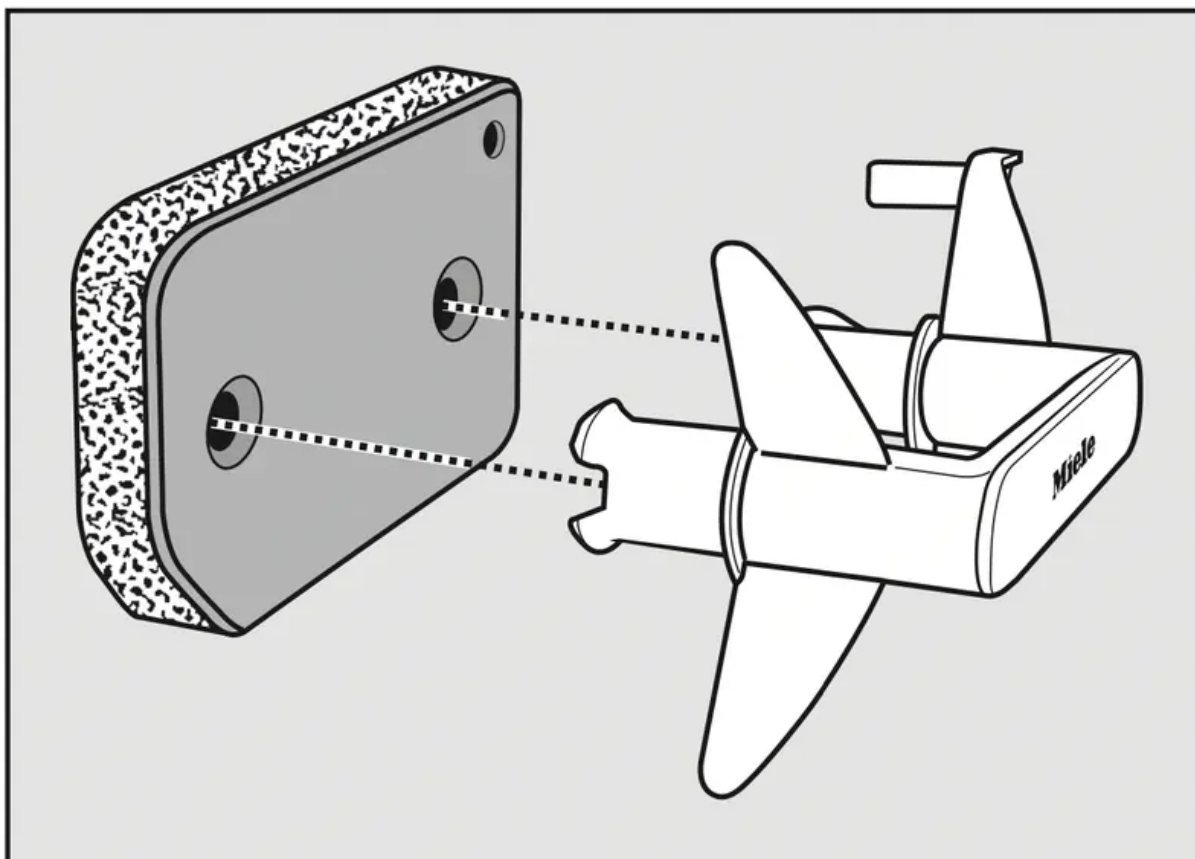

Fit the filter back on the handle. Make sure it is the correct way round.

To ensure that the filter is positioned correctly in front of the heat exchanger unit:

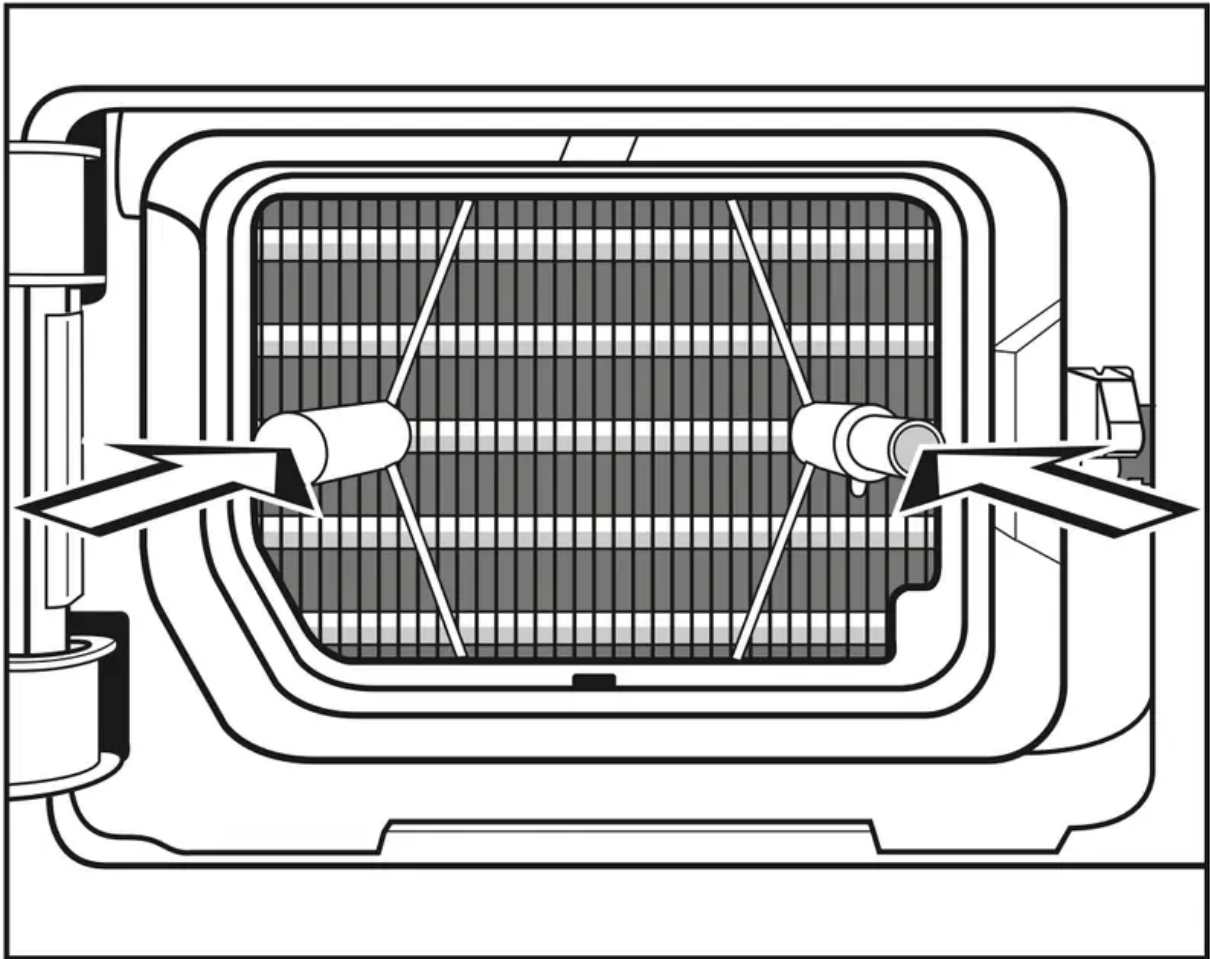

- First insert the handle with the plinth filter attached over the two guide pins:
  - The word Miele on the handle must be the correct way up.
- Push the plinth filter in completely.  
This will push in the right-hand guide pin at the same time.
- Close the heat exchanger flap.

**WARNING:** Damage or ineffective drying if drying takes place without a plinth filter or when the heat exchanger flap is open.

Excessive accumulations of lint can damage the dryer in the long term. If the system is not leak-tight, this can make the drying ineffective.


You may only operate the dryer with the plinth filter fitted correctly and the heat exchanger flap closed.

## Cleaning the dryer

Disconnect the tumble dryer from the electrical supply.

**WARNING:** Damage due to the use of unsuitable care products. Unsuitable care products could damage plastic surfaces and other parts.

Do not use any solvents, abrasive cleaners, glass cleaners, or all-purpose cleaners.

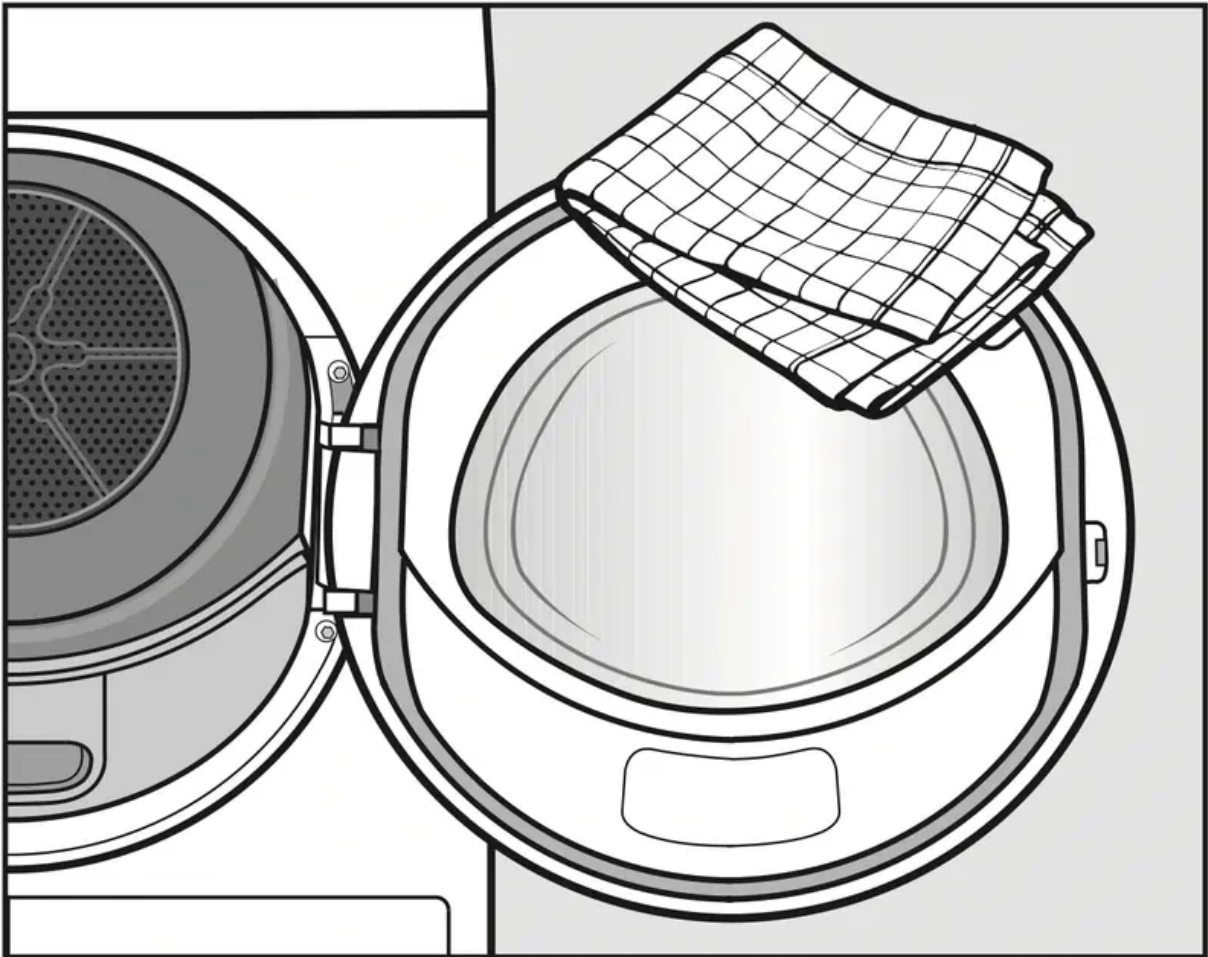



- Clean the tumble dryer and the seal on the inside of the door with a slightly damp soft cloth and a mild solution of liquid dish soap and water.
- Dry all the parts with a soft cloth.

## Troubleshooting







With the help of the following guide minor faults in the performance of the machine, some of which may result from incorrect operation, can be remedied without contacting the Service Department.







This guide may help you to find the reason for the fault, and how to correct it.

Some of the messages in the display are more than one line long. Touch the  or  sensor button to read them in full.

**The display indicates the following messages or faults**



Message	Possible cause and solution
000 lights up after switching on.	<p>Access via a PIN code has been activated.</p> <ul style="list-style-type: none"> <li>You can enter the code.</li> </ul> <p>See “Settings – PIN Code”.</p>
End/Cooling down	<p>The laundry will be cooled down at the end of the program.</p> <ul style="list-style-type: none"> <li>Either remove the laundry and spread it out to cool down or leave it in the tumble dryer to cool down during the cooling phase.</li> </ul>
 Soft Steam	<p>This is to remind you that water is taken from the condensed water container when the Soft Steam program is being used. The condensed water container must be filled with water to at least the – min– marker.</p> <ul style="list-style-type: none"> <li>Fill the condensed water container.</li> </ul> <p>To switch off the message:</p> <ul style="list-style-type: none"> <li>Confirm with OK.</li> </ul>
 Open & close door	<p>This is to remind you to load the laundry when the Soft Steam program is selected.</p> <ul style="list-style-type: none"> <li>Load the laundry in the drum.</li> </ul>
 Clean plinth filter. See  lights up at the end of a program.	<p>There is a build-up of lint in the airways.</p> <ul style="list-style-type: none"> <li>Clean the lint filters.</li> <li>Clean the plinth filter.</li> </ul> <p>See “Cleaning and care”.</p> <p>To switch off the message:</p> <ul style="list-style-type: none"> <li>Confirm with OK.</li> </ul>
 Clean plinth filter. See  lights up	<p>An excessive amount of lint has built up.</p> <ul style="list-style-type: none"> <li>Clean the lint filters.</li> <li>Clean the plinth filter.</li> <li>Clean the air duct area underneath the plinth filter.</li> </ul>

<p>after a program has been interrupted.</p>	<ul style="list-style-type: none"> <li>• Clean the heat exchanger.</li> </ul> <p>To switch off the message:</p> <ul style="list-style-type: none"> <li>• Switch the dryer off and then on again.</li> </ul>
<p> Empty container</p> <p>See  lights up after a program has been interrupted.</p>	<p>The condensed water container is full or there is a kink in the drain hose.</p> <ul style="list-style-type: none"> <li>• Empty out the condensed water container.</li> <li>• Check the drain hose.</li> </ul> <p>To switch off the message:</p> <ul style="list-style-type: none"> <li>• Open and close the door while the dryer is switched on or switch the dryer off and back on again.</li> </ul>
<p> Blockage detected.</p> <p>See  lights up after a program has been interrupted.</p>	<p>The laundry is unevenly distributed or has rolled up.</p> <ul style="list-style-type: none"> <li>• Open the door and untangle the laundry, and remove a few items, if necessary.</li> <li>• Switch the dryer off and then on again.</li> <li>• Start a program.</li> </ul>
<p>  Service Fault F XXX</p> <p>lights up after a program has been interrupted.</p>	<p>There is no obvious cause.</p> <ul style="list-style-type: none"> <li>• Switch the dryer off and then on again.</li> <li>• Start a program.</li> </ul> <p>If the program is interrupted again and an error message appears, there is a fault. Contact Miele Technical Service.</p>

## Unsatisfactory drying results

Problem	Possible cause and solution
The laundry is not sufficiently dry.	<p>The load consisted of different types of fabric.</p> <ul style="list-style-type: none"> <li>• Finish drying using the Time Dry timed drying program.</li> <li>• Select a more suitable program next time.</li> </ul> <p><b>Tip:</b> You can alter the residual moisture level for some programs. See “Settings”.</p>
The laundry or feather- filled pillows develop a smell after drying.	<p>The laundry was washed with insufficient detergent. Feathers have the property of developing a significant odor when they are warm.</p> <ul style="list-style-type: none"> <li>• Laundry: use sufficient detergent.</li> <li>• Pillows: take out of the tumble dryer and air them.</li> <li>• Use a fragrance capsule (available as an optional accessory) for your favorite fragrance.</li> </ul>
Items made of synthetic fibers are charged with static electricity after drying.	<p>Synthetic fibers tend to attract static charge.</p> <ul style="list-style-type: none"> <li>• Static charge can be reduced by adding a fabric softener to the final rinse in the washing program.</li> </ul>
There is a build-up of lint.	<p>Lint is principally the result of friction when garments are being worn and to some extent when they are being washed. Machine drying hardly causes any lint to form.</p> <p>Lint is collected by the lint filters and the plinth filter and can be removed easily.</p> <ul style="list-style-type: none"> <li>• See “Cleaning and care”.</li> </ul>


## The drying cycle duration is very long.

Problem	Possible cause and solution
<p>The drying process goes on too long or even switches off.*</p>	<p>The room in which the tumble dryer is located is too warm.</p> <ul style="list-style-type: none"> <li>• Ventilate the room thoroughly.</li> </ul>
	<p>Detergent residues, hair, and fine lint can clog the filters.</p> <ul style="list-style-type: none"> <li>• Clean the lint filters and the plinth filter.</li> <li>• Remove visible lint:                      . . . on the bottom left, behind the flap in the heat exchanger cavity (see “Cleaning and care”); . . . at the bottom right of the cooling fins behind the grille (see the end of this section).</li> </ul>
	<p>The laundry is unevenly distributed or has rolled up. The tumble dryer has been overloaded.</p> <ul style="list-style-type: none"> <li>• Untangle the laundry and remove a few items.</li> <li>• Start a program.</li> </ul>
	<p>The cool air intake (bottom right grille) is blocked.</p> <ul style="list-style-type: none"> <li>• Move any objects, such as a laundry basket, away from the dryer.</li> </ul>
	<p>The lint filters and the plinth filter were wet when replaced.</p> <ul style="list-style-type: none"> <li>• The lint filters and the plinth filter must be dry.</li> </ul>
	<p>The laundry is too damp.</p> <ul style="list-style-type: none"> <li>• Spin using a higher spin speed in the washing machine.</li> </ul>
	<p>Metallic components, e.g., zippers, have prevented the dryer from registering the correct moisture level.</p> <ul style="list-style-type: none"> <li>• Open the zippers next time.</li> <li>• If the problem recurs, dry these items using the Time Dry timed drying program.</li> </ul>

\* Switch the tumble dryer off and on again before starting a new program.




## General problems with the tumble dryer

Problem	Possible cause and solution	
You can hear operating noises (buzzing/ humming).	<p>This is not a fault.</p> <p>The compressor (heat pump) is operating or you have selected the Soft Steam program.</p> <ul style="list-style-type: none"> <li>• No action required. These noises are quite normal and can be heard when the compressor or the condensed water pump is operating.</li> </ul>	
A program does not start.	<p>There is no obvious cause.</p> <ul style="list-style-type: none"> <li>• Connect the power plug.</li> <li>• Turn on the tumble dryer.</li> <li>• Close the door.</li> <li>• Check whether the fuse has tripped.</li> </ul> <p>Power outage? When power is restored, any previously running program will restart automatically.</p>	
The display is dark and the Start/Stop button is flashing slowly.	<p>The display has switched off automatically to save energy (Standby mode).</p> <p>The drum will turn at intervals in the Anti-crease phase.</p> <ul style="list-style-type: none"> <li>• Press any button. Standby will end.</li> </ul>	
The tumble dryer is switched off at the end of the program.	<p>The tumble dryer switches off automatically. This is not a fault, but a normal function.</p> <ul style="list-style-type: none"> <li>• See “Settings – Appliance switch-off”.</li> </ul>	
The display is in a different language.	<p>A different language has been selected in “Settings, Language The interior drum lighting does not come on.</p>	<p>Not a fault. The drum lighting switches off automatically in the following cases:</p>


	<p>If the door is closed.</p> <p>If the door remains open for an extended period of time.</p>
<p>Insufficient spray for the Soft Steam program.</p>	<p>The lint filter in the condensed water container is clogged.</p> <ul style="list-style-type: none"> <li>• Clean the lint filter in the condensed water container. See “Lint filter in the condensed water container”.</li> </ul>
	<p>The spray jet in the door opening is heavily calcified.</p> <ul style="list-style-type: none"> <li>• Replace the spray jet. See “Spray jet for the SoftSteam program”.</li> <li>• Only use condensed water. Do not use tap water.</li> </ul> <p>The frequent use of tap water leads to limescale deposits.</p>

### Lint filter in the condensed water container

**WARNING:** In some circumstances, there can be problems running the Soft Steam program. The lint filter at the end of the hose which is connected to the rubber seal in the condensed water container could be blocked.

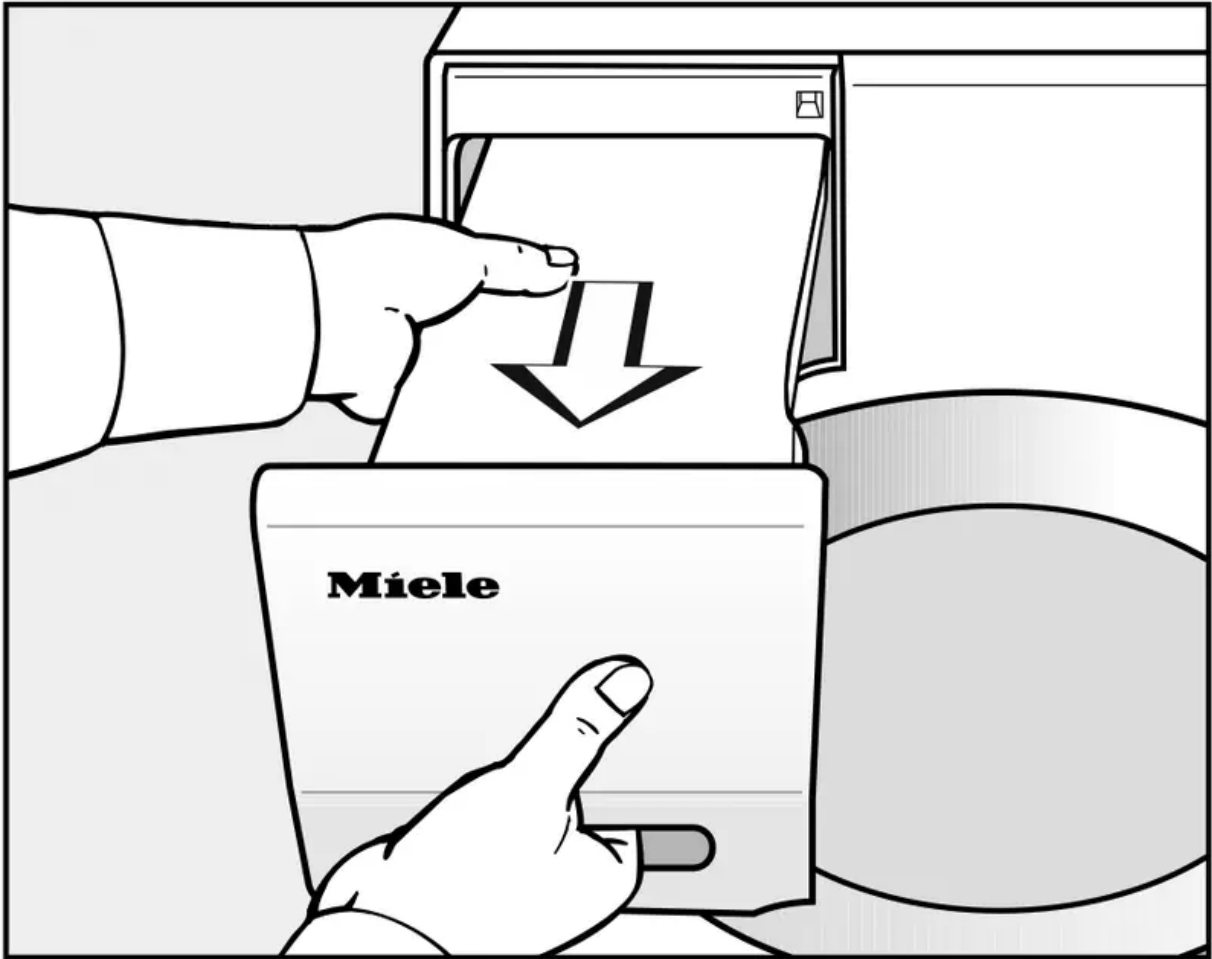


Remove the condensed water container.

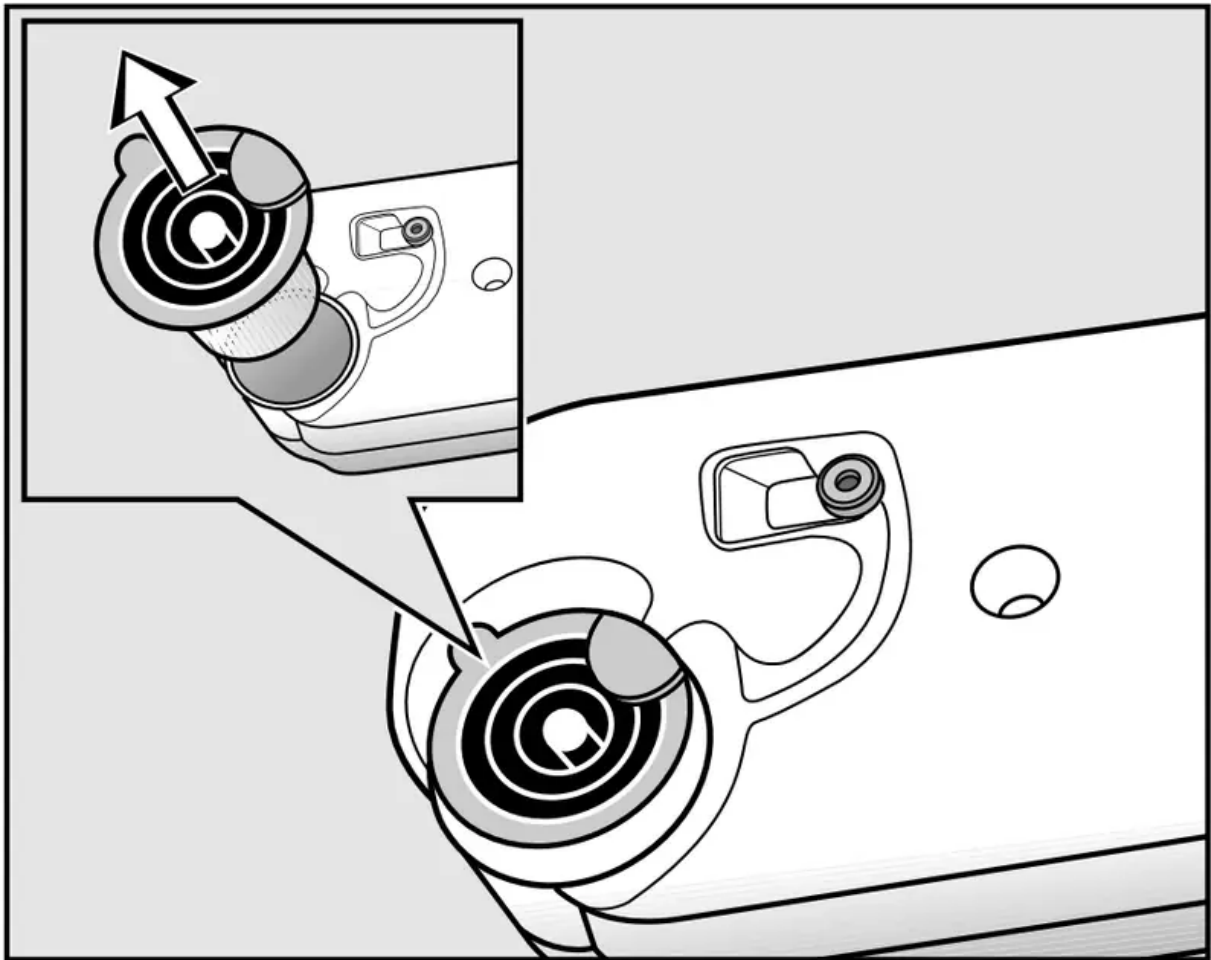

Pull out the spout. Remove the spout by holding the side lug and pulling upwards.

**WARNING:** To avoid detaching the hose, be careful not to tug on it.

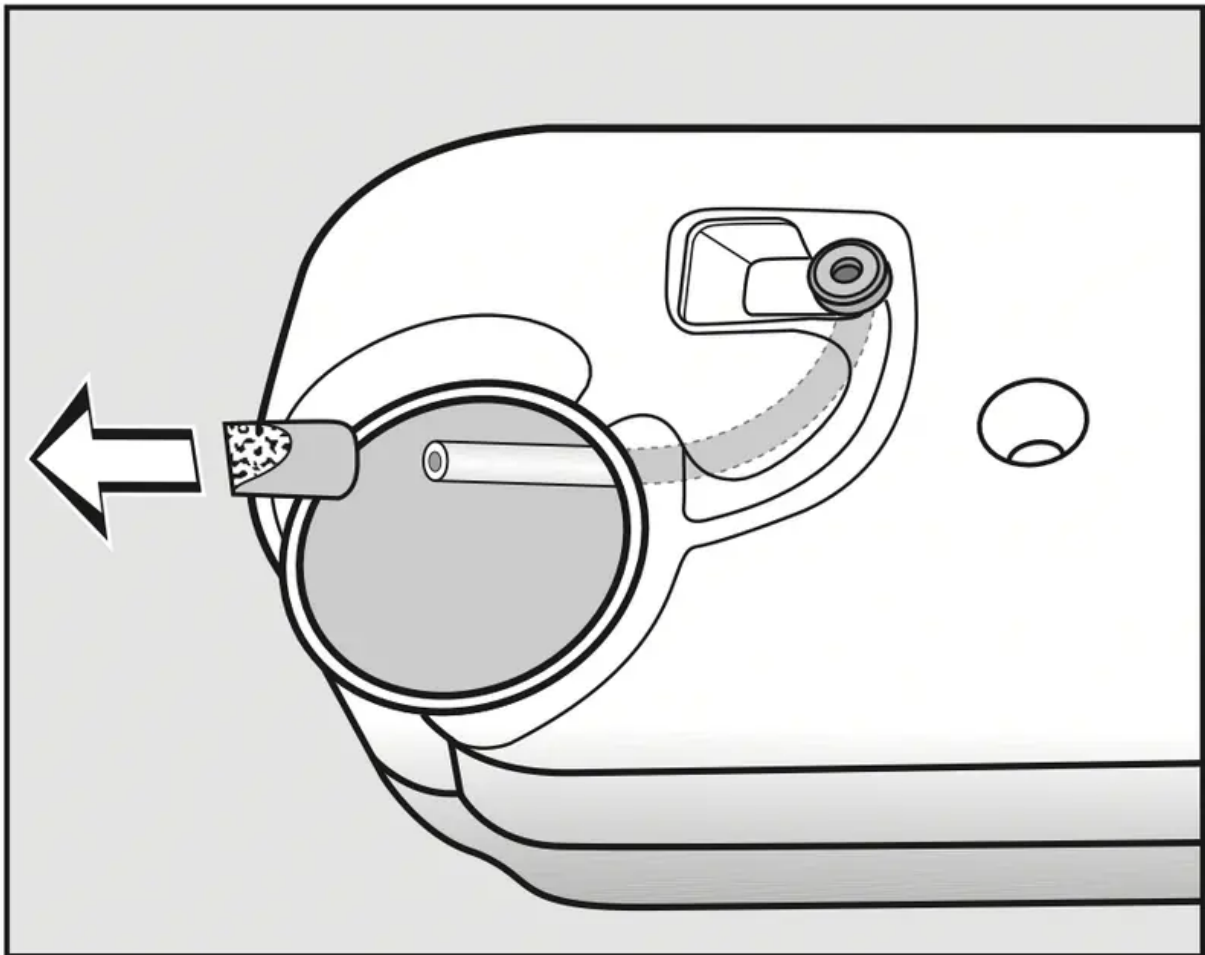

- Guide the end of the hose through the opening and hold it securely with one hand.
- Use your other hand to pull the lint filter off the hose.
- Rinse the lint filter with a jet of water until all the lint has been removed.
- Refit the cleaned lint filter onto the hose.
- Now feed the hose with its lint filter attached into the condensed water container.
- Refit the spout in the condensed water container ensuring that it is positioned correctly.  
Please refer to the image.

### **Spray jet for the Soft Steam program**

**WARNING:** Limescale deposits will impair the spray jet.

In this case, the spray jet must be removed and replaced with a new one (see “Optional accessories”).


You can only replace the spray jet using a special tool. The special tool is supplied with the new spray jet.

**WARNING:** Do not use any other tools. This would damage the spray jet or the dryer.

**WARNING:** The Soft Steam program must never be used without the spray jet fitted and screwed in correctly.

- Open the door of the tumble dryer.

The spray jet is located in the top left of the door opening.

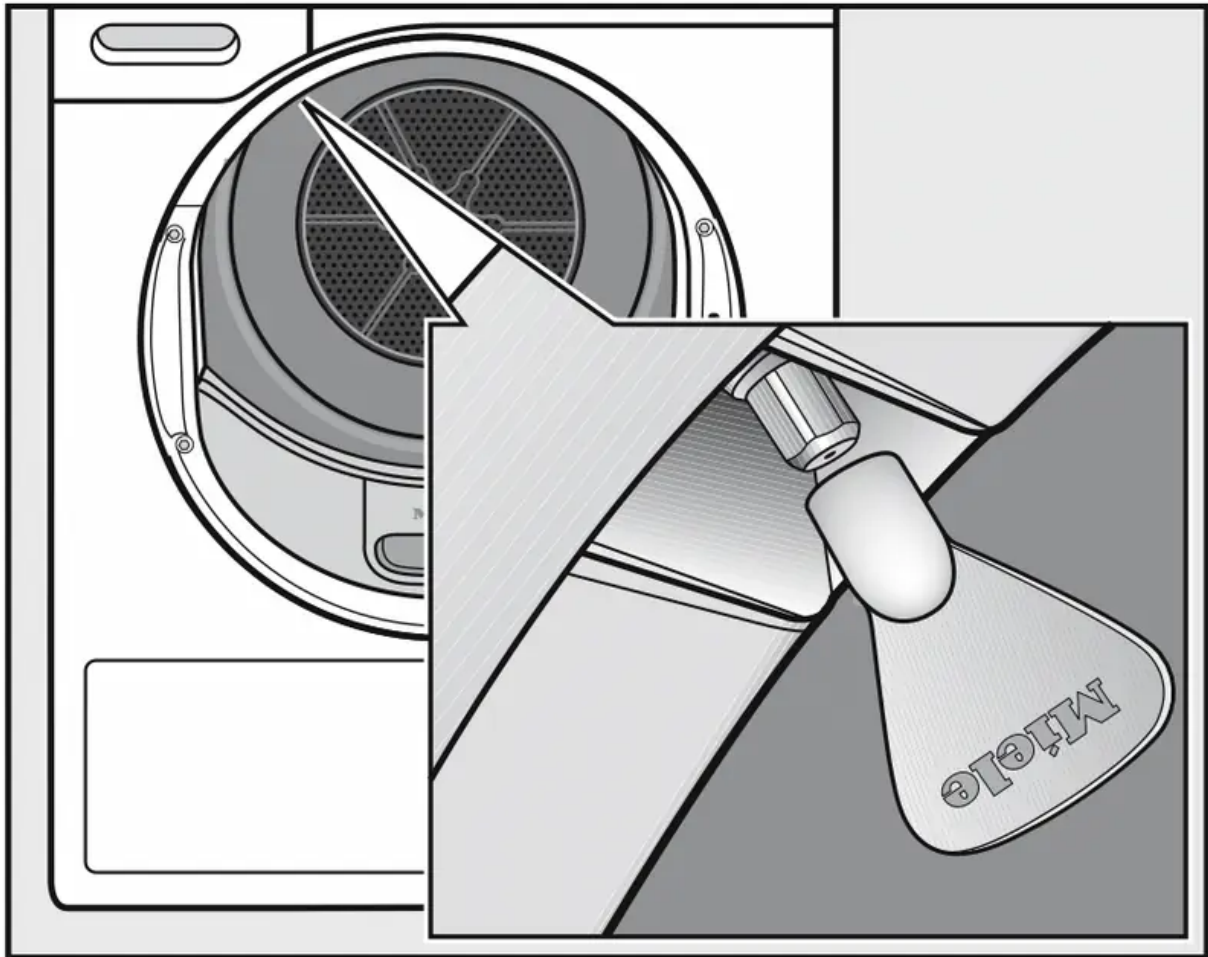


- Attach the tool to the spray jet.
- Turn the tool counterclockwise to unscrew the spray jet.
- Insert the new spray jet in the tool.
- Turn the tool clockwise to screw the spray jet securely in position.

### Bottom right grille

**WARNING:** In general, the cooling fins behind the grille on the bottom right do not need cleaning. They should only be cleaned if the drying process is taking an exceptionally long time due to a very high level of dust or lint in the room in which the dryer is located.

- First open the flap for the plinth filter (bottom left).

To remove the grille, the catch underneath it needs to be released using a teaspoon.

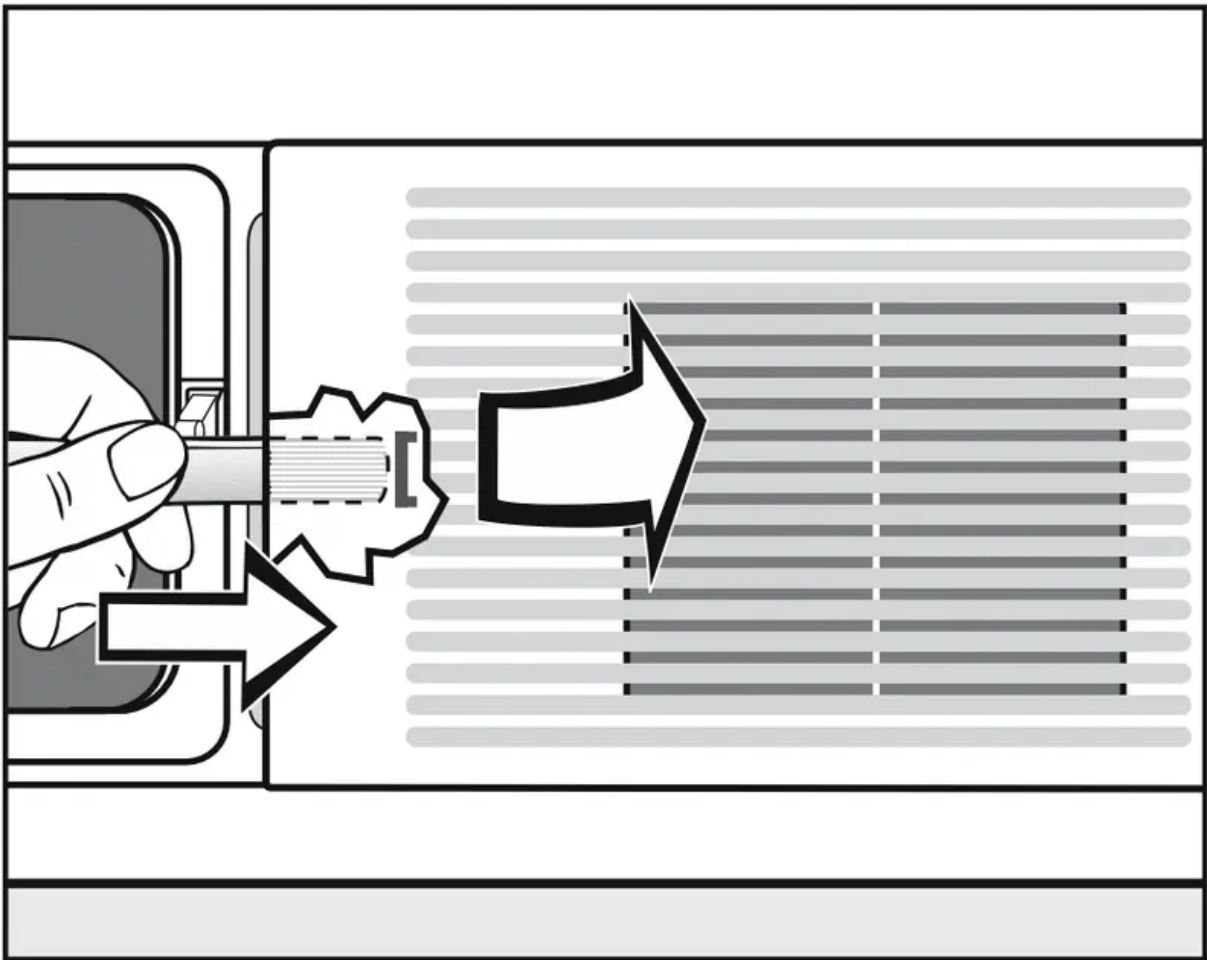


- Insert a spoon handle underneath the grille in the middle.
- Press the spoon handle against the catch and lever the grille open.
- Remove the grille.

**WARNING:** Danger of injury! Do not touch the cooling fins with your hands. You could cut yourself.

**WARNING:** Use a vacuum cleaner with a dusting brush attached to clean the cooling fins. Only pass the vacuum cleaner brush over them lightly, without applying any pressure.

Take care not to bend the cooling fins out of shape or to damage them.

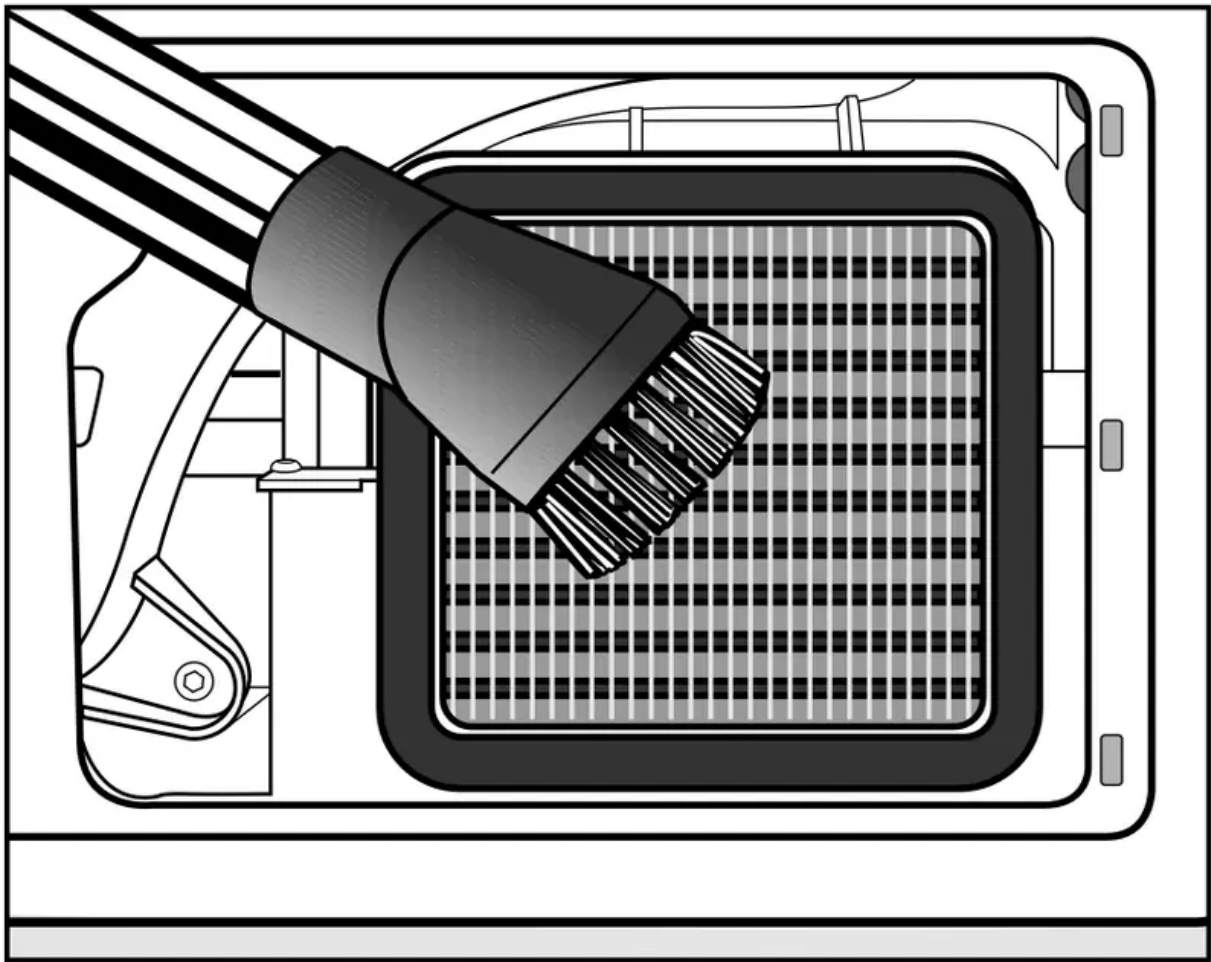

- Carefully vacuum up any visible lint or dirt.
- Re-insert the 3 hooks on the grille into the appropriate holes in the front of the dryer.
- Press the grille firmly back into position by pressing it in at the middle on the left.

### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.