


PRODUCT DESCRIPTION

Control panel overview

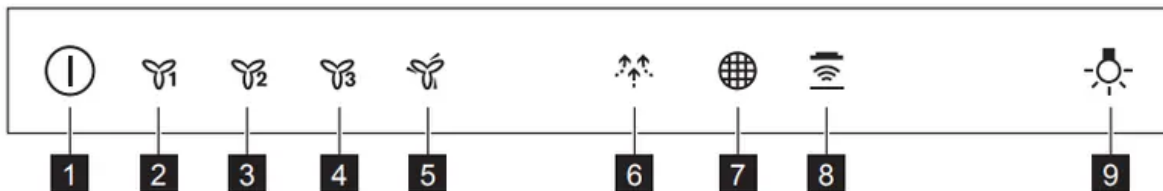

 




1. On / Off
2. First motor speed
3. Second motor speed
4. Third motor speed
5. Maximum motor speed
6. Breeze function
7. Filter reminder
8. Hob to Hood function
9. Lamp

DAILY USE

Using the hood

Check the recommended speed according to the table below.


	While heating up food, cooking with covered pots.
	While cooking with covered pots on multiple cooking zones or burners, gentle frying.
	While boiling, frying big quantities of food without a lid, cooking on multiple cooking zones or burners.
	While boiling, frying big quantities of food without a lid, big humidity. The hood operates on maximum speed. After 8 minutes the appliance returns to previous setting.
	While delicate cooking, to vent the kitchen. The hood operates on the lowest speed. After 60 minutes the appliance turns off.

It is recommended to leave the hood operating for approximately 15 minutes before cooking

The control Panel is a sensor field. Touch the symbols to activate the functions

To operate the hood:

1.

Turn on the appliance by pressing the  symbol
You can now activate the functions.

2. To activate the function touch the symbol.

3.

If needed, touch the light symbol  to illuminate the cooking surface.


To turn off the appliance press the  symbol again


Hob to Hood function

It is an automatic function which connects the hob with a hood. Both the hob and the hood have an infrared signal communicator. Speed of the fan is defined automatically on basis of mode setting and temperature of the hottest cookware on the hob. You can also operate the fan using the hob manually. The function can be activated from panel of the hob.

For more information how to use the function refer to the hob user manual

Activating Maximum Motor Speed


When you press the button , the Maximum Motor Speed starts to operate for 8 minutes. After that time, the appliance returns to its previous speed settings.

When the function is turned on, additional touch on the button  does not have any effects.

Activating and deactivating the filter notification

Filter alarm reminds to change or clean the charcoal filter and clean the grease filter. The filter


indicator  is turned on (white) for 30 seconds if the grease filter must be cleaned.


The filter indicator  flashes (white) for 30 seconds if the charcoal filter must be replaced or cleaned.


Refer to filter alarm in care and cleaning chapter.

1. Switch on the control panel.

2. Make sure that the icons are turned off.

3. To activate or deactivate the charcoal filter notification touch the button  for 3 seconds.

If the charcoal filter notification is activated, the filter icon  flashes (white) five times.

If the charcoal filter notification is deactivated, the filter icon  flashes (white) three times.


CARE AND CLEANING

Cleaning the grease filter

Each filter must be cleaned at least once a month. Filters are mounted with the use of clips and pins on the opposite side.

To clean the filter:

1. Press the handle of the mounting clip on the filter panel underneath the hood (1).

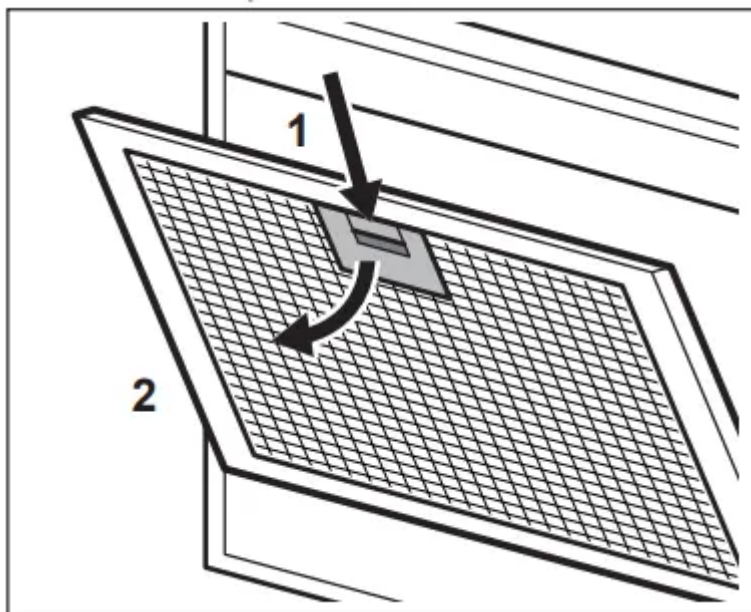

2. Slightly tilt the front of the filter downwards (2), then pull.
Repeat the first two steps for all filters
3. Clean the filters using a sponge with non abrasive detergents or in a dishwasher.
The dishwasher must be set to a low temperature and a short cycle. The grease filter may discolour, it has no influence on the performance of the appliance.
4. To mount the filters back follow the first two steps in reverse order. Repeat the steps for all filters if applicable.


Replacing the charcoal filter

WARNING! The charcoal filter is non-washable!

The time of saturation of the charcoal filter varies depending on the type of cooking and the regularity of cleaning the grease filter.

To replace the filter:

1. Remove the grease filters from the appliance.
Refer to "Cleaning the grease filter" in this chapter.
2. press the tab (1) and slightly tilt the front of the filter.

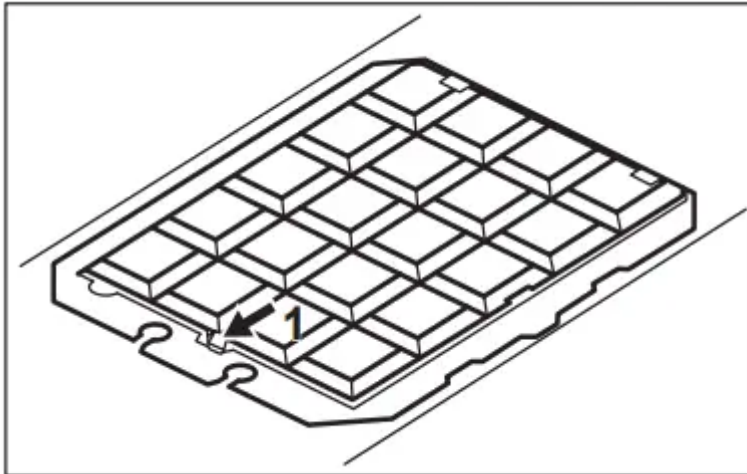

3. To install a new filter, perform the same steps in reverse order. In any case, it is necessary to replace the filters at least every four months.

Filter alarm

Refer to cleaning the grease filter in this chapter.

Refer to cleaning the charcoal filter or replacing the charcoal filter (depends on filter type).

To reset the alarm:



Touch the  for 3 seconds.

Replacing the lamp

This appliance is supplied with a LED lamp. This part can be replaced by a technician only. In case of any malfunction refer to "Service" in the "Safety Instructions" chapter.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

