

User ManualYour new washer-dryer

Description of the washer-dryer

The washer-dryer can be used in 3 ways :

- washing only
- drying only
- successive washing and drying.

The successive wash-dry programme automatically shifts from the wash cycle to the dry cycle without further intervention.

Drying is achieved using the condensation principle. The condensate that is produced during drying runs via the Drain hose into the Drain tank.

Caution: the water supply hose and water Drain hose must be correctly connected during washing and drying The tap must be open.

A safety device prevents the door from being opened during operation.


Before opening

Make sure that there is no water in the drum and that the drum is not moving.

Emergency release

In the event of a power cut, the door can be released mechanically

Control panel

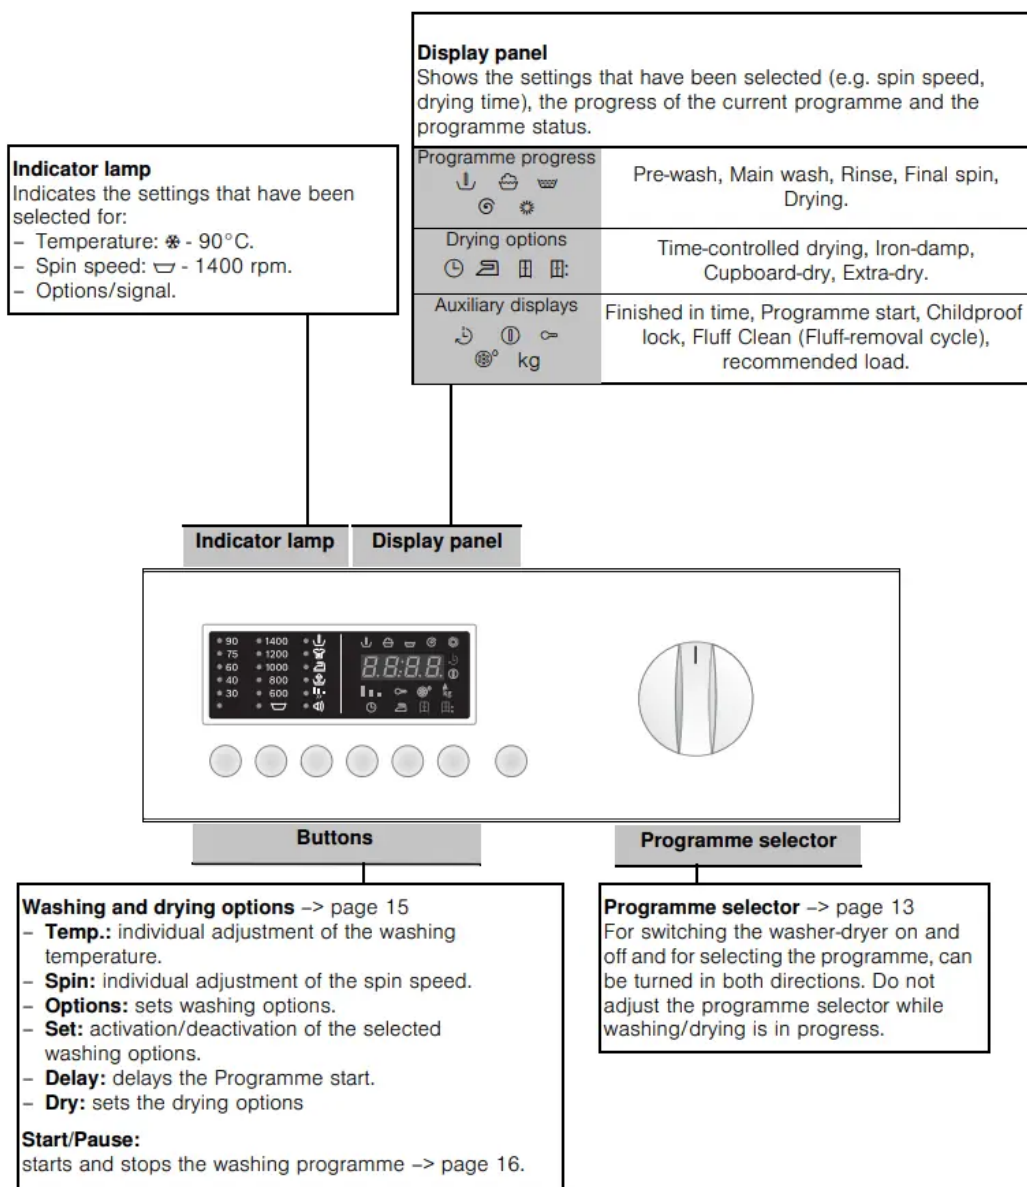

Before washing for the first time

The washer-dryer was tested before leaving the factory.

To remove any water that may be left over from the test, do not load any laundry the first time that you run a wash programme.

- Make sure that the transport safety bolts on the rear of the washer dryer have been removed.
- Do not load any laundry.
- Close the door.
- Turn on the tap.
- Pull out the detergent drawer.

- Add ½ a measuring cup of detergent to compartment II → page 11.

Do not use detergents for wool or delicates (these cause foam to be created).

- Close the detergent drawer.
- Turn the programme selector to the 60°C programme.
- Press the Start/Pause button.
- At the end of the programme, turn the programme selector to Off.
- Open the door.

 
 
 
 
Leave the door open to allow the inside of the washer-dryer to dry


Preparing and sorting the laundry

Sorting laundry for washing

- Wash white laundry separately from coloureds.
- Unhemmed or torn items should not be washed in the washer-dryer, as they may fray.
- The laundry may be damaged if you do not observe the fabric care symbols.


 
Only wash laundry with the following care labels:

Care label	Type of laundry
	Cottons 90 °C.
	Coloureds 60 °C, 40 °C, 30 °C.
	Easy-care 60 °C, 40 °C, 30 °C.
	Hand- and machine-washable silk, 40 °C, 30 °C, cold.

Laundry with care symbol  **Do not wash.**

Sorting laundry for drying

Only dry laundry that is labelled "suitable for tumble-drying" or which has the following care symbols:

Care label	Type of laundry
	Dry at normal temperature.
	Dry at low temperature (delicate drying).

Do not wash the following fabrics in the washer-dryer:

- Do not machine dry laundry with the  care symbol.

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic fabrics) - they may crease.
- Dripping-wet laundry - high energy consumption
- Wool or fabrics containing wool.

Preparing laundry for washing

Loose foreign bodies (e.g. coins, paper-clips, needles, nails) may damage the laundry and components of the washer-dryer (e.g. the drum).


- Drain the pockets of all items.
- Brush any sand out of pockets and collars.
- Pretreat any stains.
- Close zips, do up cover buttons.
- Remove curtain fittings or place curtains in a laundry bag.
- Wash the following in a laundry bag/pillowcase:
 - Delicates, e.g. tights, curtains,
 - Small items, e.g. socks or handkerchiefs,
 - Underwired bras (the underwiring may come loose during the washing process and cause damage).
- Turn trousers, knitwear and knitted fabrics, e.g. jerseys, T-shirts or sweatshirts inside out.

Preparing laundry for drying

- Only dry fabrics that have already been washed, rinsed and spun.
- Also spin easy-care fabrics before drying.
- Sort the items for washing according to material and desired level of dryness to ensure even drying.

Detergents and Care Product


Detergent drawer

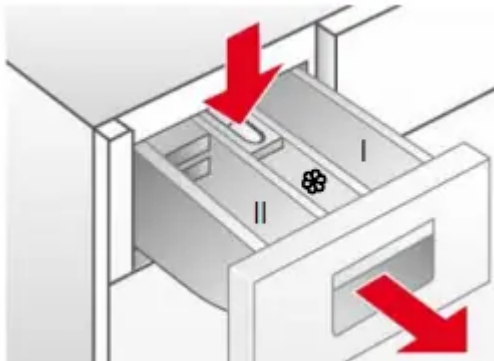

The detergent drawer is divided into three compartments

Compartment I : detergent for pre-wash.

Compartment II : detergent for main wash,

Compartment  : Liquid additives, such as starch or fabric softener.

Additives are automatically dispensed during the final rinse cycle.

- Do not exceed the maximum capacity, otherwise compartment i may be emptied too early.
- Dilute viscous additives with water to prevent blockages.

Liquid detergent insert: this must be inserted before liquid detergents are used.

To do this:

Pull out the detergent drawer as far as the stop.

Press on the zone labelled PUSH and take out the detergent drawer.

Pull the insert in compartment II forwards as far as the stop and push it down.


Insert the detergent drawer.

Descaler

Descaler can be added to compartments I and II according to the manufacturer's instructions. Add detergent first, followed by the descaler.


Detergents and care products

Normally soiled laundry

- Set the programme.
- Do not select  (Pre-wash).

- Add all the detergent, according to the manufacturer's instructions, to compartment II of the detergent drawer.

Heavily soiled laundry

- Set the programme.
- Select  (Pre-wash) .
- Add 1/4 of the recommended amount of detergent to compartment I of the detergent drawer and 3/4 of the detergent to compartment II.

Measuring liquid detergent

Only use liquid detergent for the main wash cycle with no prewash.

To do this:

- Add the recommended amount of detergent to a liquid detergent measuring aid and place it in the drum.
or
- After folding down the liquid detergent insert, pour the detergent into compartment II of the detergent drawer.
- The scale on the liquid detergent insert helps to measure the correct dosage of liquid detergent.
- If compartment II is used for washing powder, the liquid detergent insert must be folded up

Programmes

Programme selector

The programme selector is used to set the washing and drying programmes.

The time remaining until the end of the programme and the Beladungsmenge (Load) are shown on the display panel.

Washing programmes

* depends on the model

Cottons

Suitable for hard-wearing fabrics, heat-resistant fabrics made from cotton or linen.

- Coloureds up to 60 °C.
- Whites 60 °C to 90 °C.

Cottons Eco

Washing programme for the best possible washing result with minimum energy and water consumption.

Easy-Care

Washing programme for less hard-wearing fabrics made from cotton, linen, synthetic fibres or blended fabrics. It is advisable to sort the laundry by colour.

Delicates/Silk

Gentle programme for delicate, washable fabrics, e.g. silk, satin, synthetics or blended fabrics (e.g. curtains). Gentle spinning between the rinse cycles and reduced final spin speed.



Wool becomes matted when subjected to heat, moisture and movement. The woollens programme takes these qualities into account and finds a compromise between standing still and movement.

Suitable for hand- or machine-washable fabrics made from wool or a wool blend.

Rapid 15'

Short programme for easy-care, lightly soiled fabrics made from cotton, linen, synthetics or blends. Suitable for freshening up items or for washing new items before wearing for the first time. The programme takes 15 minutes.

Mix

For mixed items of laundry made of various hard-wearing and easy-care fabrics.

Sports

For washing functional clothing and sports wear made from microfibre and synthetics. Reduced creasing and additional rinse cycle.

Washing programmes

* depends on the model

Sensitive

For washing fabrics with increased hygiene requirements or those that will be used by allergy sufferers. The temperature remains constant during the washing process. More intensive rinsing with increased water level. For hard-wearing and easy-care fabrics made from cotton or linen.


Night Wash

Particularly quiet wash programme with a reduced final spin.


Sleep mode. Once the programme has finished, the display goes out, but can be reactivated by pressing any button.

Drying programmes

Intensive Dry

Intensive drying for a  (robust fabrics), at 90°C.



Gentle Dry

Gentle drying for  (easy-care fabrics), 60°C.

Special programmes

Fluff Clean

The drum must be empty.

This programme is designed to clean the drying cycle of any fluff deposits. The washer-dryer uses the flashing symbol  (Fluff removal cycle) in the display panel to show that this programme must be run. The electronic cycle counter is then automatically reset. The  (Fluff Clean) symbol goes out after the programme starts.

To run the Fluff Clean, proceed as follows:

- Make sure that the drum is completely empty and close the door.
- Turn the programme selector to Fluff Clean.
- Press the Start/Pause button.


The Fluff Clean programme can also be run at any time without prompting by the appliance.

Rinse + Spin:

An additional rinse cycle with a final spin. If the laundry is to be removed dripping wet, set the Spin speed to \$ (Rinse hold) before Programme start.

Drain + Spin:

Drain the rinsing water following a programme with  (Rinse hold) .

- Turn the programme selector to Drain + Spin.
- Set the spin speed to  (Rinse hold).
- Press the Start/Pause button.

or

Drain and spin at the desired spin speed:

- Turn the programme selector to Drain + Spin.
- Press the Spin button repeatedly until the desired spin speed is set.
- Press the Start/Pause button.

Washing and drying options

Temp. button

The temperature can be adjusted individually for each programme. To adjust it, press the Temp. button repeatedly until the required temperature is displayed.

Spin speed button

The spin speed can be individually adjusted for each programme. To set the spin speed, press the Spin button repeatedly until the required spin speed is displayed.

Rinse hold

 (Rinse hold) deactivates the spin function. The laundry remains in the rinsing water.

Unbalanced load detection system

The automatic unbalanced load detection system ensures that the laundry is evenly distributed using several initial spins. If the laundry is extremely unevenly distributed, the speed of the final spin is reduced or the spin cycle is not performed for safety reasons.

Option button

The set programmes can be individually adjusted.





 

To choose the required option:

- Press the Option button repeatedly until the required option is selected (indicator lamp flashes).
- Press the Set button to switch the option on/off (indicator lamp lights up/does not light up).


Set button

If you press and hold the Option ~ button, all the options scroll through.

Options (symbols on the display panel)


 Pre-wash	Prewash at 35 °C. Suitable for heavily soiled laundry.
 Intensive	Prolonged washing time. Suitable for particularly heavily soiled laundry with dried-on stains. Cannot be combined with Flexi Time
 Easy-iron	Special spin sequence with subsequent fluffing. Gentle final spin at reduced speed. Slightly increased residual moisture in the laundry. Reduces creasing and laundry is easier to iron.
 Water Plus	Increased water level and additional rinse cycle. For regions with very soft water or for further improving the rinsing result. Any detergent residues are removed.
 Flexi Time	Sets the washing time. <i>normal-medium-short</i> .
 Signal	Activates or deactivates the audible signal.

Delay button





You can postpone Programme start before it begins. Using the Remaining time, you can determine when the selected programme is to end. The remaining time can be set in one-hour increments, up to a maximum of 24 hours. Press the Delay button repeatedly until the required number of hours is displayed. Then press the Start/Pause button, the programme will start after a delay according to the set  (Remaining time). The required time to the end of the programme is shown on the display panel.

Dry button



The drying programmes can be individually adapted by selecting the drying options.

- Press the Dry button repeatedly until the required drying option is shown on the display panel.
- To deactivate, press the Dry button repeatedly until  is shown on the display.
Drying options (symbols on the display panel)

Drying options (symbols on the display panel)






 Time-controlled drying	The drying time can be set to between 2:40 and 0:00 by repeatedly pressing the Dry button.
 Iron-damp	The residual moisture in the washing is increased. Enables easier ironing.
 Cupboard-dry	The laundry is dry and ready to put away.
 Extra-dry	The laundry is dried intensively. Suitable for laundry that is hard to dry.

Start/Pause button

Press the Start/Pause button to start the selected programme. The  (Remaining time) is shown on the display panel. The  (Programme start) symbol is lit

Programme progress

The programme progress is shown on the display panel:




-  - Pre-wash
-  - Main wash
-  - Rinse
-  - Final spin
-  - Drying

Changing the programme


To change the programme:

- Select a new programme.
- Press the Start/Pause button.

Pausing the programme

Press and hold the Start/Pause button while the programme is in progress until  appears on the display panel.  and the (Remaining time)  appear alternately on the display while the programme is paused. Press the Start/Pause button to continue with the programme.

Cancelling the programme

Press and hold button Start/Pause until  is displayed.

For washing programmes at high temperatures:

- Cooling down laundry: choose Rinse + Spin.
- Press the Start/Pause button.

For programmes at low temperatures:

- choose Drain + Spin.
- Select the Start/Pause button.

Cleaning and care

Housing and control panel

Wipe with a soft, damp cloth.

Remove detergent and cleaning agent residue immediately. Do not clean with a jet of water.

Drum

Remove any foreign bodies from the drum and rubber seals.


Descaling the drum:

- Only use a proprietary brand of descaler with corrosion inhibitor for washing machines for descaling the washer-dryer.
- Observe the manufacturer's instructions regarding use and dosage.
- After descaling and removing rust from the drum, run the Rinse + Spin programme several times to remove any remaining acid.

If any remaining metal objects (e.g. coins, paper clips, needles, nails) have caused rust spots:

- Use chlorine-free cleaning agents; observe the manufacturer's instructions. Never use steel wool.


Detergent drawer

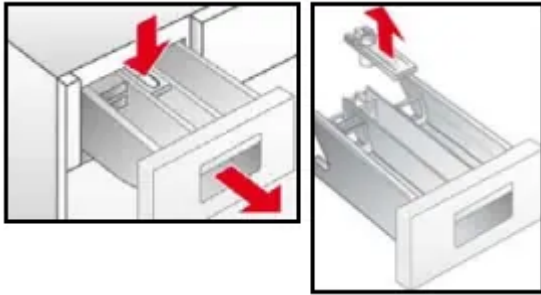

If there are detergent or care product residues:

- Pull out the detergent drawer as far as the stop.
- Press on the blue zone labelled PUSH and take out the detergent drawer.
- Clean the detergent drawer guide.
- Remove the blue fabric softener compartment insert.
- Clean the detergent drawer and fabric softener compartment insert under running water.
- Insert the fabric softener compartment insert.
- Insert the detergent drawer.

Drain pump

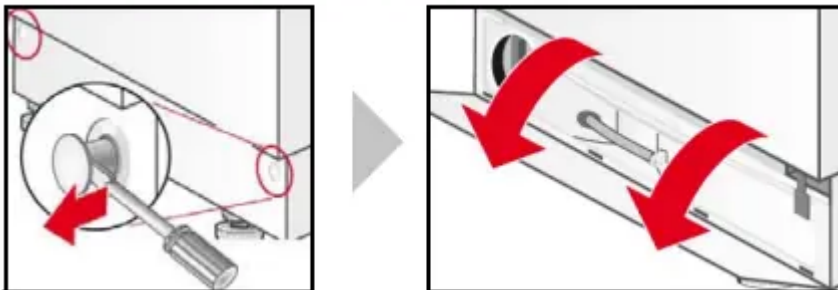


- Set the programme selector to Off.
- Use a screwdriver to release the lock pins.
- Tip the kick panel and pull upwards to remove

Draining the water



- Take the Drain hose out of the retainer.
- Remove the plug from the Drain hose and release the washing water.
 - The container for the Drained water may have to be emptied several times.
 - When no more water runs out, replace the plug.
- Place the Drain hose into the retainer.

Cleaning the Drain pump

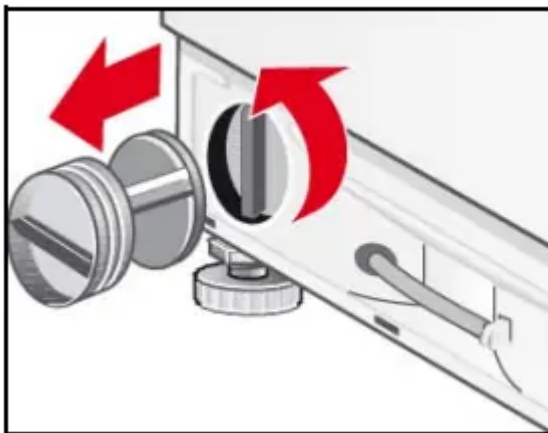

- Unscrew the pump cover.
 - Clean the pump housing and remove any foreign objects.
 - Make sure that the impeller can turn freely.
- Replace the pump cover and screw firmly in place.
- Place the kick panel in the 4 clip-in slots and secure to the housing using the lock pins.

Filter in the water supply hose



If no water runs into the washer-dryer, or only an insufficient amount, you must first reduce the water pressure in the supply hose:







- Turn off the tap. Drain + Spin.
- Press the Start/Pause button.
- Allow the programme to run for approximately 40 seconds.
- Set the programme selector to Off.
- Unplug the mains plug from the socket.
- Unscrew the water supply hose from the tap.
- Clean the filter with a small brush.
- Reconnect the hose.
- Turn on the tap.
- Check whether water comes out of the end of the hose.
- If water is escaping, check that the filter is correctly seated.

Descaling the washer-dryer

This should not be necessary if the correct detergent dosage has been used. If it is necessary, however, proceed according to the descaling agent manufacturer's instructions. Suitable descalers can be obtained via our website or from our after-sales service

What to do if...

Fault code





	<p>The door is not properly closed. Close the door.</p>
	<p>The water control system has been activated. Disconnect the appliance from the mains, turn off the tap and advise the after-sales service.</p>
	<p>Water is not entering the appliance. See the fault Water is not flowing in.</p>
	<p>The water is not Drained. See the fault Water is not Drained.</p>
	<p>Not a fault The unbalanced load detection system has detected an unbalanced load caused by laundry items. The fluff removal cycle cannot start. Remove the laundry.</p>
	<p>Maximum or minimum drying load not taken into account. HI/End or LO/End flash alternately in the display. See the fault Drying result not satisfactory.</p>


Other fault codes are only for use by the after-sales service. Make a note of the fault code to inform the after sales service

Fault	Possible cause	Remedial action
Programme does not start.	The Start/Pause button has not been pressed.	Press the Start/Pause button.
	A delayed start time has been selected.	Washer dryer starts on completion of the delay period. Change the "finished in time" if necessary
	Power cut. The delayed start time that was selected has been cleared.	Reselect the delayed start time or start the programme immediately. Press the Start/ Pause button.
	The door is not properly closed.	Close the door.
	Plug not inserted properly into socket.	Insert plug correctly.
The maximum spin speed cannot be set.	The maximum spin speed depends on the programme selected.	Change programme as required.
The water is not Drained.	Damp or lumpy detergent.	Clean and dry the detergent drawer
		Use the measuring aid for liquid detergent.
Water is not flowing in.	The mains plug is not correctly plugged in.	Plug in the mains plug correctly.
	The door is not properly closed.	Close the door.
	The tap is not turned on.	Turn on the tap.
	The filter in the water supply hose is blocked.	Clean the filter in the water supply hose
	The water supply hose is pinched or kinked.	Check the water inlet hose.

Fault	Possible cause	Remedial action
Intense vibrations during spinning.	The washer-dryer is not correctly levelled.	Level the washer-dryer
	The transport safety bolts have not been removed.	Remove the transport safety bolts
Washer-dryer fills with water and continuously Drains it away.	Drain hose fitted too low	Fit the Drain hose correctly
No water can be seen in the drum.	Not a fault.	During certain programmes the water level is below the visible range.
Water leaks from the bottom of the appliance.	Supply hose screw connection is leaking.	Tighten the screw connection.
	Drain hose is leaking.	Have the Drain hose replaced by the after-sales service.
Foam escapes fro	Too much detergent has been used.	Only use detergent which is correct for textiles, and suitable for use in automatic washing machines. Make sure that you use the correct dosage
Several attempts to start spinning.	Not a fault. The unbalanced load detection system attempts to redistribute an unbalanced load by starting to spin several times.	Always wash large and small items together.
Washing is not spun properly.	Large items of laundry are not evenly distributed in the drum. The spin speed is automatically reduced for safety reasons.	Always wash large and small items together

Fault	Possible cause	Remedial action
Washing results not satisfactory	Uncleaned areas worse than expected.	Select a suitable programme, e.g. a programme with Pre-wash. Pretreat stains if necessary.
	Too little or incorrect detergent used.	Use the correct dosage of a suitable detergent, in accordance with the manufacturer's instructions.
	Maximum load exceeded.	Select the load appropriate for the programme.
Detergent residues on the washing.	Some phosphate-free detergents contain water-insoluble residues which appear on washing as light specks.	Rinse the laundry again or change to using liquid detergent. Brush the laundry after it has dried
Grey residues on the washing.	Soiling caused by ointments, grease or oil.	Wash the laundry using the maximum detergent dosage and the maximum permissible temperature – see the care label.
Programme terminated unexpectedly.	The Start/Pause button was selected accidentally.	Press the button again to restart the programme.
Spinning during drying	No fault	"Thermo spin", which is for energy-efficient drying, starts after a drying time of approx. 10 minutes.
Drying result not satisfactory	The laundry clings to the sides of the drum after being spun.	Loosen up the laundry by hand; start the drying programme
	Closed tap	Turn on the tap.
	Selected drying time too short.	Select the drying time according to the Load.

Fault	Possible cause	Remedial action
	Maximum or minimum load not taken into account	Once the programme has ended: adjust the load quantity, select a suitable drying programme and restart.
The fabric softener is not completely flushed in or too much water remains in the compartment  .	The fabric softener compartment insert is not correctly attached or is blocked.	If necessary, clean the fabric softener compartment insert and fit it correctly in compartment  .
The laundry is not dried.	The tap is turned off	Turn on the tap.
	The load is too large.	Reduce the load size.
	The drying time is too short.	Select a suitable drying time.
No display on the display panel.	Power cut.	<p>The programme continues when power is restored. If you wish to remove the laundry during a power cut, you must first Drain out the water</p> <p>Check whether:</p> <ul style="list-style-type: none"> • the plug is plugged into the socket correctly. • the circuit breaker (fuse) has tripped; if it has, call the after-sales service
The door cannot be opened.	 (Rinse hold) has been selected.	Select the programme Drain + Spin and press the Start/Pause button.
	The programme is running or the door is locked for safety reasons.	Wait until  appears on the display panel.

Fault	Possible cause	Remedial action
	Power cut.	Unlock the door mechanically
<p data-bbox="252 349 501 383">Emergency release</p> 	<p data-bbox="576 349 1337 383">To release the door mechanically in the event of a power cut:</p> <ul data-bbox="687 412 1337 640" style="list-style-type: none"> • turn the programme selector to Off and unplug the mains plug from the socket. • open the base panel and Drain out the water • pull the emergency release downwards and open the door at the same time. <p data-bbox="576 672 1337 748">Before opening the door, make sure that there is no water or hot detergent solution in the washer dryer.</p> <p data-bbox="576 779 1337 855">WARNING Under no circumstances open the door with the emergency release while the drum is still turning.</p>	

If you cannot correct a fault yourself (switching on/off) or a repair is required:

- Turn the programme selector to Off and unplug the mains plug from the socket.
- Turn off the tap and call the after-sales service

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

