 
 


Owners' Guide Sound Bars

FRONT

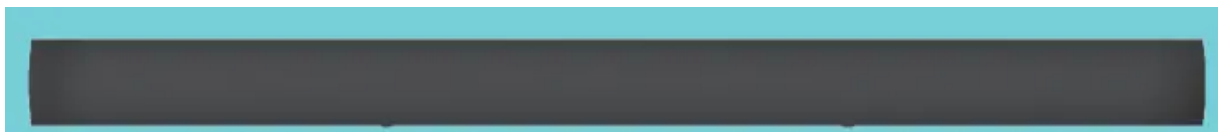 


BACK DETAIL

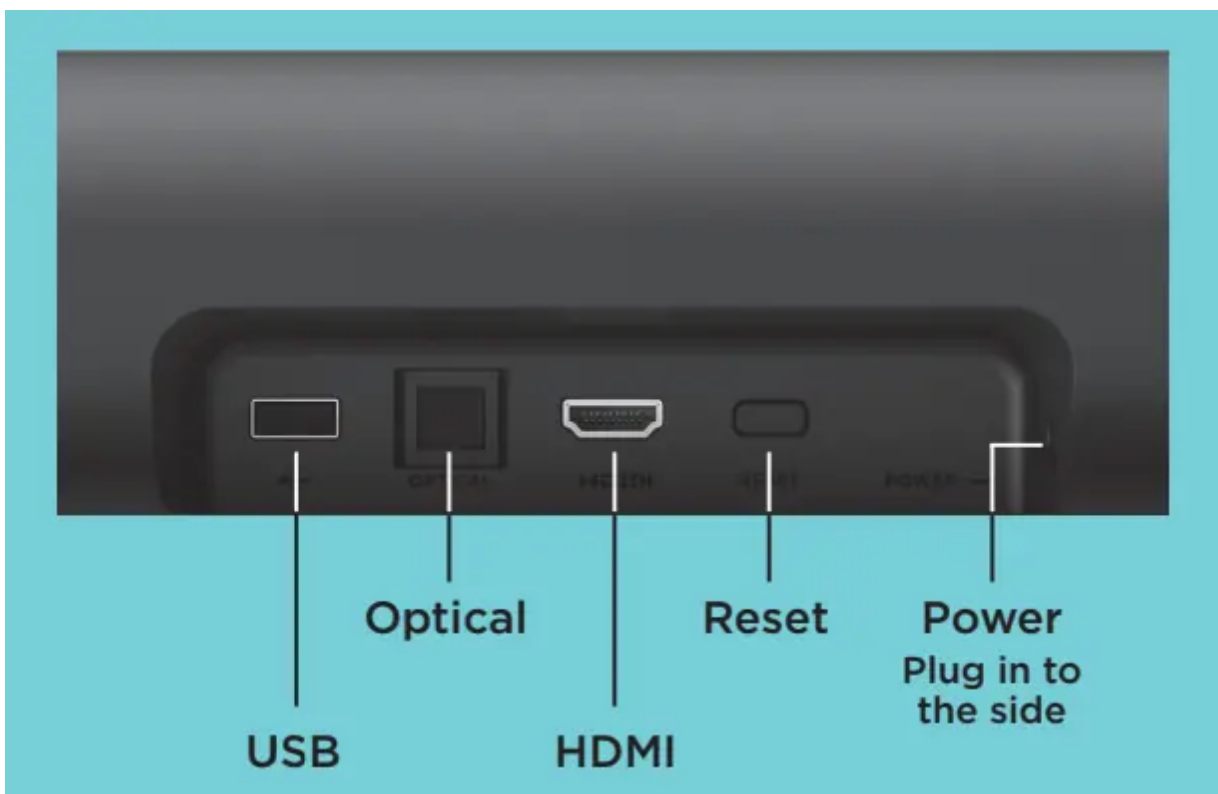


REMOTE



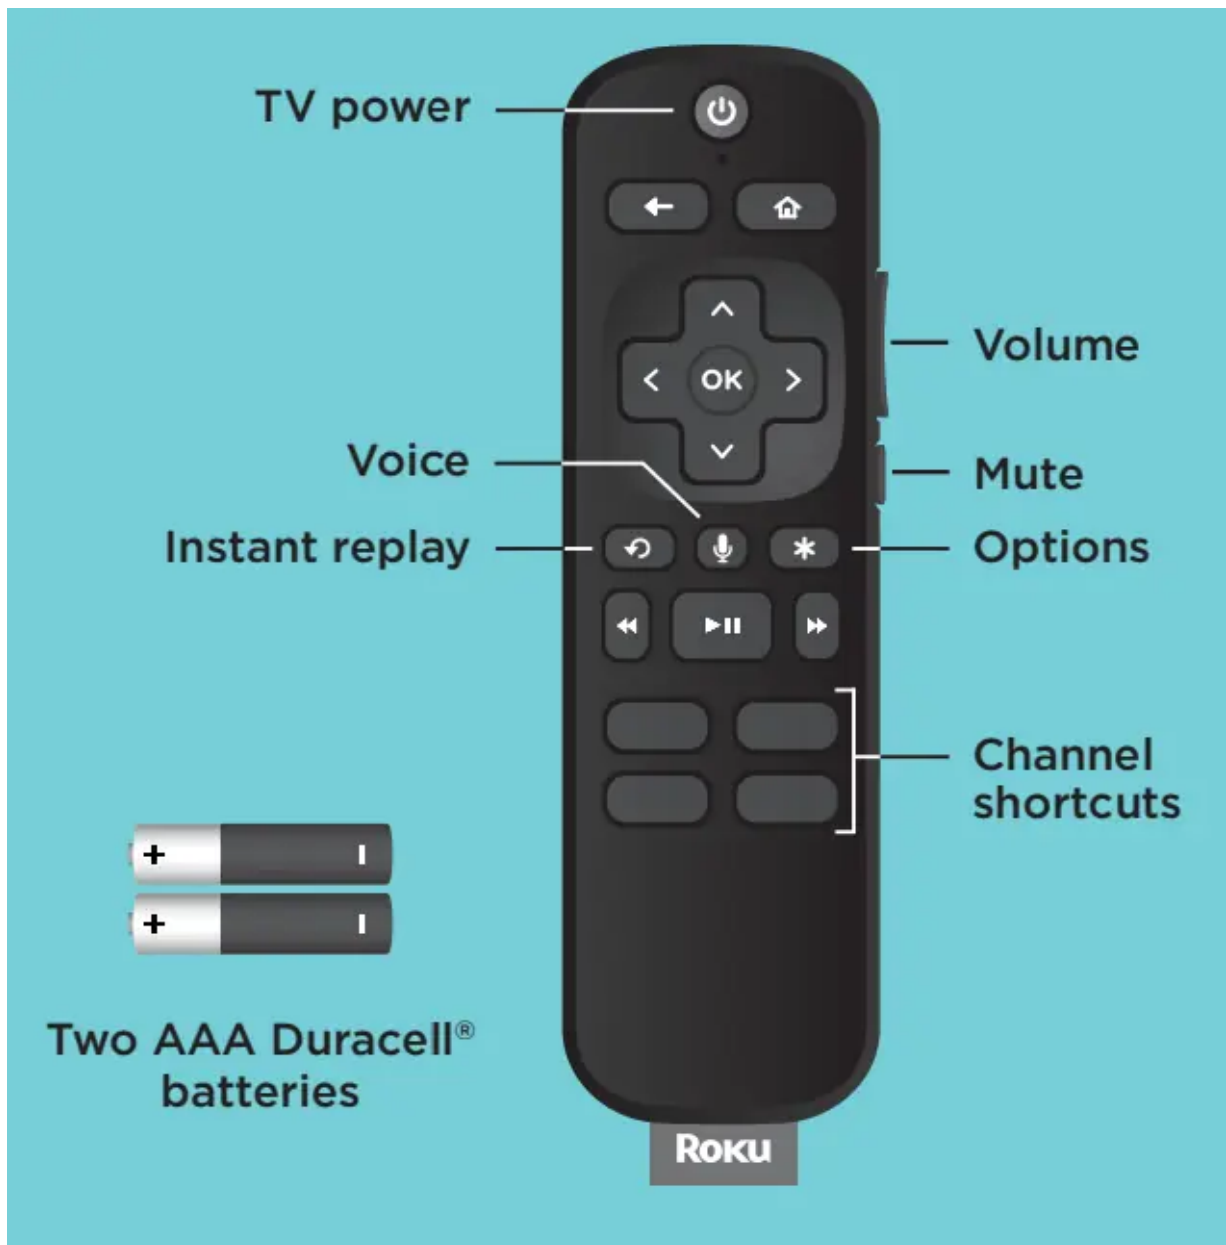

Power cable

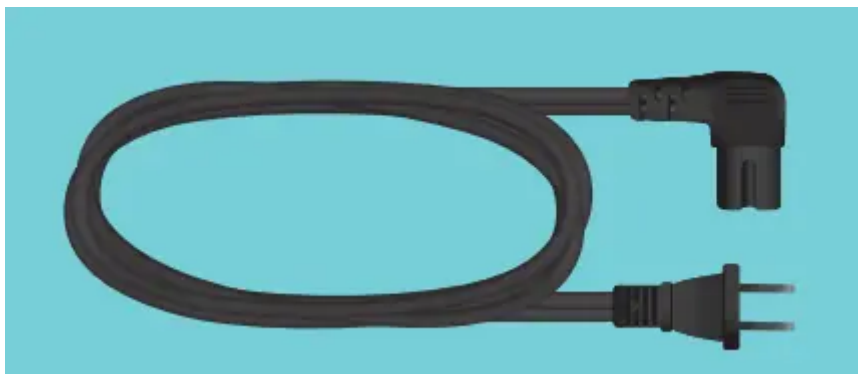 

Premium High Speed HDMI® Cable





Optional optical cable

**NOTE:** Only use if your TV does not have an HDMI-ARC port.



## What you'll need



Get ready to set up with:

- Your TV
- Your wireless network name and password
- Your smartphone or computer

## Let's get started

 
### 1. Connect to Power

Use the included power cable to connect your Roku Smart Soundbar to a wall outlet.



**TIP:** Place your Roku Smart Soundbar at the front edge of your TV stand for the best sound experience.

### 2. Connect to TV

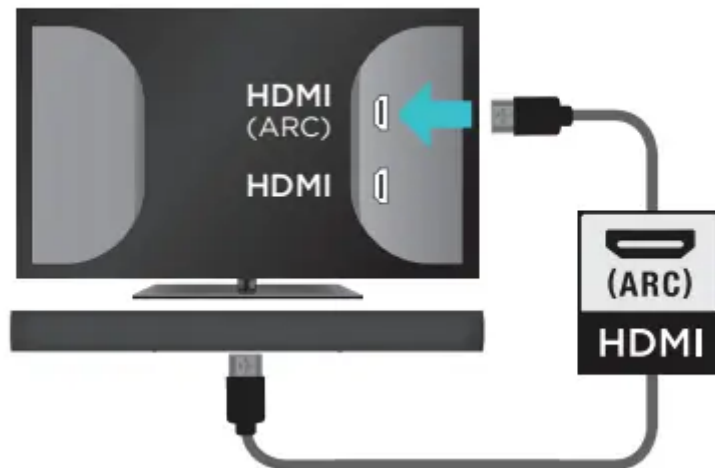


Connect your Roku Smart Soundbar to the HDMI port on your TV labeled "ARC" with the included cable.



Don't see an HDMI-ARC port? Use the optical cable along with the HDMI Cable to connect.

### 3. Select input

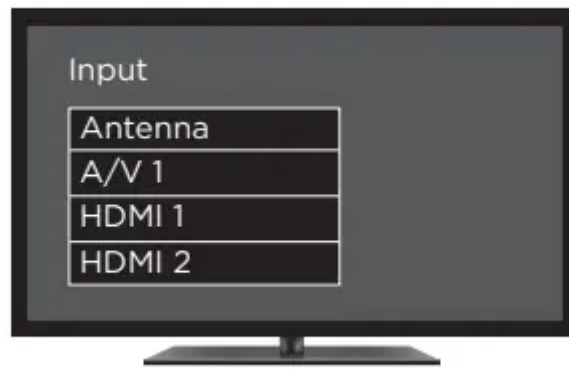 


- Use your TV remote to select the HDMI input you used to connect your Roku Smart Soundbar.

### 4. Insert batteries



 - Slide open the battery cover on your remote to insert the included Duracell® batteries negative (-) ends in first.

## 5. Follow the on-screen setup

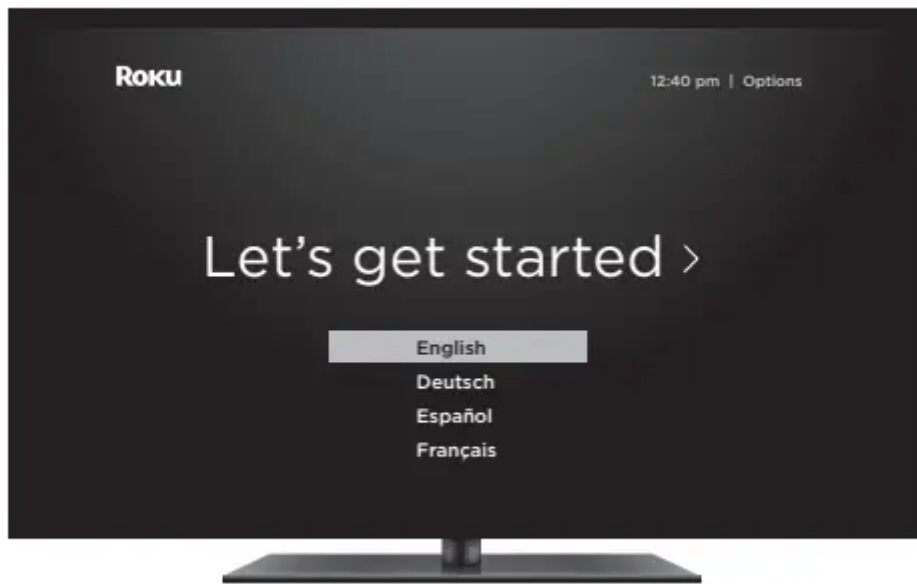

- Follow the instructions on your TV to activate your Roku Smart Soundbar and link or create a Roku account.

**IMPORTANT:** Activate your Roku Smart Soundbar by using your computer or smartphone to link to a Roku account.

**NOTE:** Roku does not charge for activation support— beware of scams.



## Common questions

### What is HDMI-CEC?

Consumer Electronics Control (CEC) allows device commands to be sent over the same HDMI Cable as audio and video.

### What is ARC?

Audio Return Channel (ARC) sends audio from your TV to the Roku Smart Soundbar, using the HDMI Cable. Connect the Roku Smart Soundbar to the HDMI port labelled “ARC” on your TV.

### **How do I enable HDMI-CEC and ARC on my TV?**

While some TVs automatically enable these features, others require you to enable them via a settings menu.

### **Why do I need to create a Roku® account?**

Before you can start streaming, channels must be downloaded and installed on your Roku Smart Soundbar. You’ll need a Roku account to access the Roku Channel Store, manage your subscriptions, view your purchase history, and add a payment method.

### **Why should I enter a credit card?**

 
Saving a payment method makes it easy to rent or buy movies on demand, subscribe to popular services, and enroll in free trials. Charges will not be made without your authorization.

## **Tips and Tricks**

### **Sound Settings**

- Automatic Volume Leveling—Helps keep your volume consistent and quiets loud commercials.
- Speech Clarity—Improves clarity of voices so your favorite TV is easier to hear.
- Night Mode—Lowers loud scenes while boosting quiet ones so you don’t wake the house.

### **Using Sound Settings**

- While streaming video, press  .
- Go to Sound Settings.
- Turn on the settings you want.



### **Using voice commands**

Press and hold the voice button\* and say things like:

“Play classic rock.”



“Set volume to 30.”

“Launch The Roku Channel.”

\*Requires a Roku voice compatible remote or Roku mobile app.



### Pairing a Bluetooth® device

-  Press  for 5 seconds.
- Follow the on-screen instructions.

#### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.