

# OPERATION

## **Before Use**

- Do not place the water heater near walls, furniture or other electrical appliances. Expelled steam and heat can deform or discolour walls, furniture and appliances.
- Place the water heater only on stable, level surfaces. On a soft, flexible surface, the appliance may tip over and you may scalding.

## **Notes on Operation**

**Note:** If the power cord is damaged, do not use the water heater again and have it replaced by the manufacturer, an authorized service center, or a similarly qualified person.

- The water heater may only be used for hot water preparation. Bubbles may form when heating tea, milk or wine. This increases the risk of scalding, jamming the rising pipe and burning or damaging the tank.
- Do not press the automatic water outlet button when the water is boiling or within the first 5 minutes of cooking. Otherwise, you may scalding yourself with the hot water leaking or no water leaking out.
- Do not move the appliance while dispensing or pouring out water. You may get scalded by the hot water that is spilled out.
- Add water immediately if the water level in the tank drops below the refill mark. If there is too little water in the tank, it may burn, damage the water heater or break out in a fire.
- Do not open the lid and do not pour out water while the appliance is heating up. Spilled out hot water may cause scalding.
- When moving the appliance, do not touch the button to open the lid. If the lid opens suddenly, it may cause scalding or injury.
- Wait until the housing has cooled down before cleaning the water heater. When pouring out the remaining water, be careful not to get scalded.

## **Initial use of the hot water dispenser**

- Drain all the remaining water that is in the water tank after the first boil and pour it away.
- An unpleasant odour may occur when the appliance is used for the first time. If you have used the appliance several times, the smell will gradually decrease.

### **1. Pour water into the inner pot.**

- Make sure the water level is below the MAX mark. Otherwise, water may come out from the water outlet.
- Refill the water if the water level is below the REFILL line shown on the gauge.

## 2. Close the lid.

- Water easily overflows when boiling. Make sure the lid is well closed

## 3. Insert the plug into the power outlet..

- Make sure there are no foreign objects on power cord before connect power supply, such as nails, pins.

## 4. Reboil.

Press the “Reboil” button to start reboil water and indicator on.

## 5. Water dispense.

- Press the “Safety Child Lock” button to unlock the water dispense function. After the indicator is on, press and hold the dispense button. The safety lock will auto restart if no operation for 10 seconds.
- Beware water flow easily increases or splashes when dispensing if water level decreases

## 6. Refill water

Water easily overflows when boiling. Make sure the lid is well closed.

### **1. Boil water**

- Do not open the lid while boiling.
- Do not refill water while boiling.
- Do not cover the steam port.
- Beware of hot steam to avoid scalding.
  - 1. Insert the mains plug into the socket. The icon will appear on the LED display indicating that the appliance is in standby mode.
  - 2. Press the “Reboil” button to start boiling water. When the water has been heated to 100 °C, the holding state indicator flashes for 60 seconds. When the indicator turns off, the appliance is in warm mode.
  - 3. Press the “Reboil” button for 5 seconds, the appliance switches to standby mode.

### **2. Keep warm temperature setting**

Press the “Temp Select“ button to set the keep warm temperature. You can make the following selection: 85 °C 75 °C 65 °C 55 °C 45 °C Temp decline 95 °C. The default keep warm temperature is 85 °C. If you select “Temp decline“, the display will show the “--“ icon and the temperature will drop

### **3. Dispense and Safety Lock**

- Press the “Safety Child Lock“ button to unlock water dispense function.

- After the “Safety Child Lock“ indicator is deactivated, press and hold the “Dispense“ button to dispense water.
- If you do not press the button, the water dispense stops and the safety lock is automatically activated if no operation is made for 10 seconds.
- Press and hold the “Safety Child Lock“ button for 5 seconds, the “Safety Child Lock“ button and the “Dispense“ button will be light up (flashing 3 times) that means the safety lock function has been deactivated. It can happen at any time that no water is dispensed because there is too little water in the water tank.
- Press the “Safety Child Lock“ button, the safety lock is activated again.

To save energy, the hot water dispenser can be switched to standby mode:

- Press and hold the “Reboil“ button for 5 seconds to enter standby mode and press the “Dispense“ button.

#### **4. Turn on/off and Reboil Function**

To turn off the appliance:

- Press and hold the “Reboil“ button for 5 seconds to turn off the hot water dispenser. The power indicator will keep flashing on the screen.
- Press the “Reboil“ button, the power indicator light will go out and the appliance resumes operation.

To enter standby mode / operating mode:

- Press and hold the “Reboil“ button for 5 seconds to enter standby mode.
- Press the “Reboil“ button again to return to the operating mode.

To use the reboil function:

- Press the “Reboil“ button to start boiling the water to 100 °C.
- Press the “Reboil“ button to activate the reboil function, press again to cancel the reboil function.

#### **5. Fast Cooling**

- Press and hold the “Purified Water“ button 5 seconds. The indicator will start flashing on the display screen.
- When the set temperature is reached, the indicator will light up on the display screen.

#### **6. Tap Water Mode / Purified Water Mode**

Tap water mode:

- By default, the appliance runs in tap water mode when it starts operation.
- After the water has been boiled to 100 °C, the chlorine content can also be reduced.

Switch on purified water mode:

- Press the “Purified Water” button to start the purified water mode, the display will light up.
- The default setting for the keep warm temperature is 45 °C. This allows you to keep the water warm at the pre-set temperature without boiling the water to 100 °C. 7.

#### No Water Check

- When the “No water” indicator lights up, it indicates that water should be filled and that the appliance is terminating the heating mode.
- Prevent dry burning without water! When you have filled up enough water, the heating mode will automatically start.

#### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.