

Use & Care Guide Dishwasher for Kenmore Elite 66514743N513

Contents

- PROTECTION AGREEMENTS
- WARRANTY
- DISHWASHER SAFETY
- PARTS AND FEATURES
- START-UP/QUICK REFERENCE
- ULTRACLEAN™ FILTRATION SYSTEM
- POWERWASH®
- DISHWASHER EFFICIENCY TIPS
- DETERGENT AND RINSE AID
 - Detergent
 - Rinse Aid
- LOADING
 - Loading for BestCleaning and Drying Performance
 - Top Rack Loading
 - Bottom Rack Loading
- DISHWASHER USE
 - Cycles and Options Information
 - Dishwasher Control Section
 - Dishwasher Feedback Section
 - Canceling A Cycle
 - Changing A Cycle After Dishwasher Is Started
 - Adding A Dish After Dishwasher Is Started
- WASHING SPECIAL ITEMS
- DISHWASHER CARE
 - Cleaning
 - Dishwasher Maintenance Procedure
 - Drain Air Gap
 - Vacation or Extended Time Without Use
- TROUBLESHOOTING
- SERVICE NUMBERS

Filter Reinstallation Instructions

1. Noting the previous illustrations, place the Lower Filter under the Locating Tabs in the bottom of the dishwasher so the round opening for the Upper Filter Assembly lines up with the round opening in the bottom of the tub.
2. Insert the Upper Filter Assembly into the circular opening in the Lower Filter.
3. Slowly rotate the filter clockwise until it drops into place. Continue to rotate until the filter is locked into place. If the filter is not fully seated (still turns freely), continue to turn the filter clockwise until it drops and locks into place.

Dishwasher Efficiency Tips

Hot water dissolves and activates the dishwasher detergent. Hot water also dissolves grease on dishes and helps glasses dry spotfree. For best dish washing results, water should be 120°F (49°C) as it enters the dishwasher. Loads may not wash as well if the water temperature is too low.

Additional efficiency tips:

- To save water, energy and time, only scrape dishes. Do not rinse dishes before putting them into the dishwasher.
- Use a delay feature to run your dishwasher during off-peak hours. Local utility providers recommend avoiding heavy usage of energy at certain times of day.
- During the summer, run your dishwasher at night. This reduces daytime heat buildup in the kitchen.
- Use a rinse aid to improve drying.

Dishwasher Care

Cleaning the exterior

- In most cases, regular use of a soft, damp cloth or sponge and a mild detergent is all that is necessary to keep the outside of your dishwasher looking nice and clean. If your dishwasher has a stainless steel exterior, a stainless steel cleaner is recommended.

Cleaning the interior

- Hard water minerals can cause a white film to build up on the inside surfaces, especially just beneath the door area. Do not clean the dishwasher interior until it has cooled. You may want to wear rubber gloves. Do not use any type of cleanser other than dishwasher detergent because it may cause foaming or sudsing.
- To clean interior: Make a paste with powdered dishwasher detergent on a damp sponge and clean OR Use liquid automatic dishwasher detergent and clean with a damp sponge.

Drain Air Gap

- Some state or local plumbing codes require the addition of a drain air gap between a built-in dishwasher and the home drain system. Check the drain air gap when your dishwasher is not draining well.
- To clean the drain air gap: Clean the drain air gap periodically to ensure proper drainage of your dishwasher. With most types, you lift off the chrome cover. Unscrew the plastic cap. Then check for any soil buildup. Clean if necessary.

Installation instructions Undercounter Dishwasher for Kenmore Elite 66514743N513

Table of contents

- DISHWASHER SAFETY
- INSTALLATION REQUIREMENTS
- Tools and Parts
- Location Requirements
- Drain Requirements
- Water Supply Requirements
- Electrical Requirements
- INSTALLATION INSTRUCTIONS
- Prepare Cabinet Opening
- Existing Utilities
- Prepare Cabinet Opening
- New Utilities
- Prepare and Route Water Line
- Install Drain Hose
- Install Optional Moisture Barrier
- Prepare Dishwasher
- Determine Cabinet Opening
- Install Door Handle
- Custom Panel Installation
- Choose Attachment Option
- Prepare Water Supply Line
- Move Dishwasher Close to Cabinet Opening
- Connect to Water Supply
- Connect to Drain
- Make Direct Wire Electrical Connection

- Secure Dishwasher in Cabinet Opening
- Complete installation
- Check Operation
- If Dishwasher Does Not Operate
- Additional Tips

Check Operation

Read the Dishwasher User Guide that came with your dishwasher.

- Check that all parts have been installed and no steps were skipped.
- Check that you have all tools used.
- Start dishwasher and allow it to complete the shortest wash cycle. After the first 2 minutes, unlatch door, wait 5 seconds, then open door. Check that there is water in the bottom of the dishwasher tub. Check that dishwasher is working properly.

If the dishwasher is not working properly, disconnect power or unplug dishwasher and See the "If Dishwasher Does Not Operate" section.

Additional Tips

Expect longer wash times. Your new dishwasher will average 2 to 3 hours per load, but use nearly 40% less energy than older models. Designed with a low wattage, low energy consumption motor, your dishwasher washes longer to ensure exceptional cleaning. Certain models are equipped with an optical water sensor so the first cycle will run longer to calibrate to optical sensor. Selecting certain options could increase cycle time past 3.5 hours.

- Rinse aid is necessary for good drying results: This dishwasher is designed to be used with rinse aid for good drying performance and controlling hard water deposit buildup. Energy efficient dishwashers use less water and energy, so they depend on the water sheeting action of rinse aid for good drying performance.
- Start/Resume indicator light may flash: When pressing Start!Resume, you must make sure the door is closed within 3 seconds. If you do not close the door within 3 seconds, the Start/Resume indicator light will flash until you press it again. (You must also do this when adding a dish during the middle of a cycle.)

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

