 


Structure Illustration

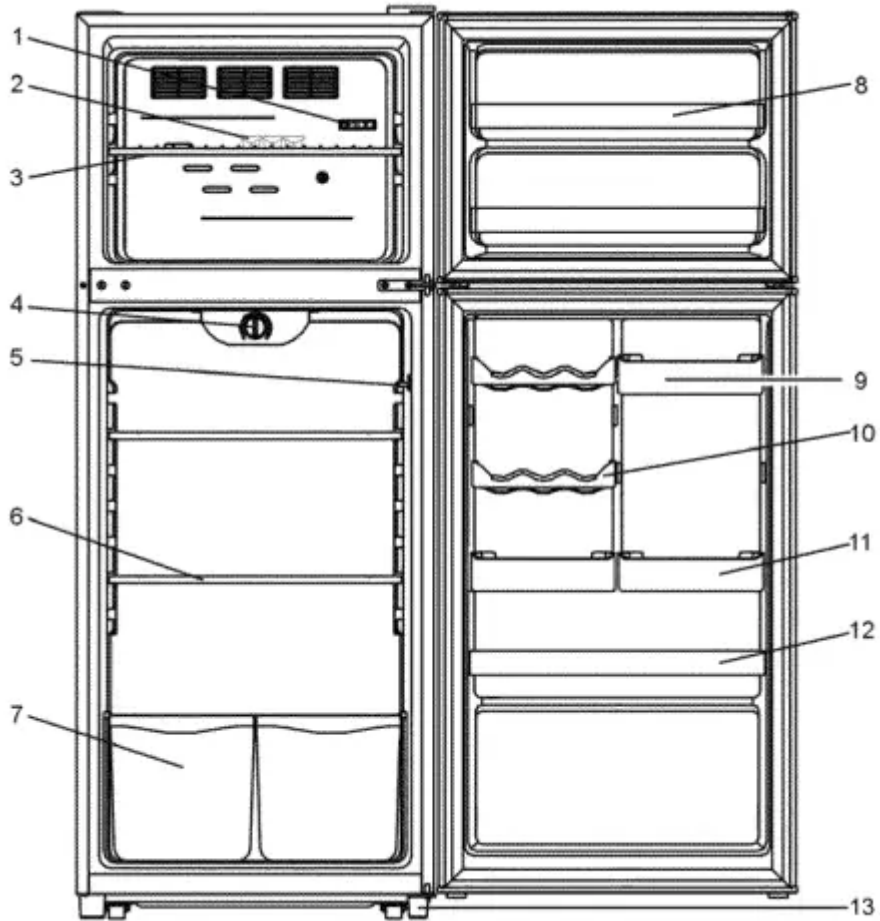

1. Freezer control knob
2. Ice Tray
3. Freezer compartment shelf
4. Refrigerator control knob
5. Lamp switch
6. Refrigerator compartment shelf
7. Crisper
8. Freezer door rail
9. Bottle Rack (Small)
10. Can Dispenser
11. Gallon Bin
12. Bottle rack (Large)

 
13. Adjustable feet

Installing Your Refrigerator

- Adjust the leveling feet to keep the refrigerator level.
- Plug the refrigerator into the dedicated, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord.
- After plugging the appliance into a wall outlet, turn the unit on and allow the unit to cool down for 24 hours before placing food in the refrigerator or freezer compartment.

Operating Your Refrigerator

Temperature Control

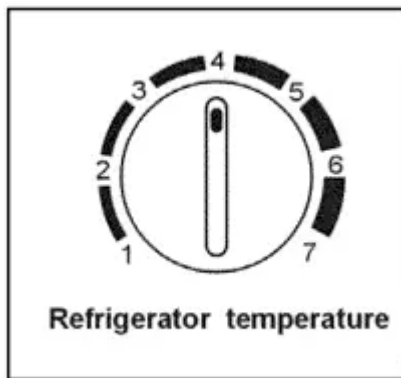

The temperature control is located inside the refrigerator compartment. The refrigerator compartment temperature control ranges from the warmest position "1" to the coldest position "7". The first time you turn the unit on, adjust the temperature control knob to a higher number and run for at least 24 hours before putting food inside. This will ensure the cabinet is thoroughly chilled before food is inserted.

 
If you choose to change the thermostat setting, adjust the thermostat by one increment at a time. After each movement of the control knob, allow several hours for the unit to adjust completely. Large amounts of food may lower the cooling efficiency of the appliance.

Replacing the Interior Light

- Unplug the electrical cord from the wall outlet. Failure to do so may result in electrical shock or personal injury. Replace the old bulb with a bulb of the same wattage.

Freezer Compartment Operation


Temperature Control

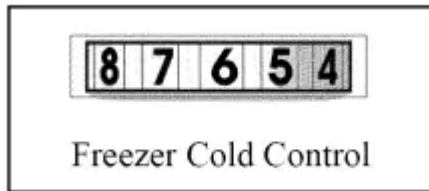

Your refrigerator has one control for regulating the temperature in the freezer compartment. The temperature control is located on the right side of the freezer compartment's interior back panel. For the best performance, leave the freezer control at the midpoint

The range of the freezer temperature control is from position "1" the warmest to "8" the coldest. Please adjust the freezer control one increment at a time until the desired temperature is reached.

 Ice Tray

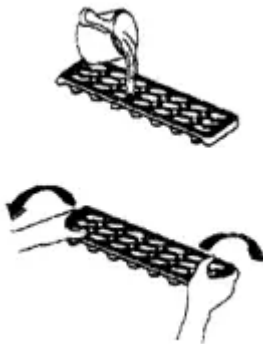

To make ice, pour cool water into ice tray and place it in the freezer for two hours. To release ice cubes, twist the ice tray and the ice cubes will separate from the ice tray. To shorten the time of making ice, you can set the temperature control knob at a colder position.

The Freezer Compartment

This compartment is designed for the long-term storage of frozen food. The storage life of frozen foods varies and the recommended storage time should not be exceeded. Place frozen food into the freezer as quickly as possible after purchase. If there are instructions on the packet, carefully follow these instructions regarding storage times.

Care and Maintenance

Cleaning Your Refrigerator

- Disconnect the electrical unit from the wall outlet.
- Clean interior and parts with a cloth soaked in lukewarm water and baking soda solution. A solution of 2 tablespoons baking soda to a quart of water will clean and neutralize odors. Rinse and wipe dry.

- Be sure to keep the door gasket (seal) clean to keep the unit running efficiently.
- The outside of the refrigerator should be cleaned with a warm damp cloth and mild detergent. Do not use harsh or abrasive cleaners.
- Never clean refrigerator parts with flammable fluids. The fumes can create a fire hazard.

Vacation Time

- For long vacations, remove all food. Then, unplug the electrical cord from the wall outlet.
- Clean the interior and leave doors open to avoid possible odor or mold formation.
- Use extreme caution in the case of children. The unit should not be accessible to child's play.

Moving Your Refrigerator

 
- Disconnect the electrical cord from the wall outlet.
- Remove all the food and securely tape down all loose items such as shelves, drawers, and doors.
- Be sure the refrigerator stays in the upright position during transportation.

Energy Saving Tips


- The refrigerator should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the refrigerator.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the refrigerator. This cuts down on frost build-up inside the refrigerator.
- Organize and label food to reduce door openings and extended searches

Changing the Reversible Door


Before reversing the door swing, ensure the appliance is unplugged and empty. Provide additional support for the doors while hinges are being removed. Do not depend on the door magnets to hold the door in place. It is recommended that two people perform this task. DO NOT lay the appliance completely flat as this may damage the coolant system.

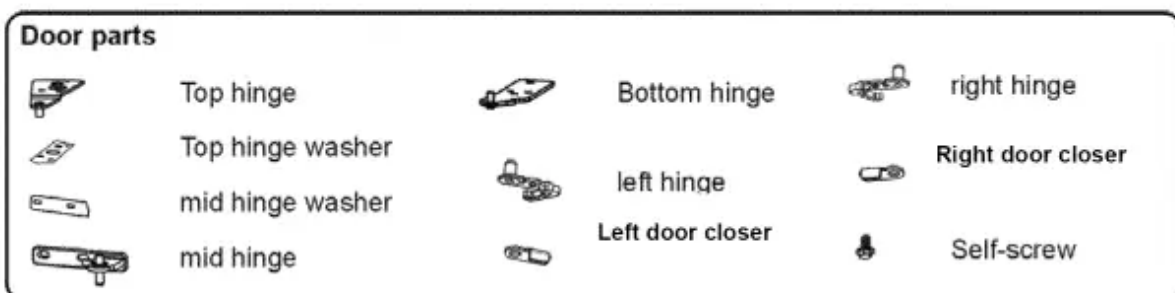

 
Step 1: Remove the hinge cover, and remove the top hinge.

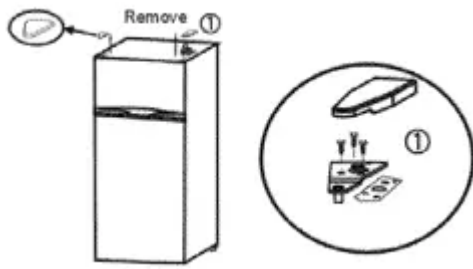

 
Step 2: Lift the freezer door up and away from the appliance.

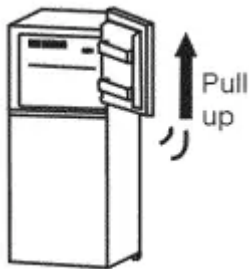

 
Step 3: Remove the screws from the middle hinge. Lift the refrigerator door up and away from the appliance.

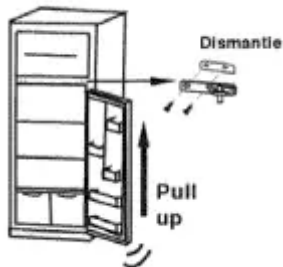

 
Step 4: Remove the bottom hinge by removing the leveling leg and screws on the bottom of the refrigerator cabinet. To reattach the hinge on the opposite side of the cabinet, first remove the leveling leg. Reattach the hinge using the screws that were previously removed. Reattach both leveling legs.

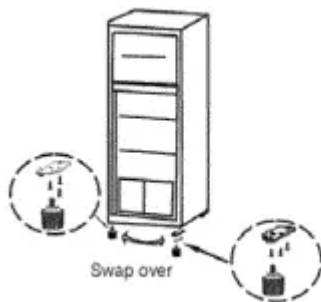

 
Step 5: Remove the pin assembly from the bottom of the freezer and refrigerator doors. On the opposite side, attach the replacement pin assembly (located in the plastic bag with the Use and Care Manual) with a screwdriver. Note: You must re-use the screw from the pin assembly that is removed in this step when attaching the new assembly.

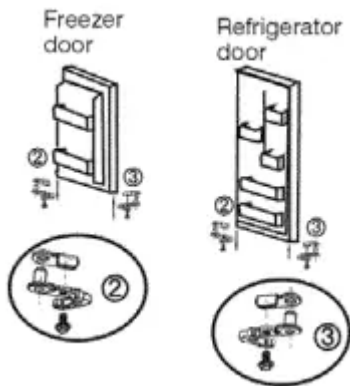

 Step 6: Place the refrigerator door on the bottom hinge. Ensure the door is aligned horizontally and vertically, and that the gasket seals on all sides before attaching the middle hinge. Attach the middle hinge using a screwdriver.

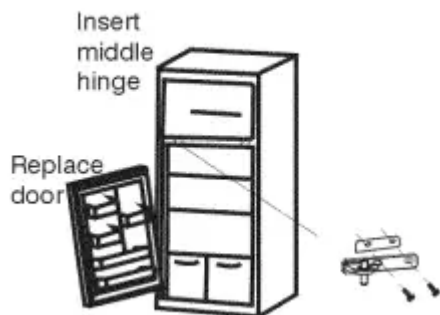

 Step 7: Place the freezer door on the middle hinge. Ensure that the door is aligned horizontally and vertically, and that the gasket seals on all sides before attaching the top hinge. Attach the top hinge and replace the hinge cover.

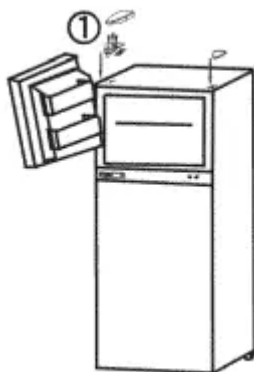

Troubleshooting Guide

Refrigerator does not operate

- Refrigerator is unplugged.
- The circuit breaker is tripped/fuse blown.

Compressor turns on and off

- The room temperature is warmer than normal
- Door is left open or is frequently opened.
- The refrigerator does not have the correct clearances.
- The refrigerator has recently been disconnected for a period of time.

Refrigerator compartments are too warm

- Temperature control is not set correctly.
- Door is left open or is frequently opened.
- The door gasket does not seal properly.
- A large amount of warm or hot food was stored recently. Wait for the refrigerator to reach its selected temperature.
- The refrigerator has recently been disconnected for a period of time.

Vibrating or rattling (slight vibration is normal)

- Leveling legs need adjusting
- Refrigerator is placed on an uneven or weak surface.
- The refrigerator is touching the wall. Re-level the refrigerator and move it away from the wall.

Temperature of external refrigerator surface is warm

- The exterior refrigerator walls can be as much as 30°F warmer than room temperature.
- This is normal while the compressor works to transfer heat from inside the refrigerator cabinet.

Moisture collects inside the refrigerator

- Door is left open or is frequently opened.

Moisture forms on outside of refrigerator

- Is normal in hot and humid weather. Air carries moisture into the refrigerator when doors are opened.

Bubbling or gurgling sounds (like boiling water)

- This is the normal sound of refrigerant (used to cool refrigerator) circulating throughout the system.

Popping or cracking sounds when compressor comes on

- This is normal. Metal parts undergo expansion and contraction, like hot water pipes. The sound will level off or disappear as refrigerator runs.

The door will not close properly

- The refrigerator is not on a level surface.
- The gasket is dirty.
- The storage basket is out of position

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.