

## IMPORTANT SAFEGUARDS

1. Read all instructions.
2. This appliance is not intended for use by persons (including
3. Close supervision is necessary when any appliance is used by or
4. Do not touch hot surfaces. Use handles or knobs.
5. To protect against electrical shock. do not immerse cord. plug.
6. Unplug from outlet when not in use and before cleaning. Allow to
7. Do not operate any appliance with a damaged supply cord or
8. The use of accessory attachments not recommended by the
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch
11. Do not place on or near a hot gas or electric burner or in a
12. Extreme caution must be used when moving an appliance
13. To disconnect. turn all controls to OFF ( ); then remove plug
14. Use extreme caution when removing pan or disposing of hot
15. Do not clean with metal scouring pads. Pieces can break off the

When using electrical appliances. basic safety precautions should always be followed to reduce the risk of fire. electric shock. and/or injury to persons. including the following:

Fire Hazard.

- If contents ignite. do not open oven door. Unplug oven and allow contents to stop burning and cool before
- Do not operate unattended while in Toast or Broil modes.
- Do not use with oven cooking bags.
- Do not heat taco shells in toaster oven. Always use full-size conventional oven.
- Always allow at least one inch between food and heating element.
- Always unplug toaster oven when not in use.
- Regular cleaning reduces risk of fire hazard.

## SAVE THESE INSTRUCTIONS

Other Consumer Safety Information

This appliance is intended for household use only. **w WARNING Electrical Shock Hazard:** This appliance is provided with a polarized plug (one wide blade) to reduce the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used.

The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

This appliance is equipped with a fully tempered safety glass door.

The tempered glass is four times stronger than ordinary glass and more resistant to breakage. Tempered glass can break; however, it breaks into pieces with no sharp edges. Care must be taken to avoid scratching door surface or nicking edges. If the door has a scratch or nick, call our toll-free customer service number.

Always unplug your toaster oven from the outlet when not in use.

Before First Use Most heating appliances produce an odor and/or smoke when used the first time. Plug the toaster oven into an outlet. Turn Temperature Dial to 450°F (230°C). Heat at this temperature for 10 minutes. The odor should not be present after this initial preheating. Wash baking pan, broil rack, and oven rack before using.

16. Oversize foods or metal utensils must not be inserted in a
17. The bread may burn. A fire may occur if toaster is covered or
18. Extreme caution should be exercised when using containers
19. Do not store any materials, other than manufacturer- recommended
20. Do not place any of the following materials in the oven: paper.
21. Do not cover crumb tray or any part of the oven with metal foil.

This will cause overheating of the oven.

22. To turn oven off, turn Toast/Timer and OFF to OFF ( ) position.

See "Parts and Features" section.

23. Do not place eyes or face in close proximity with tempered
24. Always use appliance with crumb tray securely in place.
25. Do not use appliance for other than intended use.
26. Clean oven interior carefully. Do not scratch or damage heating

27. Check that the control is OFF before plugging cord into wall

28. Do not operate the appliance by means of an external timer or

Parts and Features

Baking Pan

Temperature Dial

Function Dial

ON Indicator Light

Slide-Out Crumb Tray

Oven Rack

Toast/Timer and OFF

Broil Rack Broil Rack in Baking Pan

MIDDLE RACK POSITION: baking, broiling, and toasting

LOW RACK POSITION: baking

Convection Baking Function (on select models)

Rack/Toasting Area

To order parts: US: 1.800.851.8900 [www.hamiltonbeach.com](http://www.hamiltonbeach.com) Canada: 1.800.267.2826 Mexico: 01 800 71 16 100

CAUTION: HOT SURFACE. The

How to Toast

Unplug oven and allow contents to stop burning and cool before opening door.

- Do not leave appliance unattended when in
- Always unplug toaster oven when not in use.

Plug into outlet. Place oven rack in MIDDLE RACK POSITION (shown) for toast, English muffins, bagels, and waffles.

Turn Temperature Dial to Broil/ Toast.

Rotate Toast/Timer past 10 and then back to desired toast color.

A bell will sound when the toast cycle is complete. Rotate Toast/ Timer to off ( ) to end cycle at any time.

Place food in oven. Turn Function Dial to Toast.

Medium Dark

- When toasting only two slices of bread.

- For best results, always position bread.
- To toast bagels, English muffins, and
- To toast regular toaster pastries or frozen pastries, place oven
- When toasting, condensation may form on the oven door. The
- The number of slices of bread and the bread freshness will affect
- If you are not satisfied with the color balance between the two

How to Toast (cont.)

How to Bake

Plug into outlet. Place oven rack on MIDDLE RACK POSITION or LOW RACK POSITION (depending on food to be cooked). LOW RACK POSITION shown.

Turn Temperature Dial to desired temperature.

Turn Function Dial to Bake.

Rotate Timer past 10 and then back to “dark toast” to preheat

Unplug oven and allow contents to stop burning and cool before opening door.

- Do not use oven cooking bags.
- Always allow at least 1 inch (2.5 cm)
- Always unplug toaster oven when not in use.

After oven is preheated, set Timer to desired time by rotating past 10 and then to desired baking time or rotate to sTay on while pressing in and holding the buttons on the side of the dial.

Rotate Timer to off ( ) to end cycle at any time.

How to Bake (cont.)

- Do not totally enclose foods in aluminum foil. Foil can insulate
- To reheat rolls or biscuits, place on baking pan and heat at 300°F (149°C) for 10 minutes.
- Reheat leftover roasts or casseroles at 350°F (177°C) for 20 to 30 minutes or until heated through.
- Bake foods such as pizza on the MIDDLE RACK POSITION. Place food
- Bake foods such as a whole chicken on the LOW RACK POSITION.

Place food in baking pan.

Turn foods halfway through cooking time.

Visit [foodsafety.gov](https://www.foodsafety.gov) for more safe cooking temperature information.

# INTERNAL

## TEMPERATURES

### FOOD APPROX. BAKE TIMES

Fresh Chicken Breast 30 minutes 170°

Fish Fillet 15 minutes 145°

Convection Bake (on select models)

Plug into outlet. Place oven rack on MIDDLE RACK POSITION or LOW RACK POSITION (depending on food to be cooked). LOW RACK POSITION shown.

Turn Temperature Dial to desired temperature.

Turn Function Dial to ConveCTion.

Rotate Timer past 10 and then back to “dark toast”

- Do not use oven cooking bags.
- Always allow at least 1 inch (2.5 cm)
- Always unplug toaster oven when not

After oven is preheated. set Timer to desired time by rotating past 10 and then to desired bak ing time or rotate Timer to sTay on while pressing in and holding the buttons on the side of the dial.

Rotate Timer to off ( ) to end cycle at any time.

Convection Bake (cont.)

- The convection bake function provides superior browning and
- The convection method cooks up to one-third faster than
- Do not totally enclose foods in aluminum foil. Foil can insulate foods
- Bake foods such as pizza on the MIDDLE RACK POSITION. Place food
- Bake foods such as a whole chicken on the LOW RACK POSITION. Place
- Ovens with convection mode: When baking pizza. use convection

Unplug oven and allow contents to stop burning and cool before opening door.

- Do not leave oven unattended during
- Keep 1 inch (2.5 cm) between food and
- Do not use oven cooking bags.
- Do not heat foods in plastic containers.
- Follow food manufacturer’s instructions.

How to Broil

Plug into outlet. Place oven rack in oven. MIDDLE RACK POSITION is for faster broiling times. LOW RACK POSITION is for foods needing longer broiling times. like chicken breasts. Place food on broil rack or directly onto baking pan. Place in oven. DO NOT PREHEAT OVEN.

Turn Temperature Dial to Broil/ Toast.

Turn Function Dial to Broil. Rotate Timer past 10 and then to the desired broiling time or rotate Timer to Stay on while pressing in and holding the buttons on the side of the dial. Turn foods when browned or halfway through cooking time.

How to Broil (cont.)

Cook beef and pork to at least 160°F (71°C).

Cook chicken to at least 165°F (73°C).

Cook fish until at least 145°F (63°C) or until opaque or flakes with a fork.

Visit [foodsafety.gov](https://www.foodsafety.gov) for more safe cooking temperature information.

These cooking times are an average and should be adjusted to individual preferences. Turn foods halfway through cooking time.

## **FOOD APPROX. BROIL TIME**

Hamburgers 20 minutes

Hot Dogs 15 minutes

Sausage Links or Patties (pierce

15 to 20 minutes

Fish 15 minutes

Cleaning

To clean inside of oven. wipe oven walls. bottom of oven. and glass door with a damp. soapy cloth. Repeat with a damp. clean cloth.

For stubborn stains. use a plastic scouring pad.

Wipe outside of oven with a damp cloth. Do not use abrasive cleansers or metal scouring pads.

Oven Rack

Broil Rack

Baking Pan

Unplug and allow to cool.

Your toaster oven should be cleaned regularly for best performance and long life. Regular cleaning will also reduce the risk of fire hazard.

## Troubleshooting

### PROBLEM PROBABLE CAUSE/SOLUTION

Oven will not heat.

- Check to make sure electrical outlet is working and the oven is plugged in. Turn Temperature Dial to 350°F

(177°C). Turn Function Dial to Bake; then turn Toast/Timer and OFF to stay on while pressing in and holding the buttons on the side of the dial.

Moisture forms on inside of oven door when toasting.

- This is normal when toasting in a toaster oven. Moisture is slower to escape from a toaster oven than

An odor and smoke come from oven.

- Smoke and odor are normal during first use of most heating appliances. These will not be present after

Oven will not toast.

- Check to make sure outlet is working and oven is plugged in. Turn Temperature Dial to Toast/Broil.

Turn Function Dial to Toast; then rotate Toast/Timer and OFF past 10 and then back to desired toast color.

Some foods burn and some are not done.

- Adjust oven rack position to center food in oven.
- Adjust oven temperature or cooking time for best results with your recipes.

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the

product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g. 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit [hamiltonbeach.com](http://hamiltonbeach.com) in the U.S. or [hamiltonbeach.ca](http://hamiltonbeach.ca) in Canada. For faster service, locate the model, type, and series numbers on your appliance.

#### Limited Warranty

##### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.