

User Guide for Liebherr SBSEF7242

Table of Contents

- Appliance at a glance
- Description of appliance and equipment
- Appliance range of use
- Conformity
- EPREL database
- External dimensions of the appliance
- Saving energy
- General safety information
- Controls and displays
- Operating and control elements
- Temperature display
- Putting into operation
- Transporting the appliance
- Installing the appliance
- Changing over the door hinges
- Sliding into the row of units
- Disposing of packaging
- Connecting the appliance
- Switching on the appliance
- Control
- Brightness of the temperature display
- Child proofing
- Door alarm
- Temperature alarm
- Freezing food
- Thawing food
- Setting the temperature
- SuperFrost
- Drawers

- Shelves
- VarioSpace
- Drawer for herbs and berries
- Freezer pack
- Maintenance
- Defrosting with NoFrost
- Cleaning the appliance
- Customer service
- Malfunctions
- Decommissioning
- Switching off the appliance
- Taking the appliance out of service
- Disposal
- Preparing appliance for disposal
- Disposing of the appliance in an environmentally friendly manner



- polythene bags and sheets
- polypropylene straps
- nailed wooden frame with polyethylene panel*
- ▶ Take the packaging material to an official collecting point.

4.6 Connecting the appliance

NOTICE

Failure to connect properly
Damage to the electronics.

- ▶ Do not use a standalone inverter.
- ▶ Do not use an energy saving plug.



WARNING

Failure to connect properly
Fire hazard.

- ▶ Do not use an extension cable.
- ▶ Do not use distributor blocks.

The type of current (alternating current) and voltage at the installation site have to conform with the data on the type plate (see 1 Appliance at a glance) .

The socket must be properly earthed and fused. The tripping current for the fuse must be between 10 A and 16 A.

The socket must be easily accessible so that the appliance can be quickly disconnected from the supply in an emergency. It must be outside the area of the rear of the appliance.

- ▶ Check the electrical connection.
- ▶ Plug in the power plug.



4.7 Switching on the appliance

Note

The manufacturer recommends:

- ▶ Store frozen produce at -18 °C or colder.

Switch on the appliance approx. 2 hours before loading for the first time.

- ▶ Press On/Off button *Fig. 3 (7)*.
- ▷ The temperature display and the alarm symbol flash until the temperature is sufficiently low. If the temperature is above 0 °C, dashes flash. If it is below, the current temperature flashes.

5.1.1 Adjusting the brightness

The brightness is adjustable between **h0** (no illumination) and **h5** (maximum luminosity).

- ▶ To activate the setting mode: press the SuperFrost button *Fig. 3 (8)* for about 5 s.
- ▷ The display indicates **c**.
- ▷ The menu symbol *Fig. 3 (3)* shines.
- ▶ Using the Up setting button *Fig. 3 (1)* or Down setting button, *Fig. 3 (2)*, select **h**.
- ▶ To confirm: briefly press the SuperFrost button *Fig. 3 (8)*.
- ▶ To make the display brighter: press Up button *Fig. 3 (1)*.
- ▶ To make the display darker: press Down button *Fig. 3 (2)*.
- ▶ To confirm: press SuperFrost button *Fig. 3 (8)*.
- ▷ The brightness is adjusted to the new value.
- ▶ To deactivate the set-up mode: press On/Off button *Fig. 3 (7)*.

-or-

- ▶ Wait for 5 minutes.
- ▷ The temperature is indicated again in the temperature display.

5.2 Child proofing

The child-proofing function enables you to make sure that the appliance is not inadvertently switched off by playing children.

5.2.1 Setting the child lock function

- ▶ To activate the setting mode: press SuperFrost button *Fig. 3 (8)* for about 5 s.
- ▷ **c** flashes on the display.
- ▷ The menu symbol *Fig. 3 (3)* shines.
- ▶ Briefly press the SuperFrost button *Fig. 3 (8)* to confirm. When **cl** is indicated in the display:
- ▶ To activate the child lock, briefly press the SuperFrost button *Fig. 3 (8)*.
- ▷ The child lock symbol *Fig. 3 (11)* shines. **c** flashes on the display.
- When **cl0** is indicated in the display:
- ▶ To deactivate the child lock, briefly press the SuperFrost button *Fig. 3 (8)*.
- ▷ The child lock symbol *Fig. 3 (11)* goes out. **c** flashes on the display.
- ▶ To deactivate the set-up mode: press On/Off button *Fig. 3 (7)*.

-or-

- ▶ Wait for 5 minutes.

- ▷ The temperature is indicated again in the temperature display.

5.3 Door alarm

An audible warning sounds if the door is open for longer than 60 seconds.

The audible warning stops automatically when the door is closed.



5.3.1 Muting the door alarm

The audible alarm can be muted when the door is open. The sound switch-off function is active as long as the door is left open.

- ▶ Press alarm button *Fig. 3 (9)*.
- ▷ The door alarm is silenced.

5.4 Temperature alarm

The audible alarm sounds if the freezer temperature is not cold enough.

The temperature display and the alarm symbol *Fig. 3 (4)* flash at the same time.



The cause of the temperature being too high may be:

- warm fresh food was placed inside
- too much warm ambient air flowed in when rearranging and removing food
- Prolonged power outage
- the appliance is faulty

The audible alarm is automatically silenced, the alarm symbol *Fig. 3 (4)* goes out and the temperature display stops flashing when the temperature is sufficiently cold again.

If the alarm status persists: (see 7 Malfunctions) .

Note

Food may be spoiled if the temperature is not cold enough.

- ▶ Check the quality of the food. Do not consume spoiled food.

5.4.1 Muting the temperature alarm

The audible alarm can be muted. When the temperature is sufficiently cold again, the alarm function is active again.

- ▶ Press alarm button *Fig. 3 (9)*.
- ▷ The audible alarm is silenced.

5.5 Freezing food

The rating plate indicates the maximum quantity of fresh food

So that the food is rapidly frozen through to the core, exceed the following quantities per pack

- Fruit, vegetables up to 1 kg
- Meat up to 2.5 kg
- ▶ Pack the food in portions in freezer bags, reusable metal or aluminium containers

5.6 Thawing food

- in the refrigerator compartment
- in a microwave oven
- in a conventional or fan oven
- at room temperature
- ▶ Remove only as much food as is required. Use thawing as quickly as possible.
- ▶ Food once thawed should be re-frozen only in exceptional cases.

5.7 Setting the temperature

The appliance is pre-set for normal operation.

The temperature can be set between -14 °C and -28 °C. The recommended temperature is -18 °C.

- ▶ To set the temperature higher: press Up button *Fig. 3 (8)*.
- ▶ To set the temperature lower: press Down button *Fig. 3 (8)*.
- ▷ When the button is pressed the first time, the previous temperature is indicated in the temperature display.
- ▶ To change the temperature in 1 °C steps: briefly press the button.

-or-

- ▶ To change the temperature continuously: hold down the button.
- ▷ The value is displayed flashing during the setting operation.
- ▷ The actual temperature is displayed approx. 5 seconds after the button is last pressed. The temperature gradually returns to the new value.

5.8 SuperFrost

With this function you can freeze fresh food quickly through to the core. The appliance operates with maximum refrigeration. The noise of the refrigeration unit may be temporarily louder as a result.

You can freeze as many kilograms of fresh food within 24 hours as is indicated on the type plate under "Freezing capacity kg/24hrs". This maximum freezing quantity can vary depending on model and climate class.

You have to activate SuperFrost in good time, depending on how much fresh food is to be frozen: about 6 hours before placing the food inside in case of small amounts and about 24 hours in advance in case of the maximum amount of food to be frozen.

Wrap produce and spread it out as far as possible. Do not

5.5 Freezing food

The rating plate indicates the maximum quantity of fresh food you can freeze within 24 hours (see 1 Appliance at a glance) under "Freezing capacity ... kg/24h".

Each drawer can hold a max. of 25 kg of frozen food.

The shelves can each be loaded with 35 kg of frozen food.

If the door cannot be opened right after having been closed, due to vacuum, please wait about 2 minutes until pressure returns to normal.



CAUTION

Risk of injury due to broken glass!

Bottles and cans containing drinks may burst when being frozen. This applies particularly to sparkling drinks.

- ▶ Do not freeze bottles and cans containing drinks!

freeze in advance in case of the maximum amount of food frozen.

Wrap produce and spread it out as far as possible. Do not produce to be frozen to touch produce that is already frozen to prevent the latter thawing.

You do not have to activate SuperFrost in the following cases:

- when placing frozen food in the freezer
- when freezing up to approx. 2 kg fresh food daily

5.8.1 Freezing with SuperFrost

- ▶ Briefly press the SuperFrost button *Fig. 3 (8)* once.
- ▷ The SuperFrost symbol *Fig. 3 (5)* shines.
- ▷ The freezing temperature drops, the appliance operates at the maximum cooling capacity.
For a smaller quantity of produce to be frozen:
 - ▶ wait approx. 6 h.
- ▶ Place wrapped produce in the deep bottom drawers.
For the maximum quantity of produce to be frozen:
 - ▶ wait approx. 24 h.

* Depending on model and options

Maintenance

- ▶ Remove the deep bottom drawers and place produce directly on the bottom shelves.
- ▷ SuperFrost is automatically deactivated. Depending on the quantity placed inside, after 30 h at the earliest, 65 h at the latest.
- ▷ The SuperFrost symbol *Fig. 3 (5)* extinguishes once freezing is completed.
- ▶ Place produce in the drawers and push the latter back in again.
- ▷ The appliance continues to operate in the energy-saving, normal mode.

5.9 Drawers

Note

The energy consumption increases and the cooling performance decreases if there is insufficient ventilation.

For appliances with NoFrost:

- ▶ Leave the bottom drawer in the appliance!
- ▶ Always keep the air slits of the fan free at the rear wall!

- ▶ To store frozen food directly on the shelves pull the drawer forward



5.12.1 Using the special drawer for herbs and berries

- ▶ Spread the items out loosely in the special drawer for herbs and berries.
- ▶ Allow the food to freeze through for 10 to 12 h.
- ▶ Transfer the frozen food to freezer bags or containers.
- ▶ Store freezer bags or containers in a drawer.
- ▶ To thaw the items, spread them out loosely again.



5.13 Freezer pack

Freezer packs prevent the temperature rising too quickly there be a power cut.

5.13.1 Using freezer packs

- ▶ Put the freezer packs in the herbs and berries section to save space.
- ▶ Put the fully frozen freezer packs on the frozen food in the top front



Note

The energy consumption increases and the cooling performance decreases if there is insufficient ventilation.

For appliances with NoFrost:

- ▶ Leave the bottom drawer in the appliance!
- ▶ Always keep the air slits of the fan free at the rear wall!


- ▶ To store frozen food directly on the shelves pull the drawer forward and lift it out.



5.10 Shelves


5.10.1 Moving shelves

- ▶ To remove the shelf: lift up at the front and pull out.
- ▶ To put the shelf back: simply push in as far as it will go.

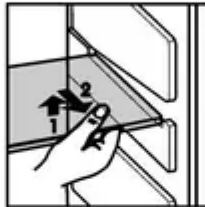

5.11 VarioSpace

You can remove the shelves and drawers. This leaves more room for larger food items such as poultry, meat, large game and tall baked goods, which can be frozen whole before further preparation.

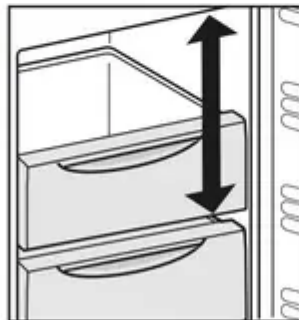

- ▶ Each drawer can hold max. 25 kg of frozen food.
- ▶ The shelves can each be loaded with 35 kg of frozen food.

5.12 Drawer for herbs and berries

In the drawer for herbs and berries you can freeze, berries, herbs, vegetables and other small items of food without them sticking together. Items being frozen will largely retain their shape, and it will be easier to remove exactly the right quantity later on.

5.13 Freezer pack

Freezer packs prevent the temperature rising too quickly, there be a power cut.

5.13.1 Using freezer packs

- ▶ Put the freezer packs in the herbs and berries section to save space.
- ▶ Put the fully frozen freezer packs on the frozen food in the top front section of the freezer compartment.



6 Maintenance

6.1 Defrosting with NoFrost

The NoFrost system automatically defrosts the appliance. The moisture condenses on the evaporator, is defrosted and evaporates.

- ▶ The appliance does not have to be manually defrosted.

6.2 Cleaning the appliance

Clean the appliance regularly.



WARNING

Risk of injury and damage as a result of hot steam! Hot steam can lead to burns and can damage the surface.

- ▶ Do not use any steam cleaners!

NOTICE

Incorrect cleaning damages the appliance!

- ▶ Do not use cleaning agents in concentrated form.
- ▶ Do not use any scouring or abrasive sponges or brushes.
- ▶ Do not use any sharp or abrasive cleaning agents that contain sand, chloride or acid.
- ▶ Do not use chemical solvents.
- ▶ Do not damage or remove the type plate on the interior of the appliance. It is important for the customer service.
- ▶ Do not pull off, bend or damage cables or other components.
- ▶ Do not allow any cleaning water to enter the drainage ventilation grille or electrical parts.
- ▶ Please use soft cleaning cloths and a universal cleaning agent.
- ▶ Please use cleaning and care products suitable for use with foodstuffs in the appliance interior.

- ▶ Empty appliance.
- ▶ Pull out the power plug.

Switching on the appliance

Note The manufacturer recommends:

- Store frozen produce at -18 °C or colder.

Switch on the appliance approx. 2 hours before loading for the first time.

- Press On/Off button Fig. 3 (7).
- The temperature display and the alarm symbol flash until the temperature is sufficiently low. If the temperature is above 0 °C, dashes flash. If it is below, the current temperature flashes.
- To cool the interior as quickly as possible when the appliance is first put into operation, the appliance runs at a high rate, i.e. compressor runs at higher speeds. Therefore the noise level is a little higher for a short time. Afterwards the appliance continues to operate quietly in the energy-saving, normal mode.
- If “DEMO” is displayed, demo mode is activated. Please contact the after sales service.

Control

Brightness of the temperature display

You can adjust the brightness of the temperature display to the light conditions of the room in which the appliance is installed. The function works with the door closed and is not relevant for appliances with a concealed screen.

Adjusting the brightness

The brightness is adjustable between h0 (no illumination) and h5 (maximum luminosity).

- To activate the setting mode: press the SuperFrost button Fig. 3 (8) for about 5 s.
- The display indicates c.
- The menu symbol Fig. 3 (3) shines.
- Using the Up setting button Fig. 3 (1) or Down setting button, Fig. 3 (2), select h.
- To confirm: briefly press the SuperFrost button Fig. 3 (8).
- To make the display brighter: press Up button
- To make the display darker: press Down button
- To confirm: press SuperFrost button Fig. 3 (8).
- The brightness is adjusted to the new value.
- To deactivate the set-up mode: press On/Off button
- Wait for 5 minutes.
- The temperature is indicated again in the temperature display

Child proofing

The child-proofing function enables you to make sure that the appliance is not inadvertently switched off by playing children.

Setting the child lock function

- To activate the setting mode: press SuperFrost button Fig. 3 (8) for about 5 s.
- c flashes on the display. w
- The menu symbol Fig. 3 (3) shines. u
- Briefly press the SuperFrost button Fig. 3 (8).to confirm.

When c1 is indicated in the display:

- Tto activate the child lock, briefly press the SuperFrost button Fig. 3 (8).
- The child lock symbol Fig. 3 (11) shines.
- c flashes in the display.

When c0 is indicated in the display:

- to deactivate the child lock, briefly press the SuperFrost button Fig. 3 (8).
- The child lock symbol Fig. 3 (11) goes out.
- c flashes in the display.
- To deactivate the set-up mode: press On/Off button Fig. 3 (7)
- Wait for 5 minutes.
- The temperature is indicated again in the temperature display.

Door alarm

An audible warning sounds if the door is open for longer than 60 seconds. The audible warning stops automatically when the door is closed.

Muting the door alarm

The audible alarm can be muted when the door is open. The sound switch-off function is active as long as the door is left open.

- Press alarm button Fig. 3 (9).
- The door alarm is silenced.

Temperature alarm

The audible alarm sounds if the freezer temperature is not cold enough. The temperature display and the alarm symbol Fig. 3 (4) flash at the same time. The cause of the temperature being too high may be:

- warm fresh food was placed inside
- too much warm ambient air flowed in when rearranging and removing food

- Prolonged power outage
- the appliance is faulty

The audible alarm is automatically silenced, the alarm symbol Fig. 3 (4) goes out and the temperature display stops flashing when the temperature is sufficiently cold again. If the alarm status persists: (see 7 Malfunctions) .

Note Food may be spoiled if the temperature is not cold enough. u Check the quality of the food. Do not consume spoiled food.

Muting the temperature alarm

The audible alarm can be muted. When the temperature is sufficiently cold again, the alarm function is active again.

- Press alarm button Fig. 3 (9).
- The audible alarm is silenced.

Freezing food

The rating plate indicates the maximum quantity of fresh food you can freeze within 24 hours (see 1 Appliance at a glance) under “Freezing capacity ... kg/24h”. Each drawer can hold a max. of 25 kg of frozen food. The shelves can each be loaded with 35 kg of frozen food. If the door cannot be opened right after having been closed, due to vacuum, please wait about 2 minutes until pressure returns to normal.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.