

User Guide for Maytag PYG2300AWW

Table of Contents

- Safety Instructions
- Controls at a Glance
- Operating Tips
- Care and Cleaning
- Dryer Exhaust Tips
- Drying Rack (select models)
- Before You Call
- Warranty
- Guide de L' Utilisateur
- Guia Del Usuario

Controls at a Glance

Step 1 : Select Temperature

In order to select the correct temperature, turn the temperature control to one of four choices; Regular, Medium (select models), Low or Air Fluff.

- Regular - Sturdy cottons or labels marked "Tumble Dry."
- Medium (Select Models) - For wrinkle free/permanent press synthetics, lightweight cottons labeled "Tumble Dry Medium."
- Low Air - For heat sensitive items labeled "Tumble Dry Low" or "Tumble Dry Medium."
- Air Fluff Items which need freshening. Load tumbles with room temperature air.

Step 2 : Select Options

Extended Wrinkle Out (Optional on Select Models)

Wrinkle Out is provided to minimize wrinkles in the Auto Dry Wrinkle Free Fabrics cycle. This feature provides an extra 30-60 minutes of unheated tumble action at the end of the cycle depending on model. Clothes can be removed any time during this portion of the cycle. On dryer models with optional EXTENDED WRINKLE OUT, the additional 60 minutes of unheated tumbling can be cancelled by turning the selector knob to OFF

End of Cycle Signal

When the cycle is complete, a signal will sound several times. On select models, the End of Cycle Signal volume is adjustable. To adjust the volume select any setting between Off and Loud. Remove load immediately to reduce wrinkling.

Step 3 : Select Cycle

To select a cycle, rotate the control dial to the desired setting. When using an Auto Dry cycle, the control dial should point between "More Dry" and "Less Dry" for most loads.

Loads of larger or bulkier size may require the "More Dry" setting to completely dry the load. The "Less Dry" setting is best suited for lightweight fabrics or for leaving some moisture in the clothing at the end of the cycle.

Auto Dry Regular Fabrics

The Auto Dry Regular Fabrics cycle is designed to dry most cottons and linens. At the end of the cycle, the clothes are cooled to reduce wrinkling for approximately 10 minutes.

Auto Dry Wrinkle Free Fabrics

The Auto Dry Wrinkle Free Fabrics cycle is designed to dry wrinkle free cottons, synthetic fabrics, double knits and permanent press fabrics automatically. At the end of the cycle, the clothes are cooled for approximately 20 minutes to reduce wrinkling. If the load is not removed from the dryer, the cycle will advance to WRINKLE OUT which provides additional unheated tumbling time. WRINKLE OUT is optional on select models. (See Step 2).

Time Dry/Air Fluff

This cycle can be used to regulate the drying time. Use with Air Fluff, Low, Medium (select models) or Regular temperature settings. For timed drying, turn the control dial clockwise until the pointer points to the proper time setting in the Time Dry/Air Fluff cycle

Note : Using the Air Fluff temperature Setting will require a longer drying time

Special Options

Damp Dry is located on the Time Dry/Air Fluff section of the dial. It is designed to partially dry items and can be used with any temperature selection. Damp Dry will provide 20 minutes of tumbling time, followed by 5 minutes of cool-down tumbling.

Wrinkle Release will release wrinkles from items that are clean and dry but only slightly wrinkled, such as from a crowded closet or suitcase, or from sitting in the dryer too long after the cycle has ended. Wrinkle Release provides 10 minutes of tumbling followed by five minutes of cool-down tumbling and can be used with any temperature selection.

Step 4 : Push the Control dial in to Start

Push the control dial in to start the dryer. The dryer door must be closed for the dryer to start.

Note: The dial can be turned in either direction to select a cycle. Once started, the dial will not advance at a specific rate during the Auto Dry cycles. At first the dial may not advance at all. Toward the end of the cycle (when the load begins to dnd) , the dial will advance at a more regular rate and much more quickly. This is normal operation.

Operating Tips

Clean the Lint Filter

- After each load.
- To shorten drying time.
- To operate more energy efficiently.

Load the Dryer Properly

- Place only one washload in the dryer at a time.
- Mixed loads of heavy and lightweight clothes will dry differently. Lightweight clothes will dry, while heavy clothes may be damp.
- Add one or more similar items to the dryer when only one or two articles need drying. This improves the tumbling action and drying efficiency.
- Overloading restricts tumbling action, resulting in uneven drying as well as excessive wrinkling of some fabrics.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.