

Loading the laundry

Textiles may be damaged. Before loading, read chapter “1. Notes on correct laundry care” first.

- Open the door.
- Remove any items that have been left inside the drum.
- Unfold the laundry and load loosely into the drum.

Do not overload the drum. Doing so will cause unnecessary wear and tear to the laundry and affect the drying result. It is also likely to cause more creasing.

Laundry items may be damaged if they get trapped by the door.

Socket for the fragrance flacon

See the section “Fragrance flacon” for information on how to use fragrance flacons.


If you are not using a fragrance flacon: Push the tab down completely (see arrow) so that the socket is closed. Otherwise, fluff will accumulate here.

Closing the door

- Shut the door with a gentle swing.

Selecting a programme and starting it

Switching on the tumble dryer

The dryer is switched on by selecting a programme, and switched off by turning the programme selector to the  position.

- Turn the programme selector to a programme.

Selecting a programme


There are 3 possible ways to select a programme:

1. Selecting drying programmes using the programme selector

- Turn the programme selector to the required programme.

A drying level may light up and durations will appear in the time display.

2. Selecting drying programmes via the MobileStart programme selector position

- Turn the programme selector to MobileStart . will light up in the time display.
- Touch the Start/Add laundry sensor.

The tumble dryer can now be operated via a mobile device together with the Miele App.

3. Selecting a drying programme via the Wash2Dry[™] programme selector position

- Turn the programme selector to Wash2Dry[™].

If the connection is successful, →...←... will flash in the display, followed by . Once the washing machine programme has completely finished, the drying time will be displayed in the tumble dryer time display

- Once the wash programme has ended, place the clean laundry in the tumble dryer and close the door.
- To start the programme, all you need to do is press the Start/Add laundry sensor on the tumble dryer.

A programme will not be selected on this tumble dryer after washing delicate textiles (e.g. curtains) in special wash programmes.

Selecting a drying level with a drying programme

Cottons, Minimum iron, Delicates, Shirts, Express, Bed linen

The preset drying level for the programme can be changed if required.

- Touch the sensor for the drying level you want. It will light up brightly.

Any drying level can be selected for the Cottons, Express, and Bed linen programmes. A limited range is available with the other programmes.

Selecting timed drying programmes and other programmes

Warm air/DryFresh

You can set the duration in ten-minute increments from minutes to hours.

- Touch the or sensor repeatedly until the required programme duration appears in the time display.

Cottons ›, Woollens handcare, Proofing

The drying level is preset by the dryer and cannot be altered.

Selecting Gentle tumble

Delicate fabrics (with the › symbol on the care label, e.g. acrylic garments) are dried at a lower temperature and with a longer programme duration.

- Touch the Gentle tumble sensor. It will light up brightly.

Gentle tumble can be selected with the following programmes:

- Cottons
- Minimum iron
- Shirts
- Warm air/DryFresh

Gentle tumble is always activated/ cannot be deselected with Delicates.

Starting a programme

- Touch the flashing Start/Add laundry sensor.

The Start/Add laundry sensor lights up.

Programme sequence

- If Delay start has been selected, the Delay start time will start to count down first.
- The programme starts.
- The PerfectDry indicator will only flash/light up with programmes with selectable drying levels (see also Operating the tumble dryer”).
- The dryer measures the residual moisture of the laundry and calculates the required programme duration. If a small load or dry laundry is placed in the dryer, it is dried/aired for a preset duration. In this case the PerfectDry indicator does not light up at the end of the programme.

Laundry items and fabrics can wear out unnecessarily. Avoid over-drying laundry and garments.

- Before the programme finishes, the laundry is cooled.

Energy savings

After 10 minutes, the indicators dim.

The Start/Add laundry sensor flashes slowly.

- Touch the Start/Add laundry sensor to switch the indicators on again (this does not have any effect on a running programme).

Adding laundry

You can add laundry after the programme has started.

- Follow the instructions in the sections “Changing the programme sequence” and “Adding or removing laundry”

Removing the laundry at the end of the programme

End of programme/Anti-crease

End of programme:  lights up in the time display and the Start/Add laundry sensor goes out. A signal tone (buzzer) sounds.

The end of the programme is followed by the Anti-crease phase, which will run for up to 2 hours. The Woollens handcare programme does not support the Anti-crease function.

See "Programmable functions -  Anti-crease".

The tumble dryer switches off automatically.

Removing the laundry

Only open the door when the drying process has finished. Otherwise, the laundry will not be properly dried and cooled down.

- Pull the door open at the side with the orange marker.
- Remove the laundry.

Always remove all items from the drum.

Items left in the dryer could be damaged by overdrying when the dryer is used the next time.

- Turn the programme selector to the ∞ position.
- Remove the fluff from the 2 fluff filters in the door opening (see “Cleaning and care - Fluff filters”).
- Shut the door with a gentle swing.
- Empty the condensed water container.

Drum lighting

The lighting helps to ensure that all items are removed from the drum.

The drum lighting will go out automatically to save energy.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.