
 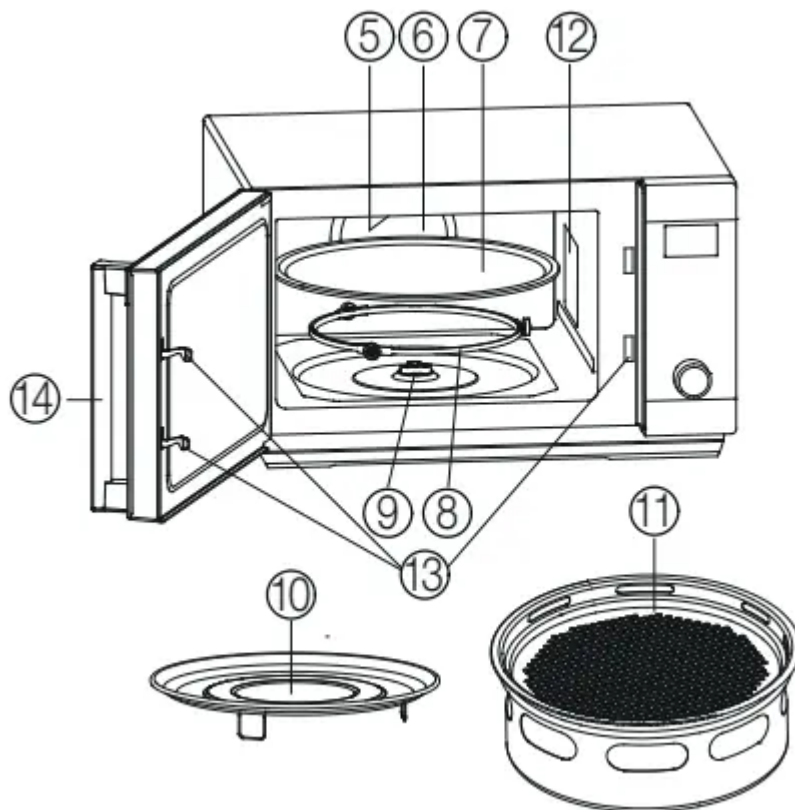


PRODUCT DIAGRAM



1. Control Panel
2. Display Screen
3. Menu / Time / Weight / Temperature / Level Selector Knob
4. Oven Window
5. Top Heating Element
6. Convection Fan & Back Wall Heating Element
7. Glass Turntable
8. Roller Ring

9. Shaft
10. Baking and Roasting Pan
11. Air Fry Kit
12. Wave Guide (Please do not remove the mica plate covering the wave guide)
13. Door Safety Lock System
14. Handle

CONTROL PANEL



BAKE

Use to bake food (See Page 14).

AIR FRY

Use to air fry food (See Page 16).

ROAST

Use to roast food (See Page 18).

MICRO

Use to microwave food with selected power level

CONV

Use to set convection program (See Page 20).

MICRO+CONV

Use to set combination cooking program (See Page 21).

SENSOR COOK

Use to set the automatic sensor cook programs (See Page 22).

POPCORN

Use to set popcorn program (See Page 24).

SENSOR REHEAT

Use to set the automatic sensor reheat programs (See Page 23).

TIME / WEIGHT DEFORST

Press to set defrost program based on time (See Page 13).

Press to set defrost program based on weight (See Page 12).

CLOCK /TIMER

Press and hold to set the clock time (See Page 9).

Press to set the timer function (See Page 10).

LOCK / TURNTABLE OFF

Press and hold to set child lock (See Page 25).

Press to turn turntable on or off while in the microwave cooking mode (See Page 25).

+30 SEC

Press to add time during the cooking program (See Page 24).

STOP/CANCEL

Press to clear all previous settings before cooking starts.

Press once to pause current cooking program or press twice to cancel the program.

Menu / Time / Weight / Temperature / Level Selector Knob













Turn to select cooking menus, time, food weight, portion, temperature or power level.

OPERATION INSTRUCTIONS

Setting the Clock

You can set the clock in 12-hour or 24-hour by pressing CLOCK/TIMER in standby mode.

Example: How to set a 12-hour clock at 11:58







<p>1 In standby mode, press and hold CLOCK/TIMER for 3 seconds to select 12-hour clock (press the pad again to select 24-hour clock).</p>	
	
<p>2 Turn the dial until the correct hour is displayed.</p>	
	
<p>3 Press the dial or CLOCK/TIMER to confirm the hour.</p>	
 or 	
<p>4 Turn the dial until the correct minute is displayed.</p>	
	
<p>5 Press the dial or CLOCK/TIMER to confirm the minute and finish setting.</p>	
 or 	

NOTE: While in the process of setting the clock, you can cancel the settings by pressing the STOP/CANCEL

Timer

You can use the timer feature to count down a specific amount of time whether it's for cooking or for anything else.

Example: How to set the timer for 3 minutes and 50 seconds.

1 Press CLOCK/TIMER once.	
	
2 Turn the dial to enter the time. The maximum time you can set is 95 minutes.	
	
3 Press the dial to confirm and start countdown.	
	



NOTE: Timer countdown can be seen for 5 seconds by touching CLOCK/TIMER, if press STOP/CANCEL during these 5 seconds, the timer will be canceled.



Accessory Guide: Glass Turntable



This feature allows you to start the oven quickly at maximum microwave power. The longest cooking time is 95 minutes.

Example: How to quick start microwave for 3 minutes and 50 seconds.

1 In standby mode, turn the dial to enter the time.	
	

2 Press the dial to confirm and start cooking.	
	



Microwave Cooking



Accessory Guide: Glass Turntable









This feature allows you to choose the power level and cooking time of microwave function. The longest cooking time is 95 minutes.

Example: Cook at 30% power level for 3 minutes and 50 seconds.

1 Press MICRO pad once, the default power level is 100%(maximum power).	
	

2 Turn the dial to select the 30% power level.	
	

3 Press the dial once to confirm the power level.	
	
4 Turn the dial again to enter cooking time.	
	
5 press the dial to confirm and start cooking.	
	

Power Level Chart:

Power Level	Display	Power Level	Display
100%	P100	50%	P-50
90%	P-90	40%	P-40
80%	P-80	30%	P-30
70%	P-70	20%	P-20
60%	P-60	10%	P-10

Weight Defrost











Accessory Guide: Glass Turntable



The defrosting time and power level are automatically set once the food category and the weight are selected.

Example: How to defrost 8oz seafood.



<p>1 In standby mode, press the TIME/WEIGHT DEFROST twice.</p>	
<p> x 2</p>	
<p>2 Turn the dial to select food code 'dEF3' (Seafood).</p>	
<p></p>	
<p>3 Press the dial once to confirm the food type.</p>	
<p></p>	
<p>4 Turn the dial to select the food weight.</p>	
<p></p>	
<p>5 Press the dial to confirm and start defrosting.</p>	
<p></p>	

Weight Defrost Food Chart:

Code	Food	Maximum Weight
dEF1	Meat	48oz
dEF2	Poultry	48oz
dEF3	Seafood	32oz

NOTE:

During the defrosting program, the system will pause and alert the user to turn the food over when 1/3 of the defrosting time remains. After turning food over, close the door and press the dial to resume the defrosting.

Weight must be in pounds and ounces. If label gives weight in pounds only, change the fraction of a pound to ounces using the following chart.







Time Defrost

Accessory Guide: Glass Turntable



The defrosting power is adjusted automatically once the cooking time is programmed

Example: How to defrost food for 3 minutes and 50 seconds.

<p>1 In standby mode, press the TIME/WEIGHT DEFROST once.</p>	
	
<p>2 Turn the dial to select the defrosting time.</p>	
	
<p>3 Press the dial to confirm and start defrosting.</p>	
	

NOTE: During the defrosting program, the system will pause and alert the user to turn the food over when 1/3 of the defrosting time remains. After turning food over, close the door and press the dial to resume the defrosting.

Air Fry

Accessory Guide: Glass Turntable & Air Fry Kit



For Air Fry cooking, you can select the type of food you want to cook from the programs listed on the cooking label located on the interior panel of the appliance.

Auto Program: How to air fry 16oz chicken wings.

<p>1 In standby mode, press the AIR FRY twice to use auto program.</p>	

<p>2 Turn the dial to select food code 'AF-3' (Chicken Wings).</p>	

<p>3 Press the dial once to confirm food code.</p>	

<p>4 Turn the dial to select food weight.</p>	





<p>5 Press the dial once to confirm and start cooking.</p>	



Air Fry Food Chart (Auto Program):

Code	Food	Weight	Cooking Time
AF-1	Onion Rings	8oz	23:00
AF-2	Chicken Drumsticks	8oz	33:00
		12oz	36:00
		16oz	39:00
		20oz	42:00
		24oz	45:00
AF-3	Chicken Wings	8oz	36:00
		12oz	38:00
		16oz	40:00
		20oz	42:00
AF-4	Chicken Nuggets	6oz	25:00
		8oz	26:00
		10oz	27:00
		12oz	28:00
AF-5	Popcorn Chicken	8oz	24:00
		10oz	26:00
		12oz	28:00
		16oz	30:00
AF-6	Mozzarella Sticks	6oz	13:00
		8oz	14:00
		10oz	15:00
		12oz	16:00
		14oz	17:00
		16oz	18:00
AF-7	French Fries	10oz	30:00

Custom Program: How to set AirFry by choosing time and temperature (400°F for 30 minutes).

<p>4 Turn the dial to set cooking time.</p>	
	
<p>5 Press the dial to confirm and start cooking.</p>	
	



NOTE:

- It can be programmed for four different temperatures. They are: 425°F(default) → 350°F → 375°F → 400°F.
- The longest cooking time is 95 minutes.





Microwave+Convection

Accessory Guide: Glass Turntable & Baking and Roasting Pan









This oven has six pre-programmed temperatures settings that make it easy to cook with both convection heat and microwave automatically. They are: 350°F → 375°F → 400°F → 425°F → 300°F → 325°F. The longest time is 95 minutes.

Example: How to set the combination of microwave and convection at temperature 425°F for 30 minutes.

<p>1 In standby mode, press MICRO+CONV once to use custom setting (Default is 350°F).</p>	
	
<p>2 Turn the dial to select the temperature.</p>	
	



3 Press the dial once to confirm the temperature.	
	
4 Turn the dial to select cooking time.	
	
5 Press the dial to confirm and start cooking.	
	

NOTE: You can check the convection temperature during cooking by pressing the MICRO+CONV.







Sensor Cook

Accessory Guide: Glass Turntable



For sensor cook function, you can select the type of food you want to cook from the programs listed on the cooking label located on the interior panel of the appliance..

Auto Program: How to Cook 8oz fresh vegetable with sensor.

<p>1 In standby mode, press the SENSOR COOK once.</p>	
	
<p>2 Turn the dial to select food code 'SC-3' (Fresh Vegetable).</p>	
	
<p>3 Press the dial once to confirm and start sensing and cooking.</p>	
	
<p>4 The appliance will automatically suggest a cooking time and start countdown.</p>	

Sensor Cook Food Chart (Auto Program) :

Code	Food	Weight Range
SC-1	Potato	6-24oz
SC-2	Beverage	8oz/10oz/12oz
SC-3	Fresh Vegetable	7-21oz
SC-4	Frozen Vegetable	7-21oz
SC-5	Frozen Pizza	5-16oz
SC-6	Oatmeal	5-16oz






NOTE:

- After cooking for a period of time, the system will detect whether there is error, if there is error, for example, the sensor short circuit or open circuit, the system will stop automatically with the display showing "Er60", beeps sound until press STOP/CANCEL pad.
- If there is no error, the system will judge corresponding cooking time based on the steam generated by the food, after cooking for a period of time, the countdown will display on the screen.
- During sensor cooking program, if press STOP/CANCEL pad once or open the door, the system will turn back to standby mode.
- If during the longest sensor time the oven cannot judge the cooking time according the steam produced by food in the cavity, the cooking will auto-end.

Turntable ON / OFF

The turntable is set to default as always turning. You can turn it on or off by pressing LOCK/TURNTABLE OFF during setting the Microwave program or during cooking in the Microwave program.

Example: How to set Turntable On/Off during MICRO programming.

1 During microwave cooking, suppose the display is showing 3:50.	
2 Press the LOCK/TURNTABLE OFF pad once, the turntable turns off.	
	
3 Press the LOCK/TURNTABLE OFF pad once again, the turntable turns on.	
	

NOTE: Below programs can use LOCK/TURNTABLE OFF during cooking or setting.

- SENSOR COOK
- SENSOR REHEAT






- MICRO
- TIME / WEIGHT DEFROST

Child lock

The child proof lock prevents unsupervised operation by children.

Example1: How to set/cancel the child lock.
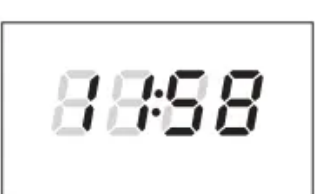
<p>1 In standby mode, suppose the display is showing 11:58.</p>	
<p>2 Press and hold the LOCK/TURNTABLE OFF for 3 seconds, then 'LOCK' appears.</p> <div style="display: flex; align-items: center; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; text-align: center; margin-right: 10px;"> LOCK TURNTABLE OFF </div> <p>Press and hold for 3 seconds.</p> </div>	
<p>3 Press and hold the LOCK/TURNTABLE OFF for 3 seconds, then 'LOCK' disappears.</p> <div style="display: flex; align-items: center; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; text-align: center; margin-right: 10px;"> LOCK TURNTABLE OFF </div> <p>Press and hold for 3 seconds.</p> </div>	

Automatic Protection Mechanism


OVERHEATING PROTECTION - The display may show Er10 which means the appliance has entered into high temperature overheat mode which will protect the appliance from further damage. Audible alert will be heard until STOP/CANCEL is pressed or the appliance is unplugged.

LOW TEMPERATURE PROTECTION - The display may show Er11 which means the appliance has entered into low temperature protection mode which will protect the appliance from further damage. Audible alert will be heard until STOP/CANCEL is pressed or the appliance is unplugged.

SENSOR MALFUNCTION PROTECTION - The display may show Er13 which means the appliance has entered into Sensor Malfunction protection mode which will protect the appliance from further damage. Audible alert will be heard until STOP/CANCEL is pressed or the appliance is unplugged.

CLEANING AND CARE


- Turn off the oven and unplug the power cord from the wall when cleaning.

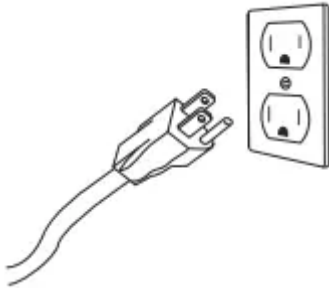


- Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.



- The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.

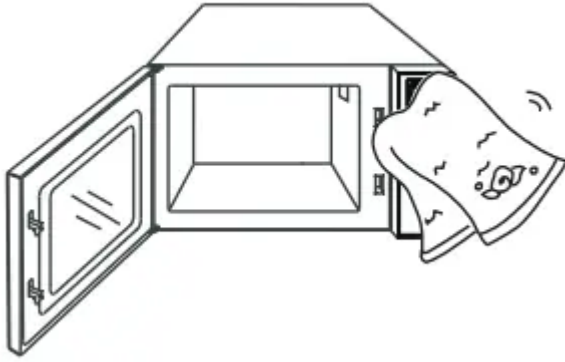

- If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
- It is occasionally necessary to remove the glass turntable, baking and roasting pan, air fry kit for cleaning. Wash them in warm sudsy water.

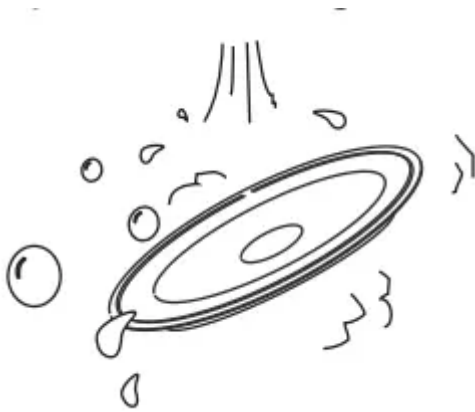

- If the light bulb burns out, please contact customer service to have it replaced.
- The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
- Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

