

Chapter 2 General Operation

Switching on

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two AAA batteries in the remote control.

 
 
Precautions on using batteries:

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.

2. Connect the power cable FIRST to the television, THEN to a mains socket. (Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)

Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

Note: The figures are for representation only. The location of the power socket at the back of the television might differ depending on the model.

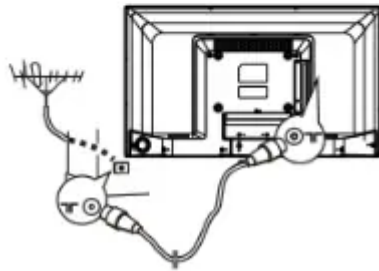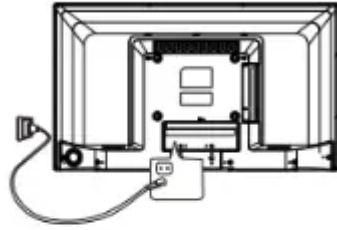

3. Connect an outside aerial to the ANTENNA IN socket at the back of the TV set.

The aerial socket (75 OHM - VHF / UHF / cable) can be used for connecting an external aerial or other equipment fitted.

4. When powered on, the TV will be turned on directly or be in standby.

Note: For some models, switch the TV on by pressing the power button.

 
If the power indicator lights up, the TV set is in standby mode. Press the button on the remote control or on the TV set to turn on the TV.

Switching off

- To put the TV set into standby mode, press the button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet. Note: For some models, press the power button to switch off the TV set .

Menu Function

The following instructions will introduce how to access and operate the main menu of the TV. Please note that some function might be unavailable in certain input source.

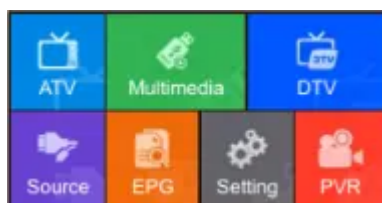

Source

Display the menu by pressing the Menu button. Press the down, left or right direction button to select the Source icon and press the OK button to enter the Source menu.



Selecting a Signal Source

1. Press the up or down direction button to select your desired source. (Note: The available source might differ depending on the model.)
2. Press the OK button to confirm the selection.

Note: ATV and DTV icon in Main Menu is the same function with ATV and DTV in Source Menu.

Setting

Display the menu by pressing the Menu button. Press the down, left or right direction button to select the Setting icon and press the OK button to enter the Setting menu. left or right direction button to select :Picture, Sound, Time, Option, Channel.

Picture



Note: Some options may be not available for certain signal sources.

Back Light: this option can be used to adjust the brightness of the backlight, depending on room lighting. Use the left or right direction button to adjust.

Picture Mode: use the right direction or OK button to enter the selectable options, then press the up or down direction button to scroll through the picture preset settings: Standard, Dynamic, Mild or User, and press the right direction or OK to confirm.

Note: When selecting Standard, Dynamic, Mild, the Back Light will restore to the defaulted setting in factory. You are recommended to use the Brightness for vivid palette.

Aspect Ratio: Selects the picture scale. This options

Include: Auto, 4:3, 16:9, Zoom1, Zoom2, Panorama.

Brightness: adjusts the brightness of the picture.

Contrast: adjusts the difference between the light and dark areas of the picture.

Color: adjusts the richness of color.

Sharpness: adjusts the crispness of the edges in the picture.

Tint: adjusts the balance between the red and green levels.

Note: Tint is available to be adjusted only when the system of the video signal is NTSC.

 
Color Temperature: adjusts the color temperature of the picture. options include Cool, Medium and Warm. Cool is for a more blue palette of picture colors; Warm is for a more red palette of picture colors; medium is between the two.

Noise Reduction: options include: Off, Low, Middle and High.

Screen: This function is only available in VGA mode.

Press Menu to return or Exit to close the menu.

Sound

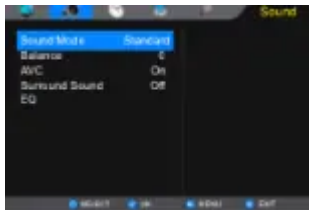

The SOUND menu allows you to adjust each option for your listening pleasure.

Sound Mode: options include User, Standard, Music, Movie and Sports.

Balance: adjusts the volume between the left and right speaker. Sets to "0" in the normal condition.

AVC: options include Off and On.

Surround Sound: options include Off and Surround.

EQ: adjusts the audio frequency settings.

Chapter 3 Advanced Functions

Music Show

1. Press LEFT/RIGHT buttons to select MUSIC and press OK button to enter the USB content browser.

2. Use the UP/DOWN/LEFT/RIGHT buttons to select a subfolder. Press OK button to enter. Use the UP/ DOWN/LEFT/RIGHT buttons to select a music and press OK button to play it.
3. Press MENU button to display the control menu. The menu options include Pause/Play, FB, FF, Prev., Next, Stop, Repeat mode, Mute, Playlist, Info., Goto Time.
4. Press OK button to confirm your setting. Press MENU or EXIT button to exit the control menu.

Movie Show

1. Press LEFT/RIGHT buttons to select MOVIE and press OK button to enter the USB content browser.
2. Use the UP/DOWN/LEFT/RIGHT buttons to select a subfolder. Press OK button to enter. Use the UP/ DOWN/LEFT/RIGHT buttons to select a movie and press OK button to play it.
3. Press MENU button to display the control menu. The menu options include Pause/Play, FB, FF, Prev., Next, Stop, Repeat mode, Set A~B, Playlist, Info., Slow Forward, Step Forward, Goto Time, Brightness, Contrast.
4. Press OK button to confirm your setting. Press MENU or EXIT button to exit the control menu.

Text Show

1. Press LEFT/RIGHT buttons to select TXT and press OK button to enter the USB content browser.
2. Use the UP/DOWN/LEFT/RIGHT buttons to select a subfolder. Press OK button to enter. Use the UP/ DOWN/LEFT/RIGHT buttons to select a file, then press OK button to display all the content.
3. Press MENU button to display the control menu. The menu options include Prev. Page, Next Page, Prev., Next, Stop, Music On/Off, Musiclist, Info..
4. Press OK button to confirm your setting. Press MENU or EXIT button to exit the control menu.

Programme Guide

Using this function you may know the following programme.

1. Press UP/DOWN buttons to move the highlight to Channel or Time item.
2. Press LEFT/RIGHT buttons to select Channel or Time item.

Select Channel, and the programme information on both the day and the next day will appear.

Select Time, and the programme information in one week will appear.

Reminder Setting

Using this function, you will not forget to watch the programme you desire.

1. Press BLUE button to enter Reminder Setting menu, use UP/DOWN/LEFT/RIGHT buttons to select and adjust it. Then press OK button to save.
2. Near the time that you set, it will remind you the channel will be switched automatically in 10 seconds.

PVR (Personal Video Record)

Allows you to record your favorite programme so that you will not miss the favorite part even if you go out.. If you go out, you may set the time that programme will play, then add it in the schedule list, at that time, it will start to record automatically. But, before that ,need to set the turnon timer for the TV.

Record the Programme

1. Press GUIDE button to display the digital programme guide. Then press RED button to enter submenu .
2. Use UP/DOWN buttons to select the item that you want to adjust, then press LEFT/ RIGHT buttons to adjust it. Note: select Mode Auto, can not be adjusted the time.
3. Press OK button to confirm it. The time information will keep in the Schedule list automatically.
4. In recording, the tool bar shows to indicate the recording progress. Press STOP button to stop recording manually. If the recording duration finishes, it will stop automatically. during recording, only PLAY and PAUSE in directions on screen are working.
5. To watch the recorded programs, go to USB/ Movie and find the folder PVR.

Schedule List

Allows you to perform scheduled recoding and reminding.

1. According to the steps above to add into list.
2. Press UP/DOWN buttons to select items and use LEFT/ RIGHT button s to adjust them. Press OK to save your selection. Press yellow button to enter the schedule list. Enter the schedule, press RED button may delete the list that you select.
3. The TV will record the programme at the set time automatically. A prompt appears during the last seconds before recording.

Attention and Frequently Asked Questions

Attention

1. Some non-standard mobile storage devices maybe cannot be recognized. Please change to use the standard device.

2. This system supports the following file formats:

Picture format: JPEG, BMP, PNG.

Video format: H.264, MPEG4, MPEG2, MPEG1, etc..

Audio Format: MP3.

Note: for coding files, there are many kinds non-standard coding method, so this system can not be guaranteed to support the file formats using any coding method.

Frequently Asked Questions:

1. Under the following conditions, this system cannot decode the file and the file cannot be play normally:

- The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system;
- The format of file is not matched or the file is harmed.

Note: The code rate of this system does not support exceed 20Mbps.

2. Hot plug: Do not disconnection when the system is reading or transmitting data, avoid damaging the system or the device.

3. Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera. If the power supply is not sufficient or not stable, you may encounter problems during operating or can not operate at all. In this case, please restart the device, or unplug the device and plug it again, and ensure that its power supply is normal.

4. The system supports standard USB1.1 and USB2.0 devices, such as standard U-disks, MP3 players, mobile hard disks, etc..

5. For obtaining better audio and video quality, suggests to use the external device which accords with USB2.0 standard.

6. Connecting two USB hard disk devices USB hard disk and one U-disk simultaneously can cause to slow the speed of reading or other problems, suggests to connect two U disk or one USB hard disk and one U-disk simultaneously.

7. When playing the video with high compression ratio, these phenomenons, such as picture standstill and menu long time response, are normal.

8. For some USB device with power supply, such as large size hard disk, MP4, etc., Suggests using it with power to avoid electric power shortage.

Chapter 4 Other Information

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

Remote control does not work

1. Change the batteries.
2. Batteries are not installed correctly.
3. Main power is not connected.

No picture, normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

Normal picture, no sound

1. Press the Vol+ button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Blank screen in VGA mode

Perhaps the TV can not recognize the resolution set by the PC. Suggest to change to the best resolution or other standard resolutions of the Windows system.

Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor/outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

 
Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

Base Installation

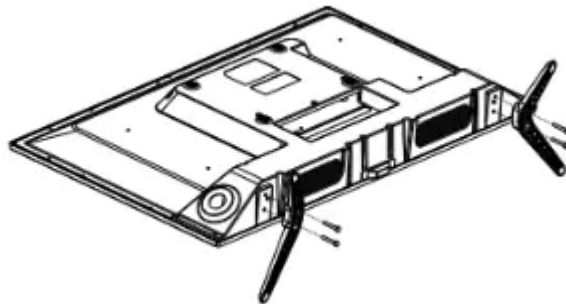

To fix the double support base on the unit by screws, the installation is completed.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

