

User Manual Furrion FCR20ACAFA-SS Refrigerator

Table Of Contents

- [Welcome](#)
- [Important Safety Instructions](#)
- [General safety and daily use](#)
- [Child safety](#)
- [Safety about electricity](#)
- [The Refrigerant and Risk of Fire](#)
- [Disposal of the Appliance](#)
- [Installation](#)
- [Location and Ambient Room Temperature Limits](#)
- [Leveling of Appliance](#)
- [Fixing the door handle](#)
- [Adjusting the doors](#)
- [Ventilation of appliance](#)
- [Parts and Features](#)
- [Operation](#)
- [Controlling the temperature](#)
- [Display controls](#)
- [Glass shelves](#)
- [Troubleshooting](#)
- [Warranty](#)

Welcome

Thank you for purchasing this Furrion 20 cu. ft. refrigerator. Before placing your new appliance into operation, please read these operating instructions carefully. They contain important information for safe use, installation and maintenance of the appliance.

Please keep this instruction manual in a safe place for future reference. Pass it onto possible new owners of the appliance.

The manufacturer does not accept responsibility for any damages that may arise due to non observation of these instructions.

Important Safety Instructions

General safety and daily use

WARNING

It is important to use your appliance safely. We recommend that you follow the guidelines below.

- We recommend that you wait for 4 hours before connecting the appliance to main plug to allow the refrigerant to flow back into the compressor. It is also recommend that you let the refrigerator run for 3 hours before storing any food inside.
- The packaging material is recyclable. and marked with the recycling symbol Adhere to current local regulations when disposing of packaging material.
- Do not use sharp-edge object or metal instrument to remove the frost and ice. or any frozen items from the freezer. This might damage the tubing of the refrigerant circuit and create leakage and risk of fire.
- Do not try to repair the appliance yourself. It is dangerous to alter the specifications or modify this product in any way. Any damage to the power cord may cause short circuit. fire or electric shock.
- Store any food in accordance with the storage instructions from the manufacturer.
- Do not place a large amount of food directly against the air outlet on the rear wall of both the refrigerator and freezer compartment. as it obstructs air circulation.
- Do not place hot items near the plastic components of this appliance.
- Frozen food must not be refrozen once it has been thawed out.
- Do not store bottled or canned drinks (especially carbonated drinks) in the freezer compartment. Bottles and cans may explode.
- Any type of pressurised aerosol containers with the "flammable" and/or small flame symbol should not be stored inside the refrigerator or freezer since it may cause an explosion.
- To avoid items falling and causing injury or damage to the appliance. Do not overload the door racks or store a large amount of food in the crisper drawers.
- Do not use mechanical devices or other means to accelerate the defrosting process. unless they are approved by the manufacturer.
- If the supply cord is damaged. it must be replaced by the manufacturer. its service agent or similarly qualified persons in order to avoid a hazard.
- When disposing of the appliance. do so only at an authorized waste disposal center. Do not expose to flame.

Child safety

- Keep all packaging away from children to avoid risk of suffocation.

- Protect children from being scalded by touching the very hot compressor at the rear bottom of appliance.
- Do not place items on top of the appliance as this could cause injury should they fall off.
- Never allow children to play with the appliance by hanging or standing over or on the doors, racks, shelves and drawers etc.

Safety about electricity

WARNING

To avoid the risks that are always present when using an electric appliance, we recommend that you pay attention to the instructions about electricity below.

- We recommend after you unpack the appliance and check through the appliance. Should any damage be evident.

Do not plug in the appliance but contact the shop immediately from which you purchased it. Keep all packing materials in this case.

- The appliance must be applied with single phase alternating current of AC V/60Hz.
- The mains plug must be accessible when the appliance is installed.
- Make sure that the appliance is grounded properly. If still in doubt, call a registered electrician.
- If the plug is not suitable for your socket outlets, it should be replaced by a qualified electrician. To avoid a possible shock hazard, do not insert the discarded plug into a socket. If in doubt, contact a registered electrician.
- Do not use extension cords or multiple sockets which could cause overloading of wiring circuits and cause a fire.
- Always plug your appliance into its own individual electrical socket which has a voltage rating that matched the rating plate.
- Make sure that the plug is not damaged.

Otherwise, it may cause a short circuit, electric shock, overheating and cause a fire.

- Do not insert the mains plug if the socket is loose, there is a risk of electric shock or fire.
- Switch off the appliance and disconnect it from the main power before you clean or move it.
- Never unplug the appliance by pulling on the electrical cord. Always grip the plug firmly and pull straight out from the socket to prevent damaging the power cord.
- Do not use the appliance without the light cover of interior lighting.
- Any electrical component must be replaced or repaired by a qualified electrician or authorized service engineer. Only genuine spares should be used.

- Do not use electrical appliances (such as ice cream makers) inside the food storage compartments of the appliance. unless they are approved by the manufacturer.
- Do not look directly into the LED light if it is uncovered to avoid eye injuries. If it is not functioning correctly. consult a qualified registered electrician.

The Refrigerant and Risk of Fire

The appliance contains a small quantity of refrigerant (R600a) in the refrigerant circuit.

- The iso-butane (R600a) refrigerant is environmentally friendly. but flammable. Ensure that tubing of the refrigerant circuit is not damaged during transportation and installation to avoid risk of fire caused by leaking refrigerant.

CAUTION

Keep away burning candles. lamps and other items with naked ~ flames and sources of ignition from the appliance. Ventilate the room thoroughly to avoid the risk of fire and eye injury in the case of any leakage of refrigerant (R600a). Do not store products which contain flammable propellants (e.g. spray cans) or explosive substances in the appliance.

Disposal of the Appliance

The refrigerator is built from reusable materials. It must be disposed of in compliance with current local waste disposal regulations. The appliance contains a small quantity of refrigerant (R600a) in the refrigerant circuit. For your safety. please refer to the section of "the refrigerant and risk of fire" in this Instruction Manual before scrapping the appliance. Please cut off the power cord to make the refrigerator unusable and remove the door seal and lock. Please be cautious of the cooling system and do not damage it by puncturing the refrigerant container and/or bending the tubing. and/or scratching of the surface coating.

Correct Disposal of this product

This symbol on the product or in its packing indicates that this product may not be treated as household waste.

Instead. it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly. you will help prevent potential negative consequences for the environment and human health. which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product. please contact your local council. your household waste disposal service. or the shop where you purchased the product.

Installation

This section explains the installation of the new appliance before using it for the first time. We recommend reading the following tips.

WARNING

For proper installation, this refrigerator must be placed on a level surface of hard material that is the same height as the rest of the flooring. This surface should be strong enough to support a fully loaded refrigerator, or approximately 294 lbs (133 kg). When moving, be sure to pull out and push back the unit in straight. (Fig. 1)

Location and Ambient Room Temperature Limits

It's essential to find a suitable place to locate your new appliance to ensure its efficient operation. Please consider the following instruction for your appliance:

- Install the appliance in a dry and low moisture area. The best range of ambient temperature for the appliance is 55 °F to 110 °F.
- Keep the appliance away from heat sources, such as stoves, fireplaces or heaters .
- Keep the appliance out of direct sunlight and rain.

Leveling of Appliance

For proper leveling and to avoid vibration, this appliance is provided with adjustable feet in front. Please adjust the level by following below instructions: (Fig. 2)

1. Roll the refrigerator into place.
2. Turn the adjustable feet (with your fingers or a suitable spanner) until they touch the floor.
3. Tilt the top backwards about 25/64-19/32 inches (10-15 mm) by turning the feet 1-2 turns further. This will allow the doors to self-close and seal properly.
4. Whenever you want to move the appliance, remember to turn the feet back up so the appliance can roll freely. Reinstall the appliance when relocating.

WARNING

The rollers, which are not castors, should be only used for forward or backward movement. Moving the refrigerator sideways may damage your floor and the rollers.

Fixing the door handle

If handles are to be fixed, please use an allen wrench clockwise until handles are securely in place. Each one of the handles is fitted with 2 screws. (Fig. 3):

Adjusting the doors

- Both left and right doors are equipped with adjustable axes, which are located in the lower hinges.
- Before adjusting its doors, please ensure that the refrigerator is level. Please review the previous section on "Leveling appliance". If you find the top of the doors are uneven, insert the allen wrench into the hinge axis, and turn it clockwise to raise the door or counterclockwise to lower the door, and insert an E Ring into the gap. (Fig. 4)

Ventilation of appliance

In order to improve efficiency of the cooling system and save energy, it is necessary to maintain proper ventilation around the appliance for heat dissipation. For this reason, sufficient space should be provided around the refrigerator, and the area should be clear of any obstruction that affects the air circulation.

Operation

All functions and controls of the unit are accessible from a control panel conveniently located on the door of the refrigerator. A keypad of touch buttons and a digital display allow easy configuration of features and settings in a simple and intuitive manner.

Important! Touch buttons require only a short press on a button to operate. The operation occurs when releasing your finger from the button, not while the button is pressed. There is no need for applying pressure on the keypad. Child Lock function related to the "Alarm" button requires a long touch of at least 3 seconds. Please refer to those related sections of this manual for detailed instructions.

The control panel consists of two indicating temperature areas, five icons representing different modes and six touch buttons. When the appliance is powered on for the first time, the backlight of the icons on the display panel turns on. If no buttons have been pressed and the doors remain closed, the backlight will turn off after 60 seconds.

Controlling the temperature

We recommend that when you start your refrigerator for the first time, set the temperature to 5 °C (41 °F) and the freezer to -18 °C (-0.4 °F). If you want to change the temperature, follow the instructions below.

CAUTION

When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature.

Display controls

1. Fridge

Press "Fridge" button repeatedly to set your desired temperature. The refrigerator temperature indicator will display corresponding values according to the following sequence.

2. Freezer

Press "Freezer" button to set the freezer temperature. The freezer temperature indicator will display corresponding values according to the following sequence.

3. Super

Freeze can rapidly lower temperatures and freeze your food substance faster than usual. This feature also helps to keep the vitamins and nutrition of fresh food for a longer period.

- Press "Super Freeze" button to activate the super freeze function. The Super Freeze light will illuminate and the freezer temperature setting will display -24 °C(-11.2°F).
- For first time use. or after a period of inactivity. allow 6 hours of normal operation before using Super Freeze mode. This is particularly important if a large amount of food is placed in the freezer.
- Super freeze automatically switches off after 26 hours of usage and the freezer temperature goes to below -20 °C(-4 °F).
- Press "Super Freeze" or "Freezer" to cancel Super Freeze mode and revert to previous temperature settings.

NOTE: When selecting the Super Freeze function. ensure there are no bottled or canned drinks (especially carbonated drinks) in the freezer compartment. Bottles and cans may explode.

4. Super Cool

Super Cool can refrigerate the food quicker and keep food fresh for a longer period.

- Press "Super Cool" button to activate this function. The Super Cool icon will light up and the Refrigerator temperature indicator will display 2 °C(35 .6 °F). Super cool automatically switches off after 6 hours.
- Press "Super Cool" or "Fridge" to cancel super cool mode and revert to previous temperature settings.

5. Alarm

In case of alarm. "Alarm" icon will light up and a buzzing sound will start.

Press "Alarm" button to stop alarm and buzzing then "Alarm" icon will turn off.

Caution! When the refrigerator is turned on after a period of inactivity. the alarm may be activated. In this case. press "Alarm" button to cancel it.

6. Child Lock

Press and hold the "Alarm" button for 3 seconds to activate the child lock. This will disable the display to prevent accidental changes to settings, Meanwhile, the "Child Lock" icon will be illuminated.

- To turn the child lock off. press and hold the "Alarm" button for 3 seconds. The "Child Lock" icon will be turned off.

7. Door Alarm

The alarm light and a buzzing sound indicate abnormal conditions, such as a door left open or a power interruption to the unit has occurred.

- Leaving any door of refrigerator or freezer open for over 2 minutes will activate a door alarm and buzzer. The buzzer will beep 3 times per minute for 10 minutes. Closing the door cancels the door alarm and buzzer.
- To save energy, please avoid keeping doors open for a long time when using refrigerator. The door alarm can also be cleared by closing the doors.

8. Temperature alarm

This is an important feature that alerts users of potential damage to stored food. If a power failure occurs, for example a blackout in your area of residence while you are away, the temperature alarm will memorize the temperature of the freezer when power is restored to the unit; this is likely to be the maximum temperature reached by frozen items.

This section explains that how to use the refrigerator features. We recommend that you read through carefully before using the appliance.

Glass shelves

The refrigerator chamber is provided with two glass shelves. While the top shelf is designed to be fixed, the lower shelf is adjustable. There are three placements for relocating the lower shelf. Adjust the height of the shelf according to your need: (Fig. 7)

- When removing the shelves, gently pull them forward until they exit the guides.
- When you return the shelves, make sure there is no obstacle behind and gently push them into the position. (Fig. 8)

Crisper and humidity control

The crisper, mounted on telescopic extension slides, is for storing vegetables and fruits.

You can adjust the humidity inside by using the sliding block. (Fig. 9)

- The humidity control adjusts the airflow in the crisper; higher airflow results in lower humidity. Slide the humidity control to the right in order to increase humidity.
- High humidity settings are recommended for vegetables, while low humidity is suitable for preservation of fruit.
- Follow these simple instructions to remove the crisper chamber, or freezer drawer, for cleaning. Empty the crisper chamber; pull it out to fully open position. Lift the crisper from the lateral slides. Push the slides fully in to avoid damage when closing the door.

Refrigerator Chamber

The refrigerator chamber is suitable for storage of vegetable and fruits. Separate packing of different foods is recommended to avoid losing moisture or flavour permeating into other foods.

CAUTION

Never close doors while the shelves, crisper and/or telescopic slides are extended. It may damage the unit.

Freezer Drawer

Freezer drawer is suitable for storing food required to be frozen, such as meat, ice cream, etc.

To remove the freezer drawer pull it out fully, tilt up the serving tray and lift it out, then open the refrigerator doors to the maximum angle and the lower freezer drawer can be taken out. (Fig. 10)

CAUTION

Do not allow babies or children go inside the refrigerator, as they could injure themselves or damage the refrigerator. Do not sit on the freezer door. The door may break. Do not allow children to climb into the freezer basket.

If you remove the divider to clean the basket bin, you must reinstall the divider after cleaning to prevent children from getting trapped inside the basket.

Energy saving tips

- We recommend that you follow the tips below to save energy.
- Try to avoid keeping the door open for long periods in order to conserve energy.
- Ensure the appliance is away from any sources of heat (direct sunlight, electric oven or cooker etc).
- Do not set the temperature colder than necessary.
- Do not store warm food or evaporating liquid in the appliance.
- Place the appliance in a well ventilated, humidity free, room. Please refer to Installing your new appliance chapter.
- View 1 under the "Description of the appliance" section shows the correct arrangement for the drawers, crisper and shelves. Do not adjust the combination as this is designed to be the most energy efficient configuration.

Tips for fresh food refrigeration

- Do not place hot food directly into the refrigerator or freezer. The internal temperature will increase resulting in the compressor having to work harder and will consume more energy.
- Do cover or wrap the food, particularly if it has a strong flavor.
- Place food properly so that air can circulate freely around it.

Tips for refrigeration

- Meat (all types): wrap and place on the glass shelf above the vegetable drawer.

Always follow food storage times and use by dates suggested by manufacturers.

- Cooked food, cold dishes, etc.: should be covered and may be placed on any shelf.

- Fruit and vegetables: should be stored in the special drawer provided.
- Butter and cheese: should be wrapped in airtight foil or plastic film wrap.
- Milk bottles: should have a lid and be stored in the door racks.

Tips for freezing

- When first starting-up or after a period out of use. let the appliance run at least 2 hours on the higher settings before putting food in the compartment.
- Prepare food in small portions for rapid freezing and thawing.
- Wrap up the food in aluminum foil or polyethylene food wraps which are airtight.
- Do not allow frozen and unfrozen food to touch.
- Iced products. if consumed immediately after removal from the freezer compartment. will probably cause frost bums to the skin.
- It is recommended to label and date each frozen package in order to keep track of the storage time.

Hints for the storage of frozen food

- Ensure that frozen food has been stored correctly by the food retailer
- Once defrosted. food will deteriorate rapidly and should not be re-frozen. Do not exceed the storage period indicated by the food manufacturer.

Switching off your appliance

If the appliance needs to be switched off for an extended period. the following steps should be taken to prevent mould on the appliance .

1. Remove all food.
2. Remove the power plug from the main socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate. For hygienic reasons the appliance (including exterior and interior accessories) should be cleaned regularly at least every two months.

CAUTION

The appliance must not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains socket.

Exterior cleaning

To maintain good appearance of your appliance. you should clean it regularly.

- Wipe the digital panel and display panel with a clean. soft cloth.

- Spray water onto the cleaning cloth instead of spraying directly on the surface of the appliance. This helps ensure an even distribution of moisture to the surface.
- Clean the doors, handles and cabinet surfaces with a mild detergent and then wipe dry with a soft cloth.

CAUTION

Do not use sharp objects as they are likely to scratch the surface. Do not use thinner, car detergent, clorox, ethereal oil, abrasive cleansers or organic solvent such as benzene for cleaning. They may damage the surface of the appliance and cause fire.

Interior cleaning

- You should clean the appliance interior regularly. It will be easier to clean when food stocks are low. Wipe the inside of the refrigerator freezer with a weak solution of bicarbonate of soda, and then rinse with warm water using a wrung out sponge or cloth. Wipe completely dry before replacing the shelves and baskets. Thoroughly dry all surfaces and removable parts.
- Although this appliance automatically defrosts, a layer of frost may occur on the freezer compartment's interior walls if the freezer door is opened frequently or kept open too long. If the frost is too thick, choose a time when the supply of food stocks are low and proceed as follows: – Remove existing food and accessories baskets, unplug the appliance from the mains power and leave the doors open. Ventilate the room thoroughly to accelerate the thawing process. – When defrosting is completed, clean your freezer as described above.

CAUTION

Do not use sharp objects to remove frost from the freezer compartment. Only after the interior is completely dry should the appliance be switched back on and plugged back into the mains socket.

Door seals cleaning

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

CAUTION

Only after the door seals are completely dry should the appliance be powered on.

WARNING

The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance.

Troubleshooting

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service. Please see below. You can carry out some easy checks according to this section before calling for service.

WARNING

Do not try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

Problème Solution

- Appliance is not working correctly

- Check whether the power cord is plugged into the power outlet properly.
- Check the fuse or circuit of your power supply, replace if necessary.
- It is normal that the freezer is not operating during the automatic defrost cycle, or for a short period of time after the appliance is switched on to protect the compressor.

- Odors from the compartments

- The interior of the refrigerator may need to be cleaned.
- Some food containers cause odors.

- Noise from the appliance

The sounds below are normal:

- Compressor running noises.
- Air movement noise from the small fan motor in the freezer compartment or other compartments.
- Gurgling sound similar to water boiling.
- Popping noise during automatic defrosting. Clicking noise before the compressor starts.

Other unusual noises are due to the reasons below and may need you to check and take action:

- The cabinet is not level.
- The back of the appliance touches the wall.
- Bottles or containers fallen or rolling.

- The motor runs continuously

It is normal to frequently hear the sound of the motor. It will need to run more when in the following circumstances:

- Temperature setting is set colder than necessary
- Large quantity of warm food has recently been stored within the appliance.
- The temperature outside the appliance is too high.
- Doors are kept open for a long period.
- After installing the appliance or it has been switched off for a long time.

- A layer of frost occurs in the compartment

Check that the air outlets are not blocked by food and ensure food is paced within the appliance to allow sufficient ventilation. Ensure the door is fully closed. To remove the frost, please refer to "cleaning and care" section.

- Temperature inside is too warm

You may have left the doors open too long or too frequently. the doors are kept open by some obstacle. or the appliance is located with insufficient clearance at the sides, back and top.

- Temperature inside is too cold

Increase the temperature by following the "Display controls" chapter

- Doors can't be closed easily

Check whether the top of the refrigerator is tilted back by 10 - 15mm to allow the doors to self close. or if something inside is preventing the doors from closing.

- Water drips on the floor

The water pan (located at the rear bottom of the cabinet) may not be properly leveled. the draining spout (located underneath the top of the compressor depot) may not be properly positioned to direct water into this pan. or the water spout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout.

- The light is not working

The LED light may be damaged. Refer to replace LED lights in cleaning and care chapter. The control system has disabled the lights due to the door being kept open too long. Closing and reopening the door reactivates the lights.

- Doors does not open smoothly

Check the door seal. If it is necessary, clean the rubber gasket seal around the edges of the door using dish soap and warm water. Dirt and grime can collect here and cause the door to stick.

Warranty

FURRION WARRANTS FOR A PERIOD OF 1 YEAR FROM DATE OF RETAIL PURCHASE BY THE ORIGINAL END-USE PURCHASER. THAT THIS PRODUCT, WHEN DELIVERED TO YOU IN NEW CONDITION, IN ORIGINAL PACKAGING, FROM A FURRION AUTHORIZED RESELLER AND USED IN NORMAL CONDITIONS, IS FREE FROM ANY DEFECTS IN MANUFACTURING, MATERIALS, AND WORKMANSHIP. IN CASE OF SUCH DEFECT, FURRION SHALL REPLACE OR REPAIR THE PRODUCT AT NO CHARGE TO YOU. THIS WARRANTY DOES NOT COVER: PRODUCTS WHERE THE ORIGINAL SERIAL NUMBERS HAVE BEEN REMOVED, ALTERED OR CANNOT READILY BE DETERMINED; DAMAGE OR LOSS CAUSED BY ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, PRODUCT MODIFICATION, FAILURE TO FOLLOW INSTRUCTIONS IN INSTRUCTION MANUAL, COMMERCIAL OR INDUSTRIAL USE; DAMAGE OR LOSS CAUSED TO THE DECORATIVE SURFACE OF PRODUCT; TO ANY DATA.

SOFTWARE OR INFORMATION; AND NORMAL WEAR AND TEAR. THIS WARRANTY ONLY PROTECTS THE ORIGINAL END-USER (“YOU”) AND IS NOT TRANSFERABLE; ANY ATTEMPT TO TRANSFER THIS WARRANTY SHALL MAKE IT IMMEDIATELY VOID. THIS WARRANTY IS ONLY VALID IN THE COUNTRY OF PURCHASE. THIS WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES. REMEDIES AND CONDITIONS. WHETHER ORAL OR WRITTEN. EXPRESS OR IMPLIED. FURRION SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES. INCLUDING. WITHOUT LIMITATION. WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF FURRION CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY. ALL SUCH WARRANTIES. INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

No Furrion reseller. agent. or employee is authorized to make any modification, extension, or addition to this warranty.

FURRION IS NOT RESPONSIBLE FOR DIRECT. INDIRECT. SPECIAL. INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION. OR UNDER ANY OTHER LEGAL THEORY. INCLUDING BUT NOT LIMITED TO LOST PROFITS. DOWNTIME. GOODWILL. DAMAGE TO OR REPLACEMENT OF ANY EQUIPMENT OR PROPERTY. ANY COSTS OF RECOVERING. REPROGRAMMING. OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH FURRION PRODUCTS. FURRION'S TOTAL LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THIS PRODUCT PURSUANT TO THE TERMS OF THIS SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR EXCLUSIONS OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OR CONDITIONS. SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY BY STATE OR (WHERE APPLICABLE IN THE COUNTRIES WHERE FURRION HAS NON-US/CANADIAN AUTHORIZED DEALERS) COUNTRY. NO ACTION OR CLAIM TO ENFORCE THIS WARRANTY SHALL BE COMMENCED AFTER THE EXPIRATION OF THE WARRANTY PERIOD.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

