

Owner's Manual Sewing Machine for Kenmore 38515512000

Table of contents

- Names Of Parts
- Cabinet And Tote Bags
- Names Of Parts
- Available Accessories And Attachments
- Getting Ready to Sew
- Connecting Machine To Power Supply
- For Your Safety
- Operating Instructions
- Controlling Sewing Speed
- Setting Spool Pins
- Presser Foot Lifter
- Thread Cutter
- Accessory Box
- Free-Arm Sewing .
- Stitch Selector
- Stitch Length Control
- Adjusting Stretch Stitch Balance
- Reverse Stitch Control
- Straight Stitch Sewing
- Straight Stitch .
- Use The Seam Guides
- Turn A Square Corner
- Topstitching
- Zipper Sewing
- Zigzag Stitches
- Basic Zigzag
- Satin Stitch
- Monogramming
- Applique
- Bar Tacking
- Button Sewing

- Overcasting Stitch
- Utility Stitches And Decorative Stitches
- Blind Hem Stitch
- Lace Work
- Multiple Zigzag Stitch
- Shell Stitch
- Stretch Stitches
- Straight Stretch
- Rick*Rack Stretch
- Overcast Stretch Stitching .
- Serging
- Buttonhole
- Buttonhole
- Care Of Your Machine
- Replacing The Light Bulb
- Cleaning The Feed Dogs
- Cleaning The Shuttle Race
- Oiling The Machine
- Troubleshooting

Threading the Machine

Threading the machine - Raise the thread take-up lever to its highest position by turning the handwheel counterclockwise, toward you. Raise the presser foot lifter. Place a spool on the spool pin, with thread coming off as shown.

1. Draw the end of thread around the upper thread guide
2. While holding the thread near the spool, draw the end of the thread down around the check spring holder,
3. Firmly draw the thread up from right to left over the take-up lever and down into the take-up lever eye.
4. Slide the thread behind the needle bar thread guide on the left [] Thread the needle from front to back or use a needle threader. We recommend using the convenient needlethreader (#200262101), included with your machine.

Drawing up bobbin thread

1. Raise the presser foot. Hold the needle thread lightly with your left hand and rotate the handwheel counterclockwise, toward you, for one complete turn.
2. Bring the bobbin thread up by pulling the needle thread up.
3. Pull both threads under and to the back of the presser foot, leaving 4 to 6 inches (10 cm to 15 cm) of thread clear.

Care Of Your Machine

Replacing the Light Bulb

- CAUTION: As the light bulb could be HOT, protect your fingers when you handle it.
- Unplug the machine and open the face cover. While pushing the bulb up, turn it counterclockwise to remove, Put in a new bulb by pushing it up and turning it clockwise

Cleaning the Feed Dogs

- Unplug the machine and remove the presser foot and needle with a screwdriver
- Remove the needle plate with a screwdriver.
- Use a lint brush to clean the feed dogs
- Replace needle plate and tighten with a screwdriver

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.