




CONTROL PANEL

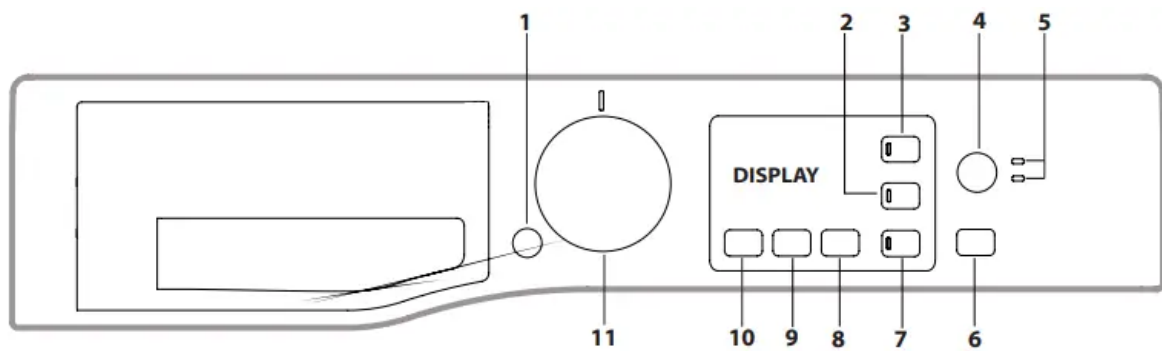

1. ON/OFF button
2. DRY ONLY button and indicator light
3. KEY LOCK button and indicator light
4. EXTRA TOUCH button
5. EXTRA TOUCH indicator lights
6. START/PAUSE button and indicator light
7. DELAY button and indicator light
8. DRYING LEVEL button
9. SPIN button
10. TEMPERATURE button
11. WASH CYCLE SELECTOR KNOB

WASH CYCLE TABLE

Maximum washing load 8 kg. Maximum drying load 6 kg. Power input in off mode 0.5 W / in left-on mode 8 W								Detergents and Additives		Recommended detergent		Residual dampness % (****)	Energy consumption kWh	Total water lt	Laundry temperature °C	
Wash cycle	Temperature		Max. spin speed (rpm)	Max. load for washing (kg)	Duration (h : m)	Drying	Max. load for drying (kg)	Wash	Fabric softener	Powder	Liquid					
	Setting	Range						1	2							
Wash & Dry Mixed	30 °C	☼ - 30 °C	1200	3.0	**	✓	3.0	●	○	-	✓	-	-	-	-	
Wash & Dry XL Bed & Bath	60 °C	☼ - 60 °C	1400	5.0	**	✓	5.0	●	○	-	✓	-	-	-	-	
Cotton (2)	40 °C	☼ - 60 °C	1400	8.0	3:55	✓	6.0	●	○	✓	✓	49	1.40	105	45	
Synthetics (3)	40 °C	☼ - 60 °C	1200	4.0	2:55	✓	4.0	●	○	✓	✓	35	0.80	55	43	
Wool	40 °C	☼ - 40 °C	800	2.0	**	✓	2.0	●	○	-	✓	-	-	-	-	
Delicates	30 °C	☼ - 30 °C	600 (****)	1.0	**	✓	1.0	●	○	-	✓	-	-	-	-	
Anti Allergy	60 °C	40 °C - 60 °C	1400	5.0	**	✓	5.0	●	○	✓	✓	-	-	-	-	
Anti Stain	20 °C	☼ - 20 °C	1400	8.0	**	✓	6.0	●	○	-	✓	-	-	-	-	
Steam Refresh	-	-	-	2.0	**	-	-	-	-	-	-	-	-	-	-	
 Spin & Drain *	-	-	1400	8.0	**	✓	6.0	-	-	-	-	-	-	-	-	
 Rinse & Spin	-	-	1400	8.0	**	✓	6.0	-	○	-	-	-	-	-	-	
Wash 20°C	20 °C	☼ - 20 °C	1400	8.0	1:50	-	-	●	○	-	✓	49	0.16	90	22	
Eco 40-60 (1) (Wash)	40 °C	40 °C	1351	8.0	3:38	✓	6.0	●	○	✓	✓	53	0.73	56	34	
			1351	4.0	2:48	✓		●	○	✓	✓	53	0.55	53	34	
			1351	2.0	2:25	✓		●	○	✓	✓	53	0.35	35	23	
Intense 60-90°C	60 °C	☼ - 90 °C	1400	8.0	2:45	✓	6.0	●	○	✓	✓	49	0.90	90	55	
Rapid Wash	30 °C	☼ - 30 °C	1200 (****)	4.5	0:30	-	-	●	○	-	✓	71	0.20	45	27	
Wash & Dry XS Rapid	30 °C	30 °C	1400	1.0	**	✓	1.0	●	○	-	✓	-	-	-	-	
● Required dosage ○ Optional dosage																
Eco 40-60 (4) (Wash & Dry)	40 °C	40 °C	1351	6.0	9:20	✓	6.0	●	○	✓	✓	0	3.80	75	33	
			1351	3.0	5:10	✓	3.0	●	○	✓	✓	0	1.98	47	32	

The cycle duration indicated on the display or instruction manual is an estimate based on standard conditions. The actual duration may vary in relation to several factors, such as the temperature and pressure of the incoming water, ambient temperature, amount of detergent, load quantity and type, load balancing and any additional options selected. The values given for programmes other than the Eco 40-60 programme are indicative only.


1) Eco 40-60 (Wash) - Test wash cycle in compliance with EU Ecodesign regulation 2019/2014. The most efficient programme in terms of energy and water consumption for washing normally soiled cotton laundry. Note: spin speed values shown on the display can slightly differs from the values stated in the table.

4) Eco 40-60 (Wash & Dry)- Test wash and drying cycle in compliance with EU Ecodesign regulation 2019/2014. To access “wash and dry” cycle select “Eco 40-60” wash programme and set “Drying Level” to “A3”. The most efficient programme in terms of energy and water consumption for washing and drying normally soiled cotton laundry. At the end of cycle the garments can be immediately stored to the cupboard.

For all testing institutes:

2) Long cotton cycle: set programme COTTON at temperature 40°C.

3) Long synthetics cycle: set cycle SYNTHETICS at a temperature of 40°C


* By selecting the  cycle and excluding the spin cycle, the washer-dryer will drain only.

** The duration of the wash cycles can be checked on the display.

*** After programme end and spinning with maximum selectable spin speed, in default programme setting.


**** The display will show the suggested spin speed as default value.

PRODUCT DESCRIPTION

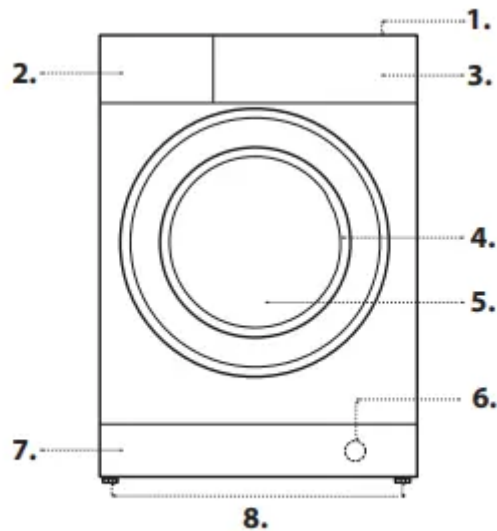

1. Top
2. Detergent dispenser drawer
3. Control panel
4. Handle
5. Porthole door
6. Drain pump (behind the plinth)
7. Plinth (removable)
8. Adjustable feet (2)

DETERGENT DISPENSER DRAWER

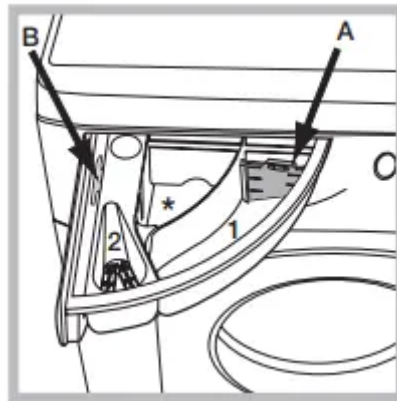

Compartment *: Do not insert detergent in this compartment.

Compartment 1: Washing detergent (powder or liquid)

- If liquid detergent is used, the removable plastic partition A (supplied) should be used for proper dosage.
- If powder detergent is used, place the partition into slot B.

Compartment 2: Additives (fabric softeners, etc.) The fabric softener must not exceed the “MAX” level.

- Use powder detergent for white cotton garments, for pre-washing, and for washing at temperatures over 60°C.
- Follow the instructions given on the detergent packaging.

WASH CYCLES

Follow the instructions on the symbols of the garment’s wash care label. The value indicated in the symbol is the maximum recommended temperature for washing the garment.



Wash & Dry: Mixed Use this cycle to wash and dry mixed garments (cotton and synthetics) in less than 4 hours. This cycle may be used to wash and dry loads of up to half of the machine drying capacity; we recommend the use of liquid detergent.

Wash & Dry XL Bed & Bath: This cycle is suitable for washing and drying without interruption cotton bulky items, like bed linens and towels, with the possibility to fully load the machine; we recommend using liquid detergent.

Cotton: Suitable for washing towels, underwear, table cloths, etc. made of resistant linen and cotton that are moderately to heavily soiled.

Synthetics: Specific for synthetic items (e.g. polyester, polyacrylic, viscose, etc.). If the dirt is difficult to remove, the temperature can be increased up to 60° and powder detergent can be used too.

Wool - Woolmark Apparel Care - Green: the wool wash cycle of this machine has been approved by The Woolmark Company for the washing of wool garments labelled as “hand wash” provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washer-dryer. (M1318)



Delicates: For washing very delicate garments. For best results, turn the garments inside out and use liquid detergent. If a time-based drying option is added, a particularly delicate drying cycle is performed at the end of the wash cycle, thanks to light handling and appropriate temperature control of the water jet. The recommended durations are:

- 1 kg of synthetic garments --> 150 min
- 1 kg of synthetic and cotton garments --> 180 min
- 1 kg of cotton garments --> 180 min

The degree of dryness depends on the load and fabric composition

Anti Allergy: Suitable for removing major allergens such as pollen, mites and cat or dog hair.

Anti Stain: This program ensures stain removal at low temperatures, preserving fabrics and colours. It is suitable to heavily-soiled garments with resistant colours. When running the program, do not mix garments of different colours. We recommend the use of powder detergent.

Steam Refresh: The garments will be damp once the cycle is completed, so we recommend hanging them to dry (2 kg, roughly 3 items). This programme refreshes garments by removing bad odours and relaxing the fibres and it is meant for dry, unsoiled items. Insert dry items only (that are not dirty) and select programme “Steam Refresh”. The “Steam Refresh” programme makes ironing easier.

- Do not add softeners or detergents.
- Not recommended for wool or silk garment

Spin & Drain: Spins the load then empties the water. For resilient garments. If you exclude the spin cycle, the machine will drain only.

Rinse & Spin: Rinses and then spins. For resilient garments.

Wash 20°C: For washing lightly soiled cotton garments, at a temperature of 20 °C.

Eco 40-60: For washing normally soiled cotton garments declared to be washable at 40 °C or 60 °C, together in the same cycle. This is the standard cotton programme and the most efficient in terms of water and energy consumption. The cycle runs only at 40°C as per regulation.


Intense 60-90°C: For heavily soiled whites and resistant colours.

Rapid Wash: For washing lightly soiled garments in a short time. Not suitable for wool, silk and garments to be washed by hand.

Wash & Dry XS Rapid: This cycle is to wash and dry without interruption small garments or T-shirts in different fabrics and colours up to 1kg in 45'. To achieve optimum results, use liquid detergent.

DISPLAY

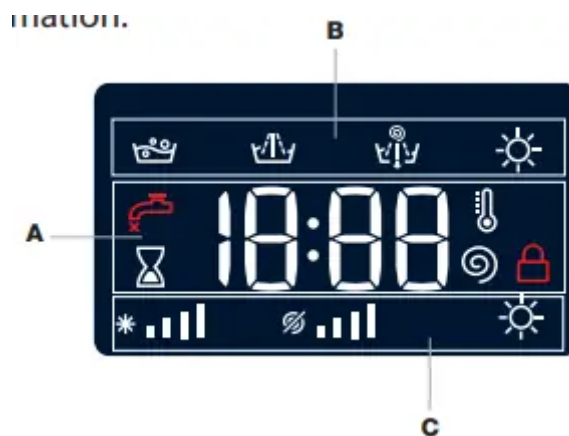



The display is useful when programming the washer-dryer and provides plenty of information.




Section A displays the duration of the various available wash cycles and, once the cycle starts, the time remaining to the latter's end (the display will show the maximum duration of the selected cycle which may decrease after a few minutes, as the actual duration varies in relation to the laundry load and the chosen settings); if the Delay option was set, the display will show the time remaining to the start of the selected wash cycle.


Moreover, pressing the relative button allows for visualising the maximum values for the temperature, spin speed or type of drying relative to the selected programme or the most recently selected ones, if compatible with the selected programme.

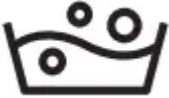
The “washing phases” relative to the selected cycle and the “washing phase” of the running cycle appear in section B:

-  Main Wash
-  Rinse
-  Spin/Drain
-  Drying

Section C displays – starting from the left – the icons corresponding to “temperature”, “spin” and “drying”.

The “temperature” bars  indicate the maximum temperature level that can be selected for the chosen cycle.

The “spin” bars  indicate the maximum spin speed that can be selected for the chosen cycle.

The  symbol lights up while the drying settings are being adjusted.

LOCKED DOOR INDICATOR

When lit, the symbol indicates that the door is locked. To prevent any damage, wait until the symbol turns off before attempting to open the door. To open the door while a cycle is in progress,

press the START/PAUSE button



; if the symbol







is off, the door can be opened.

FIRST-TIME USE





Once the appliance has been installed, and before it is used for the first time, run a wash cycle with detergent and no laundry, by setting the “Auto-Clean” cycle.

DAILY USE



Prepare the laundry by following the suggestions appearing under the “TIPS AND SUGGESTIONS” section.

- Press the ON/OFF button ; the indicator light relative to START/PAUSE  will flash slowly.
- Open the door. Load the laundry while making sure not to exceed the maximum load quantity indicated in the wash cycle table.
- Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments, as described in the “DETERGENT DISPENSER DRAWER” section.
- Close the door.
- The machine automatically displays the maximum temperature and spin speed values for the selected cycle, or the most recently used settings if they are compatible with the selected cycle. Pressing the  button gradually reduces the temperature down to the cold wash “OFF” setting. Pressing the  button gradually reduces the spin speed until it is completely excluded (“OFF” setting). Pressing the buttons further restores the maximum allowed values for the selected cycle.
- Select the desired wash cycle.
- Select the desired options.





STARTING CYCLE

- Press the START/PAUSE  button. The machine will lock the door ( symbol on) and the drum will start to rotate; the door will be unlocked ( symbol off) and then locked again ( symbol on) as preparation phase of each washing cycle.
- The “Clicking” noise is part of the door locking mechanism. Water will enter the drum and start the washing phase once the door is locked.

PAUSING A CYCLE

- To pause the wash cycle, press the START/PAUSE  button again; the indicator light will flash. To start the wash cycle from the point at which it was interrupted, press the START/PAUSE  button again.

OPENING THE DOOR, IF NECESSARY

- Once a cycle starts, the  symbol turns on to signal that the door cannot be opened. While a wash cycle is running, the door remains locked. To open the door while a cycle is under way, for example, to add or remove garments, press the START/PAUSE  button to pause the cycle; the indicator light will flash. If the  symbol is not lit, the door may be opened. Press the START/PAUSE  button again to continue the cycle

CHANGING A RUNNING WASH CYCLE

- To change a wash cycle while it is in progress, pause the washer-dryer using the START/




button (the relative indicator light will flash), then select the desired


cycle and press the START/PAUSE  button again. ! To cancel a cycle that has

already begun, press and hold the ON/OFF  button. The cycle will be stopped and the machine will switch off.

AT THE END OF THE WASH CYCLE

 



-


This will be indicated by the word “END” on the display; when the  symbol switches off, the door may be opened. Open the door and switch off the machine. If you

do not press ON/OFF  button, the washing machine will switch off automatically after about a 10 minutes. Close the water tap and unload the washing machine. Leave the door ajar to allow the drum to dry


OPTIONS


If the selected option is not compatible with the set wash cycle, the indicator light will flash and the option will not be activated.

-  Delay: To set a delayed start for the selected cycle, press the corresponding button repeatedly until the required delay period has been reached. To remove the delayed start setting, press the button until the text “OFF” appears on the display.
-  Temperature: Each wash cycle has a pre-defined temperature. To modify the temperature, press the button. The value will appear on the display.
-  Spin: Each wash cycle has a pre-defined spin speed. To modify the spin speed, press the  button. The value will appear on the display.

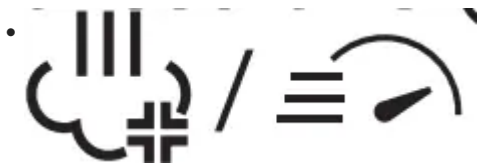


Extra Touch: After pushing the button for the 1st time,


option “Steam Hygiene”  enhances washing performance by generating steam during the wash cycle to remove up to 99,9% of viruses and bacteria. ! The steam generated during the operation of the washing machine may cause the porthole door to


become hazy. After pushing the button for the 2nd time, option “Rapid”  is selected and the cycle duration will be reduced.




Drying Level: The “Drying Level”  button adds a drying phase that will start automatically at the end of the washing phase, without interruption. The machine will select the maximum drying level which is compatible with the chosen wash cycle. It is possible to change the drying setting by pressing the button and choosing the desired laundry dryness level or drying time: Cupboard (A3): suitable for laundry which can be put back in a cupboard without being ironed. Hanger (A2): ideal for clothes which do not need to be dried fully. Iron (A1): suitable for clothes which will need ironing afterwards; the remaining dampness softens creases, making them easier to remove. Drying time: from 210 to 30 minutes. A cooling down period is always added to the end of each drying cycle. If your laundry load to be washed and dried is bigger than the maximum stated drying capacity of the machine, perform only the washing. Then unload some garments from the drum, until the maximum drying capacity is reached. At this point, follow the instructions provided for a “Dry Only” cycle.



Dry Only: The “Dry Only”  button allows you to start a drying-only cycle. Select the wash cycle compatible with the type of garments you wish to dry, then press

the button  to skip the washing phase and perform only the drying. The drying level is automatically set at the maximum for the selected cycle. It is possible to change it

by pressing the drying button  . Press start. Compatible cycles listed in the “wash cycle table” ! A cooling down period is always added to the end of each drying cycle.




KEY LOCK

•



To activate the control panel lock, press and hold the

button for approximately 2 seconds. When the symbol is lit, the control panel is locked (except for the ON/OFF  button). This will prevent accidental modifications to wash cycles, especially when children are at home. To deactivate the control panel lock, press and



hold the

button for approximately 2 seconds

TIPS AND SUGGESTIONS

- Divide the laundry according to: Type of fabric (cotton, mixed fibres, synthetics, wool, garments to be hand-washed). Colour (separate coloured garments from whites, wash new coloured garments separately). Delicates (small garments – such as nylon stockings – and items with hooks – such as bras: insert them in a fabric bag).
- Empty the pockets: Objects such as coins or lighters can damage the washer-dryer and the drum. Check all pockets.
- Follow the dosage recommendation / additives: To optimise cleaning results, and avoid skin irritation from excess detergent residue. Also saving money, by avoiding wasting detergent.
- Use low temperature and longer duration: The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.
- Observe the load sizes: Load your washing machine up to the capacity indicated in the “Wash Cycle Table” table to save water and energy.
- Noise and remaining moisture content: They are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.

CARE AND MAINTENANCE


Before performing cleaning and maintenance, switch the washer-dryer off and disconnect it from the mains power. Do not use flammable liquids to clean the washer-dryer. Clean and maintain your washer-dryer periodically (at least 4 times per year)


Cutting off the water and electricity supplies

- Close the water tap after every wash. This will limit wear on the hydraulic system inside the washer-dryer and help to prevent leaks. Unplug the washer-dryer when cleaning it and during all maintenance work.

Cleaning the washer-dryer

- The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives.
- The washer-dryer has a “Auto-Clean” cycle for its internal parts; it must be run without any load in the drum.
- To optimise this cycle, it is possible to use either detergent (10% of the quantity specified for lightly soiled garments) or special additives to clean the washer-dryer. We recommend running a cleaning cycle every 40 wash cycles.

- To start the programme press button  for 5 seconds.
- The cycle will start automatically and will run for about 70 minutes. To stop the cycle,

press the START/PAUSE  button.

Cleaning the detergent dispenser drawer

- Remove the dispenser drawer by lifting and pulling it outwards. Wash it under running water; this procedure should be effected regularly.

Caring for the door and drum

- Always leave the porthole door ajar in order to prevent unpleasant odours from forming.

Cleaning the pump: The washer-dryer is fitted with a self-cleaning pump that does not require any maintenance. Small items (such as coins or buttons) may sometimes fall into the protective pre-chamber situated at the base of the pump. ! Make sure that the wash cycle has ended and unplug the appliance. To access the pre-chamber:

1. remove the covering panel on the front side of the machine by inserting a screwdriver in the centre and sides of the panel and using it as a lever;
2. loosen the drainage pump cover by turning it anti-clockwise: it is normal for some water to leak out;
3. clean the inside thoroughly;

4. screw the cover back on;
5. put the panel back in place, making sure the hooks slot in place before pushing the panel onto the appliance.

Checking the water inlet hose


- Check the water inlet hose at least once a year. If it is cracked or broken, it must be replaced: during wash cycles, the high pressure of the water could suddenly split the hose open.
- Never use hoses that have already been used.

CLEANING THE OUTSIDE OF THE WASHING MACHINE


- Use a soft damp cloth to clean the outer parts of the washing machine.
- Do not use glass or general purpose cleaners. scouring powder or similar to clean the control panel – these substances might damage the printing.

CHECKING THE WATER SUPPLY HOSE

- Check the inlet hose regularly for brittleness and cracks. If damaged. replace it by a new hose available through our After-Sales Service or your specialist dealer.
- Depending on the hose type:

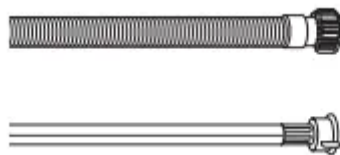


- If the inlet hose has a transparent coating. periodically check if the colour intensifies locally. If yes. the hose may have a leak and should be replaced.

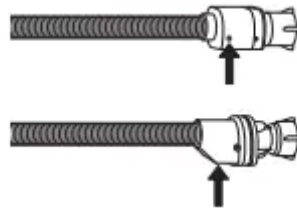

- For water stop hoses: check the small safety valve inspection window (see arrow). If it is red. the water stop function was triggered. and the hose must be replaced by a new one. For unscrewing this hose. press the release button (if available) while unscrewing the hose.

CLEANING THE MESH FILTERS IN THE WATER SUPPLY HOSE

1.

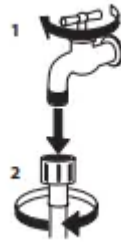


Close water tap and unscrew the inlet hose.

2. Clean the mesh filter at the hose's end carefully with a fine brush.




3. Now unscrew the inlet hose on the back of the washing machine by hand. Pull out the mesh filter from the valve on the back of the washing machine with pliers and carefully

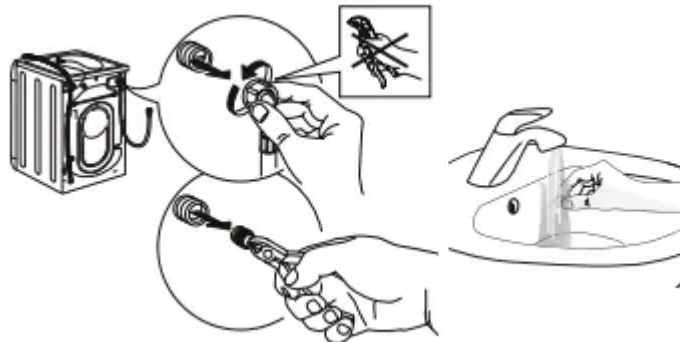

clean it.

4. Insert the mesh filter again. Connect the inlet hose to water tap and washing machine again. Do not use a tool to connect the inlet hose. Open the water tap and check that all

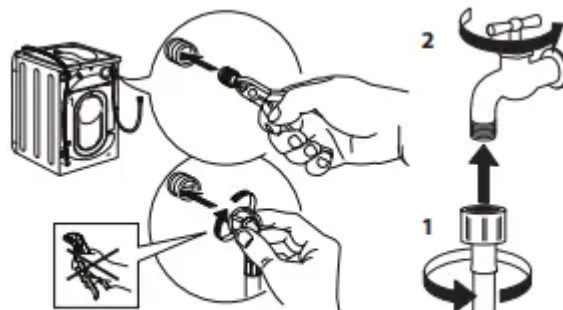


connections are tight.

CLEANING THE DETERGENT DISPENSER

- Remove the dispenser by raising it and pulling it out (see figure).

- Wash it under running water; this operation should be repeated frequently.

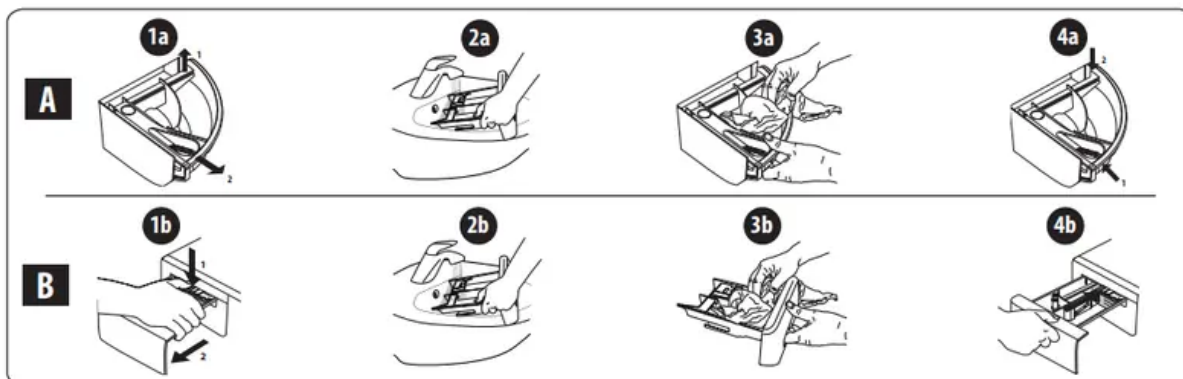

CLEANING THE WATER FILTER / DRAINING RESIDUAL WATER

Switch off and unplug the washing machine before cleaning the water filter or draining residual water. If you used a hot wash programme, wait until the water has cooled down before draining any water. Clean the water filter regularly, to avoid that the water cannot drain after the wash due to obstruction of the filter. If the water cannot drain, the display indicates that the water filter may be clogged.

1. Remove the kick panel: Using a screwdriver, do that which is shown in the following


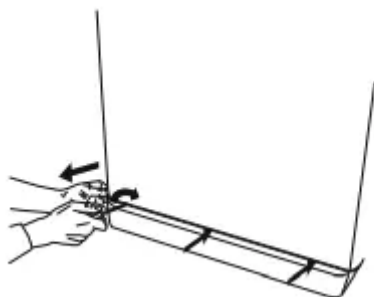


figure.

2. Container for the drained water: Place a low and wide container under the water filter in

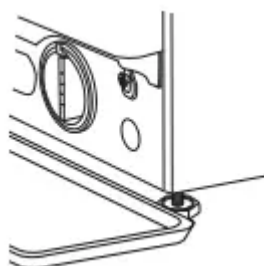

order to collect the residual water.


3. Drain the water: Slowly turn the filter counter-clockwise until all the water has come out. Allow the water to flow out without removing the filter. Once the container is full, close the

water filter by turning it clockwise. Empty the container. Repeat the procedure until all the



water has been drained.


4. Remove filter: Lay a cotton cloth beneath the water filter, which can absorb a small amount of rest water. Then remove the water filter by turning it out anticlockwise

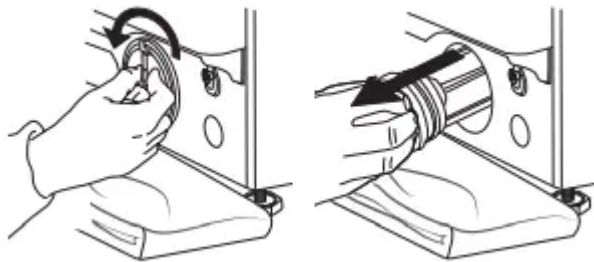

5. Clean the water filter: remove residues in the filter and clean it under running water.



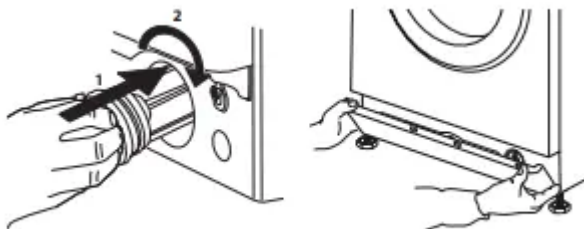

6. Insert the water filter and reinstall the plinth: Reinsert the water filter again by turning it in clockwise direction. Make sure to turn it in as far as it goes; the filter handle must be in vertical position. To test water tightness of the water filter, you can pour about 1 liter of water into the detergent dispenser. Then reinstall the plinth.



TRANSPORT AND HANDLING

- Do not lift the washer-dryer by gripping it from the upper section. Unplug the appliance and close the water tap. Check that the door and detergent dispenser drawer are tightly closed. Detach the filling hose from the water tap then detach the drain hose. Empty all the water remaining in the hoses and secure the latter so that they do not get damaged during transport. Apply the transport bolts back on. Repeat, in reverse order, the transport bolt removal procedure described in the “Installation instructions”.

DEMO MODE: to deactivate this function, switch the washer-dryer OFF. Then press and hold

“START/PAUSE”  button, within 5 seconds press also “ON/OFF”  button and hold both buttons for 2 seconds.



Never lift the washing machine by holding it at the worktop.


1. Pull out the mains plug and close the water tap.
2. Make sure that door and detergent dispenser are properly closed.
3. Disconnect the inlet hose from the water tap and remove the drain hose from your draining point. Remove all rest water from the hoses, and fix them so that they cannot get damaged during transport.
4. Refit the transport bolts. Follow the instructions for removing the transport bolts in the “Installation Guide” in reverse order

Important: Do not transport the washing machine without having fixed the transport bolts.

TROUBLESHOOTING

Your washer-dryer could occasionally fail to work. Before contacting the Technical Assistance Service, make sure that the problem cannot be easily solved using the following list.

1. The washer-dryer does not start.
 - The appliance is not plugged into the socket fully, or not enough to make contact.
 - There is no power in the house.
2. The wash cycle does not start.
 - The washer-dryer door is not closed properly.
 - The ON/OFF  button has not been pressed.
 - The START/PAUSE  button has not been pressed.
 - The water tap has not been opened.

- A delay has been set for the start time.
3. The washer-dryer does not fill with water (“H2O” appears on the display).
- The water inlet hose is not connected to the tap.
 - The hose is bent.
 - The water tap has not been opened.
 - There is no water supply in the house.
 - The pressure is too low.
 -
- The START/PAUSE  button has not been pressed.
4. The washer-dryer continuously loads and unloads water.
- The drain hose is not fitted between 65 and 100 cm from the floor.
 - The free end of the hose is immersed in water.
 - The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Technical Assistance Service.
 - If the home is on one of the upper floors of a building, there may be problems relating to back-siphonage, causing the washer-dryer to fill with water and drain continuously. Special anti-siphon valves are available in shops and help to prevent this inconvenience.
5. The washer-dryer does not drain or spin.
- The cycle does not include drainage: with certain cycles it must be started manually.
 - The drain hose is bent.
 - The drainage duct is clogged.
6. The washer-dryer vibrates a lot during the spin cycle.
- The drum was not unlocked correctly during installation.
 - The washer-dryer is not level.
 - The washer-dryer is tucked between furniture cabinets and the wall.
7. The washer-dryer leaks.
- The water inlet hose is not screwed on properly.
 - The detergent dispenser drawer is obstructed.
 - The drain hose is not properly attached.



8. The START/PAUSE indicator light flash rapidly and an error code appears on the display (e.g.: F-01, F-..).

- Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service.

9. There is too much foam.

- The detergent is not suitable for machine washing (it should display the text “for washer-dryers” or “hand and machine wash”, or the like).
- Too much detergent was used.

10. The washer-dryer does not dry.

- The appliance is not plugged into the socket, or not enough to make contact.
- There has been a power failure.
- The appliance door is not shut properly.
- A Delay Timer has been set.
- DRYING LEVEL is in the OFF position.


AFTER-SALES SERVICE

BEFORE CALLING THE AFTER-SALES SERVICE

1. See if you can solve the problem by yourself with the help of the suggestions given in the TROUBLESHOOTING
2. Switch the appliance off and back on again to see if the fault persists.

IF AFTER THE ABOVE CHECKS THE FAULT STILL OCCURS, GET IN TOUCH WITH THE NEAREST AFTER-SALES SERVICE: To receive assistance, call the number shown on the warranty booklet. When contacting our Client After sales service, always specify:

- a brief description of the fault;
- the type and exact model of the appliance;

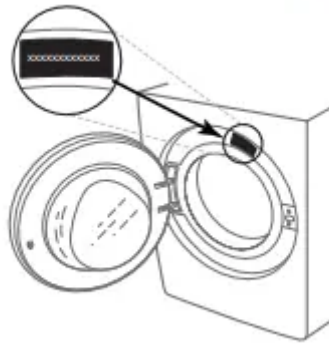

- the service num



- your full address;
- your telephone number

If any repairs are required, please contact an authorised aftersales service (to guarantee that original spare parts will be used and repairs carried out correctly).

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.