

## Using the INFO button (Now & Next guide)

The display identifies the current channel and the status of certain audio-video settings. The Now & Next guide shows daily TV programme information for each channel according to the broadcasting time.

**Note:** When you press the INFO button, a channel information banner will appear on the top of the screen. And then press the ENTER button, you can see the details of the programme.

- Scroll ◀/▶ to view information for a desired programme while watching the current channel.
- Scroll ▲/▼ to view information for other channels.

## Memorising channels

- Auto Tuning (depending on the country and model)

MENU → Broadcasting → Auto Tuning → ENTER

**Note:** Automatically allocated programme numbers may not correspond to actual or desired programme numbers. If a channel is locked, the PIN input window appears.

- Auto Tuning Aerial (Terrestrial): Selects the aerial source to memorise.

**Note:** When selecting Terrestrial, scans for a channel automatically and stores in the TV.

Channel Type (Digital & Analogue / Digital / Analogue): Selects the channel source to memorise.

## Using the Channel menu

MENU → Broadcasting → Channel List → ENTER

- Channel List The Channel List contains the channels your TV displays when you press the channel button. You can view channel information, All, TV, Radio, Data/Other, Analogue or Favourites 1-5.

Press ▶ (Mode) button to change the channel mode, or press ◀ (Sorting) button to change the channel order according to channel number or name on the list.

**Note:** When you press the CH LIST button on the remote control, Channel List screen will be displayed at once.

Channel Sorting

- Number / Name: Arranges the channel order according to channel number or name on the list.

## Channel Mode

- Aerial: Switches to Terrestrial or Cable. (depending on the country and model)
- Edit Favourites: Sets channels you watch frequently as favourites.

**Note** For detailed information about using Edit Favourites, refer to "Edit Favourites".

- Favourites 1-5: Shows all favourite channels, arranged in up to five groups. Each group has a separate screen.

**Note** The TV displays Favourites 1-5 only if you have added favourites using Edit Favourites.

- All: Shows all currently available channels.
- TV: Shows all currently available Digital TV channels.
- Radio: Shows all currently radio channels.
- Data/Other: Shows all currently available MHP (Multimedia Home Platform) or other channels.
- Analogue: Shows all currently available analogue channels.

### **Guide (Depending on the country and model)**

MENUm → Broadcasting → Guide → ENTERE

The EPG (Electronic Programme Guide) information is provided by broadcasters. Using programme schedules provided by broadcasters, you can specify programmes you want to watch in advance so that the channel automatically changes to the selected programme channel at the specified time. Programme entries may appear blank or out of date depending on a channel status.

- a Red (Quick Nav): Viewing the TV programmes on the list quickly using ▲/▼/◀/▶ buttons.
- b Green (Channel Category): Selects the type of channels you want to display.
- { Yellow (Schedule Manager): Moves to the reserved programmes in Schedule Manager.

### **Schedule Manager**

MENUm → Broadcasting → Schedule Manager → ENTERE

You can set a desired channel to be displayed automatically at the intended time. In addition, you can view, modify or delete a channel you have reserved to watch. N You must set the current time first using the Time → Clock function in the System menu to use this function.

1. Press the Schedule on the Schedule Manager screen. The Schedule Viewing menu appears.
2. Press the ▲/▼/◀/▶ buttons to set each option menu.

- Aerial: Selects the desired broadcasting signal.
- Channel: Selects the desired channel.
- Repeat: Select Once, Manual, Sat~Sun, Mon~Fri or Everyday to set at your convenience. If you select Manual, you can set the day you want.

**Note** The (c) mark indicates the day you've selected.

- Date: You can set the desired date. N It is available when you select Once in Repeat.
- Start Time: You can set the start time you want.

Note If you want to edit or cancel a reserved schedule, select the reserved schedule on Schedule Manager. Then press the ENTER button and select the Edit or Delete.

## **Edit Channel**

MENU → Broadcasting → Edit Channel → ENTER

You can edit or delete channels.

1. Go to Edit Channel screen.
2. Press the ▲/▼ buttons to select the desired channel, then press the ENTER button. The (c) mark indicates the channel you've selected.

**Note:** You can select more than one channel.

**Note:** Press the ENTER again to deselect the channel.

### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.