

# Owner 's Manual for GE APSA13YBMW

## Table of Contents

- IMPORTANT SAFETY INFORMATION
- USING THE AIR CONDITIONER
- CARE AND CLEANING
- INSTALLATION INSTRUCTIONS
- TROUBLESHOOTING
- WIFI SETUP
- LIMITED WARRANTY
- CONSUMER SUPPORT

## USING THE AIR CONDITIONER

### Controls

Features and appearance will vary. Lights next to the touch pads on the air conditioner control panel indicate the selected settings.

#### A. Control Panel Display

Displays the Set Temperature in degrees Fahrenheit. The corresponding indicator light will illuminate.

#### B. Power Button

Turns ON/OFF power to the air conditioner.

**NOTE:** Turning off power by pressing the Power button does NOT disconnect the appliance from the power supply.

- Press the Power button. The Power indicator will illuminate.

#### C. Mode Button

Press the Mode button to toggle among the operating options. The corresponding indicator will illuminate: Heat (on some models) - Heats the room to the set temperature

- Cool – Cools the room to the set temperature
- DRY – Reduces the humidity in the room
- Fan – Circulates the air in the room without cooling

#### D. Timer / Temperature Set Controls

Adjusts the Temperature or Hours in Time Delay.

### **To Set the Temperature:**

The temperature can be set between 64°F and 86°F (18°C and 30° C) when the air conditioner is in Cool mode.

- 1. Press the Mode button until the Cool mode is selected.
- 2. Press the Up Arrow or Down Arrow buttons to select the Temperature.

**NOTE:** The temperature cannot be set when the air conditioner is in either Fan or DRY mode.

### **E. Fan Speed Button**

The fan speed can be adjusted from Low, Medium, to High speed when the air conditioner is in operation.

**NOTE:** The fan speed cannot be adjusted when the unit is in DRY mode.

- Press the Fan Speed button to toggle among the three speeds. The corresponding fan speed indicator will illuminate.

### **1. Continuous Fan Mode**

To activate continuous fan mode, press and hold Fan Speed button for 3 seconds and release. "CF" will show on display for continuous fan mode. When set temperature is achieved, indoor fan will continue to run.

### **F. Timer Button**

Program a time from (1-hour to 24-hours) for the air conditioner to turn Off or On. When a Time Delay is programmed, the Timer indicator light will illuminate.

### **While the air conditioner is operating:**

- 1. Press the Timer button.
- 2. Press the Up/Down arrow buttons to select the number of hours you want the air conditioner to continue to operate before turning Off.

**NOTE:** Wait approximately 5 seconds for the Turn-Off time to be saved.

### **While the air conditioner is off:**

- 1. Press the Timer button.
- 2. Press the Up/Down arrow buttons to select the number of hours you want the air conditioner to remain off before turning On.

**NOTE:** Wait approximately 5 seconds for the Turn-On time to be saved.

### **To cancel the timer:**

- Press the Timer button once, the hours remaining will flash, press the timer button again and the timer will be canceled.

### G. WiFi Connect Pad (on some Models)

- 1. Press and hold the timer button for 3 seconds to connect the app or disconnect the app.
- 2. Connect your air conditioner to WiFi router. Refer to the “WiFi Set up” section for more information.

Set Temperature will be shown when unit is in operation.

### **Cool Mode**

Use the COOL mode for cooling.

#### **To set the COOL mode:**

- 1. Press the MODE pad until the COOL indicator light is lit.
- 2. Press the FAN pad to set HIGH, MEDIUM OR LOW fan speed.
- 3. Press + or - to set the desired temperature between 64°F and 86°F in 1°F increments.

After settings have been made, the display will not change back to show the room temperature. The temperature control is used to maintain the room temperature. The compressor will cycle on and off to keep the room at the set level of comfort. Set the temperature control at a lower number and the indoor air will become cooler. Set the temperature control at a higher number and the indoor air will become warmer.

**NOTE:** If the air conditioner is off and is then turned on while set to COOL, it will take approximately 3 minutes for the compressor to start and cooling to begin.

### **Cooling Descriptions**

- For Normal Cooling-Select the COOL mode and HIGH, MEDIUM, or LOW fan speed with a middle set temperature.
- For Maximum Cooling-Select the COOL mode and HIGH fan speed with a lower set temperature.
- For Quieter & Nighttime Cooling-Select the COOL mode and LOW fan speed with a middle set temperature.

**NOTE:** If you switch from COOL or DRY mode setting to OFF, wait 3 minutes before restarting

### **DRY Mode—Dehumidification**

Use the DRY mode to provide dehumidification only. The fan will run at a fixed speed at this setting, so a fan speed cannot be set. Keep windows and doors closed for the best dehumidifying effects. To set the DRY mode:

- Press the MODE pad until the DRY indicator light is lit.

In the DRY mode, a set temperature will not be displayed. After DRY mode has been set, the display will change back to show the room temperature.

**NOTE:** If you switch from a DRY setting to OFF or to a fan setting, wait at least 3 minutes before switching back to a DRY setting. If using the unit in the DRY mode as a dehumidifier for an extended time.

- 1. Unplug the power cord.
- 2. Connect a ½" outer diameter flexible drain hose to the drain port and drain to floor drain.
- 3. Reconnect the power cord and press the MODE pad until the DRY indicator light is lit

## FAN Mode

Use the FAN mode to provide air circulation and filtering without cooling.

### To set the FAN mode:

- Press the FAN pad until the desired indicator light for high, medium, or low fan speed is lit. Since fan only settings do not provide cooling, a set temperature will not be displayed. After FAN speed has been set, the display will change back to show the room temperature. The exhaust hose and window kit do not need to be installed when operating in fan mode.

## HEAT Mode

Use the Heat mode at Low, Med, High or Auto Fan Speed for Heating. Use the Temperature Increase (+) / Decrease (-) pads to set the desired temperature between 64°F and 86°F in 1°F increments. An electronic thermostat is used to maintain the room temperature. The heater will cycle on and off to keep the room at the set level of comfort.

## REMOTE CONTROL

1. Insert the two batteries (provided).
2. Aim the remote control at the signal receiver on the control panel to operate the air conditioner.

### A. Power

Turns ON/OFF power to the air conditioner.

**NOTE:** Turning off power by pressing the Power button does NOT disconnect the appliance from the power supply.

- Press the Power button. The Power indicator will illuminate.

### B. Mode

Press the Mode button to toggle among the operating options. The corresponding indicator will illuminate:

- Heat (on some models)- Heats the room to the set temperature
- Cool-Cools the room to the set temperature
- DRY- Reduces the humidity in the room
- Fan-Circulates the air in the room without cooling

### C. Temperature

Adjusts the Temperature or Hours in Time Delay.

To Set the Temperature: The temperature can be set between 64°F and 86°F (18°C and 30°C) when the air conditioner is in Cool mode.

1. Press the Mode button until the Cool mode is selected.
2. Press the Up Arrow or Down Arrow buttons to select the Temperature

**NOTE:** The temperature cannot be set when the air conditioner is in either Fan or DRY mode.

### D. Fan Speed

The fan speed can be adjusted from Low, Medium, to High speed when the air conditioner is in operation.

**NOTE:** The fan speed cannot be adjusted when the unit is in DRY mode.

- Press the Fan Speed button to toggle among the three speeds. The corresponding fan speed indicator will illuminate.

### E. Hours

Program a time from (1-hour to 24-hours) for the air conditioner to turn Off or On. When a Time Delay is programmed, the Timer indicator light will illuminate.

### F. Swing Button

The louvers on your portable air conditioner will open automatically (do not pry them open or push them shut). Use the Swing Button on your remote to adjust the louvers in the position you would like them to be in, or to operate in Swing mode the louvers will continue to move up and down

#### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.