

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable
- This does not affect your statutory rights.

IMPORTANT SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a competent person to carry out any service or
- The appliance is only to be used with the power supply unit provided with the
- This appliance contains batteries that are only replaceable by skilled persons.

Battery must be disposed of safely.

WARNING:

For the purposes of recharging the battery, only use the detachable

- If the adapter cord is damaged, it must be replaced by the manufacturer, its service
- This appliance can be used by children aged from 8 years and above and persons with
- This product is intended for household use only. Do not use outdoors. Do not direct
- Unplug from outlet when fully charged, and before putting on and taking off parts.
- Do not use vacuum cleaner if it has been dropped, damaged, left outdoors or
- Keep the vacuum cleaner and adapter away from water; do not allow it to get wet. If
- The use of accessory attachments not recommended by the appliance manufacturer
- Do not use this vacuum to pick up water or any other liquids, combustible substances

PROBLEM SOLVING

The vacuum cleaner doesn't switch on

- Check the vacuum is charged
- Check the socket is switched on
- Check another appliance in the socket
- Check for any obvious signs of damage to cord or plug
- If recently used, allow to cool for 1 hour then try again

The suction is decreasing and dirt is not adequately being picked up

- Check if the dust canister is full; if so, empty it

- Clean the filters following the instructions in this manual
- Check there are no blockages in the hose. and clear any

Vacuum cleaner is over heating

- Check the filters are clean

Dust is coming out of the vacuum

- The dust canister has not been fitted correctly. Refit the

The air exhausted from the vacuum smells

- Clean the filters and dust container following the

The vacuum cleaner has cut out

- Allow the vacuum to cool for 1 hour. Clean all filters and
- If you are still experiencing difficulties with the appliance please contact us BEFORE returning the appliance to the retailer it was purchased from:

MONTH

- This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship. the faulty product must be returned to the place of purchase.
- By registering your product you will get an additional year guarantee free of charge. Additional cover can be purchased through the website.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.