


# WASH CYCLE TABLE

Maximum load 7 kg Power input in off mode 0.5 W / in left-on mode 8 W							Detergents and Additives		Recommended detergent		Residual dampness % ( <sup>1</sup> )	Energy consumption kWh	Total water l	Laundry temperature °C
Wash cycle		Temperature		Maxim spin (r.p.m.)	Max. load (kg)	Duration (h : m)	Wash	Fabric softener	Powder	Liquid				
		Setting	Range				2	3						
1	White	60°C	☼ - 90°C	1200	7	2:10	●	○	✓	✓	53	2.16	72	55
2	Mix Colours	40°C	☼ - 40°C	1200	7	1:35	●	○	-	✓	-	-	-	-
3	Synthetics (3)	40°C	☼ - 60°C	1200	3.5	2:55	●	○	✓	✓	35	0.86	60	43
4	Cotton (2)	40°C	☼ - 60°C	1200	7	3:40	●	○	✓	✓	50	0.98	75	45
5	Delicate	30°C	☼ - 30°C	0	1	1:15	●	○	-	✓	-	-	-	-
6	Wool	40°C	☼ - 40°C	800	1.5	1:15	●	○	-	✓	-	-	-	-
7	Mix Light	20°C	☼ - 20°C	1000	7	2:00	●	○	-	✓	-	-	-	-
8	Rapid 20'	20°C	☼ - 20°C	800	1.5	0:20	●	○	-	✓	-	-	-	-
9	Sport Intensive	30°C	☼ - 30°C	600	2.5	1:25	●	○	-	✓	-	-	-	-
10	Sport Light	30°C	☼ - 30°C	600	2.5	1:00	●	○	-	✓	-	-	-	-
11	Sport Shoes	30°C	☼ - 30°C	600	Max. 2 Pairs	0:55	●	○	-	✓	-	-	-	-
12	Jeans	40°C	☼ - 40°C	800	2.5	1:20	●	○	-	✓	-	-	-	-
13	Eco 40-60 (1)	40°C	40°C	1151	7	3:25	●	○	✓	✓	53	1.00	50	38
				1151	3.5	2:40	●	○	✓	✓	53	0.60	42	35
				1151	1.75	2:10	●	○	✓	✓	53	0.60	42	36
14	20°C	20°C	☼ - 20°C	1200	7	1:50	●	○	-	✓	64	0.16	25	22
15	Rinse+Spin	-	-	1200	7	0:55	-	○	-	-	-	-	-	-
16	Spin+Drain *	-	-	1200	7	0:10	-	-	-	-	-	-	-	-
4	Eco Cotton (4)	60°C	60°C	1200	7	3:45	●	○	✓	✓	53	0.90	40	-
		40°C	40°C	1200	7	3:40	●	○	✓	✓	50	0.98	75	-

## PRODUCT DESCRIPTION

1. Top
2. Detergent dispenser drawer
3. Control panel
4. Handle
5. Porthole door
6. Drain pump (behind the plinth)
7. Plinth (removable)
8. Adjustable feet (2)

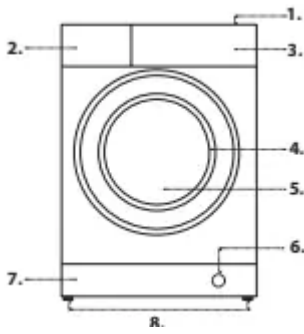

## PAUSING A CYCLE

To pause the wash cycle, press the START/PAUSE button again; the indicator light will flash amber. If the symbol is not lit, the door may be opened. To start the wash cycle from the point at which it was interrupted, press the START/PAUSE button again.

## OPENING THE DOOR, IF NECESSARY

Once a cycle starts, the symbol turns on to signal that the door cannot be opened. While a wash cycle is running, the door remains locked. To open the door while a cycle is under way, for example, to add or remove garments, press the START/PAUSE button to pause the cycle; the indicator light will flash amber. If the symbol is not lit, the door may be opened. Press the START/PAUSE button again to continue the cycle.

## CHANGING A RUNNING WASH CYCLE

To change a wash cycle while it is in progress, pause the washing machine using the START/PAUSE button (the relative indicator light will flash amber), then select the desired cycle and press the START/PAUSE button again.

To cancel a cycle that has already begun, press and hold the ON/OFF button. The cycle will be stopped and the machine will switch off.

## END OF THE CYCLE

Once the cycle terminates the END indicator light will light up; when the indicator light switches off, the door may be opened. If you do not press ON/OFF button, the washing machine will switch off automatically after about a 10 minutes. Close the water tap, open the door and unload the washing machine. Leave the door ajar to allow the drum to dry.

## **CARE AND MAINTENANCE**

Before performing cleaning and maintenance, switch the washing machine off and disconnect it from the mains power. Do not use flammable liquids to clean the washing machine. Clean and maintain your washing machine periodically (at least 4 times per year).

### **Disconnect the water and power supplies**

Close the water tap after every wash. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks.

Unplug the washing machine when cleaning it and during all maintenance work.

### **Clean the washing machine**

The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives.

### **Clean the detergent dispenser drawer**

Wash it under running water; this operation should be repeated frequently.

### **Care for the door and drum**

Always leave the porthole door ajar in order to prevent unpleasant odours from forming.

### **Clean the pump**

The washing machine is fitted with a auto-cleaning pump that does not require any maintenance. Small items (such as coins or buttons) may sometimes fall into the protective pre-chamber situated at the base of the pump.

Make sure the wash cycle has ended and unplug the appliance.

To access the pre-chamber:

1. remove the cover panel on the front of the machine by first pressing it in the centre then pushing downwards on both sides to extract it;
2. loosen the drainage pump cover by turning it anti-clockwise;
3. it is normal for some water to leak out;
4. clean the inside thoroughly; screw the cover back on;
5. put the panel back in place, making sure the hooks slot in place before pushing the panel onto the appliance.

## ELECTRICAL WARNINGS

It must be possible to disconnect the appliance from the power supply by unplugging it if plug is accessible, or by a multi-pole switch installed upstream of the socket in accordance with the wiring rules and the appliance must be earthed in conformity with national electrical safety standards.

Do not use extension leads, multiple sockets or adapters. The electrical components must not be accessible to the user after installation. Do not use the appliance when you are wet or barefoot. Do not operate this appliance if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.

If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard - risk of electric shock.

## CLEANING AND MAINTENANCE WARNING:

Ensure that the appliance is switched off and disconnected from the power supply before performing any maintenance operation; never use steam cleaning equipment - risk of electric shock.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.