

User Manual Samsung HW-Q930B/XY Soundbar 2022

Table Of Contents

- [Checking the Components](#)
- [Product Overview](#)
- [Top Panel of the Soundbar](#)
- [Bottom Panel of the Soundbar](#)
- [Using the Soundbar Remote Control](#)
- [Inserting Batteries before using the Remote Control \(AAA batteries X 2\)](#)
- [How to Use the Remote Control](#)
- [Active Voice Amplifier \(AVA\)](#)
- [Using the Hidden Buttons \(Buttons with more than one function\)](#)
- [Output specifications for the different sound effect modes](#)
- [Adjusting the Soundbar volume with a TV remote control](#)
- [Connecting the Soundbar](#)
- [Connecting the power and units](#)
- [Recommended Speaker Layout](#)
- [Surround speaker mode \(HW-QB only\)](#)
- [Manually connecting the Subwoofer or Surround Speakers](#)
- [LED Indicator Lights on the Rear of Subwoofer and Surround Speakers](#)
- [Connecting to a TV](#)
- [Connecting the TV that supports HDMI ARC \(Audio Return Channel\)](#)
- [Connecting using an Optical Cable](#)
- [Connecting via Bluetooth](#)
- [Connecting via Wi-Fi](#)
- [Using the Q-Symphony Function](#)
- [Using the Spacefit sound](#)
- [Connecting an External Device](#)
- [Method 1. Connecting using an HDMI Cable \(Capable of Dolby Atmos / DTS:X decoding and playback\)](#)
- [Method 2. Connecting using an Optical Cable](#)
- [Connecting a Mobile Device](#)
- [Method 1. Connecting via Bluetooth](#)

- [Method 2. Connecting via Wi-Fi \(Wireless Network\)](#)
- [Using the Tap Sound](#)
- [Connecting via Apple Airplay](#)
- [Installing the Wall Mount](#)
- [Installation Precautions](#)
- [Wallmount Components](#)
- [Installing the Surround Speakers on a Wall \(applicable models only\)](#)
- [Installing the Soundbar in front of TV](#)
- [Component](#)
- [Software Update](#)
- [Auto Update](#)
- [USB Update](#)
- [Initialisation](#)
- [Troubleshooting](#)
- [Licence](#)
- [Open Source Licence Notice](#)
- [Important Notes About Service](#)
- [Specifications and Guide](#)
- [Specifications](#)

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Refer to the table below for an explanation of symbols which may be on your Samsung product.

WARNING

- To reduce the risk of fire or electric shock. do not expose this appliance to rain or moisture.

CAUTION

- TO PREVENT ELECTRIC SHOCK. MATCH WIDE BLADE OF PLUG TO WIDE SLOT. FULLY INSERT.
- This apparatus shall always be connected to a AC outlet with a protective grounding connection.

- To disconnect the apparatus from the mains. the plug must be pulled out from the mains socket. therefore the mains plug shall be readily operable.
- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids. such as vases. on the apparatus.
- To turn this apparatus off completely. you must pull the power plug out of the wall socket. Consequently. the power plug must be easily and readily accessible at all times.

PRECAUTIONS

1. Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the bottom of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7~10 cm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit. disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.
2. During thunderstorms. disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.
3. Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and cause the unit to malfunction.
4. Protect the product from moisture (i.e. vases). and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Unplug the power cable from the AC wall socket if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only. Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter. wait approximately 2 hours until the unit has reached room temperature before using.
5. The battery used with this product contains chemicals that are harmful to the environment. Do not dispose of the battery in the general household trash. Do not expose the battery to excess heat. direct sunlight. or fire. Do not short circuit. disassemble. or overheat the battery.

01 CHECKING THE COMPONENTS

- For more information about the power supply and power consumption. refer to the label attached to the product. (Label: Rear of the Soundbar Main Unit)
- To purchase additional components or optional cables. contact a Samsung Service Centre or Samsung Customer Care.
- For more information about the wallmount or rubber-foot. see pages 32~34.
- Design. specifications. and App screen are subject to change without prior notice.
- The appearance of the accessories may differ slightly from the illustrations above.

02 PRODUCT OVERVIEW

Top Panel of the Soundbar

- When you plug in the AC cord, the power button will begin working in 4 to 6 seconds.
- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.
- If you hear sounds from both the TV and Soundbar, go to the Settings menu for the TV audio and change the TV speaker to External Speaker.

Bottom Panel of the Soundbar

- When disconnecting the power cord from a wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.

03 USING THE SOUNDBAR REMOTE CONTROL

Inserting Batteries before using the Remote Control (AAA batteries X 2)

Slide the back cover in the direction of the arrow until it is completely removed. Insert 2 AAA batteries (1.5V) oriented so that their polarity is correct. Slide the battery cover back into position.

How to Use the Remote Control

1. Power

Turns the Soundbar on and off.

- **Auto Power Down Function** : The unit turns off automatically in the following situations:
 - In D.IN / HDMI / Wi-Fi / BT mode if there is no audio signal for 18 minutes.

2. Source

Press to select a source connected to the Soundbar.

3. Bluetooth PAIR

Switch the Soundbar to Bluetooth pairing mode. Press the button and wait for the “**BT PAIRING**” screen to connect to a new Bluetooth device.

4. Mute

- Press the (Mute) button to mute the sound.
- Press it again to unmute the sound.

5. SOUND MODE

By pressing the button, you can select the desired audio mode such as **Surround, Game, Standard, Adaptive sound.**

- **Standard**

Outputs the original sound.

- **Surround**

Provides a wider sound field than standard.

- **Game**

Provides stereoscopic sound to immerse you in the action while gaming.

- **Adaptive sound**

Analyzes the content in real time and automatically provides the optimal sound field based on the characteristics of the content.

6. CH LEVEL

By pressing the button, you can adjust the volume of the each speaker such as Centre level, Side level, Wide level, Front Top level, Rear level, and Rear top level.

- To control the volume of the each speaker select Centre level. Side level. Wide level. or Front Top level in Sound Settings. and then adjust the volume between -6~+6 by using the Up/Down buttons.
- If Surround Speakers are connected. select Rear level or Rear top level and then use the Up/Down buttons to adjust the volume within a -6 to +6 range.
- CH LEVEL specifications may differ with the respective model.

7. Sound Control

By pressing the button. you can set the audio function such as **Spacefit sound, AVA, Voice enhance mode, Night mode, Sync, Surround speaker mode, Virtual**. The desired item can be adjusted using the **Up/Down** buttons.

- The **Spacefit sound** and **AVA** functions are not supported by **Q700B** model.
- **Voice enhance** mode enhances spoken dialog in movies and TV to make it easier to hear.
- **Night mode** is optimized for night time viewing with the settings adjusted to bring the volume down but keep the dialog clear.
- Press and hold the **(Sound Control)** button for about 5 seconds to adjust the sound for each frequency band. Hz. 300Hz. 600Hz, 1.2kHz, 2.5kHz, 5kHz, and 10kHz are selectable using the **Left/Right** buttons and each can be adjusted to a setting between -6 to +6 using the **Up/Down** buttons. (Make sure the Sound mode is set to "Standard".)
- If the video on the TV and audio from the Soundbar are not synchronized. select Sync in Sound Control. and then set the audio delay between 0~300 milliseconds by using the Up/Down buttons.
- **Sync** is only supported for some functions.
- Available **Surround speaker mode** settings are supported only by **Q930B** model.

- The **Virtual** Speaker function can be turned ON/OFF by using the **Up/Down** buttons.

8. Play / Pause

You can also play or pause music by pressing the button.

9. Up/Down/Left/ Right

Press the indicated areas to select Up/Down/Left/Right.

Press Up/Down/Left/Right on the button to select or set functions.

- **Music Skip**

Press the Right button to select the next music file. Press the Left button to select the previous music file.

- **ID SET**

Use this option when the Subwoofer or Surround Speakers are not connected or need reconnection.

While powered off, press and hold the Up button for 5 seconds to perform ID SET. (See page 16.)

10. Info

Press to display information about the active function or the codec available. In BT mode, it displays the connected device (when pairing is complete) or "BT ready" (when pairing is required).

11. WOOFER LEVEL

Push the button up or down to adjust the level of the woofer (bass).

12. VOLUME

Push the button up or down to adjust the volume.

- **Mute**

Press the VOL button to mute the sound. Press it again to unmute the sound.

13. TONE CONTROL

By pressing the button, you can adjust the volume of the treble or bass sound. The desired item can be adjusted using the **Up/Down** buttons. This function is enabled in Sound mode excluding in **Standard** mode.

- To control the volume of the treble or bass sound, select **TREBLE** or **BASS** in Sound Settings, and then adjust the volume between -6~+6 by using the Up/Down buttons.
- Once the bass level is changed, the woofer level will be also adjusted accordingly.

Active Voice Amplifier (AVA)

- Analyzes external noise in real time while soundbar is playing, so that voice audio can always be heard clearly.

- No data is saved during the analysis.
- This function is not supported by Q700B model.

Adjusting the Soundbar volume with a TV remote control

Adjust the Soundbar volume using the TV's remote control.

- This function can be used with IR remote controls only. Bluetooth remote controls (remote controls that require pairing) are not supported.
- Set the TV speaker to External Speaker to use this function.
- Manufacturers supporting this function: Samsung, VIZIO, LG, Sony, Sharp, PHILIPS, PANASONIC, TOSHIBA, Hisense, RCA

1. Turn Off the Soundbar.
2. Push up and hold the **WOOFER** button for 5 seconds. Each time you push the **WOOFER** button up and hold it for 5 seconds. the mode switches in the following order: "**OFF-TV REMOTE**" (Default mode). "**SAMSUNG-TV REMOTE**". "**ALL-TV REMOTE**".

04 CONNECTING THE SOUNDBAR

Connecting the power and units

Use the Power cord to connect the Subwoofer. Surround Speakers. and Soundbar to an electrical outlet in the following order:

- For more information about the required electrical power and power consumption, refer to the label attached to the product. (Label: Rear of the Soundbar Main Unit)
1. Connect the Power cord to the Subwoofer.
 2. Connect the power cord to the Left and Right Surround Speakers. (optional)
 3. Connect the Power cord to the Soundbar.
 4. Connect power to the Soundbar. Subwoofer and Surround Speakers. The Subwoofer and Surround Speakers are automatically connected when the Soundbar is turned on.

NOTE

- Connect the Subwoofer and Surround Speakers power before connecting to the Soundbar. The Subwoofer and Surround Speakers will be automatically connected when turning on the Soundbar.
- If you unplug and reconnect the power cord when the product is turned on. the Soundbar turns on automatically.
- The surround speaker system is supported by applicable models only.

Recommended Speaker Layout

CAUTION

- Wireless receiving antennas are built into the wireless subwoofer and surround speakers. Keep the units away from water and moisture.
- For optimal listening performance, make sure that the areas around the wireless subwoofer and surround speakers locations are clear of any obstructions.

Surround speaker mode (HW-Q930B only)

An optimal surround sound may be delivered depending on the position of the rear speaker. See the illustration below for speaker positioning. To activate this mode, select the Surround Speaker mode using the remote control of the Soundbar. (Sound Control) → Surround speaker → (Up) / (Down) → Front / Rear)

NOTE

- This mode is available only with Soundbar models including a specific surround speaker.
- In Front speaker mode, position the front speakers toward you.
- The Rear Speaker mode is enabled by default.

Manually connecting the Subwoofer or Surround Speakers

Before performing the manual connection procedure below:

- Check whether the power cables for the Soundbar and subwoofer or Surround Speakers are connected properly.
 - Make sure that the Soundbar is turned off.
1. Turn off the Soundbar main.
 2. Press and hold ID SET on the rear of the subwoofer and surround speakers for at least 5 seconds.
 3. Press the Up button on the remote control for 5 seconds. • The ID SET message appears on the display of the Soundbar for a moment, and then it disappears. • The Soundbar will automatically power on when ID SET is complete.
 4. Check if the LINK LED is solid blue (connection complete).

LED Indicator Lights on the Rear of Subwoofer and Surround Speakers

NOTE

- If the main unit is powered off, the wireless subwoofer will go into stand-by mode and the STANDBY LED on the rear of the sub-woofer will turn red after blinking in blue several times.
- If you use a device that uses the same frequency as the Soundbar near the Soundbar, interference may cause some sound interruption.

- The maximum transmission distance of the main unit's wireless signal is about 10 m. but may vary depending on your operating environment.
- If a steel-concrete or metallic wall is between the main unit and the wireless subwoofer. the system may not operate at all because the wireless signal cannot penetrate metal.
- The surround speaker system is supported by applicable models only.

CAUTION

- Wireless receiving antennas are built into the wireless subwoofer and Surround Speakers. Keep the unit away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless subwoofer and the Surround Speakers are clear of any obstructions.

05 CONNECTING TO A TV

Connecting the TV that supports HDMI ARC (Audio Return Channel)

CAUTION

- When both the HDMI cable and optical cable are connected. the HDMI signal is received first.
- To connect the HDMI cable between the TV and Soundbar. be sure to connect the terminals marked ARC. Otherwise. the TV sound may not be output.
- The recommended cable is High Speed HDMI Cable with Ethernet

1. With the Soundbar and TV turned off. connect the HDMI cable as shown in the figure.

2. Turn on the Soundbar and TV.

3. "TV ARC" appears in the display window of the Soundbar main unit and the Soundbar plays TV sound.

- When the TV sound is not output. press the (Multi Function) / (Source) button at the top of the Soundbar or the (Source) button on the remote control to select the "D.IN" mode. The screen displays "D.IN" and "TV ARC" in sequence. and TV sound is played.
- When connecting a TV that supports the eARC function. "eARC" appears on the display and the sound is heard.
- To connect with eARC. the eARC function in the TV menu should be set to On. Refer to the TV user manual for details on setting. (e.g. Samsung TV : Home () → Menu → Settings () → All Settings () → Sound → Expert Settings → HDMI-eARC Mode (Auto))
- If "TV ARC" does not appear in the display window of the Soundbar main unit. confirm that the HDMI cable is connected to the correct port.
- Use the volume buttons on the TV's remote control to change the volume on the Soundbar.

NOTE

- When you connect the TV that supports the HDMI ARC (Audio Return Channel) to the Soundbar with an HDMI cable, you can transmit the digital video and audio data without connecting a separate optical cable.
- We recommend you use a coreless HDMI cable if possible. If you use a cored HDMI cable, use one whose diameter is less than 14 mm.
- This function is not available if the HDMI cable does not support ARC.
- When the audio in a broadcast is encoded in Dolby Digital and the “Digital Output Audio Format” on your TV is set to PCM, we recommend that you change the setting to Dolby Digital. When the setting on the TV is changed, you will experience better sound quality. (The TV menu may use different words for Dolby Digital and PCM depending on the TV manufacturer.)
- The ARC/eARC protocols support Dolby Atmos.
- Make sure that the content supports Dolby Atmos.

Connecting using an Optical Cable

Pre-connection Checklist

- When both the HDMI cable and optical cable are connected, the HDMI signal is received first.
 - When you use an optical cable and the terminals have covers, be sure to remove the covers
1. With the TV and Soundbar turned off, connect the DIGITAL AUDIO IN (OPTICAL) port on the Soundbar and the OPTICAL output port on the TV with the optical cable (not supplied), as shown in the figure.
 2. Turn on the Soundbar and TV.
 3. Press the (Multi Function) / (Source) button at the top of the Soundbar or the (Source) button on the remote control to select the “D.IN” mode.
 4. The TV sound is output from the Soundbar.

What is the difference between BT READY and BT PAIRING?

- **BT READY** : In this mode, you can reconnect any Samsung TV or mobile device that was connected before.
- **BT PAIRING** : In this mode, you can connect a new device to the Soundbar. (Press the PAIR button on the Soundbar remote control or press and hold the (Mic On/Off) / (Source) button on the top of the Soundbar for more than 5 seconds while the Soundbar is in “BT” mode.)

Notes on Bluetooth connection

- Locate a new device within 1 m to connect via Bluetooth communication.
- If asked for a PIN code when connecting a Bluetooth device. enter <0000>.
- The Soundbar automatically turns off after 18 minutes in the Ready state.
- The Soundbar may not perform Bluetooth search or connection correctly under the following circumstances: – If there is a strong electrical field around the Soundbar. – If several Bluetooth devices are simultaneously paired with the Soundbar. – If the Bluetooth device is turned off. not in place. or malfunctions.
- Electronic devices may cause radio interference. Devices that generate electromagnetic waves must be kept away from the Soundbar main unit - e.g. microwaves, wireless LAN devices. etc.

Connecting via Wi-Fi

Pre-connection Checklist

- Wi-Fi connection is available only on Samsung TV.
 - Check whether the wireless router (Wi-Fi) is turned on and the TV is connected to the router.
 - The TV and Soundbar must be connected to the same wireless network (Wi-Fi).
 - If your wireless router (Wi-Fi) uses a DFS channel. you will not be able to establish a Wi-Fi connection between the TV and Soundbar.
 - Contact your Internet service provider for details.
 - Because the menus may differ depending on the year of manufacture. refer to your TV manual.
 - To connect the TV to the Soundbar via Wi-Fi. connect the Soundbar to the wireless router first. See page 29. for details on how to establish a Wi-Fi connection.
1. For more information about Wi-Fi connection to the Soundbar. see page 29. "Method 2. Connecting via Wi-Fi (Wireless Network)".
 2. Change the input source of the TV by using the Audio menu to Soundbar. Samsung TVs released in 2017 or later Home () → Menu → Settings () → All Settings () → Sound → Sound Output → Soundbar Q***B (Wi-Fi)

NOTE

The Wi-Fi Dolby Atmos connection is available in some Samsung TVs and some Soundbar models.

Using the Q-Symphony Function

For Q-Symphony, the Soundbar syncs with a Samsung TV to output sound through two devices for optimum surround effect. When the Soundbar is connected, the menu, "TV+Soundbar" appears under the Sound Output menu of the TV. Select the corresponding menu.

- TV menu example: TV + [AV] Soundbar series name (HDMI)
- TV menu example: TV + [AV] Soundbar series name (Wi-Fi)

NOTE

- It can operate according to the Codec supported by TV.
- This function is supported only when the HDMI Cable or Optical Cable (not supplied) or Wi-Fi is connected.
- The message displayed may differ with the TV model.
- Ensure that your TV and Soundbar are connected to the same wireless router/frequency.
- This function is available in some Samsung TVs and some Soundbar models.

Using the Spacefit sound

Provides optimized sound quality by analyzing the listening spaces.

Method 1. Connecting via Soundbar

To enable this function, turn on the Spacefit sound mode with the remote control of the Soundbar. (Sound Control) → "Spacefit sound Off" → (Up) → "Spacefit sound On")

- This is available in all Sound modes.

Method 2. Connecting via TV

To enable this function, turn on the Adaptive Sound+ mode on your Samsung TV menu. (Home () → Menu → Settings () → All Settings () → General → Intelligent Mode Settings → Adaptive Sound+)

- The sound mode on your Soundbar will automatically change to Adaptive Sound+ if you enable the Adaptive Sound+ mode on your TV.

NOTE

- This function works when the Soundbar connects to some of the Samsung TVs.
- Q700B models support only the method of "Connecting via TV".

06 CONNECTING AN EXTERNAL DEVICE

Method 1. Connecting using an HDMI Cable (Capable of Dolby Atmos / DTS:X decoding and playback)

Pre-connection Checklist

- If the Audio Output options include Secondary Audio, make sure Secondary Audio is set to Off.

- Make sure that the content supports Dolby Atmos / DTS:X.
1. Use an HDMI cable to connect the HDMI OUT port on the external device and the HDMI port on the bottom of the Soundbar.
 2. Use an HDMI cable to connect the HDMI IN port of the TV and the HDMI TO TV (eARC/ARC) port on the bottom of the Soundbar.
 3. Turn on the Soundbar, TV, and the external device.
 4. Press the (Multi Function) / (Source) button on the top of the Soundbar or the (Source) button on the remote control to select “HDMI” mode.
 5. The Soundbar display indicates that “HDMI” mode is currently selected and the Soundbar will start playing sounds.

NOTE

- When you use Dolby Atmos / DTS:X: If the input source is Dolby Atmos / DTS:X, refer to “Output specifications for the different sound effect modes” on page 11.
- When Dolby Atmos is activated, “DOLBY ATMOS” appears in the front display.
- When DTS:X is activated, “DTS:X” appear in the front display.
- Configuring Dolby Atmos / DTS:X on your BD player or other device Open the audio output options on the settings menu of your BD player or other device and make sure that “No Encoding” is selected for Bitstream. For example, on a Samsung BD Player, go to Home Menu → Sound → Digital Output and then select Bitstream (unprocessed).

Method 2. Connecting using an Optical Cable

- Use an optical cable (not supplied) to connect the DIGITAL AUDIO IN (OPTICAL) on the Soundbar main and the OPTICAL OUT port on the external device.
- Turn on the Soundbar and external device.
- To select “D.IN” mode, press the (Multi Function) / (Source) button on the top of the Soundbar or the (Source) button on the remote control.
- Your Soundbar will play sounds from the external device.

07 CONNECTING A MOBILE DEVICE

Method 1. Connecting via Bluetooth

When a mobile device is connected using Bluetooth, you can hear stereo sound without the hassle of cabling.

- When you connect a paired Bluetooth device with the Soundbar off, the Soundbar automatically turns on.

The initial connection

- When connecting to a new Bluetooth device, make sure the device is within 1 m distance.

1. Press the PAIR button on the Soundbar remote control to enter the “BT PAIRING” mode.

(OR)

a. Press the (Multi Function) / (Source) button on the top panel and then select “BT”. “BT” changes to “BT PAIRING” in a few seconds automatically or changes to “BT READY” if there is a connect record.

b. When “BT READY” appears. press and hold the (Mic On/Off) / (Source) button on the top panel of the Soundbar for more than 5 seconds to display “BT PAIRING”.

2. On your device. select “Soundbar Q***B” from the list that appears.

- When the Soundbar is connected to the Mobile device. [Mobile Device Name] → “BT” appears in the front display.

3. Play music files from the device connected via Bluetooth through the Soundbar.

- After you have connected the Soundbar to your mobile device the first time. use the “BT READY” mode to reconnect.

If the device fails to connect

- If you have an existing Soundbar (e.g. “Soundbar Q***B”) in the list of speakers on the Mobile device. delete it.
- Repeat steps 1 and 2.

What is the difference between BT READY and BT PAIRING?

- **BT READY** : In this mode. you can reconnect any Samsung TV or mobile device that was connected before.
- **BT PAIRING** : In this mode. you can connect a new device to the Soundbar. (Press the PAIR button on the Soundbar remote control or press and hold the (Mic On/Off) / (Source) button on the top of the Soundbar for more than 5 seconds while the Soundbar is in “BT” mode.)

Notes on Bluetooth connection

- Locate a new device within 1 m to connect via Bluetooth communication.
- If asked for a PIN code when connecting a Bluetooth device. enter <0000>.
- The Soundbar automatically turns off after 18 minutes in the Ready state.
- The Soundbar may not perform Bluetooth search or connection correctly under the following circumstances: – If there is a strong electrical field around the Soundbar. – If several Bluetooth devices are simultaneously paired with the Soundbar. – If the Bluetooth device is turned off. not in place. or malfunctions.
- Electronic devices may cause radio interference. Devices that generate electromagnetic waves must be kept away from the Soundbar main unit - e.g. microwaves. wireless LAN devices. etc.



- The Soundbar supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the Soundbar to a Bluetooth device that supports only the HF (Hands Free) function.
- When connecting the Soundbar to a Bluetooth device, place them as close to each other as possible.
- The farther the Soundbar and Bluetooth device are from each other, the lower the sound quality will become.
- The Bluetooth connection may break when the devices are out of the effective range.
- The Bluetooth connection may not function as intended in areas with poor reception.
- A Bluetooth device may experience noise or malfunction under the following conditions:
 - When the body is in contact with the signal transceiver on the Bluetooth device or Soundbar
 - In corners or when there is an obstacle in proximity, such as a wall or partition, where electrical changes may occur.
 - When exposed to radio interferences by other products operating on the same frequency ranges, such as medical equipment, microwave ovens, and wireless LAN devices.
 - Obstacles such as doors and walls may still impact the sound quality even when the devices are within the effective range.
- Note that your Soundbar cannot be paired with other Bluetooth devices while using the Bluetooth option.
- This wireless device may cause electrical interference during operation.

Disconnecting the Bluetooth device from a Soundbar

You can disconnect a Bluetooth device from the Soundbar. For instructions, see the Bluetooth device's user manual.

- The Soundbar will be disconnected.
- When the Soundbar is disconnected from the Bluetooth device, the Soundbar will display "BT DISCONNECTED" on the front display.

Disconnecting the Soundbar from the Bluetooth device

Press the (Multi Function) / (Source) button on the top of the Soundbar or the (Source) button on the remote control to switch the mode from "BT".

- Disconnecting takes time because the Bluetooth device must receive a response from the Soundbar. (Disconnection time may differ, depending on the Bluetooth device)
- When the Soundbar is disconnected from the Bluetooth device, the Soundbar will display "BT DISCONNECTED" on the front display.

Method 2. Connecting via Wi-Fi (Wireless Network)

To connect a Soundbar to a mobile device via a wireless network (Wi-Fi), the SmartThings app is required.

The initial connection

1. Install and launch the SmartThings app from your mobile device (smartphone or tablet).
2. On the app, follow the screen instructions to add the Soundbar.
 - The automatic pop-up (the second screenshot below) may not show on some devices. If the pop-up window does not appear, press “ ” on the Home screen. The Soundbar is added to the app.
 - The illustration below may differ according to the app version.

Using the Tap Sound

Tap the Soundbar with your mobile device to play the sound of content on the mobile device through the Soundbar.

- This function may not be supported, depending on the mobile device.
 - This function is only compatible with Samsung mobile devices with Android 8.1 or later.
1. Turn on the Tap Sound function on your mobile device. For details on how to turn on the function, refer to “Setting the Tap Sound function” below.
 2. Tap the Soundbar with the mobile device. Select “Start now” in the displayed message window. A connection is established between the mobile device and Soundbar via Bluetooth.
 3. Play the sound of content on the mobile device through the Soundbar.
 - This function connects a mobile device to the Soundbar via Bluetooth by detecting vibration that occurs when the device touches the Soundbar.
 - Make sure the mobile device does not tap a sharp corner of the Soundbar. The Soundbar or mobile device may become scratched or damaged.
 - It is recommended that the mobile device be covered with a case. Lightly tap the wide area in the upper portion of the Soundbar, without using excessive force.
 - To use this function, update the SmartThings app to the latest version. The function may not be supported, depending on the app version.

Setting the Tap Sound function

Use the **SmartThings** app to turn on the **Tap View, Tap Sound** function.

1. On the mobile device, run the SmartThings app.
2. Select (→) in the SmartThings app screen displayed on the mobile device.
3. Set “Tap View, Tap Sound” to On to allow the function to work when a mobile device moves close to the Soundbar. The function is turned on.

NOTE.

- When the mobile device is in power-saving mode, the Tap Sound function does not work.
- The Tap Sound function may not work if there are devices near the Soundbar that cause radio interference such as electric devices. Make sure devices that may cause radio interference are placed at a sufficient distance away from the Soundbar

08 CONNECTING VIA APPLE AIRPLAY 2

- This feature may not be available in some countries.
- This Samsung Soundbar supports AirPlay 2 and requires iOS 11.4 or later.

With AirPlay 2, you can stream music, podcasts, and other audio from your Apple devices to the Samsung Soundbar.

1. Make sure the Soundbar is powered on and connected to the same Wi-Fi network as your Apple device.
2. Select from an AirPlay-supported app or Control Centre on your iPhone, iPad, or Mac.
3. Select the Soundbar from the list of available devices to play the current audio to.

09 INSTALLING THE WALL MOUNT

Installation Precautions

- Install on a vertical wall only.
- Do not install in a place with high temperature or humidity.
- Verify whether the wall is strong enough to support the product's weight. If not, reinforce the wall or choose another installation point.
- Purchase and use the fixing screws or anchors appropriate for the kind of wall you have (plaster board, iron board, wood, etc.). If possible, fix the support screws into wall studs.
- Purchase wall mounting screws according to the type and thickness of the wall you want to mount the Soundbar on. – Diameter: M5 – Length: 35 mm or longer recommended.
- Connect cables from the unit to external devices before you install the Soundbar on the wall.
- Make sure the unit is turned off and unplugged before you install it. Otherwise, it may cause an electric shock.

Wallmount Components

1. Place the Wall Mount Guide against the wall surface.
- The Wall Mount Guide must be level.
 - If your TV is mounted on the wall, install the Soundbar at least 5 cm below the TV.

2. Align the Wall Mount Guide's Centre Line with the centre of your TV (if you are mounting the Soundbar below your TV). and then fix the Wall Mount Guide to the wall using tape.

- If you are not mounting below a TV. place the Centre Line in the centre of the installation area.

3. Push a pen tip or sharpened pencil tip through the centre of the A-TYPE images on each end of the Guide to mark the holes for the supporting screws. and then remove the Wall Mount Guide.

4. Using an appropriately sized drill bit. drill a hole in the wall at each marking.

- If the markings do not correspond to the positions of studs. make sure you insert appropriate anchors or mollies into the holes before you insert the support screws. If you use anchors or mollies. make sure the holes you drill are large enough for the anchors or mollies you use.

5. Push a screw (not supplied) through each Holder-Screw. and then screw each screw firmly into a support screw hole.

6. Install the 2 Bracket-Wall Mounts in the correct orientation on the bottom of the Soundbar using 2 Screws.

- When assembling. make sure the hanger part of the Bracket Wall Mounts are located behind the rear of the Soundbar.

7. Install the Soundbar with the attached Bracket-Wall Mounts by hanging the Bracket-Wall Mounts on the Holder-Screws on the wall.

8. Slide the Soundbar down as shown below so that the Bracket-Wall Mounts rest securely on the Holder-Screws.

- Insert the Holder-Screws into the wide (bottom) part of the Bracket-Wall Mounts. and then slide the Bracket-Wall Mounts down so that the Bracket-Wall Mounts rest securely on the Holder-Screws.

Installing the Surround Speakers on a Wall (applicable models only)

You can purchase wall mounts separately to install the surround speakers on a wall. Wall mounts aren't sold by Samsung Electronics.

Notes for Wall Mounting the Surround Speakers

- Surround Speaker wall mounts must be able to support more than 8.0 kg.

- Hole size : 1/4 - 20 UNC threaded insert

– Standard Screw : 6.35 mm \varnothing .

1.2 7mm Pitch

– Length : 18 mm long

– Quantity : Left 1 EA / Right 1 EA

- Check the strength of the wall before you install the Wall Mount Brackets. If the strength is insufficient, make sure to reinforce the wall before installing the Wall Mount Brackets and the speakers on the wall.
- Samsung Electronics is not liable for any damage to the product due to the product being installed inappropriately.
- Take care not to install the speakers sideways or upside down.

10 INSTALLING THE SOUNDBAR IN FRONT OF TV

Component

To install, attach the Rubber-Feet to the bottom of the Soundbar before placing it in position above the TV stand. Make sure you attach the Rubber-Feet so they do not lie outside the edges of the TV stand. Refer to the figure below.

As illustrated in the image, align the centre of the Soundbar with the centre of the TV. Carefully place the Soundbar onto the TV stand.

At this time, place the microphones (applicable models only) at the front of the stand not to interfere with voice recognition.

NOTE

- Make sure the Soundbar is placed on a flat and solid surface.
- Insufficient gap from the TV may cause voice recognition and acoustic problems.
- The illustration above differs with the respective model.
- This function is not supported by Q700B model.

11 SOFTWARE UPDATE

Auto Update

When the Soundbar is connected to the Internet, software updates automatically occur even when the Soundbar is turned off.

- To use the Auto Update function, the Soundbar must be connected to the Internet. The Wi-Fi connection to the Soundbar will be terminated if the Soundbar's power cord is disconnected or the power is cut off. If the power is cut off, when the power comes back on or you reconnect the power cord, turn on the Soundbar, and then reconnect it to the Internet.

USB Update

Samsung may offer updates for the Soundbar's system firmware in the future.

When an update is available, you can update the Soundbar by connecting the USB drive that contains the update firmware to the SERVICE port of the Soundbar.

1. Go to the Samsung website (www.samsung.com) → search for the model name from the customer support menu option.

- For more information about update, refer to Upgrade Guide.

2. Download the upgrade file (USB type).

3. Unzip the file to create a folder with the file name.

4. Store the created folder in a USB and then connect it to the Soundbar.

5. Turn on the Soundbar. Then the product is updated within 3 minutes with displaying the message. "UPDATE".

- During update, do not turn it off or remove the USB.
- If "UPDATE" does not appear on the display window, remove the power cord from the Soundbar and then reconnect it.
- When the latest version is installed, no update is performed.
- Depending on the USB type, update may not be supported.

Initialisation

With the Soundbar on, press the (Volume) buttons on the body at the same time for at least 5 seconds. "INIT" appears on the display and then the Soundbar is initialised.

CAUTION

- All the settings of the Soundbar are initialised. Be sure to perform this only when initialisation is required.

12 TROUBLESHOOTING

Before seeking assistance, check the following.

Soundbar does not turn on.

- Check whether the power cord of the Soundbar is correctly inserted into the outlet.

Soundbar works erratically.

- After removing the power cord, insert it again.
- Power cycle the external device and try again.
- If there is no signal, the Soundbar automatically turns off after a certain period of time. Turn on the power. (See page 9.)

Remote control does not work

- Point the remote directly at the soundbar.
- Replace the batteries with new ones.

The Soundbar indicator turns solid red.

- The microphone is turned off. Turn on the microphone. (See page 7.)

Sound is not output from the soundbar.

- The volume of the Soundbar is too low or muted. Adjust the volume.
- When any external device (STB, Bluetooth device, mobile device, etc.) is connected, adjust the volume of the external device.
- For sound output of the TV, select Soundbar. (Samsung TV: Home () → Menu → Settings () → All Settings () → Sound → Sound Output → Select Soundbar)
- The cable connection to the Soundbar may not be loose. Remove the cable and connect again.
- Remove the power cord completely, reconnect, and turn the power on.
- Initialise the product and try again. (See page 35.)

Sound is not output from the subwoofer or the rear speakers.

- Check whether the LED indicator on the rear of the Subwoofer and Surround Speakers are on in blue. Reconnect the Soundbar and Subwoofer and Surround Speakers if the indicator is blinking in blue or turned red. (See page 16.)
- You may experience an issue if there is an obstacle between the Soundbar and Subwoofer. Move devices to an area away from obstacles.
- Other devices sending radio frequency signals in proximity may interrupt the connection.

Keep your speaker away from such devices.

- Remove and reconnect the power plug.

In case there is sound jitter, delays, or noise from the Subwoofer and Surround Speaker

- If there are any objects between the Soundbar and Subwoofer speaker, this could cause a problem. Please reposition these to a place without such an object.
- There may be sound jitter or delays when the Subwoofer and Surround Speaker are far from the Soundbar. Please place them near the Soundbar.
- There may be sound jitter or delays when the Soundbar is near an instrument or electrical device that can cause radio interference. Place the Soundbar far from such devices that can cause radio interference. (E.g. wireless router)
- Change the TV network connection status from wireless to wired.

The Subwoofer volume is too low

- The original volume of the content you are playing may be low. Try adjusting the Subwoofer level. (See page 10.)
- Bring the Subwoofer speaker closer to you.

If the TV is not connected via HDMI TO TV (eARC/ARC)

- Check whether the HDMI cable is correctly connected to the ARC terminal. (See page 18.)
- Connection may not be possible due to the connected external device (set-top box, game machine, etc.). Directly connect the Soundbar.
- HDMI-CEC may not be activated on the TV. Turn on the CEC on the TV menu.
(Samsung TV: Home () → Menu → Settings () → All Settings () → Connection → External Device Manager → Anynet+ (HDMI-CEC) ON)
- To connect with eARC, the eARC function in the TV menu should be set to On.
(Samsung TV: Home () → Menu → Settings () → All Settings () → Sound → Expert Settings → HDMI-eARC Mode (Auto))

There is no sound in when connecting to the TV in HDMI TO TV (eARC/ARC) mode

- Your device is unable to play the input signal. Change the TV's audio output to PCM or Dolby Digital. (For a Samsung TV: Home () → Menu → Settings () → All Settings () → Sound → Expert Settings → Digital Output Audio Format)

Soundbar will not connect via Bluetooth.

- When connecting a new device, switch to "BT PAIRING" for connection. (Press the PAIR button on the remote control or press the (Mic On/Off) / (Source) button on the body for at least 5 seconds.)
- If the Soundbar is connected to another device, disconnect that device first to switch the device.
- Reconnect it after removing the Bluetooth speaker list on the device to connect.
(Samsung TV: Home () → Menu → Settings () → All Settings () → Sound → Sound Output → Bluetooth Speaker List)
- The automatic TV connection may be disabled. While the Soundbar is in "BT READY", press and hold the Left button on the Soundbar remote control for 5 seconds to select ON-TV CONNECT. If you see OFF-TV CONNECT, press and hold Left button again for 5 seconds to switch the selection.
- Remove and reconnect the power plug, then try again.
- Initialise the product and try again. (See page 35.)

Sound drops out when connected via Bluetooth.

- Some devices can cause radio interference if they are located too close to the Soundbar, e.g. microwaves, wireless routers, etc.
- If your device that is connected via Bluetooth moves too far away from the soundbar, it may cause the sound to drop out. Move the device closer to the soundbar.

- If a part of your body is in contact with the Bluetooth transceiver or the product is installed on metal furniture, the sound may drop out. Check the installation environment and conditions for use.

Soundbar will not connect to Wi-Fi.

- Check whether your wireless router is on.
- Turn off the router, turn it back on, and then try again.
- The soundbar will not connect if the wireless signal is too weak. Try moving the router closer to the soundbar, or eliminating any obstacles that are between the soundbar and the router, if possible.
- If your wireless router is new, you will need to reconfigure the speaker's network settings.

The soundbar does not turn on automatically with the TV.

- When you turn off the Soundbar while watching TV, power synchronization with the TV is disabled. First turn off the TV.
- The AVA function (applicable models only) is not available in the following cases.
- The AVA function (applicable models only) will not be available using Q-symphony function.
- The AVA function (applicable models only) will not be available when the microphone is turned off. After connecting the TV to the Soundbar, I switched the Soundbar mode. Then no sound is output from the TV.
- If you connect your Soundbar to a mobile device while the Soundbar is connected to the TV, the Soundbar outputs sound from the mobile device while keeping the TV connection. So the TV sound will not be delivered anywhere.
- Disconnect the mobile device, and the TV sound will be output from the Soundbar again.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.