 



Programming Your Remote Control

1. Install Batteries

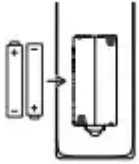

Remove the battery compartment cover, insert 2 AAA batteries (not included), and replace the cover.

 2. Turn On Your Device

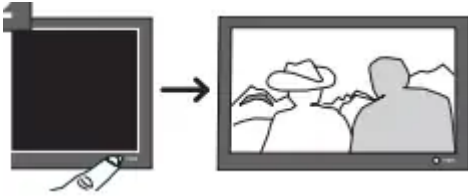

Manually turn on the component you want to control.

3. Locate Your Brand Codes

Find the Code List that came with the remote. Locate the section for the type of device you're trying to program, and find your brand in that section. Circle the codes for your brand and keep them handy.

SOAY	89117
SOLF	93819
SONIC	29842
SONY	31912, 41012, 89613
SOLLAICA	36144
SOUNDESIGN	54711, 55514, 78313, 79513
SOVA	81213, 85613
SOYO	89613
SWYTRA	54011

If you don't see your brand listed, consult the Owner's Manual for other programming options.

4. Enter Programming Mode

Press and hold the device key you want to program for about 2 seconds, until the POWER key illuminates and stays on. Then release the key.




5. Enter Your Code

Enter the first five-digit code for your brand in the code list (the POWER key flashes after each digit).



6. Test the Remote

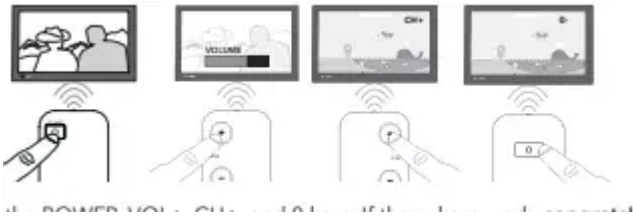

Test the POWER, VOL+, CH+, and 0 keys. If these keys work, congrats! You've finished programming for this key! If not, repeat steps 4 and 5, and enter the next code for your brand from the code list.

7. Program Additional Devices



To program the other device keys, follow these instructions again.

The Code List that's included with your remote provides codes for all major brands of home entertainment components.

Code Lists / Liste des codes / Lista de Códigos

Brand Code List / Liste des codes de marque / Lista de Códigos de Marcas

TV (T) / Téléviseur (T)

Admiral	10093, 10463
Advent	10761
Akai	10702, 11675
AOC	11365, 11589, 12014, 12087, 12621
Apex Digital	12397
Asus	13340
Audiovox	11564, 10451, 10802, 10846, 10875, 11276, 11284, 11865, 11937, 11951, 12121, 12413, 12513, 13065
Aventura	10171
Axion	11937
Broksonic	10463
Coby	12306, 12315, 12340, 12343, 12344, 12345, 12347, 12348, 12350
Commercial Solutions	11447, 10047
Curtis	12352, 12397, 12466, 12855, 13228
Curtis Mathes	10702, 10093, 10047, 10451, 11661, 11347
Daewoo	10451, 11661, 10661
Dell	11264, 11863
Dish Network	11948
Disney	11892
Dumont	10017
Durabrand	10178, 10171, 10463
Dynex	12049, 11810, 12184
Electrohome	10463
Element	11886, 12183

Emerson	11864, 11394, 10178, 10171, 10451, 10463, 11661, 11886, 11944, 11963
Emprex	11422
Envision	11365, 11589, 12014, 12087
ESA	10171, 11944, 11963
Fluid	12964
Funai	10171, 11271, 11963
Gateway	11756
GE	11447, 10178, 10047, 10051, 10451, 11347, 11547
GFM	11864, 10171, 11886, 11963
Gibraltar	10017
GoldStar	10178
Haier	11748, 11749, 12309
Hallmark	10178
Hannspree	11348, 11745
Havermy	10093
Hello Kitty	10451
Hisense	11314, 12098, 12355, 12419
Hitachi	11643, 11145, 10679
iLo	11394, 11684, 11990
Initial	11990
Insignia	12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417
Inteq	10017
JCM	12256
Jensen	10761

JVC	11601, 12271, 11774, 10463, 11253
KDS	11498
LG	11423, 11447, 12358, 12731, 12424, 10178, 10017, 11265, 10856
LXI	10156, 10178, 10047
MAG	11498
Magnavox	11867, 11454, 12372, 11866, 10171, 10051, 10802, 11254, 11365, 11944, 11963, 11990
Marantz	11454
Matsushita	10250
Megatron	10178
Memorex	10178, 10463, 10150, 11892
MGA	10178, 10150
Midland	10047, 10017, 10051
Mintek	11990
Mitsubishi	11250, 10093, 10178, 10150, 11797
Motorola	10093
NAD	10156, 11156, 10178
Naxa	12104
NEC	11704, 11797
Nexus Electronics	12183
Nikko	10178
Norcent	11365, 11589, 11745
Olevia	11610, 11240, 11331
Optimus	10250

Optoma	11348
Optonica	10093
Orion	10463
Panasonic	11480, 10250, 11291, 10051, 11271, 11941, 11946
PARK	12104
Penney	10156, 10178, 10047, 10051, 11347
Philco	11394, 10171, 11271, 11963
Philips	11867, 11454, 12374, 12372, 11866, 11394, 10171
Pioneer	11457, 10679, 11260
Planar	11589
Polaroid	11523, 11276, 11314, 11498, 12121
Portland	10451, 11661
Prima	10761, 11749
Prism	10051
Proscan	11447, 10047, 11347, 12147, 12183, 12256
Proton	10178
Proview	11498
Pulsar	10017
Quasar	10250, 11291, 10051
RadioShack	10178, 10047
RCA	11447, 12434, 12746, 10093, 10047, 10051, 11661, 10679, 11347, 11547, 11781, 11948, 11953, 12187, 12247, 12932
Realistic	10178
Runco	10017

Samsung	12051, 10702, 10178
Sansui	10171, 10463, 11409, 11892
Sanyo	11142
Sceptre	11360, 11599, 12337, 12506
Scotch	10178
Scott	10178, 11711
Sears	10156, 10178, 10047, 10171
Sense	11865
Sharp	10818, 12360, 10093
Sheng Chia	10093
Sony	10810, 11300
Soundesign	10178
Spectroniq	11498
Squareview	10171
SunBriteTV	11610, 12337
Superscan	10864, 10093, 11944
Supersonic	12104
SVA	11963
Sylvania	11864, 11394, 10171, 11271, 11314, 11886, 11944, 11963
Symphonic	11394, 10171, 11944
Syntax	11610, 11240, 11331
Tandy	11756
TCL	12434, 13183
Technics	10250, 10051

Techwood	10051
Teknika	10150
Telefunken	10702
TMK	10017
TNCI	10017
Toshiba	11524, 11656, 10156, 11156, 11256, 12006, 11265, 10845, 11704, 11945
TVS	10463
Venture	11865
Vidtech	10178
Viewsonic	12049, 10864, 11564, 10885, 11330, 11365, 11578, 11627, 11742, 12014, 12087
Viore	11684, 12104, 12352, 13118
Vizio	11758, 12512, 12757, 10864, 11756, 10885
Wards	10156, 11156, 10178, 10047, 10017, 10051, 11347
Waycon	10156
Westinghouse	11712, 10451, 10885, 10889, 11282, 11300, 11577
White Westinghouse	10463, 11661
Zenith	11423, 12358, 12731, 10178, 10047, 10017, 10463, 11265, 11145, 11661, 11365

Brand Codes are used for programming using the Brand Code Search and Entry method outlined in the User's Guide.



Quick Code Reference

Code	TV	DVD	VCR	SAT/CBL/IPTV	AUDIO
01	RCA, GE, Proscan	RCA, GE, Proscan	RCA, GE, Proscan	RCA, GE, Proscan	RCA, GE, Proscan
02	Hitachi	Apex Digital	JVC	Motorola	Denon
03	Insignia, Dynex	Insignia, Dynex	Magnavox, Philips	DirectTV	Harman/ Kardon
04	JVC	JVC	Mitsubishi	Dish Network, EchoStar	Insignia, Dynex
05	LG	LG	Panasonic	Cisco, Scientific Atlanta	Panasonic
06	Philips, Magnavox	Magnavox, Philips	Samsung	Amino	Pioneer
07	Mitsubishi	Memorex	Sharp	Time Warner	Sony
08	Panasonic	Panasonic	Sony	Comcast	Yamaha
09	Samsung	Pioneer	TiVo	Verizon	Bose
10	Sanyo	Samsung	Toshiba	AT&T	Samsung
11	Sharp	Sharp			
12	Sony	Sony			
13	Sylvania, Emerson	Sylvania			
14	Toshiba	Toshiba			
15	Vizio	Yamaha			

For a three-component remote control, program the DVR Codes on the DVD+VR Key. For a four-component remote control, program the DVR Codes on the DVR+AUX keys.

VCR (V)



Accurian	20000
Admiral	20048
Adventura	20000
Aiko	20278
Aiw	20037
Allegro	20039
America Action	20278
American High	20035
Audiovox	20037
Calix	20037
Canon	20035
Carver	20081
CCE	20278
Citizen	20037, 20278
Craig	20037
Crosley	20081, 20000
Curtis Mathes	20060, 20035, 20162, 20278
Daewoo	20045, 20278
Denon	20045
DirecTV	20079
Durabrand	20039
Dynatech	20000
Electrohome	20037, 20043
Electroponic	20037



Emerex	20037
Emerson	20037, 20000, 20043, 20278, 20593, 21593
Fuji	20000, 20593, 21593
Funai	20000, 20593, 21593
Garrard	20000
GE	20060, 20035, 20202
GFM	20000, 20593, 21593
Goldstar	20037
Gradiente	20000
Harley Davidson	20000
Harman/Kardon	20081
Hitachi	20000, 20042, 20593
Hughes Network Systems	20042
Humax	20000
Instant Replay	20035
JVC	20037
KEC	20037, 20278
Kodak	20035, 20037
LXI	20037
Magnasonic	20039
Marantz	20035
Matsushita	20035
MEO	20035
Memorex	20035, 20162, 20037, 20048, 20039, 20000

MGA	20043
Mitsubishi	20047
Motorola	20035, 20048
MTC	20000
Multitech	20000
NEC	20067
Nikko	20037
Olympus	20035
Optimus	20062, 20162, 20037, 20048, 20593
Panasonic	21062, 20035, 20162
Penney	20035, 20037, 20042
Pentax	20042
Philco	20035
Philips	20037, 20039, 20051
Pilot	20037
Pioneer	20067
Polk Audio	20081
Portland	20278
Presidian	21593
Proscan	20060, 20202
Pulsar	20039
Quasar	20035, 20162
RadioShack	20000
Radix	20037

Randex	20060, 20035, 20042, 20202, 20880
RCA	20060, 20035, 20042, 20202, 20880
Realistic	20035, 20037, 20048, 20000
Runco	20039
Samsung	20045
Sanky	20048, 20039
Sansui	20000, 20067
Scott	20045, 20043
Sears	20035, 20037, 20000, 20042
Sharp	20048, 20848
Signature	20035
Sony	20032, 20035, 20000, 20636
STS	20042
Sylvania	20035, 20081, 20000, 20433, 20593, 21593
Symphonic	20000, 20593, 21593
Tashiko	20037
Teac	20000
Technics	20035, 20162
Teknika	20035, 20037, 20000
Thomas	20000
TiVo	20039, 20366
Toshiba	20035, 20162
Totevision	20035
Vector	20045

Video Concepts	20045
Videomagic	20035
Villain	20000
Wards	20060, 20035, 20048, 20039, 20081, 20045, 20000, 20042
XR-1000	20035, 20000
Zenith	20037, 20039, 20000



DVD (Y)



Accurian	30675
Alco	30790
Allegro	30869
Apex Digital	30672, 30796, 31061
Audio Authority	32555
Audiovox	30790
Bel Canto Design	31571
California Audio Labs	30490
Cinea	30831
CineVision	30869
Coby	31107, 31628, 32494
Craig	30831
Daewoo	30490, 32258, 31634, 32748
Denon	30675, 31270
Disney	30675, 31270
Dynex	32596
Emerson	30675, 32213
Funai	30675
GE	30522
GFM	30675
Go Video	31075, 30741, 30744, 30869, 31044
GoldStar	30741, 30869
Grundig	30539

Harman/Kardon	30702, 31229
Hello Kitty	30831
Hitachi	30573, 30664
Hiteker	30672
Insignia	30675, 30741, 32596, 32095, 32428
Integra	32147, 31769, 30627, 31634
Irradio	30646
JBL	30702
JVC	31602, 30623, 30867, 31164, 32365, 32855
Kawasaki	30790
Kenwood	30490, 30534
KLH	30790
Lexicon	32545
LG	30741, 31602, 30869
Logitech	32639
Magnavox	30539, 30503, 30675, 30646, 31354, 31506
Marantz	30539, 32414
Memorex	30831, 31270, 32213, 32331, 31553
Microsoft	30522, 32083
Mitsubishi	31521
NAD	30741
Norcent	31107
Olevia	32331
Onkyo	30503, 32147, 31769, 30627

Oppo	30575, 32545
Panasonic	30490, 31641, 30503, 31579, 31762, 33641
Philco	30675
Philips	32056, 30539, 32434, 32084, 30503, 30675, 30646, 31340, 31354, 31506
Pioneer	30142, 30631, 31571, 32442
Polaroid	31061
Polk Audio	30539
Presidian	30675
Proceed	30672
RCA	30522
RE-BL	32555
Rio	30869
Rotel	30623
Samsung	30199, 30573, 32069, 31075, 30490, 30820, 31044, 31470, 32239, 32489, 32556
Schneider	30646
Sharp	30675, 32250, 30630
Sherwood	31043
Sonic Blue	30869
Sony	31633, 31516, 31070, 30864, 30772, 31033, 31431
Sylvania	30675
Symphonic	30675
Teac	30790
Technics	30490

Toshiba	30503, 32705, 31769, 31154, 32006, 32277, 33157
Urban Concepts	30503
Venture	30790
Vioro	32553
Vizio	32563
WB Electronics	32555
Xbox	30522, 32083
Yamaha	30490, 30539, 30497, 32298, 30646, 30545, 30817, 31354, 32558
Zenith	30503, 30741, 30869



Satellite Set Top Box (S) / Boitier décodeur pour satellite (S) / Convertidor para Satélite (S)

Bell ExpressVu	50775
DirecTV	51377, 50392, 50566
Dish Network	50775
Dishpro	50775
Echostar	50775
Expressvu	50775
GE	50566
General Instrument	50869
GOI	50775
HTS	50775
Hughes Network Systems	51377
Jerrold	50869
JVC	50775
Motorola	50869
Next Level	50869
Proscan	50392, 50566
RadioShack	50869
RCA	50392, 50566, 50855
Samsung	51377
Shaw Direct	50869
Star Choice	50869
Voom	50869

Cable Set Top Box (C) / Boitier décodeur pour cable (C) / Convertidor para Cable (C)



ADB	52254
Amino	51602, 51481, 51822, 52482
Arris	52187
AT&T	50858
Bell	51998
Bright House	51376, 51877
Cable One	51376, 51877
Cablevision	51376, 51877
Charter	51376, 51877, 51878
Cisco	51877, 50858, 52378, 51982, 52187, 52576
Cox	51376, 51877
Digeo	52187
i3 Micro	51602
Insight	51376, 51877
Knology	51877
KoolConnect	51481
Mediacom	51376, 51877
Motorola	51376, 50858, 52378, 51982, 51998
Mosi	52187
MTS	51998
Myrio	51602, 51822
Pace	51376, 51877, 51982
Panasonic	51982
Pioneer	51877

RCN	51376
Rogers	51877
Samsung	51877
Sasktel	51602
Scientific Atlanta	51877, 50858, 51982, 52345
Sejin	51602
Shaw	51376
Suddenlink	51376, 51877
SureWest	51481, 51998
Telus	52345
Thomson	51982
Time Warner	51376, 51877, 52187
TiVo	52576
Verizon	52378
Videotron	51877
WideOpenWest	51877



Accessory (M) / Accessoire (M) / Accessorio (M)

Apple	41115
Denon	42502
JVC	42969
LG	43217
Samsung	42609
Sharp	43097
Sony	42610
Vizio	42454
Yamaha	41797, 42021, 42116, 42458

Accessory (N) / Accessoire (N) / Accessorio (N)



Access HD	52185
Airlink 101	52491
Alpha Digital	52185
AMTC	52185
Apex Digital	52478
Apple	52615
Artec	52490
Asus	52987
CASTI	52305
Centronics	52360
Channel Master	52365
Cisco	52826
Coby	52667
Coship	52487
Daewoo	52338
Daytek	52305
Digital Stream	52303
Digiwave	52360
Dish Network	52470
Echostar	52470
Epson	51563
Evolution	52479
Firebird Systems	52360
GE	52360

Goodmind	52360, 52450
Gridlink	52348
Insignia	51415
Lasonic	52348
LG	51415
Magnavox	51563, 53339
Memorex	52486
MicroGEM	52489
Microsoft	52049
Netgear	53324
Philco	51563
Popcorn Hour	52260
RCA	52325, 52454, 53335
Roku	52371, 53061
RTC	52360
Samsung	51967, 52592
Sansonic	52348
Scientific Atlanta	52826
Seagate	52698
Sony	52713
Sunkey	52695
Sylvania	51563
Tivax	52185
Ventura	52454

Venturer	52454
Western Digital	52558
Winegard	52454
Xbox	52049
Zenith	51415
Zentech	52491
Zinwell	52488

Streaming Player / Lecteur en continu / Reproductor de streaming

Apple	52615
Asus	52987
LG	53373
Magnavox	53339
Netgear	53324
Popcorn Hour	52260
RCA	53335
Roku	52371, 53061
Seagate	52698
Sony	52713
Western Digital	52558
Xbox	52049

Receiver (R) / Récepteur (R) / Receptor (R)



Alco	41390
AMC	41077
Anam	41609
Arcam	41189
Audiotronic	41189
Audiovox	41390
Bose	41933, 41629
Carver	41189
Denon	42857, 41360, 41142, 42279, 42820
Dynex	42971
Harman/Kardon	41304, 42443, 41306, 42670
Insignia	41077, 42169, 42175, 42472, 42929, 42966
Integra	41805, 41320
JBL	41306
JVC	41374, 41495, 42331
Kenwood	41570
KLH	41390
LG	41293, 42197, 42284, 42676
Magnavox	41189, 41269
Marantz	41189, 41269, 41289
McIntosh	41289
Micromega	41189
Myryad	41189
Onkyo	41805, 41320

Panasonic	42967, 41275, 41288, 41548, 42452
Philips	41189, 41269, 42311, 42459
Pioneer	41935
Polk Audio	41289
Proscan	41254
RCA	41609, 41254, 41390, 42041, 42611
Samsung	41868, 41304, 41500
Sherwood	41077, 42169
Sherwood Newcastle	42169
Sony	41759, 41758, 42172, 41622, 41822, 41441, 41658, 41858, 42475, 42522
Teac	41390
Thorens	41189
Venture	41390
Yamaha	42061, 42467, 40376, 41815, 41276, 41331, 41375, 42455
Zenith	41293, 42197

Amplifier (A) / Amplificateur (A) / Amplificador (A)

Denon	42134
Marantz	42138

By: 2012 Audiovox Accessories Corporation UEI 2012 2539 00. Download [here](#).

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

