

How to use

Start cooking

Touch the ON/OFF control. After power on, the buzzer beeps once. all displays show “-” or “- -”, indicating that the induction hob has entered the state of standby mode.

Place a suitable pan on the cooking zone that you wish to use.

- Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.

Touching the heating zone selection control, and an indicator next to the key will flash

Select a heat setting by touching the slider control

- If you don't choose a heat setting within 1 minute, the Induction hob will automatically switch off. You will need to start again at step 1.
- You can modify the heat setting at any time during cooking.

If the display flashes alternately with the heat setting

This means that:

- you have not placed a pan on the correct cooking zone or.
- the pan you're using is not suitable for induction cooking or.
- the pan is too small or not properly centered on the cooking zone.

No heating takes place unless there is a suitable pan on the cooking zone.

The display “ ” will automatically disappear after 1 minute if no suitable pan is placed on it.

EN-8

Finish cooking

Touching the heating zone selection control that you wish to switch off

Turn the cooking zone off by touching the slider to “|”.

Make sure the display shows “0”

Turn the whole cooktop off by touching the ON/OFF

Beware of hot surfaces

H will show which cooking zone is hot to touch. It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans. use the hotplate that is still hot.

Using the Boost function

Activate the boost function

Touching the heating zone selection control.

Touching the boost control. the zone indicator show

“P” and the power reach Max.

Cancel the Boost function

Touching the heating zone selection control that you wish to cancel the boost function

ENGLISH

EN-9

The function can work in any cooking zone. The cooking zone returns to its original setting after 5 minutes. If the original heat setting equals 0. it will return to 9 after 5 minutes.

FLEXIBLE AREA

- This area can be used as a single zone or as two different zones. accordingly
- Free area is made of two independent inductors that can be controlled

As big zone

1. To activate the free area as a single big zone. Touching the Flexible Area control .
2. As a big zone. we suggest the used as the follow:

Cookware: 250mm or 280mm diameter cookware (Square or Oval

We don't recommend other operations except for above mentioned three

As two independent zones

To use the flexible area as two different zones. you can have two choices of

(a) Put a pan on the right up side or the right down side of the flexible zone.

Touching the "Boost" control to cancel the Boost

EN-10

(b)Put two pans on both sides of the flexible zone.

Notice: Make sure the pan is bigger than 12cm.

Locking the Controls

You can lock the controls to prevent unintended use (for example children accidentally turning the cooking zones on). When the controls are locked. all the controls except the ON/OFF control are disabled.

To lock the controls

Touch the lock control The timer indicator will show “ Lo“

To unlock the controls

Touch and hold the lock control for a while.

When the hob is in the lock mode. all the controls are disable except the ON/OFF. you can always turn

Timer control

You can use the timer in two different ways: a) You can use it as a minute minder. In this case. the timer will not turn any cooking zone off when the set time is up.

b) You can set it to turn one or more cooking zones off after the set time is up.

The timer of maximum is 99 min.

If you are not selecting any cooking zone

ENGLISH

EN-11

Make sure the cooktop is turned on.

Note: you can use the minute minder at least one zone shall

Touch timer control. the "10" will show in the timer display.

Set the time by touching the slider control. (e.g. 5)

Touch timer control again. the "1" will flash

Set the time by touching the slider control (e.g.9). now the

When the time is set. it will begin to count down immediately. The display will show the remaining time

Buzzer will beep for 30 seconds and the timer indicator shows "- -" when the setting time finished.

Set one zone

Touching the heating zone selection control that you want to set the timer for.

In short time. touch timer control. the "10" will show in the timer display and the "0" flashes.

EN-12

Set the time by touching the slider control. (e.g. 5)

Touch timer control again. the "1" will flash.

Set the time by touching the slider control (e.g.9). now the timer you set is 95 minutes.

When the time is set. it will begin to count down immediately.

The display will show the remaining time .

NOTE: The red dot next to power level indicator will illuminate indicating that zone is selected.

When cooking timer expires. the corresponding cooking zone will be switched off automatically.

Other cooking zone will keep operating if they are turned on previously.

The pictures shown above are for reference only. and the final product shall prevail. set more zones: The steps for setting more zones are similar to the steps of setting one zone; When you set the time for several cooking zones simultaneously. decimal dots of the relevant cooking zones are on. The minute display shows the min. timer. The dot of the corresponding zone flashes.

The shown as below:

(set to 15 minutes)

(set to 45 minutes)

Once the countdown timer expires. the corresponding zone will switch off. Then it will show the new min. timer and the dot of corresponding zone will flash.

The shown as right: (set to 30 minutes)

Touch the heating zone selection control. the corresponding timer will be shown in the timer indicator.

C)Cancel the timer

ENGLISH

EN-13

Default working times

Auto shut down is a safety protection function for your induction hob. It shut down automatically if ever you forget to turn off your cooking. The default working times for various power levels are shown in the below table:

Power level

Default working timer (hour)

When the pot is removed. the induction hob can stop heating immediately and the hob automatically switch off after 2 minutes.

To switch to another level

Confirmation Power Management Function

After the desired power setting mode is selected.

When the timer indicator stops flickering. the power

Exit Power Management Function

After the setting. make sure to dis-connect the

Then the hob will be turned off.

ENGLISH

EN-15

There are 6 power levels. from “7.4” to “2.5”. The

“7.4” : the maximum power is 7.4Kw.

“6.5” : the maximum power is 6.5Kw.

“5.5” : the maximum power is 5.5Kw.

“4.5” : the maximum power is 4.5Kw.

“3.5” : the maximum power is 3.5Kw.

“2.5” : the maximum power is 2.5Kw.

You may have a number of different cooking vessels

1. This induction hob can identify a variety of cooking vessels. which you can test by

Place the vessel on the cooking zone. If the corresponding cooking zone displays a

2. Hold a magnet to the vessel. If the magnet is attracted to the vessel is suitable for

NB: The base of the vessel must contain magnetic material.

It must have flat bottom with a diameter according to the table 1 below.

3. Use only ferromagnetic cookwares made from enameled steel. cast iron or stainless

4. Use pans whose diameter of the ferromagnetic area (base of the pan) is in the range

If you use smaller pots. performance could be affected

If you use pot with a diameter smaller than the one indicated in the table 1. pots

According to the dimension of the zone you can use pots of different diameters as picture

Iron oil frying Stainless steel Iron pan Iron kettle Enamel

Enamel cooking

Iron plate

EN-16

5. If the ferromagnetic part covers only partially the base of the pan. only the

6. If the ferromagnetic area is not homogeneous. but presents others material such as

If the base of the pan is similar to the pictures below the pan could be not detected.

The base diameter of induction cookware

Cooking zone

Minimum(mm) Maximum(mm)

The above may vary according to the size of the pan and the material it is made from.

Flexible Area 386\*180

ENGLISH

EN-17

**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)

