


Features

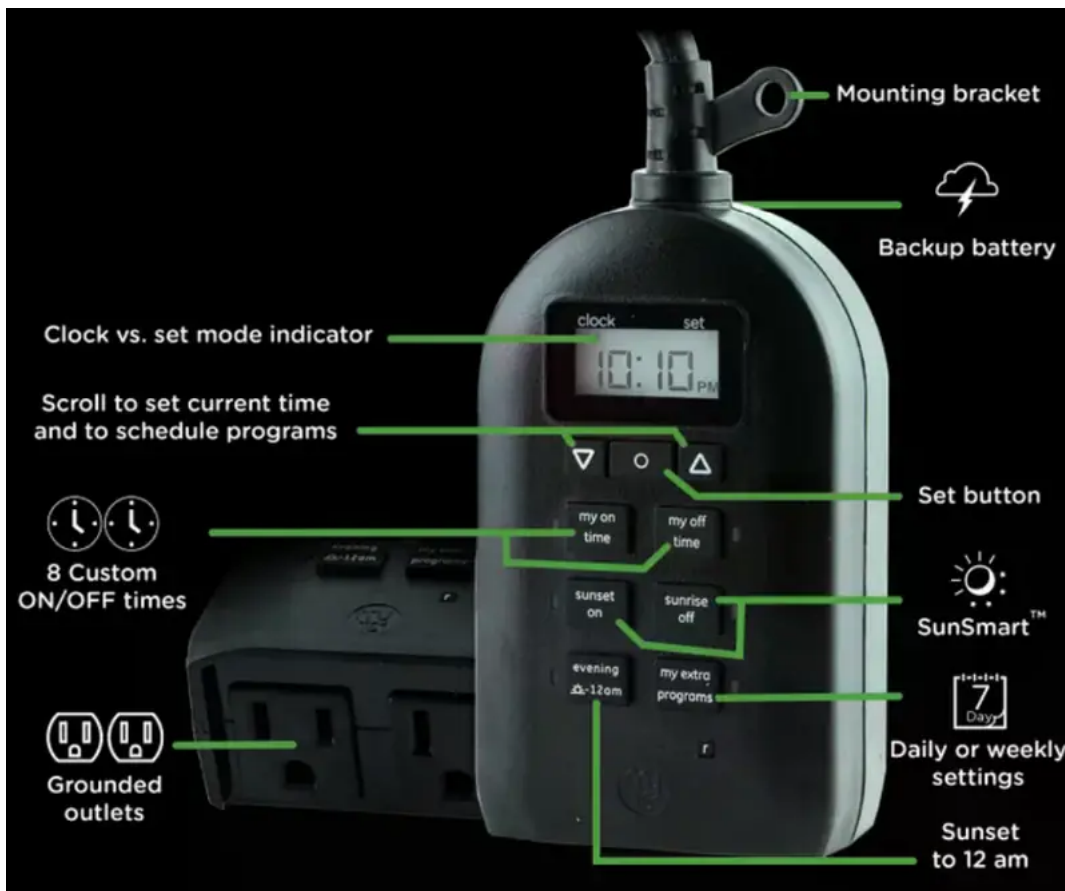

If Mounting Outdoors

1. Mount the timer on a wall near a GFCI receptacle using a screw or nail. Install timer as far above ground level as possible with receptacle facing downward. Do not install where timer can be immersed or where water will splash or drip onto receptacle. Screw or nail head must extend at least 3/16" out from the wall (nail or screw not included).
2. Hang the timer from the hole at the top of the unit.

Simple Setup




1. Just scroll to set the current date & time.
2. Select your region so SunSmart technology adjust to sunrise/sunset times in your area.
3. Choose from preset options or set custom times.



Initial Setup



1. Setup

If no numbers are visible on-screen, plug timer into an outlet and let the timer charge for 1 hour.

Once charged, press the reset () button in the lower right corner using a toothpick or pencil.

2. Set the time

Use the up () and down () arrows to set the current time, taking note of AM or PM.

Note: When daylight saving time occurs use the up () and down () arrows to adjust the time by 1 hour.

Programming



Program 1

ON at 6:30 P.M.
OFF at 10:00 P.M.,
every Friday

Choose your custom “my on time”

Press the “my on time” button (the default time will be flashing), then use the up (▲) and down (▼) arrows to set the on time. (If you set the “my on time” earlier than the current time, it will not turn on until the next day at the time scheduled).

Once you reach the desired “my on time,” wait 5 seconds, press the “my on time” button again or press the “my off time” button to begin setting the off time.

Choose your custom “my off time”

Press the “my off time” button (the default time will be flashing), then use the up (▲) and down (▼) arrows to set off time.

Once you reach the desired “my off time,” wait 5 seconds, press the “my off time” button again or press the other “my on time” button to begin setting the next on time.

Repeat Steps 1 and 2 to program second set of “my on” and “my off” times.

Note: When a “my on” or “my off” time is set, the active program indicator arrow will appear on the screen beside the corresponding program number. Programs may run individually or simultaneously.



Sun ON/OFF



ON at sunset

OFF at sunrise

Evening Preset



ON at sunset

OFF at 12 A.M.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.