


Portable Smart Tire Inflator

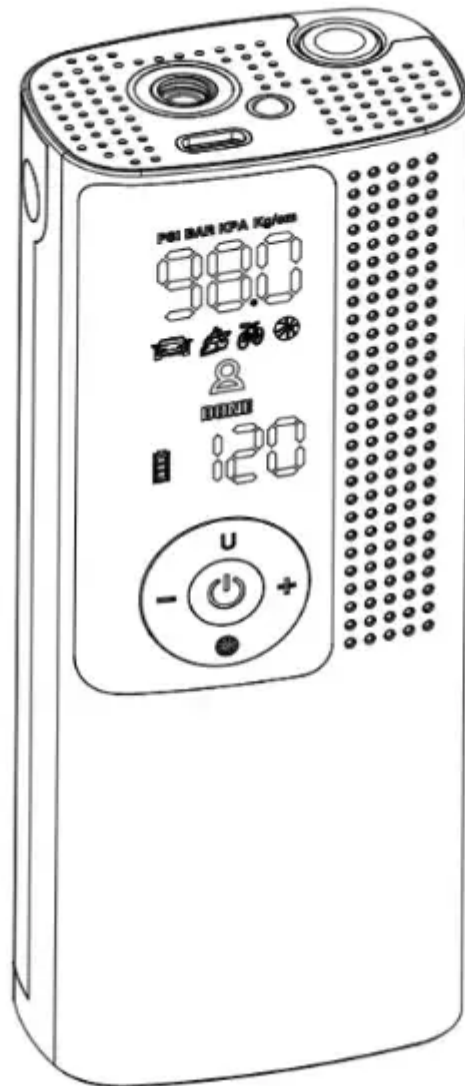

NOTE: AIR HOSE IS STORED INSIDE THE DEVICE. PRESS THE RELEASE BUTTON ON THE BOTTOM

TUTORIAL: GetAirmoto.com/HowTo

1. Packing list

- 1 x smart air pump
- 1 x flexible hose (US standard connector)
- 1 x French standard adapter
- 1 x ball needle

- 1 x nozzle for swimming ring
- 1 x Type-C cable


2. Specification

- Product name: Portable smart air pump
- Product model: BP198
- Product size: 38 x 60 x 152mm
- Weight: 340g
- Inflation pressure: 120PSI (MAX)
- No-load flow: 20L/M
- Charging temperature: 0 ~ 45 °C
- Working temperature: -10~60 °C
- Battery capacity: 2000mA/7.2V (14.4WH)
- Charging input: 5V/2A
- USB output: 5V/1.5A
- Charging time: 2.5~4.5h
- Pressure accuracy: +/- 1PSI
- LED lighting: 0.5W
- Over-current protection: 9A/1S
- Over discharge protection: 6V

3. Illustration

- [a] Air release valve
- [b] Hose connector
- [c] Storage hole for hose
- [d] LED light
- [e] USB Type-C port
- [k] unit
- [f] Measured pressure
- [g] Mode
- [h] Preset pressure value
- [i] Battery level
- [m] Unit switching LED light

- [n] Power on / off Inflation On/Off
- [p] Preset plus / minus
- [r] Hose button

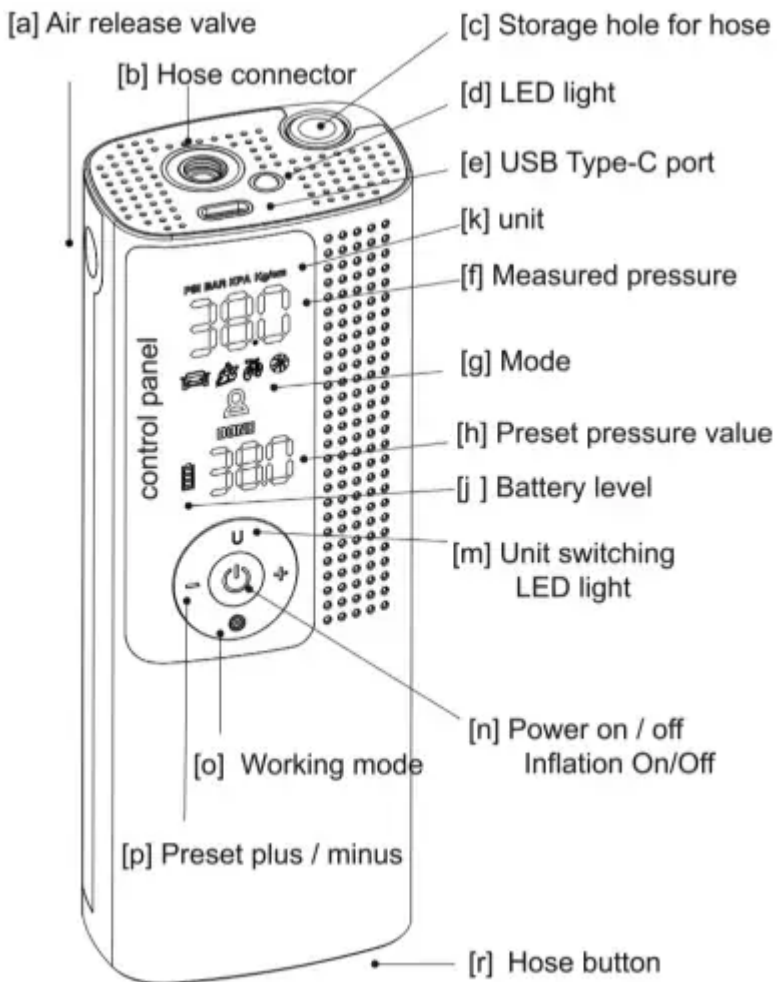


4. ATTENTION:

1. Do not leave during inflation.
2. Keep away from combustible and explosives.
3. Avoid moisture, sand and fall.
4. Do not store the product in a place that is too cold or hot.
5. It is forbidden to throw the product into fire or discard it at random due to the built-in lithium battery.
6. Not for children.

5. How to use

5.1 Charging method

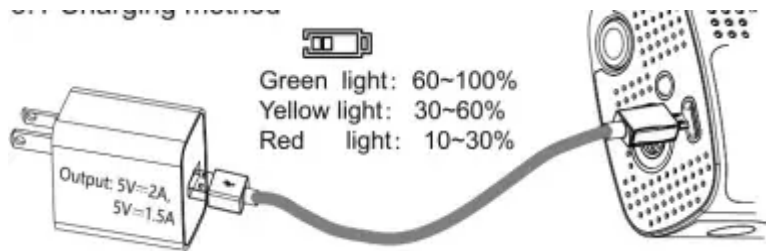

Green light: 60~100%

Yellow light: 30~60%

Red light: +10~30%


The USB charger is recommended to use 5V / 2A. Use the Type-C charging cable to connect the air pump and power adapter (sold separately) for charging.

Charging status: battery indicator flashes.

Full state: the battery indicator is green and does not flash.

The product cannot be used during charging.

5.2 Startup and shutdown

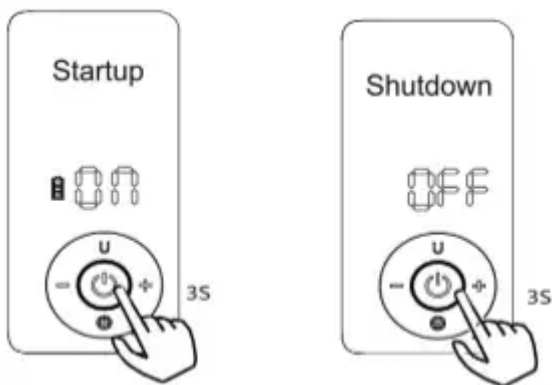

- Long press the power button for 3 seconds, as shown in the figure. Switch on successfully.
- Long press the power button for 3 seconds, as shown in the figure. Shut down successfully.
- Automatic shutdown in 3 minutes without operation.
- Automatically shut down when battery is low.

5.3 Application scenario switching

Short press mode selection key [o], you can choose 5 inflatable scene modes. They are:

Scene mode	Reference value	Adjustable range
Car mode	35PSI/2.4bar	0-65PSI
Motorcycle mode	40PSI	0-55PSI
Bicycle mode	38PSI	0-120PSI
Custom mode	100PSI	0-120PSI
Ball mode	8PSI	0-15PSI

5.4 Unit switching

Short press the unit switch key [m], you can switch the air pressure display unit. The unit conversion formula is shown below:

1PSI = 6.89KPA

1BAR = 100KPA

1Kg/cm² = 98KPA


5.5 Preset pressure value

Short press +/- button [p]: Adjust the preset pressure value +/- 0.5PSI.

Long press +/- button [p]: can quickly adjust the preset pressure value.

Note: The scene switch and preset pressure value are automatically saved by the software. You only need to switch the scene for the next use, and the preset pressure is automatically set.

5.6 Hose connection

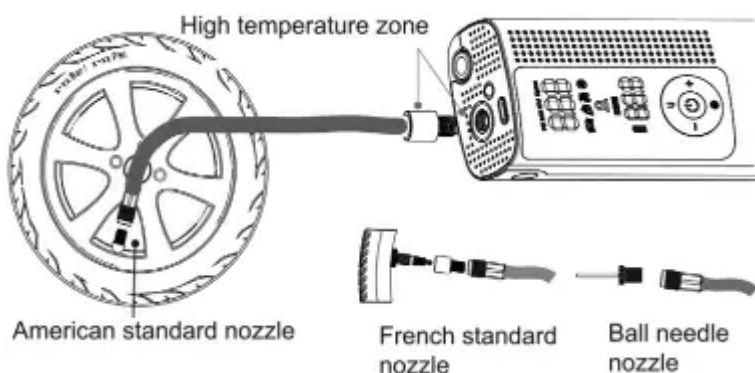

High temperature zone

American standard nozzle French standard Ball needle nozzle nozzle

5.7 Start inflation

Short press the inflation switch [n] to start inflation. The digital display of the real-time air pressure value [f] changes during inflation.

Noise will be generated during inflation, and the hose produces high temperature during long-term work.

Avoid prolonged contact with hose and hose joints by hand [b].

5.8 Stop inflation


[f] Measured pressure

[h] Preset pressure

5.8 Stop inflation

* Short press the inflation switch [n] to stop inflation manually.

* When the measured pressure [f] reaches the preset pressure [h], stop inflation automatically.

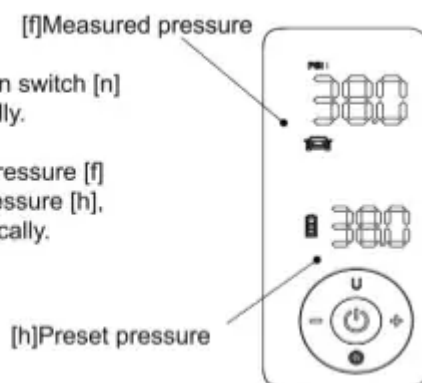


- Short press the inflation switch [n] to stop inflation manually.
- When the measured pressure [f] reaches the preset pressure [h], stop inflation automatically.

5.9 LED Lighting

- Long press LED [m] to turn on LED lighting.
- Press and hold the LED light button [m] to turn off the LED light.

5.10 Hose storage

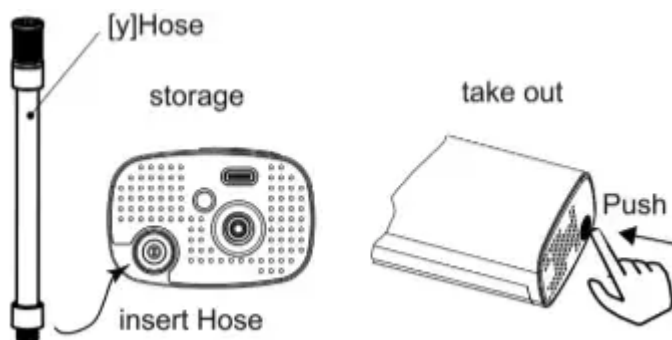

The hose can be stored in the storage hole as the following figure shows, just put the thread head of hose inside the hole to store.

storage take out insert Hose

5.11 Measuring pressure

After switching on, connect the air pipe to the measured object, and the measured pressure value [f] shows the current pressure value.

5.12 Air release valve

Connect the air pipe to the measured object and press the air release valve [a] to deflate.

5.13 Clearing the pressure


After switching on, when the measured pressure value is not zero, press the preset +/- key [m] for 3 seconds at the same time to enter auto clear.

Note:

The product has been cleared from the factory. When the difference in altitude or the sensor tolerance shows that the measured pressure is not zero, manual clearing can improve the accuracy of pressure detection. Do not connect inflatable objects when clearing.

6. High temperature safety precautions

When the hose is unscrewed, the air pipe and the joint will generate high temperature due to long-term work. Do not touch it with your hands for a long time.

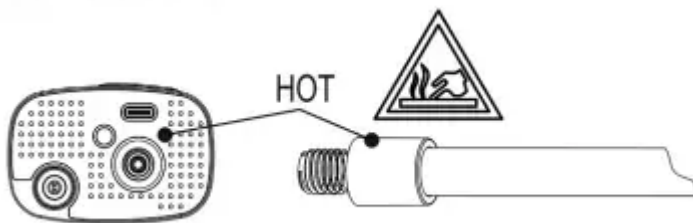

7. Common product pressure values

category	Type	Pressure value
bicycle	Stroller	18~30PSI
	10~16inch tire	30~45PSI
	20~30inch tire	38~55PSI
	road bike	90~120PSI
	scooter / wheelchair / Moped	30~45PSI
motorcycle/ Electric car	motorcycle/ Electric car	28~55PSI
	car	2.2~2.8Bar
ball	Children's toy ball	3~6PSI
	basketball	7~9PSI
	football	10~12PSI
	volleyball	4~6PSI
	Rugby	10~14PSI

Rapid Service

FE CEO SE
MADE IN CHINA

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.