

Overview



Specification

EN80	
	12 cm 23 cm 32.1 cm
	220–240 V, 50/60 Hz, 1150-1260 W
P	Max/max. 19 Bar
	2.4 Kg
	0.7 L

Packaging Content




Energy Saving Mode

This machine is equipped with an energy saving feature. The machine will automatically enter power off mode after 9 minutes

To turn the machine on either press the Espresso or Lungo button.



To turn the machine off before automatic Power Off mode, press both the Espresso and Lungo buttons simultaneously

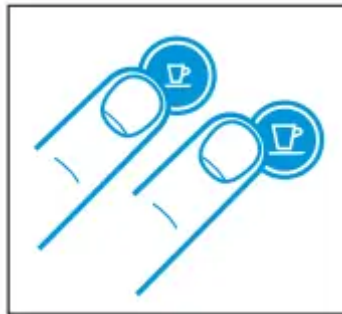

To change this setting:

1. With machine being turned off, press and hold the Espresso button for 3 seconds



2. The Espresso button will blink to indicate the current setting.



3. To change this setting press the Espresso button: One time for power off mode after 9 minutes One more time for power off mode after 30 minutes




4. To exit the energy saving mode press the Lungo button for 3 seconds



First use or after long period of non-use

1. Rinse the water tank before filling with potable water

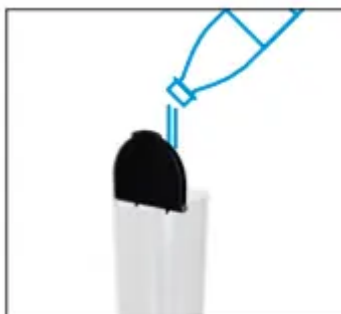


2. Place a container (min. 1 L) under coffee outlet



3. Plug into mains




4. Press the Espresso or Lungo button to activate the machine.

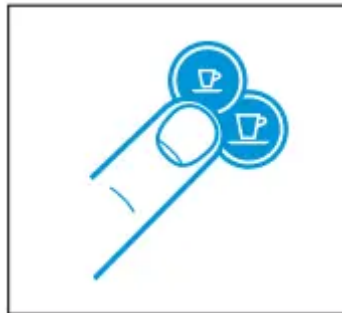

Blinking Lights: heating up (25 sec.)




5. Press the Lungo button to rinse the machine. Repeat 3 times.

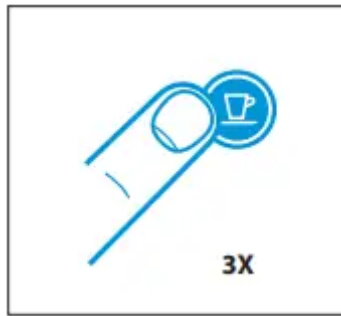

Coffee Preparation

1. Rinse then fill the water tank with potable water.

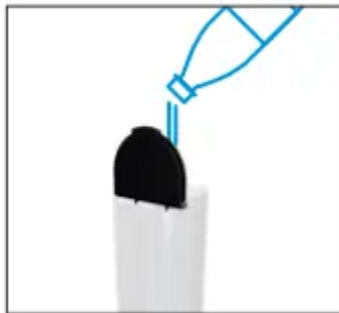

2. Press the Espresso or Lungo button to activate the machine



Blinking Lights: heating up (25 sec.)

Steady Lights: ready



3. Lift the lever completely and insert a Nespresso capsule



4. Close the lever and place a cup under the coffee outlet.



5. Press the Espresso (40 ml) or the Lungo (110 ml) button to start. Preparation will stop automatically. To stop the coffee flow or top up your coffee, press again.



6. Remove the cup. Lift and close the lever to eject the capsule into the used capsule container



Programming the water volume

1. Turn the machine on and wait for it to be in ready mode (steady lights).



2. Fill the water tank with potable water and insert a Nespresso capsule



3. Place a cup under the coffee outlet




4. Press and hold the Espresso or Lungo button.




5. Release button once the desired volume is served.

6. Water volume level is now stored.

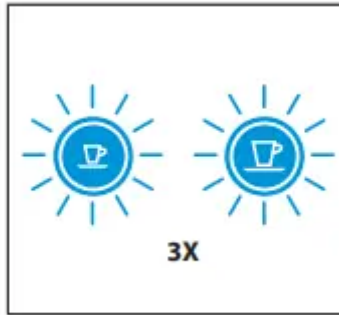

Emptying the system before a period of non-use and for frost protection, or before a repair


1. To enter the emptying mode, press both the Espresso and Lungo buttons to turn the machine off

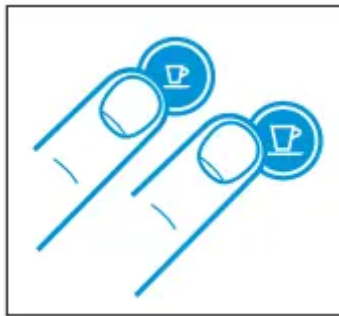


2. Remove the water tank and open the lever



3. Press both the Espresso and Lungo buttons for 3 seconds.

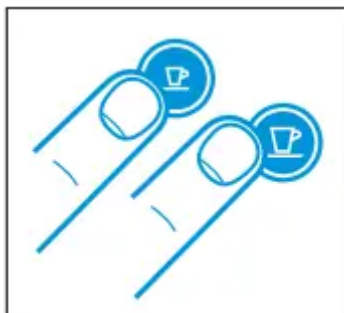

Both LEDs blink alternatively.

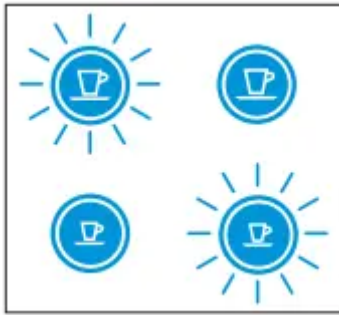

4. Close the lever.



5. Machine switches off automatically.


6. Empty and clean the used capsule container and drip tray.

Reset to factory settings

1. With machine being turned off, press and hold down the Lungo button for 5 seconds.



2. LEDs will blink fast 3 times to confirm machine has been reset to factory settings.

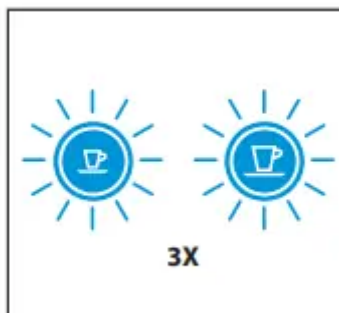

3. LEDs will then continue to blink normally, as heating up, until ready

Factory settings

Espresso Cup: 40 ml



Lungo Cup: 110 ml

Power Off mode: 9 min

Descaling

1. Remove the capsule and close the lever.



2. Empty the drip tray and used capsule container.




3. Fill the water tank with 0.5 L of potable water and add 1 Nespresso descaling liquid sachet



4. Place a container (min. volume 1 L) under the coffee outlet




5. To enter the descaling mode, while the machine is turned on, press both the Espresso and Lungo buttons for 3 seconds

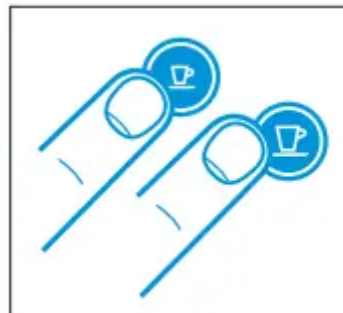


Both LEDs blink.




6. Press the Lungo button and wait until the water tank is empty.

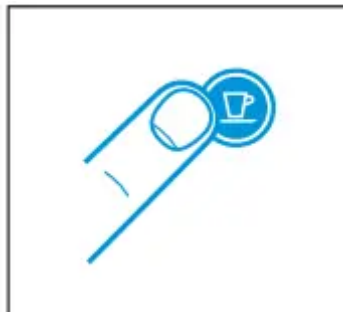


7. Refill the water tank with the used descaling solution collected in the container and repeat step 4 and 6

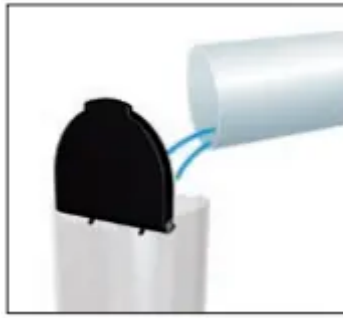


8. Empty and rinse the water tank. Fill with potable water

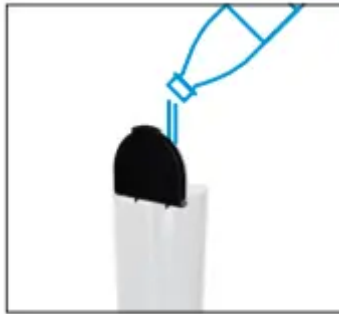

9. When ready, repeat step 4 and 6 to now rinse the machine. Repeat twice.

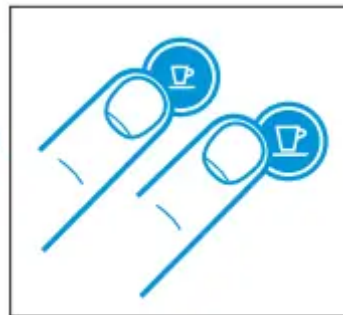

10. To exit the descaling mode, press both the Espresso and Lungo buttons for 3 seconds.

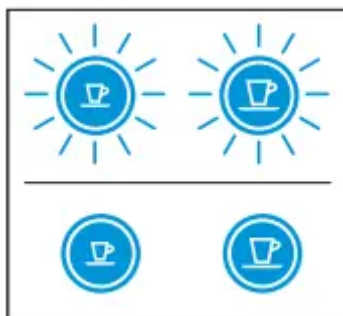


Blinking Lights: heating up (25 sec.)

11. The machine is now ready for use.

CAUTION: the descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. Never use any product other than the Nespresso descaling kit available at the Nespresso Club to avoid damage to your machine. The following table will indicate the

descaling frequency required for the optimum performance of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact your Nespresso Club.


Water hardness:		Descal after:		fH	French grade
fH	dH	CaCO ₃	Cups (40 ml)	dH	German grade
36	20	360 mg/l	1000		
18	10	180 mg/l	2000		
0	0	0 mg/l	4000		



 CaCO₃ Calcium carbonate

Cleaning

Clean the coffee outlet regularly with a soft damp cloth.

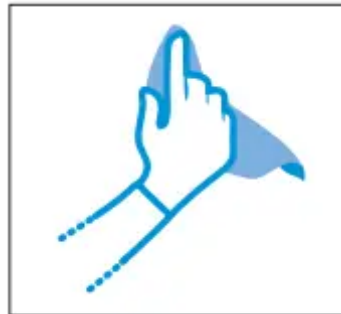

Maintenance unit can be removed in separate pieces for easy cleaning.



Troubleshooting

No light indicator	Check the mains, plug, voltage, and fuse. In case of problems, call the Nespresso Club
No coffee, no water.	<ul style="list-style-type: none"> • First use: fill water tank with warm water (max. 55° C) and run through machine according to instructions on page 10. • Water tank is empty. Fill water tank • Descale if necessary; see Descaling section
Coffee comes out very slowly.	<ul style="list-style-type: none"> • Flow speed depends on the coffee variety. • Descale if necessary; see Descaling section.
Coffee is not hot enough.	<ul style="list-style-type: none"> • Preheat cup. • Descale if necessary
Capsule area is leaking (water in capsule container).	Position capsule correctly. If leakages occur, call the Nespresso Club
Irregular blinking.	Send appliance to repair or call the Nespresso Club.
No coffee, just water runs out (despite inserted capsule).	In case of problems, call the Nespresso Club.

Safety precautions

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for other than its intended use.
- This appliance has been designed for indoor and non-extreme temperature conditions use only
- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments, farm houses; by clients in hotels, motels and other residential environments; bed and breakfast type environments.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are

fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and they are supervised by an adult.

- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the device safely and understand the dangers.
- Children should not use the device as a toy.
- The manufacturer accepts no responsibility and the warranty will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professionals' repair or failure to comply with the instructions.

Avoid risk of fatal electric shock and fire

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the warranty.

The appliance must only be connected after installation.

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.
- If the cord is damaged, do not operate the appliance.
- Return the appliance to the Nespresso Club or to a Nespresso authorized representative.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm² or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar
- Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.

- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.
- Never put the appliance or part of it in a dishwasher.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock

Avoid possible harm when operating the appliance

- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power socket. Contact the Nespresso Club or Nespresso authorized representative for examination, repair or adjustment.
- A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the lever and never lift it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use a damaged or deformed capsule. If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the Nespresso Club or Nespresso authorized representative.
- Fill the water tank only with fresh and potable water
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean cleaning tools.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for Nespresso coffee capsules available exclusively through the Nespresso Club or your Nespresso authorized representative. Nespresso

quality is only guaranteed when Nespresso capsules are used in Nespresso appliances.

- All Nespresso appliances pass stringent controls. Reliability tests under practical conditions are performed randomly on selected units. This can show traces of any previous use.
- Nespresso reserves the right to change instructions without prior notice.

Descaling

- Nespresso descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day. For the correct amount and procedure to follow, consult the user manual included in the Nespresso descaling kit

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.