

PACKAGE CONTENTS



VIZIO HD TV with Stand



 
Remote Control with Batteries



Quick Start Guide

 


Power Cable

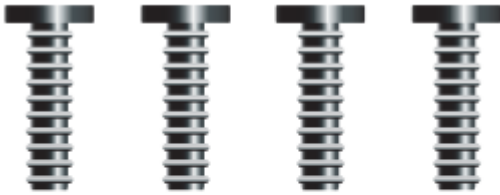

T4 Phillips Screws

BASIC REMOTE

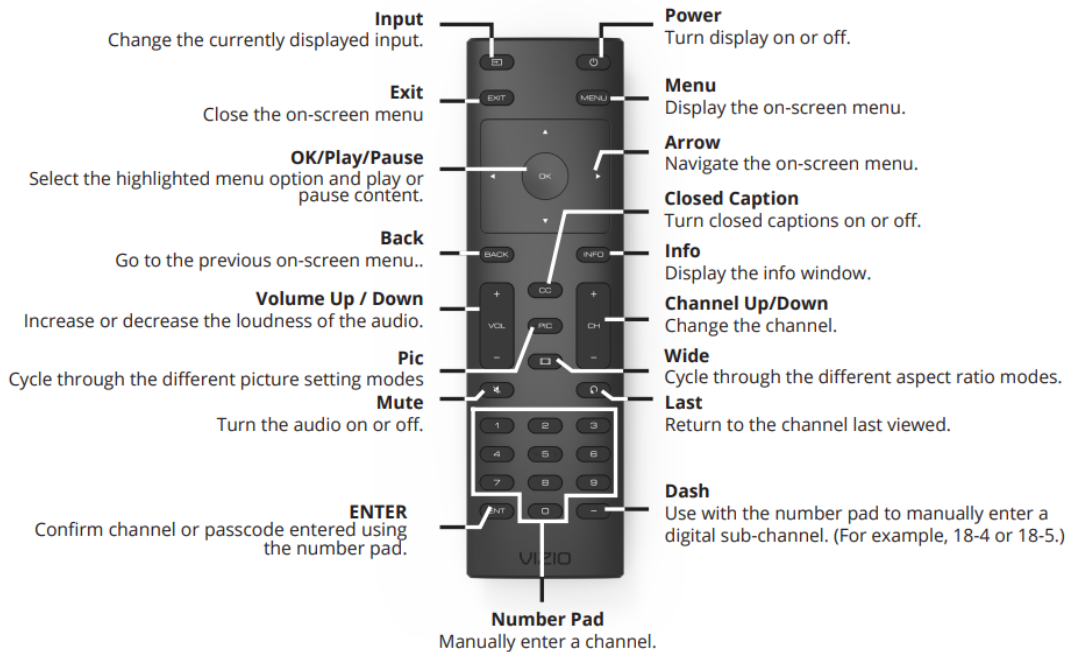 


INSTALLING THE BASE

1. Place the TV screen-down on a clean, flat surface. To prevent scratches or damage to the screen, place the TV on a soft surface such as a blanket.



Align the stand and hook it into the bottom of the TV as shown.

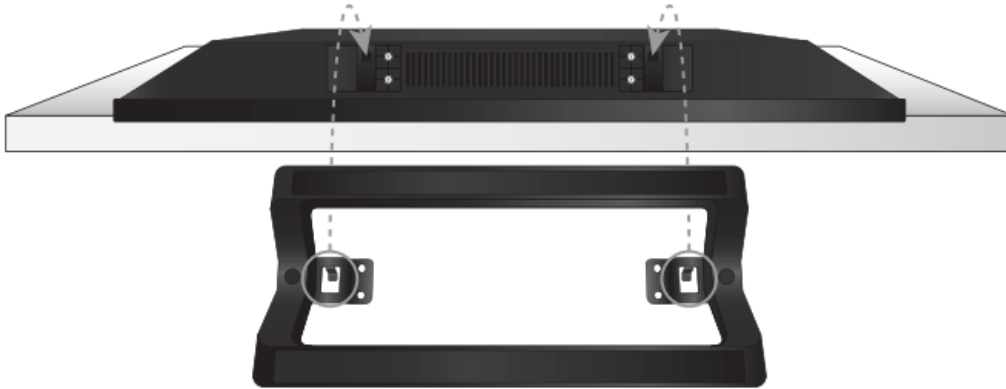

 
2. Use a Philips screwdriver to tighten four (4) Philips screws into the base to secure it to the TV.





 

 
When you are finished, place the TV on a stable, level surface

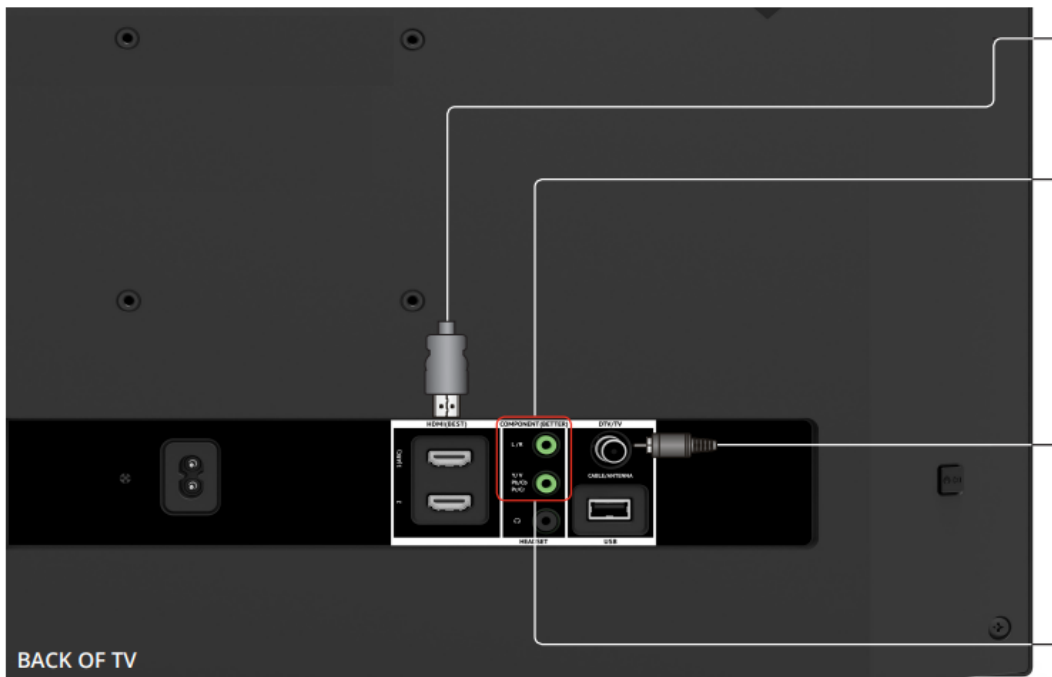

FIRST-TIME SET-UP

1. Connect all of your devices first. Choose ONE connection type for each device.

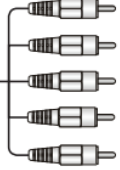

<p>HDMI CABLE*</p> <p>BEST</p> <ul style="list-style-type: none"> • DIGITAL • HD VIDEO (1080p)** • HD AUDIO 		<p>Commonly-Connected Devices:</p>  <p>Cable or Satellite Boxes</p>  <p>Blu-ray™ or DVD Players</p>  <p>Game Consoles</p>
<p>Connect to Phono port using phono adapter. (Sold separately)</p>		
<p>COMPONENT CABLE*</p> <p>BETTER</p> <ul style="list-style-type: none"> • ANALOG • HD VIDEO (1080i)** • STEREO AUDIO 		
<p>COAXIAL CABLE*</p> <p>BETTER</p> <ul style="list-style-type: none"> • ANALOG • HD VIDEO (1080i)** • STEREO AUDIO 		
<p>AV CABLE*</p> <p>GOOD</p> <ul style="list-style-type: none"> • ANALOG • VIDEO (480i)** • STEREO AUDIO <p>Connect to Phono port using phono adapter. (Sold separately)</p>		

Match colored connectors to colored ports.

* Cables are not included. ** Maximum resolution.

2. Inserting and replacing batteries.

Two AAA batteries are included for you to use with 2 the remote control.

To insert/replace the batteries:

1. Press on the arrow and slide the battery cover off.
2. Insert two AAA batteries (included). Be sure to align the + and - signs on the batteries and remote.
3. Replace the battery cover.

 


WARNING: keep the remote control batteries away from children. It may cause choking and/ or lead to a fire or chemical burn if mishandled. Do not dispose of batteries in fire. Replace only with batteries of the correct type.

NOTE: When needed, VIZIO recommends replacing the batteries that came with this remote with two, new Duracell 'AAA' alkaline batteries.

3. Connect the power cord to the back of the TV. The flat edge of the connector goes toward the inside of the TV.

 
Plug the power cord into an electrical outlet.

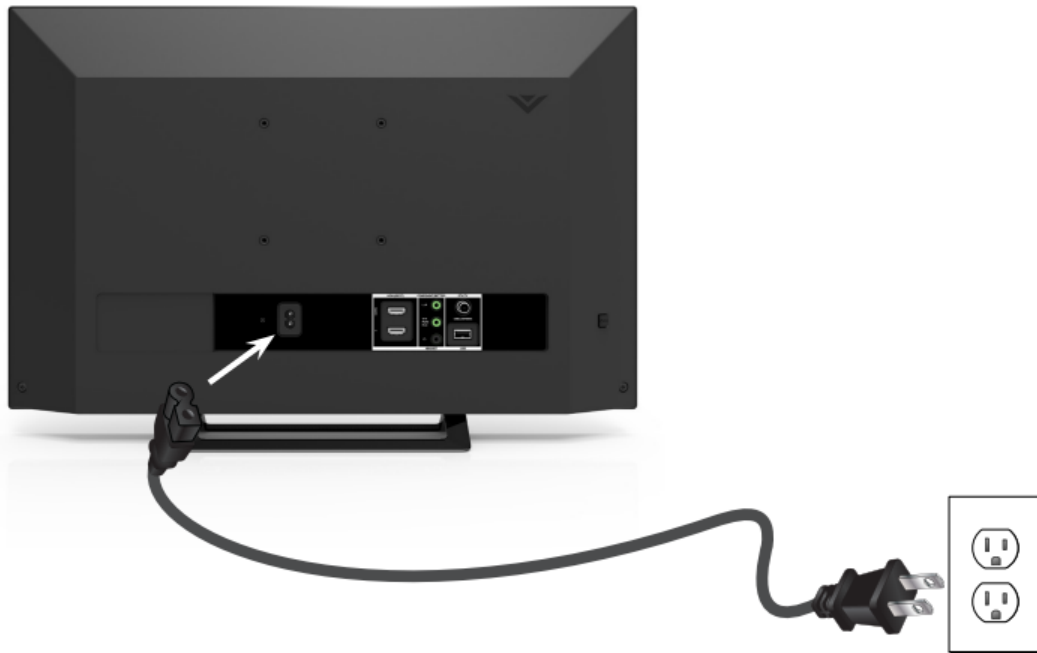

4. Turn the TV on by pressing the POWER button on the remote.

The Guided Setup app is displayed.

Use the Arrow buttons on the remote to select Home Use and press OK.

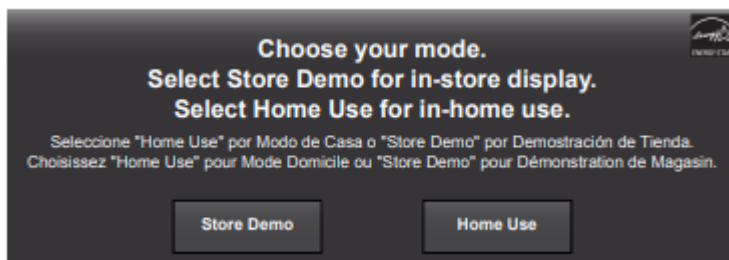 



5. Use the Arrow buttons on the remote to select your preferred language and press OK.

Follow the on-screen instructions to complete the First-Time Setup.

NOTE: If you need help, skipped a step, or would like to go back to the Guided Setup, see the Help Topics page.

— SELECT A LANGUAGE —

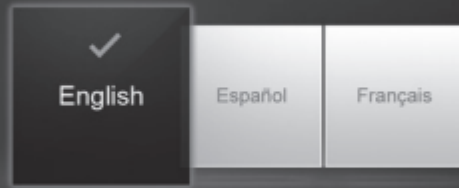

Press  to use English as the primary language.

HELP TOPICS



<p>The TV does not power on.</p>	<ul style="list-style-type: none"> • Verify that the power cord is securely connected to the AC socket on the TV and to a working electrical outlet. • Press the POWER button on the remote. If this does not power the TV on, press the POWER button on the TV. • If the TV still does not power on, plug the TV power cord into a different electrical outlet.
<p>The TV displays “No Signal.”</p>	<ul style="list-style-type: none"> • Verify that all devices connected to the TV are powered on. • Press the INPUT button on the remote and use the Arrow buttons to select the input to which your device is connected (TV, HDMI-1, HDMI-2, or COMP).
<p>There is a picture, but there is no sound.</p>	<ul style="list-style-type: none"> • Press the VOLUME UP button on the remote. The volume slider appears. • Press the MUTE button on the remote until the volume slider is blue, indicating that the volume is On. • Press MENU > Audio. Verify that the TV Speakers setting is On.
<p>There are black/ gray bars on the top/ bottom/sides of the screen.</p>	<ul style="list-style-type: none"> • Some television channels add black bars to the picture. • Press the WIDE button on the remote until the picture fills the screen, and press OK. • Refer to your connected device’s User Guide to adjust device video settings.



<p>How do I return to the Guided Setup app?</p>	<ul style="list-style-type: none"> • Press MENU > Guided Setup. Select a type of setup and press OK. The Guided Setup app appears. • To reset the TV to factory defaults, press MENU > System > Reset & Admin > Reset TV to Factory Defaults. Select Reset. Remember that all of your settings will be lost.
---	--

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

Your TV is designed and manufactured to operate within defined design limits. Misuse may result in electric shock or fire. To prevent your TV from being damaged, the following instructions should be observed for the installation, use, and maintenance of your TV. Read the following safety instructions before operating your TV. Keep these instructions in a safe place for future reference.

- To reduce the risk of electric shock or component damage, switch off the power before connecting other components to your TV.
- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.



- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Unplug the power cord before cleaning your TV.
- When moving your TV from an area of low temperature to an area of high temperature, condensation may form in the housing. Wait before turning on your TV to avoid causing fire, electric shock, or component damage.
- A distance of at least three feet should be maintained between your TV and any heat source, such as a radiator, heater, oven, amplifier etc. Do not install your TV close to smoke. Operating your TV close to smoke or moisture may cause fire or electric shock.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of your TV and to protect it from overheating, be sure these openings are not blocked or covered. Do not place your TV in a bookcase or cabinet unless proper ventilation is provided.
- Never push any object into the slots and openings on your TV cabinet. Do not place any objects on the top of your TV. Doing so could short circuit parts causing a fire or electric shock. Never spill liquids on your TV.
- Your TV should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- Do not apply pressure or throw objects at your TV. This may compromise the integrity of the TV. The manufacturer's warranty does not cover user abuse or improper installations.
- The power cord must be replaced when using different voltage than the voltage specified. For more information, contact your dealer.
- When connected to a power outlet, power is always flowing into your TV. To totally disconnect power, unplug the power cord.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- The wall socket should be installed near your TV and easily accessible.
- Only power of the marked voltage can be used for your TV. Any other voltage than the specified voltage may cause fire or electric shock.

- Do not touch the power cord during lightning. To avoid electric shock, avoid handling the power cord during electrical storms.
- Unplug your TV during a lightning storm or when it will not be used for long period of time. This will protect your TV from damage due to power surges.
- Do not attempt to repair or service your TV yourself. Opening or removing the back cover may expose you to high voltages, electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel.
- **WARNING:** Keep your TV away from moisture. Do not expose your TV to rain or moisture. If water penetrates into your TV, unplug the power cord and contact your dealer. Continuous use in this case may result in fire or electric shock.
- Do not use your TV if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair your TV yourself.
- Avoid using dropped or damaged appliances. If your TV is dropped and the housing is damaged, the internal components may function abnormally. Unplug the power cord immediately and contact your dealer for repair. Continued use of your TV may cause fire or electric shock.
- Do not install your TV in an area with heavy dust or high humidity. Operating your TV in environments with heavy dust or high humidity may cause fire or electric shock.
- Follow instructions for moving your TV. Ensure that the power cord and any other cables are unplugged before moving your TV.
- When unplugging your TV, hold the AC/DC power adapter, not the cord. Pulling on the power cord may damage the wires inside the cord and cause fire or electric shock. When your TV will not be used for an extended period of time, unplug the power cord.
- To reduce risk of electric shock, do not touch the connector with wet hands.
- Insert batteries in accordance with instructions. Incorrect polarities may cause the batteries to leak which can damage the remote control or injure the operator. Do not expose batteries to excessive heat such as sunshine, fire or the like.
- If any of the following occurs, contact the dealer:
 - The power cord fails or frays.
 - Liquid sprays or any object drops into your TV.
 - Your TV is exposed to rain or other moisture.
 - Your TV is dropped or damaged in any way.
 - The performance of your TV changes substantially.
- This apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

- The mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.
- Please use caution around the TV: pulling or pushing on the TV may cause the TV to tip or fall over resulting in personal injury and/or property damage.
- **WARNING:** Exposure to loud sounds can damage your hearing causing hearing loss and tinnitus (ringing or buzzing in the ears). with continued exposure to loud noises, ears may become accustomed to the sound level, which may result in permanent damage to hearing without any noticeable discomfort.
- Install the TV where it cannot be pulled, pushed or knocked over.
- Do not allow children to hang onto the product.
- **WARNING:** This product includes small parts and cables that may present a choking hazard to young children, and the packaging may cause suffocation. Always keep the cables, parts and packaging out of the reach of young children.
- Store the accessories (remote, batteries, etc.) in a location safely out of the reach of children.
- The American Academy of Pediatrics discourages television viewing for children younger than two years of age.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating instructions in the literature accompanying the product.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.