


Before Operation


Feature Diagram

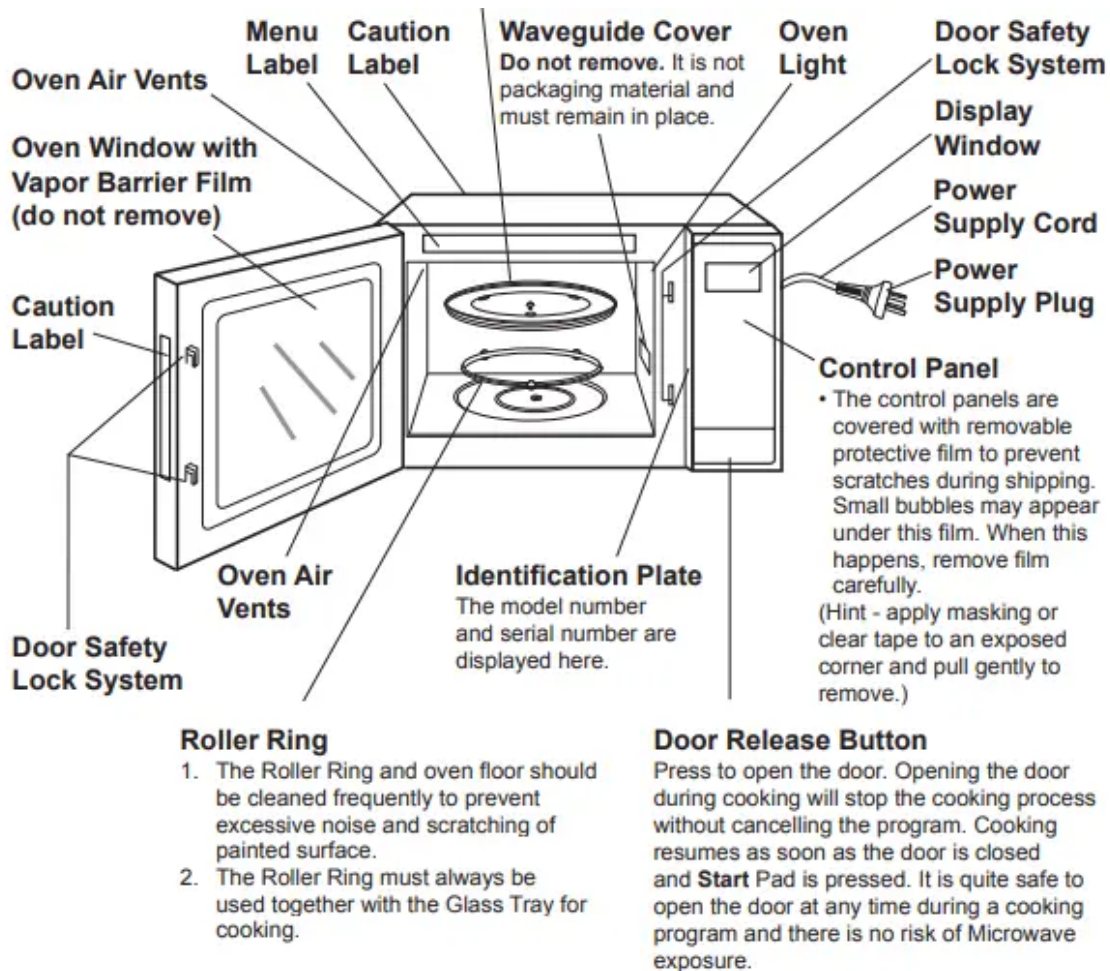

Oven Light: Oven Light will turn on during cooking and also when door is opened.

NOTE: The above illustration is for reference only

Control Panel

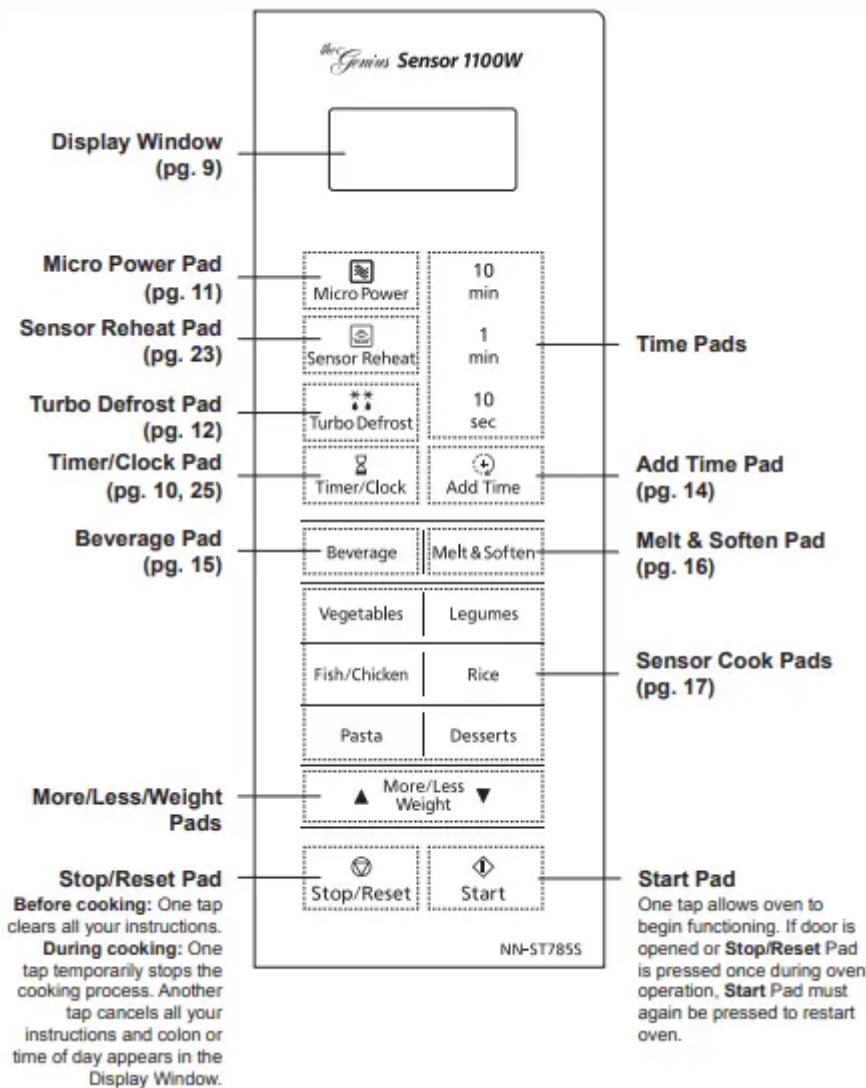

Beep Sound

When pad is pressed correctly, a beep sound will be heard. If a pad is pressed and no beep is heard, the unit does not or cannot accept the instruction. The oven will beep twice between programmed stages. At the end of any complete programme, the oven will beep five times.

NOTE: If an operation is set and Start Pad is not pressed, after 6 minutes, the oven will automatically cancel the operation. The display will revert back to clock or colon mode.

Let's Start To Use Your Oven!

1 Plug in

Plug into a properly earthed electrical outlet. "88:88" appears in the Display Window. (This will



immediately cease when any pad is pressed.)

 
 
2 Open Door

Open the door and place container with food in a dish on Glass Tray in the oven. Then close the door.

3 Select Power Level



eg. P7

Press Power Level Pad four times. (see page 11 for Micro Power chart)



4 Set Time

 e.g. 12 minute 20 seconds Press Time Pads

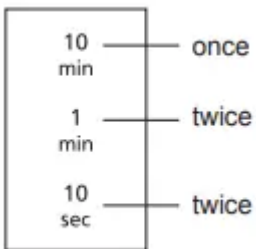


5 Press

Cooking will start.


The time in the Display Window will count down.


Display Window

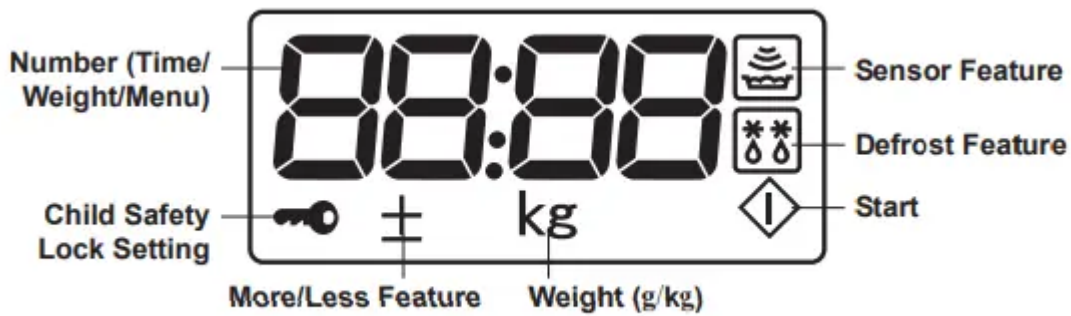

To Set Clock

You can use the oven without setting the clock.

 
1 Press  twice



Colon will blink in Display Window.

2 Enter Time of Day

Enter time of day using Time Pads e.g. 12:35

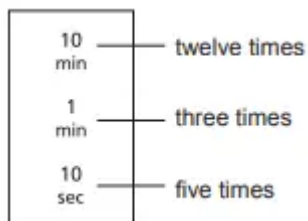

Time appears in the Display Window, colon is blinking. Verify time of day in the Display Window.



3 Press 



Colon stops blinking; time of day is entered and locked into Display Window.

NOTES:


1. Oven will not operate while colon is still blinking.
2. To reset time of day, repeat step 1 through 3.
3. Clock is a 12 hour display. There isn't a.m. or p.m. setting.

4. The clock will keep the time of day as long as oven is plugged in and electricity is supplied.
5. Maximum time available is 12:59. Clock is 12 hour only. One o'clock will be displayed as 1:00 not 13:00.


To Use Child Safety Lock

This feature allows you to prevent operation of the oven by a young child; however, the door will open. You can set Child Safety Lock when colon or time of day is displayed.

To set

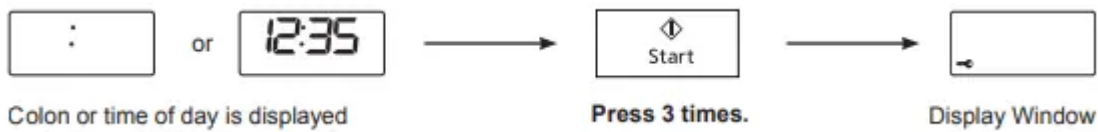

To cancel

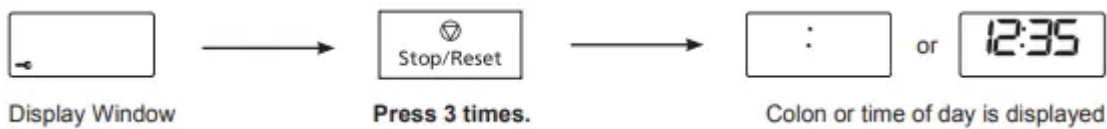

NOTE: To set or cancel child safety lock, Start Pad or Stop/Reset Pad must be pressed 3 times within 10 seconds.

To Use Micro Power and Time


1 Select Power Level

Press Micro Power Pad until your desired power level appears in the Display Window. (see chart below) **Note:** When selecting P10 on the first stage, you can start from step 2.



2 Set Cooking Time

Enter cooking time using Time Pads. Maximum Length of cooking time: High power: up to 30 minutes, other powers: up to 99 minutes and 50 seconds for a single stage

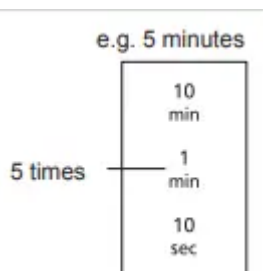













Cooking will start. The time in the Display Window will count down.

For more than one stage cooking, Repeat steps 1 & 2 above then press Start. The maximum number of stages for cooking is 3. The oven will beep twice between stages. (For further information, refer to page 24)

Micro Power:

         The Power Level Pad gives you a selection of different power levels representing decreasing amounts of microwave energy, used for cooking foods at different speeds. e.g. The lower the micro power setting, the more evenly the food cooks, although it will take a little longer. To select the correct power level for cooking different foods, refer to the chart below.

Press	POWER LEVEL	WATTAGE	DISPLAY	EXAMPLE OF USE
1x	P10	1100 W		Boil water. Cook vegetables, rice, pasta and noodles. Reheating.
2x	P9	1000 W		Cook fresh fruits.
3x	P8	900 W		Cook cakes, desserts. Heat milk.
4x	P7	800 W		Cook pork, whole chicken and chicken pieces.
5x	P6	700 W		Cook beef, lamb and eggs. Melt butter.
6x	P5	600 W		Cook meatloaves. Melt chocolate.
7x	P4	400 W		Cook fish and seafood.
8x	P3	300 W		Defrost meat, poultry and seafood.
9x	P2	200 W		Simmer soups, stews and casseroles (less tender cuts).
10x	P1	100 W		Keep cooked foods warm, simmer slowly.

To Defrost

To Defrost using Turbo Defrost

This feature allows you to defrost meat, poultry and seafood automatically by just setting the weight of the food.



until the desired weight appears in the Display Window.

The shape and size of the food will determine the maximum weight the oven can accommodate. The recommended maximum weight of food depends on the oven cavity size. Weight must be



programmed in kilograms and tenths of a kilogram (0.1 kg ~ 3.0 kg). For best results, the minimum recommended weight is 0.2 kg.




Defrost time appears in the Display Window and begins to count down.

NOTES:

1. After you select the Turbo Defrost feature, you can also press More/Less/Weight Pads to select weight before pressing Start.
2. The oven will beep once or twice during the total defrosting time. This indicates that food should be turned, broken apart or removed. After attending to food, close door and press Start to resume defrosting.
3. For further information, refer to next page.

To Defrost by Micro Power and Time Setting

This feature allows you to defrost meat, poultry and seafood by P3 and time.

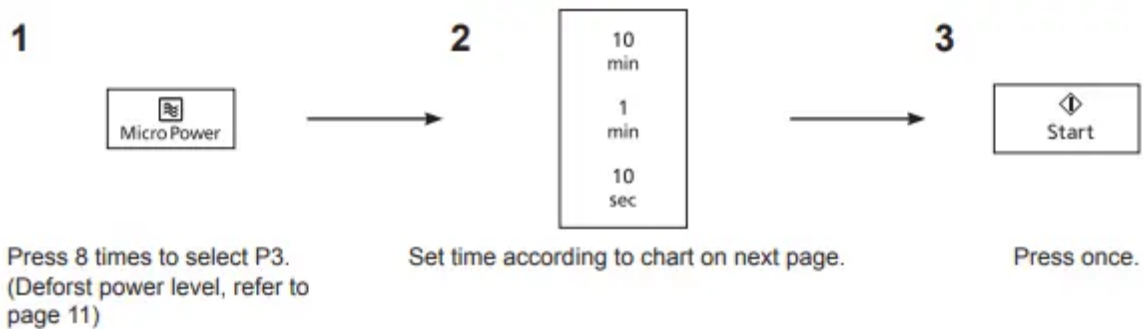

NOTE: Opening the door and taking out the defrosted parts during the operating time is recommended. Turn over, stir or rearrange the parts which are still in icy.

Before Requesting Service

THESE THINGS ARE NORMAL

The oven causes interference with my TV.

- Some radio, TV, Wi-Fi, cordless telephone, baby monitor, blue tooth or other wireless equipment interference might occur when you cook with the microwave oven. This interference is similar to the interference caused by small appliances such as mixers, vacuums, blow dryers, etc. It does not indicate a problem with your oven.

Steam accumulates on the oven door and warm air comes from the oven vents.

- During cooking, steam and warm air are given off from the food. Most of the steam and warm air are removed from the oven by the air which circulates in the oven cavity.



However, some steam will condense on cooler surfaces such as the oven door. This is normal.

I accidentally ran my microwave oven without any food in it.

- Running the oven empty for a short time will not damage the oven. However, we do not recommend this.

Oven will not turn on.

- The oven is not plugged in securely.
 - Remove plug from outlet, wait 10 seconds and re-insert.
- Circuit breaker or fuse is tripped or blown.
 - Reset circuit breaker or replace fuse.
- There is a problem with the outlet.
 - Plug another appliance into the outlet to check if the outlet is working.

Oven will not start cooking

- The door is not closed completely.
 - Close the oven door securely.
- Start Pad was not pressed after programming
 - Press Start Pad.
- Another program has already been entered into the oven.
 - Press Stop/Reset Pad to cancel the previous program and program again.
- The program has not been entered correctly.
 - Program again according to the Operating Instructions.
- Stop/Reset Pad has been pressed accidentally.
 - Program oven again.

When the oven is turning on, there is noise coming from Glass Tray.

- The roller ring and oven bottom are dirty.
 - Clean these parts according to care of your oven (See next page).



“” appears in the Display Window.

- The Child Lock was activated by pressing Start Pad 3 times.
 - Deactivate Lock by pressing Stop/Reset Pad 3 times.

“H97”, “H98” or “H00” appears in the display window.


- The display indicates a problem with microwave generation system.
 - Contact the specified service centre.

If it seems there is a problem with the oven, contact an authorized Service Centre

Care of your Microwave Oven

BEFORE CLEANING: Unplug at socket of the oven. If impossible, leave oven door open to prevent oven from accidentally turning on.

AFTER CLEANING: Be sure to replace the Roller Ring and Glass Tray in the proper position and press Stop/Reset Pad to clear the Display Window.

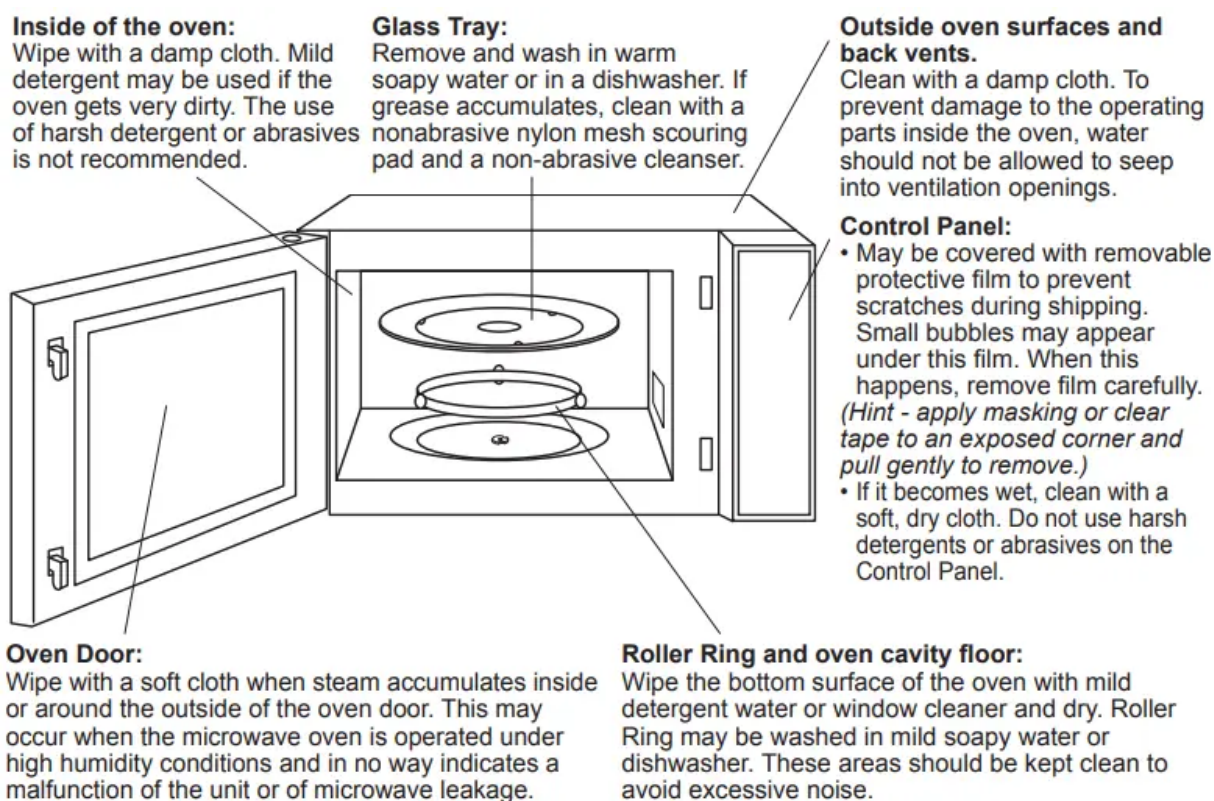

Note:

1. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
2. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced

Technical Specifications

Power Supply:	230 V - 240 V, 50 Hz
Power Consumption*:	4.4 A 1000 W
Power Requirement: (Maximum)	7.5 A 1800 W
Output*:	1100 W
Outside Dimensions (W x H x D):	555 mm (W) x 304 mm (H) x 493 mm (D)
Oven Cavity Dimensions (W x H x D):	398 mm (W) x 210 mm (H) x 470 mm (D)
Overall Cavity Volume:	44 L
Glass Tray Diameter:	Ø380 mm
Operating Frequency:	2450 MHz
Uncrated Weight:	Approx. 14.3 kg

Trim Kit (Australia and New Zealand only)

Model Number	NN-TK712SSQP
Outside Dimensions	596 mm (W) x 410 mm (H)
Cabinet Opening	600 mm (W) x 395 mm (H) x 533 mm (D)

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.