

## **ENERGY SAVING TIPS**

- Install the refrigerator in the coolest part of a dry and ventilated room, out of direct sunlight and away from heating ducts or registers. Do not place the refrigerator next to heat-producing appliances such as a range, oven or dishwasher.
- Level the refrigerator so the door closes tightly.
- Do not overcrowd the refrigerator or block cold air vents. Doing so causes the refrigerator to run longer and use more energy. Shelves should not be lined with aluminum foil, wax paper or paper toweling. Liners interfere with cold air circulation, making the unit less efficient.
- Wipe bottles and containers dry before placing them in the refrigerator. This cuts down on moisture build-up inside the unit.
- Organize the refrigerator to reduce door openings. Remove as many items as needed at one time and close the door as soon as possible.

## **TEMPERATURE CONTROLS**

### **Cool Down Period**

For best performance, allow 4 hours for the refrigerator to cool down completely. The refrigerator will run continuously for the first several hours.

### **Temperature Control**

The temperature control is located inside the refrigerator and in the freezer compartment on some models. The temperature is factory preset to provide satisfactory food storage temperatures. However, the temperature control is adjustable to provide a range of temperatures for your personal satisfaction.

To adjust the temperature colder, turn the control knob toward the “Colder” setting or higher number for the fresh food control and the slide control toward the “Colder” setting for the freezer control. After each movement, allow 24 hours for the unit to adjust. If the unit is still not cold enough, repeat until desired temperature is achieved.

To adjust the temperature warmer, turn the control knob toward the “Cold” setting or lower number for the fresh food control and the slide control toward the “Cold” setting for the freezer control. After each movement, allow 24 hours for the unit to adjust. If the unit is still not warm enough, repeat until desired temperature is achieved.

# FEATURES

## Double Door Model

1. Freezer compartment shelf
2. Freezer temperature control knob (some models}
3. Refrigerator temperature control knob
4. Refrigerator compartment shelf
5. Vegetable bin
6. Freezer door rail
7. Can rack
8. Bottle rack (short)
9. Bottle rack (long)
10. Adjustable feet

## Single Door Model

1. Thermostat
2. Glass shelf (2)
3. Crisper
4. Door rack
5. Can rack
6. Adjustable foot

## Adjustable Interior Shelves

Multi-position adjustable interior shelves can be moved to any position for larger or smaller bottles. The shipping spacers that stabilize the shelves for shipping should be removed and discarded.

## Slide-Out Crisper (Some Models)

A Slide-Out Basket (some models) located at the bottom of the refrigerator, provides separate storage space for items that are difficult to store on refrigerator shelves. To remove the basket, pull out and lift up.

## Interior Light (Some models)

The light comes on automatically when the door is opened. To replace the light bulb, turn the temperature control to OFF and unplug the electrical cord. Replace the old bulb with a bulb of the same wattage.

## CARE AND CLEANING

### Cleaning the Inside

Wash inside surfaces of the refrigerator with a solution of two tablespoons of baking soda in one quart (1.136 liters) warm water. Rinse and dry. Wring excess water out of the sponge or cloth when cleaning in the area of the controls, or any electrical parts.

Wash the removable parts with the baking soda solution mentioned above, or mild detergent and warm water. Rinse and dry. Never use metallic scouring pads, brushes, abrasive cleaners, or alkaline solutions on any surface. Do not wash removable parts in a dishwasher.

### Cleaning the Outside

Wash the cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

### Vacation and Moving Tips

#### Vacations:

If the refrigerator will not be used for several months:

- Remove all food and unplug the power cord.
- Clean and dry the interior thoroughly.
- Leave the refrigerator door open slightly, blocking it open if necessary, to prevent odor and mold growth.

**Moving:** When moving the refrigerator, follow these guidelines to prevent damage:

- Disconnect the power cord plug from the wall outlet.
- Remove food and clean the refrigerator.
- Secure all loose items by taping them securely in place to prevent damage.
- In a moving vehicle, secure the refrigerator in an upright position to prevent movement. Also, protect the outside of the refrigerator with a blanket or similar item.

## DOOR REVERSAL INSTRUCTIONS

Reversing the door swing should be performed by a qualified person. Before you begin, ensure that the appliance is unplugged and empty. Adjust the two leveling legs on the front of the refrigerator to their highest level by turning counter clockwise. It is recommended that two (2) people perform this task.

### TOOLS REQUIRED

- Phillips Head Screwdriver

- Flat bladed screwdriver

Note: To remove the door it is necessary to tilt the appliance backward.

You should rest the refrigerator against a stable, solid object and place something under the rear rollers so that it will not slip during the door reversal process.

DO NOT lay the appliance completely flat as this may damage the coolant system.

### **First Step**

### **Second Step**

Lift the freezer door up and away from the appliance.

### **Third Step**

Remove the screws from the middle hinge. Lift the refrigerator door up and away from the appliance.

### **Fourth Step**

Remove the bottom hinge by removing the leveling leg and screws on the bottom of the refrigerator cabinet. To reattach the hinge on the opposite side of the cabinet, first remove the leveling leg. Reattach the hinge using the screws that were previously removed. Reattach in both leveling legs.

### **Fifth Step**

Freezer : Remove the pin assembly door hinge from the bottom of the freezer and refrigerator doors. On the opposite side, attach the replacement pin assembly (located in the plastic bag with it in the Use and Care Manual) with a screwdriver. Note:

You must use the screw from the pin assembly that is removed in this step when attaching the new assembly.

### **Sixth Step**

Place the refrigerator door on the bottom hinge. Ensure the door is aligned horizontally and vertically, hinge and that the gasket seals on all sides before attaching the middle hinge. Attach the middle hinge using a screwdriver.

### **Seventh Step**

Be Place the freezer door on the middle hinge. Ensure that the door is aligned horizontally and vertically, and that the gasket seals on all sides before attaching the top hinge. Attach the top hinge and replace the hinge cover.

# BEFORE YOU CALL

## REFRIGERATOR OPERATION

### Refrigerator does not run.

- Refrigerator is plugged into a circuit that has a ground fault interrupt.
  - Use another circuit. If you are unsure about the outlet, have it checked by a certified technician.
- Temperature control is in the OFF position.
  - See Setting the Temperature Control section.
- Refrigerator may not be plugged in, or plug may be loose.
  - Ensure plug is tightly pushed into outlet.
- House fuse blown or tripped circuit breaker.
  - Check/replace fuse with a 15 amp time-delay fuse. Reset circuit breaker.
- Power outage.
  - Check house lights. Call local Electric Company.

### Refrigerator runs too much or too long.

- Room or outside weather is hot.
  - It's normal for the Refrigerator to work harder under these conditions.
- Refrigerator has recently been disconnected for a period of time.
  - It takes 4 hours for the Refrigerator to cool down completely.
- Large amounts of warm or hot food has been stored recently.
  - Warm food will cause Refrigerator to run more until the desired temperature is reached.
- Door is opened too frequently or too long.
  - Warm air entering the Refrigerator causes it to run more. Open doors less often.
- Refrigerator door may be slightly open.
  - See "DOOR PROBLEMS" section.
- Temperature control is set too low,
  - Turn control knob to a warmer setting. Allow several hours for the temperature to stabilize.

- Refrigerator gasket is dirty, worn, cracked, or poorly fitted.
  - Clean or change gasket. Leaks in the door seal will cause Refrigerator to run longer in order to maintain desired temperature.

#### **Interior Refrigerator temperature is too cold**

- Temperature control is set too low,
  - Turn the control to a warmer setting. Allow several hours for the temperature to stabilize.

#### **Interior Refrigerator temperature is too warm.**

- Temperature control is set too warm
  - Turn control to a colder setting. Allow several hours for the temperature to stabilize. warm.
- Door is opened too frequently
  - Warm air entering the Refrigerator causes it to run more. or too long. Open doors less often.
- Door may not be seating
  - See "DOOR PROBLEMS" section. properly.
- Large amounts of warm or hot food has been stored recently.
  - Warm food will cause Refrigerator to run more until the desired temperature is reached.
- Refrigerator has recently been disconnected for a period of completely. time.
  - It takes 4 hours for the Refrigerator to cool down

#### **Refrigerator external surface temperature is warm,**

- The external Refrigerator walls can be as much as 30°F warmer than room temperature.
  - This is normal while the compressor works to transfer heat from inside the Refrigerator cabinet.

## **SOUND AND NOISE**

#### **Louder sound levels when Refrigerator is on.**

- Modern refrigerators have increased storage capacity and more stable temperatures. They require a high efficiency compressor
  - This is normal. When the surrounding noise level is low, you might hear the compressor running while it cools the interior,

### **Longer sound levels when compressor comes on.**

- Refrigerator operates at higher pressures during the start of the ON cycle,
  - This is normal. Sound will level off or disappear as Refrigerator continues to run.

### **Popping or cracking sound when compressor comes on.**

- Metal parts undergo expansion and contraction, as in hot water pipes.
  - This is normal. Sound will level off or disappear as Refrigerator continues to run.

### **Boiling or gurgling sound, like water boiling.**

- Refrigerant (used to cool Refrigerator) is circulating throughout the system.
  - This is normal.

### **Vibrating or rattling noise.**

- Refrigerator is not level. It rocks on the floor when it is moved slightly.
  - Level the unit. Refer to leveling instructions in the "Installation" section.

### **Snapping sound.**

- Cold control turning the Refrigerator OFF and ON.
  - This is normal.

## **WATER/MOISTURE/FROST INSIDE REFRIGERATOR**

### **Moisture forms on inside of Refrigerator walls,**

- Weather is hot and humid.
  - This is normal.
- Door may not be seating properly,
  - See "DOOR PROBLEMS" section.
- Door is kept open too long, or opened too frequently.
  - Open the door less often.

## **WATER/MOISTURE/FROST OUTSIDE REFRIGERATOR**

### **Moisture forms on outside of Refrigerator.**

- Door may not be seating properly, causing the cold air from inside the unit to meet warm moist air from outside.
  - See "DOOR PROBLEMS" section.

## **ODOR IN REFRIGERATOR**

### **Odors in Refrigerator.**

- Interior needs to be cleaned.
  - Clean interior with sponge, warm water, and baking soda.

## **DOOR PROBLEMS**

### **Door will not close,**

- Refrigerator is not level. It rocks on the floor when it is moved slightly.
  - This condition may force the cabinet out of square and misalign the door. Refer to “Leveling” in the “Installation” section.

## **LIGHT BULB IS NOT ON**

### **Light bulb is not on.**

- Light bulb is burnt out.
  - Follow instructions under “Interior Light” in the “FEATURES” section.
- No electric current is reaching the refrigerator.
  - See “Installation” section.

## **MAJOR APPLIANCE WARRANTY**

Your appliance is covered by a one year limited warranty. For one year from your original date of purchase, Electrolux will pay all costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions.

### **Exclusions**

This warranty does not cover the following:

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside the USA or Canada.
3. Rust on the interior or exterior of the unit.
4. Products purchased “as-is” are not covered by this warranty.
5. Food loss due to any refrigerator or freezer failures.
6. Products used in a commercial setting.

7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.
8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
9. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.
10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts.
11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc.
13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

#### **DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES**

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY, SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

#### **If You Need Service**

Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.



This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

