







User manual Remote Control Samsung AA59-00764B



	Original		Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>> / Preset+
	AD/Subt		Subtitle / EQ
	P.Size		Zoom / Size
	E-Manual		D.Menu / Top
	Tools		Setup / OPT / Menu
	TTX/MIX		Text / Goto Tools
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down



 
	PRE-CH		Back / Return
	Vol+		Vol+
	CH List Smart / List		List Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Media.P		Display / Media
	PR-		CH- / Page
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat
	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	Return		Shift + Back / Return



 


Viewing the Remote Control

This is a special remote control for the visually impaired persons and has Braille points on the Power, Channel, and Volume buttons.

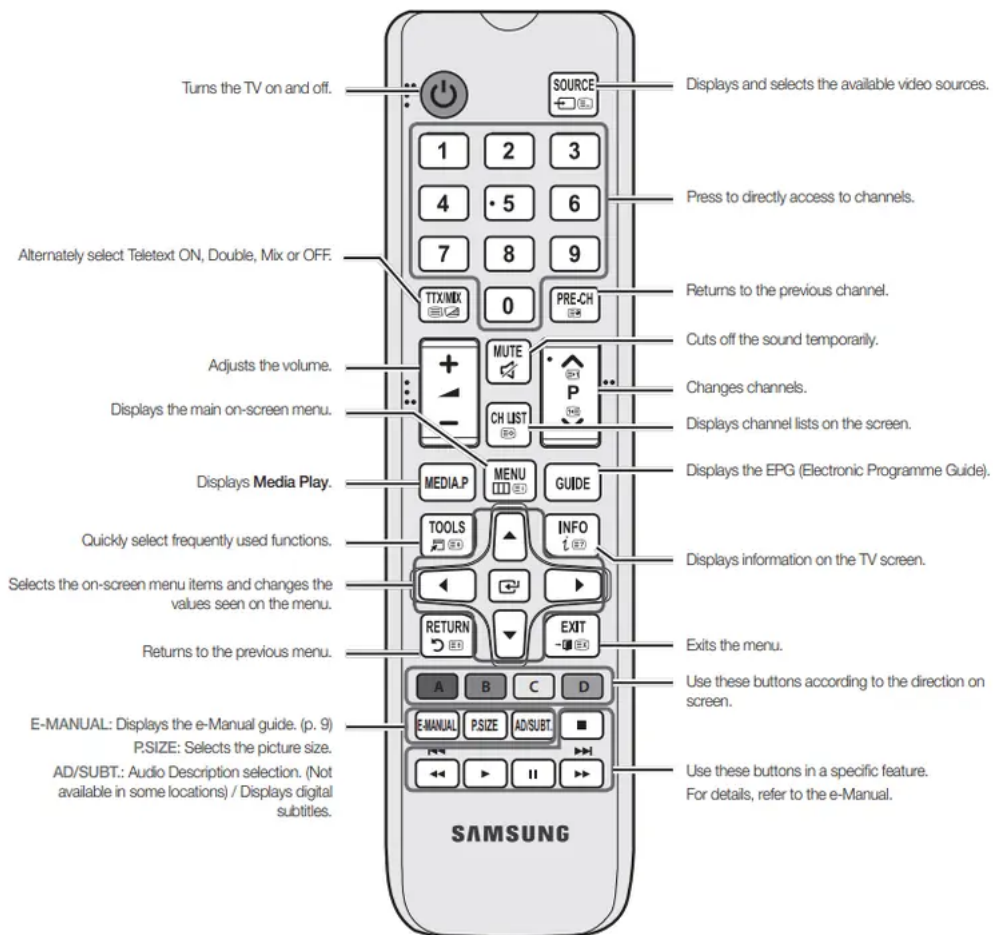

 
Installing batteries (Battery size: AAA)

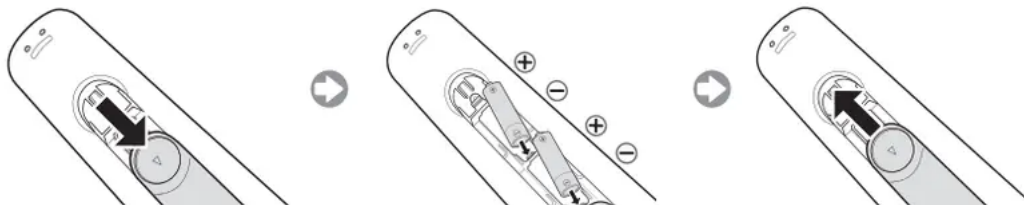



 
 


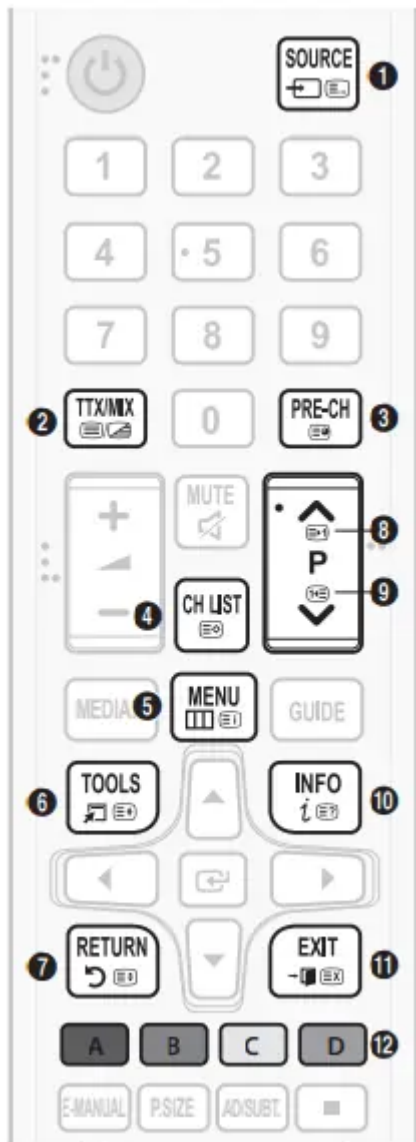

 
 

 
Teletext Feature

The index page of the Teletext service gives you information on how to use the service. For Teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.

👉 You can change Teletext pages by pressing the numeric buttons on the remote control.



1.  (mode): Selects the Teletext mode (LIST/FLOF). If pressed during LIST mode, switches the mode to List save mode. In List save mode, you can save a Teletext page into a list using the  (store) button.
2.  (Teletext on/mix/off): Activates the Teletext mode for the current channel. Press the button twice to overlap the Teletext mode with the current broadcasting screen. Press it one more time to exit teletext.
3.  (sub-page): Displays the available sub-page.
4.  (store): Stores the Teletext pages.
5.  (index): Displays the index (contents) page at any time while you are viewing Teletext.

6.  (size): Displays the teletext on the upper half of the screen in double-size. To move the text to the lower half of the screen, press it again. For normal display, press it once again.
7.  (hold): Holds the display at the current page, in the case that there are several secondary pages that follow automatically. To undo, press it again.
8.  (page up): Displays the next Teletext page.
9.  (page down): Displays the previous Teletext page.
10.  (reveal): Displays the hidden text (answers to quiz games, for example). To display the normal screen, press it again.
11.  (cancel): Shrinks the Teletext display to overlap with the current broadcast.
12. Colour buttons (red, green, yellow, blue): If the FASTEXT system is used by the broadcasting company, the different topics on a Teletext page are colour-coded and can be selected by pressing the coloured buttons. Press the colour corresponding to the topic of your choice. A new colour coded page is displayed. Items can be selected in the same way. To display the previous or next page, press the corresponding coloured button.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.