 
 
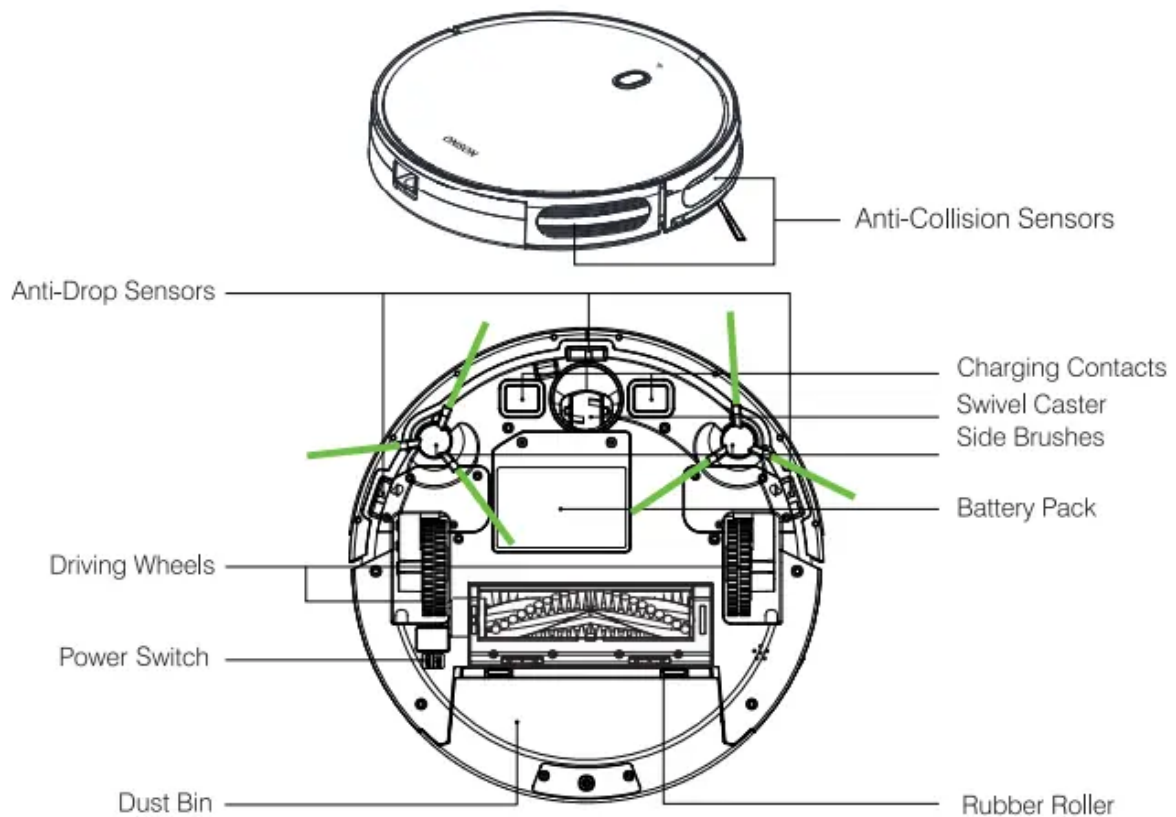 


Product Diagram

 
Robot

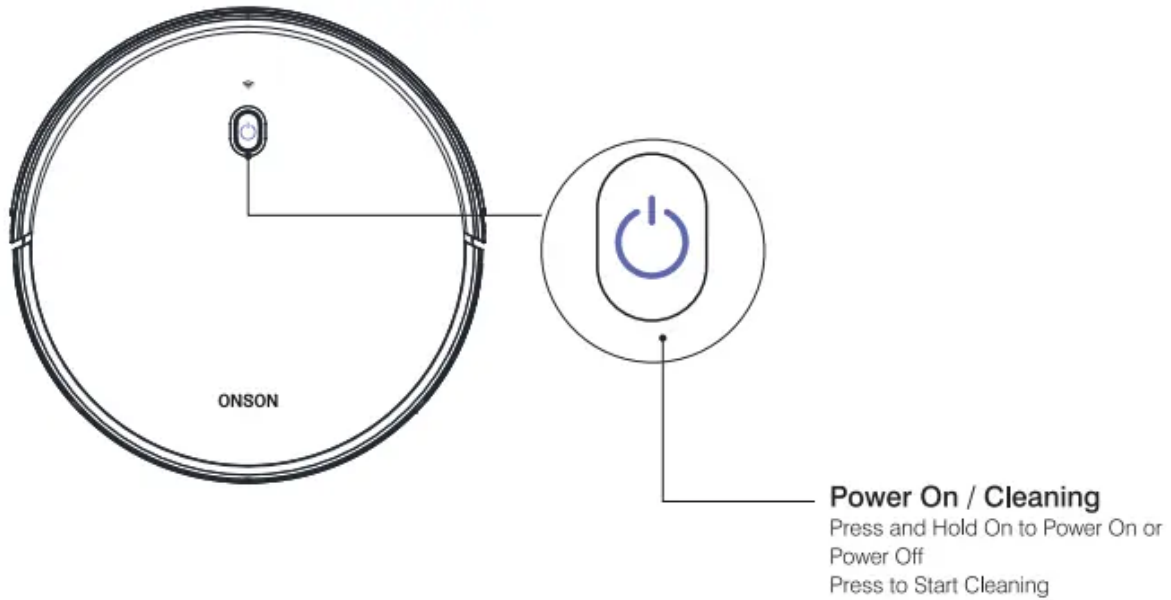

Accessories

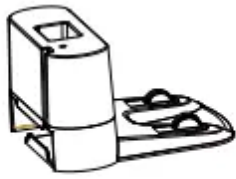

Charging Dock



Adapter



Remote Control



Sponge Filter and HEPA



Brush



4 x Side Brushes

 


Planting Brush




Battery (remote control)

Charging Dock


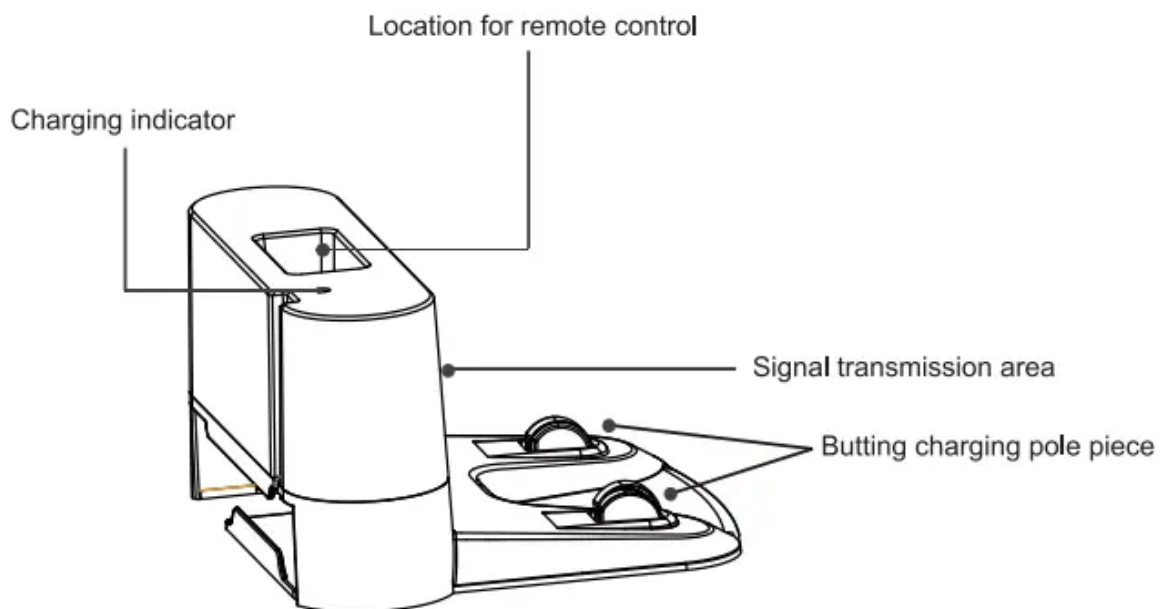


Remote Control


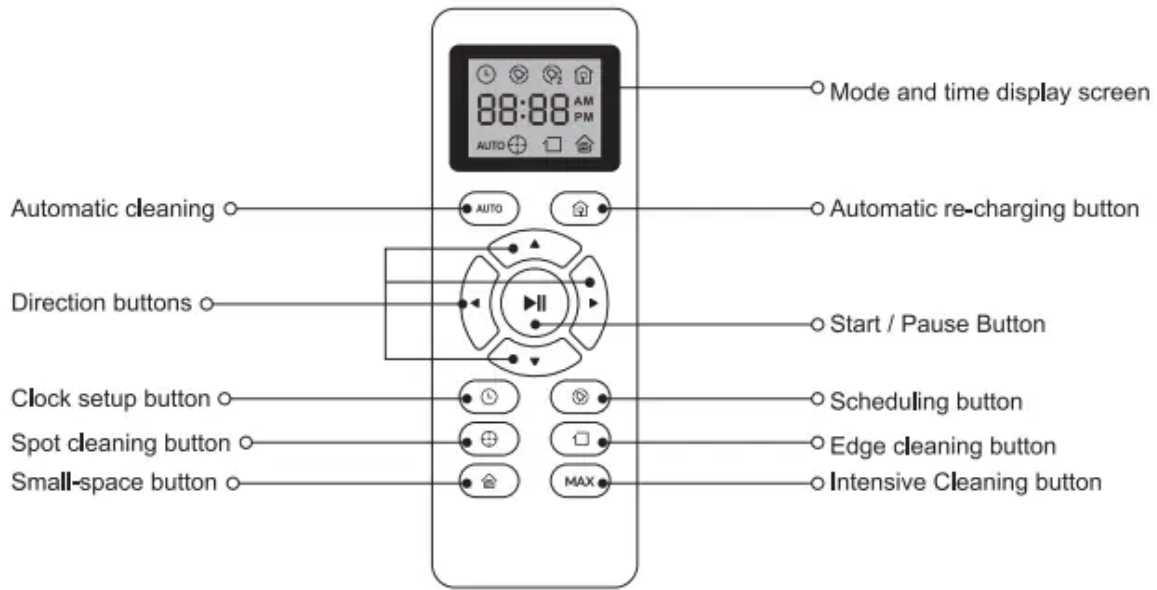 


Operating and Programming

  Note Before Cleaning

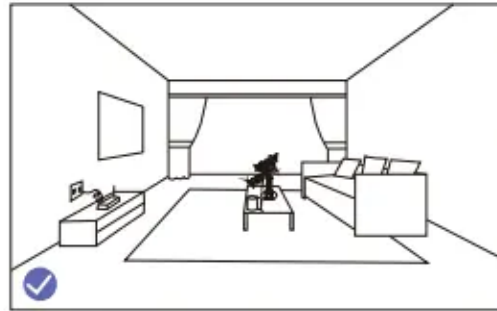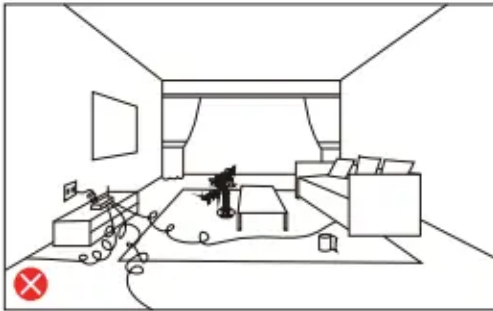

  Before using Robot, pick up objects like clothing, loose papers, pull cords for blinds or curtains, power cords, and any fragile objects. If the Robot passes over a power cord and drags it, there is a chance an object could be pulled off a table or shelf.

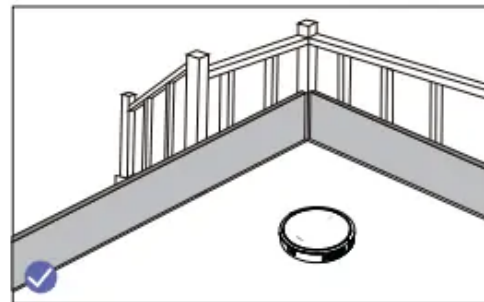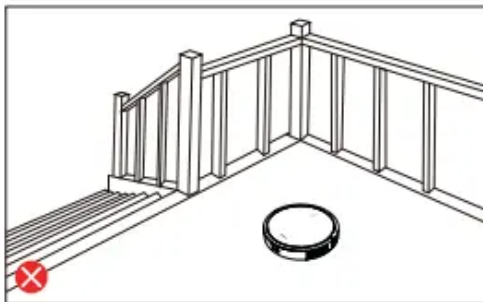


If the room to be cleaned contains a balcony, a physical barrier should be used to prevent access to the balcony and ensure safe operation.

Quick Start

1. Plug in the Charging Dock and take the rest wire into the trunking at The bottom of Charging Dock.

 
Note: Didn't put the rest wire into the trunking may stuck the Robot while Charging or Cleaning.

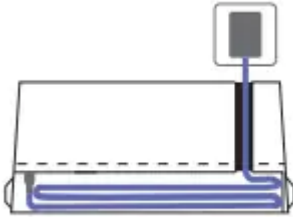

2. Charging Dock Position


Place the charging Dock again the wall & make sure the place is open & uncluttered area leaving at least

 - 2 meters (6.5 feet) in front of the charging Dock
- 1 meters (2.3 feet) on both sides of the charging dock

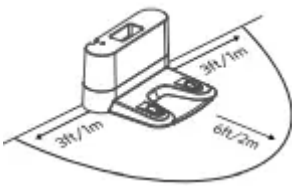


3. Install Side Brushes

 Attach side brushes to the bottom of By pressing a brush into each slot with the matching color until it clicks.

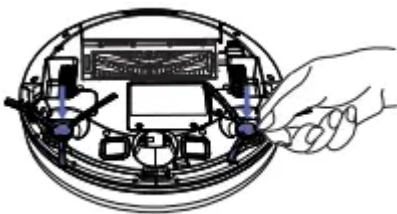



4. Aactivate the Robot

Place onto the Charging Dock. making sure the metal charging contacts on the charging Dock match up with those underneath the robot

If successful you will hear a series of tones, once the  Power button illuminates is ready for use.



5. Start Cleaning Cycle

 
- Press  the power button Once to wake up the robot
- Press  the power button again to start a cleaning cycle

(or press the  button on Remote control)





If its battery gets low before finishing a cleaning cycle, robot Returns to the Charging Dock to recharge.

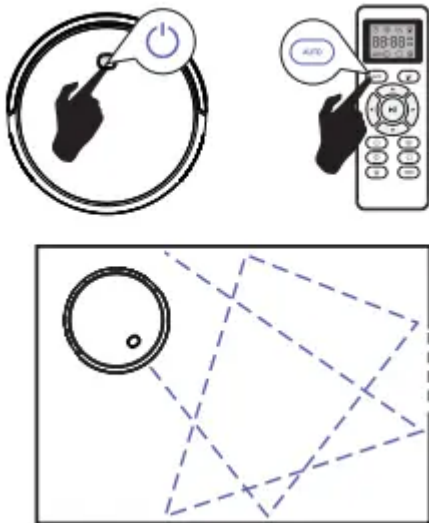If the Charging Dock is inaccessible. Robot will not be able to recharge. please place the robot manually on.

 
Charging Dock for charging. (Refer Activate the Robot)




6. Pause

- To pause the robot during a cleaning cycle press the  button or press the  button on Remote control
- To resume the cleaning cycle, press  button again.
- To send robot back to The Charging Dock, press  button.

Note: The actions listed above can also be managed from the Remote control

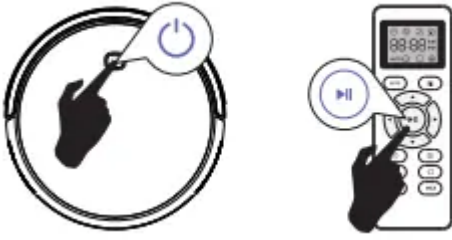

7. Power OFF

- To end the cleaning cycle and put robot in standby mode. Press and hold  button until robot's indicators turn off.



How Cleans your home

 
J10C is designed to Intelligently navigate and clean an entire level of your home. a multifunctional function robot with cleaning Sweeping, Vacuuming, Wet/Dry mopping for your home.

1. Avro Cleaning


At the start of a cleaning cycle, will map out your home and cleaning them efficiently.

 
At various times throughout the cleaning cycle, touches up around the edges of the room, as well as chair legs and other furniture.

Once finishes its cleaning cycle, returns to the Charging Dock recharge.

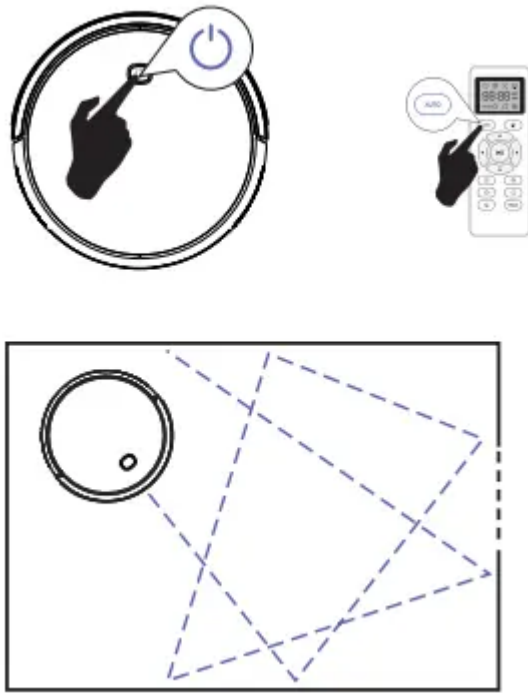


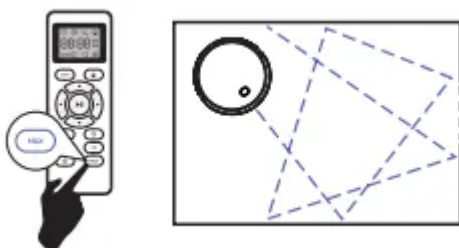 
2. Spot Cleaning

When you select Spot Cleaning, robot intensely cleans a localized area by spiraling outward about 3 feet (1 meter) in diameter and then spiraling inward to where it started. When Spot Cleaning Robot boosts its vacuum power to provide the best cleaning possible where you need it. To use Spot Cleaning, place robot on top of the localized debris and press  (Spot) on the Remote control.

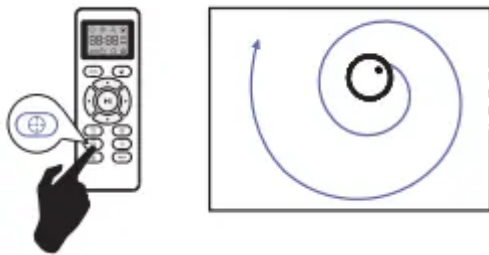


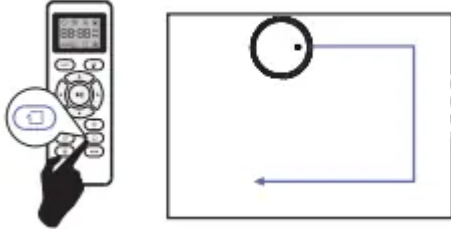 
3. Max vacuuming Cleaning

Robot increases its vacuum power to provide a deeper clean when press the  button on Remote control. Max Vacuuming Cleaning is Off by default.



4. Edge Cleaning

Alter robot fishes cleaning the open areas of your floor, it uses Edge Clean to ensure that it has cleaned along walls and around furniture Legs. If you prefer a quicker edge cleaning, press the  button on Remote Control

 



Cleaning Schedule

Robot has cleaning schedule settings which allow you to customize when Robot cleans your home. These settings are available only through the Remote Control



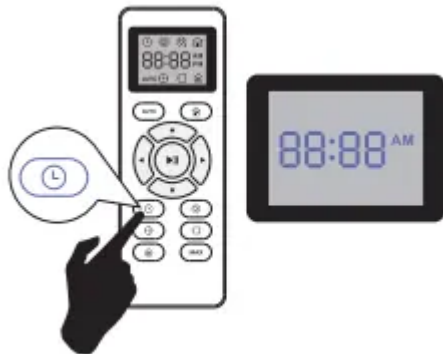

Note: Please make sure the Rate Control near by the Robot while setting the Clocks Schedule

 
1. Set the Remote Control's Clock




Prees  button on Remote Control, and then to hour section begins flash display setting window.




Prees  or  button to select the desires figures. Press the of  or  button to select the minute or hour section.

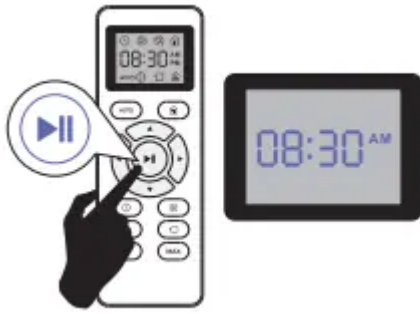






And then press the  button, the Robot will "BEEP" when the clock setting completed.

 
2. Sting Charing Schedule

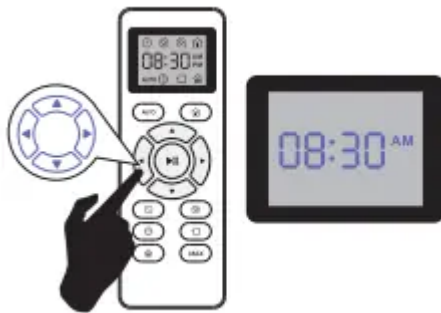


Press  button on Remote Control, and then the hour section begins to Hash in the Cleaning Schedule display setting window.



 
Press  or  button to select the desires figures. Press the of  or  button to select the minute or hour section.

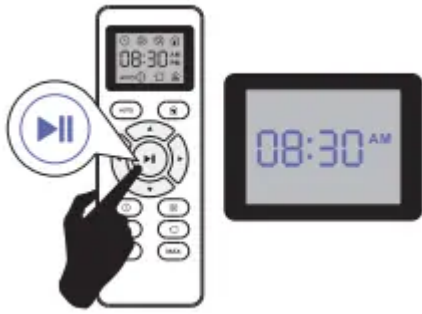

And then press the  button, the Robot will "BEEP" when the clock setting completed.

3. Cancel the Cleaning Schedule

Press and hold  button approximately 4 seconds on Remote Control, the Robot will "BEEP" twice when the Cleaning Schedule process cancel completed



Regular Robot Care

 
To keep robot tuning at peak performance pert the flowing care procedures. you note robot picking UP less doors from your fear then empty the bin clean the filter and clean the extractors

Emptying Robot's Bin

1. Press bin release button to remove bin




2. Open bin door to empty bin.

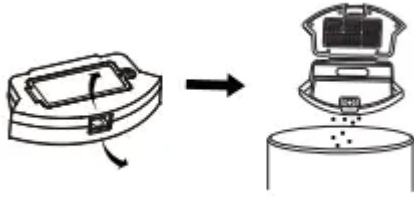

Cleaning Robot's Filter

 1. Remove filter grasping the white tab

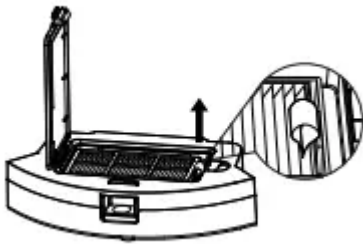

2. Shake off debris by tapping the filter against your trash container.



Cleaning Robot's Floor Tracking Sensor

 
Use a clean dry microfiber or soft cotton cloth to wipe any debris that has accumulated in the round sensor opening on the right side of the bottom surface.

Do not spray cleaning solution directly into the sensor Opening.



Cleaning Robot's Extractors


1. Use a coin or small screwdriver to remove the screw, remove the extractor frame, and obstructions

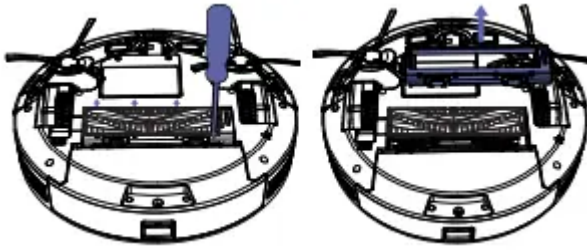

2. Remove the extractors. Remove any hair or debris that has collected underneath the caps and around the axles.



 3. Clear Robot's Vacuum Path

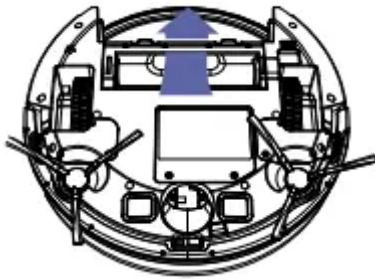

4. Reinstall the extractors, Match the color and shape of the extractor pegs with the color and shape of the extractor icons on the cleaning head module.



Battery and Charging / Information

Lithium I-on Battery

Important Lithium-ion batteries and products that contain lithium-ion batteries are subject to stringent transportation regulations. If you need to ship this product (with the battery included) for service, travel, or any other reason, you **MUST** comply with the following shipping instructions:

- Remove the lithium-ion battery from the product
- Reinstall the battery (with the tape on it) in the product and secure the battery door

- Package the product in its original packaging or your own packaging that prevents any movement during transportation
- Ship via ground transportation only (no air shipping)

Battery Charging

To extend battery life, always keep robot charged on the home base when not use.

Battery Storage

If storing robot of the Charging Dock remove the battery first. Then store robot and the battery in a cool, dry place

 
Battery Disposal

Contact your local waste management author for battery recycling and disposal regulations in your area


Battery Removal

Follow these instructions to remove and reinstall robot's battery:


1. Unscrew the two screws on the battery door. then remove the door and battery.

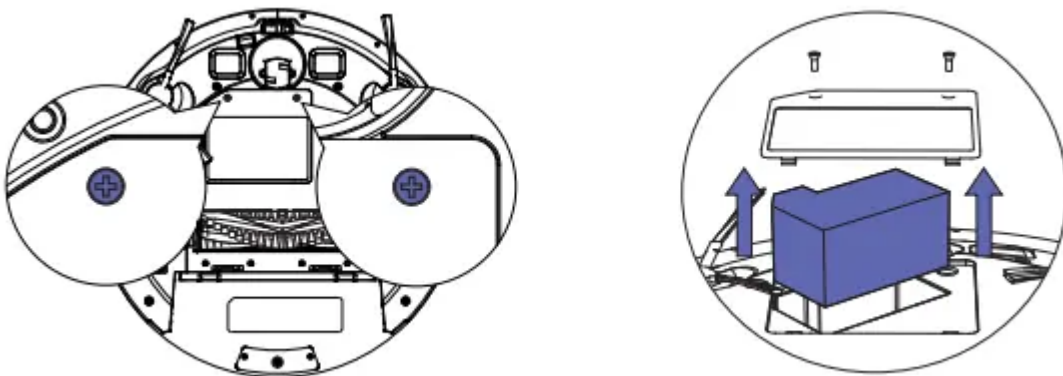

 2. Reinstall the battery with the battery label and tabs facing up.

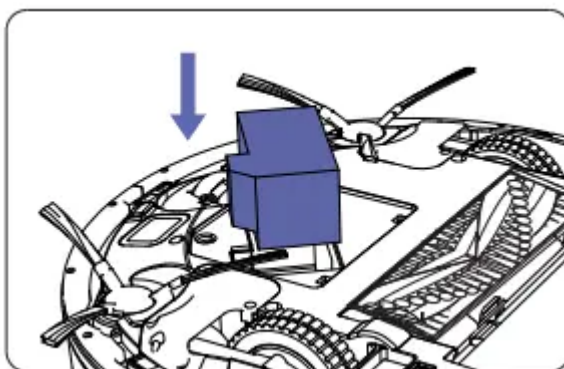

 
3. Reinstall the battery door and the two screws. Take care not to pinch the side brush in the battery door when re-installing the battery.

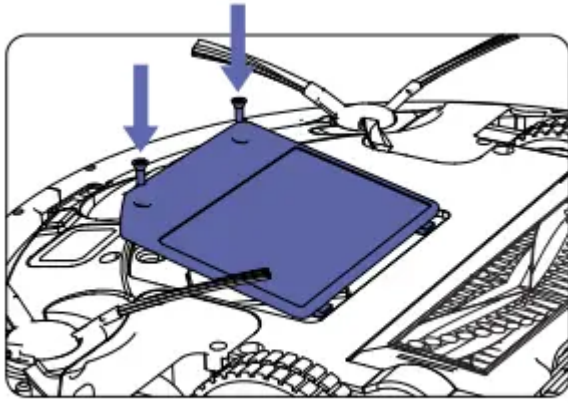


Use the Boundary Strip

With the Boundary Strip, you can keep Robot away from any area or item you do not want Robot to clean. Robot will recognize the Boundary Strip and will not cross into the blocked-off area.

 1. Identify the area or item you do not want Robot to get close to.
2. If necessary, use scissors to cut the Boundary Strip to a shorter length. Be sure to correctly measure the length before cutting.

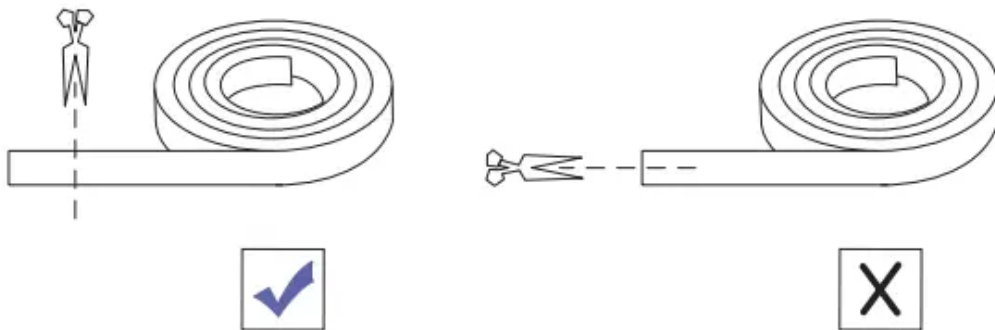

 3. Apply adhesive tape to lay the Boundary Strip flat on the floor. Make sure the strip is placed **FLAT** on the floor.

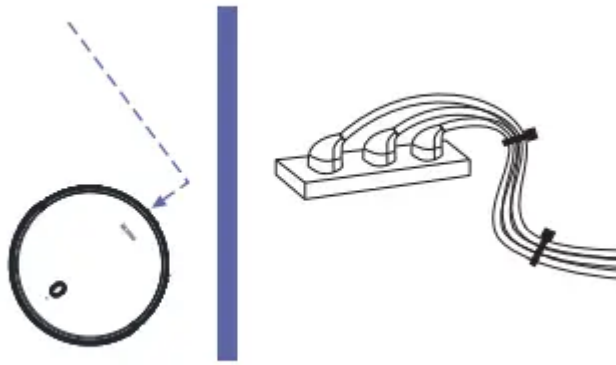

Troubleshooting

Robot will tell you something is wrong with a two-tone distress sound followed by a spoken message. The indicator will also blink or It red. Refer to the chart as below to resolve Robots problem. If the e problem is not resolved. please contact our COST-FREE customer service team for more assistance.

Rebooting Instructions

For some errors. rebooting Rabot may resolve the problem. To reboot Robot. press the power button on the bottom on Robot. you will hear an audible tone signifying a successful reboot.

Beeps and red light flashing

Beep 1: No dust or water tank installed

- Insert the dust or water tank in the robot.

Beep 2: Bumper error

- Check the bumper and remove any object that could be blocking it

Beep 3: Free-fall sensors error

- Clean the free-fall sensors.

Beep 4: Other error

- Contact the Technical Support Service of Cecotec.

Beeps and steady red light

Beep 1: Driving wheel error

- Manually spin the wheel and remove any object that could be blocking it

Beep 2: Side brushes error

- Unblock or untangle the side brushes and clean them.

Beep 3: Motor error

- Empty the dust tank and clean the suction channel.

Specifications

Classification	Item	Specifications
Structural Class	Diameter	325mm
	Height	70mm
	Net Weight	2.6kg
Electronic Class	Voltage	14.4 V
	Battery Capacity	Lithium Battery 2600mAh
Cleaning Parameters	Dustbin Volume	0.5L
	Charging Type	Automatic Charging
	Cleaning Mode	Automatic Cleaning Spot Cleaning Edge Cleaning Appointment Cleaning
	Description of Light Display	Red Light: Failure warning
	One-time Charging Time	About 300 Minutes
	One-time Cleaning Time	About 100 Minutes
Host Button Type		Mechanical Button

Note: This product shall be stored in the ambient temperature range from -20°C to 60°C.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.