

Shortcuts Instructions


Figures and illustrations in this manual are provided for reference only and may differ from actual product appearance.

Parts of the software function changes with the system upgrade.

You can use shortcuts on the remote control for fast operation. Refer to the “ Quick Setup Guide ” for more information.



Turning your TV on or off

To turn your TV on or off :

1. Plug the AC power cord into a socket outlet of AC power supply.
2. When the TV is powered on, press the  button on the remote control, to turn TV on or off.

Selecting the Input Source

Select the Input Source depending on the video device you have connected to your TV. To select the input source:

1. Turn on your TV, then press the [INPUT] button on the remote, the list of Source appears.
2. Press the [ /  / < / >] buttons to select the input source.
3. Press the [OK] button to confirm your selection.

Using the Live TV

To view broadcast programs, press the [Live TV] button on your remote.

Channel search guide

When switching to Live TV, the TV detects the presence of the channel list information (Channel scan must have been completed). If the scan has not yet been completed, a prompt will appear to begin scanning for channels. Press the **Scanning** button to enter the channel search interface.

Launch Live TV

After channel tuning is done for the first time, the screen will display Live TV operating tips.

[Up] load info bar.

[OK] load Channel list.

[EPG] load Guide.

[MENU] load onscreen menu.

[Down] initiate PVR and Timeshift.

[BACK] jump to previous channel.

Viewing Channel List

After you have done an automatic channel scan (if you're using an antenna) or receiving your channels through a cable provider, you can view your list of channels by pressing [OK] button on your remote. You will see the channel list display on the screen.

Enter the sub-menu of channel list

Press the [OK] button and the [<] button on your remote when viewing channels.

Introduction of the sub-menu

1. Channel List

- All

Display the channels that have been automatically searched.

- Favourite

List Display favourites lists 1 to 4. (Max 4 fav lists can be added)

2. Filter

Select channels by content, HD, child lock, scrambled, Sort.

3. Search

Quick access to channels.

4. Edit

Edit the channel list.



Favorites List

To quickly access your most-watched channels, you can create a Favorites List.

To create your Favorites List:

There are 2 ways to enter the edit menu :

1. Press the [OK] button and the [<] button on your remote when viewing channels to select Channel List > Favorite List

2. Press the [] / [] button on your remote to select Settings, and then press [OK] button to enter the **Settings** menu, Select **Channel > Channel Edit > FAV > Edit**.

- Adding channels to a Favorites list

Select the + Add to add the selected channel to the favorite list.

- Moving channels from a favorites list

Select channels in a favorites list, press [<] button to move the selected channel.

- Deleting channels from Favorites list

Select channels in a favorites list, press [>] button to remove the selected channel.


Viewing your Favorite list

To view channels that you've added to your Favorites List, press [OK] button on your remote to call out the channel list.

The channel list appears on the screen and heart-shaped icons are shown next to the channels that make up your Favorites List.

Advanced Features



Getting familiar with the Home screen

To access the Home screen, press the [] button on your remote control and use the arrows on the D-pad to make your selection.

Indicators and Icons on the top of the Home screen


You can always view the current time at the top of the Home screen.

If your TV is connected to the Internet through a wireless connection or an Ethernet cable,

then an icon  /  will display on the screen. This location makes it very convenient for you to determine if you still have Internet connectivity when you use the TV.

Editing the Home screen


1. Move an app, or an input, or a channel from the Home screen.

- Select the item you want to move, press the [] button, and then display


the tip  .

- Press the [< / >] buttons to move it.

2. Delete an app, or an input, or a channel from the Home screen.

- Select the item you want to delete, press the [] button, and then display

the tip .

- Press the [] button twice constantly, and it will be deleted.

Search

Search the app you want.

Notifications

Allow pop-up notifications to appear for useful information and events that occur with your TV.

Select Notifications on the Home screen, and then display **Advertising, New Arrivals, System message, Warnings And Legal Statements** only when starting the TV for the first time. Choose which types of notifications you would like to receive.

Settings

Open the settings menu.

Apps

Numerous factory-installed apps are available for you to choose from for your entertainment preferences.

Installing an App

Even though your TV has numerous factory-installed apps, there may be others that you'd like to download.

To install an app:

1. From the Home screen, click on the **Apps** to select the **AppsNOW** icon.
2. Use the navigation buttons of your remote to select the app that you want to install and then press the [OK] button. A page displays that shows a written description of the app.
3. Click on **Install**. The selected app has been added to the Home screen.

Removing an App

You can only delete apps that you've installed to the TV. Some factory-installed apps can not be deleted.

To delete an app:

1. Use the navigation buttons on your remote to select the app that you want to remove.
2. Press the 'red' button on your remote. A dialog message displays that asks do you want to uninstall this app.

3. Click on **OK**. The icon is removed from the Apps list screen

Media

Media is a central location for you to upload and view or listen to different types of content (for example, your photos, music and movies) through the following methods:

- A USB thumb drive or hard drive
- Compatible mobile phone, tablet or other personal devices: You can stream movies, pictures and photos that are stored on Compatible personal device and play or view the content on your TV.

Browsing Content

To browse through content based on the type that you wish to access:

1. Navigate to the appropriate menu tab on the screen and select All Media, Picture, Music or Video, also you can find the file you want through the file type: Name, Date Modified, Size.
2. Press the [\wedge / \vee / $<$ / $>$] buttons to select the name of the content/folder that contains your content.
3. Press the **[OK]** button to play/enter content/the folder.

If you want to close out of the Media center, press the **[EXIT]** button on your remote.

Creating Playlist



1. Press the **[GREEN]** button on the remote to create a playlist.
2. Select Picture / Music / Video that you want to play
3. Press the **[GREEN]** button on the remote to play the list you have created.

Using Anyview Cast to mirror content from your device to the TV screen

The Anyview Cast is an app that enables you to share (or cast) a video, audio or image from compatible Android device to the TV.

From your tablet or phone

To mirror content from your tablet to the TV:

1. Press the [] / [] button on your remote to select Settings, press the **[OK]** button to enter the Settings menu. Go to Network > Network Configuration and select Wireless.
2. Press the **[INPUT]** button on your remote and select the Anyview Cast.
3. Turn on the wireless display function on your Android-based device.
4. Find your TV in the list of devices that displays and select it.



5. Wait for the 'Creating Connection' progress bar to complete on the TV screen and the video or image will display in a moment.

Software updates for your TV

The software (also referred to as firmware) is part of what powers your TV. We will provide software updates to continuously enhance your TV and correct any issues that may impact your user experience; therefore, we recommend that you keep your TV connected to the Internet to receive updates when they are available. You can choose to receive updates automatically or check for software updates and install them manually.

Checking for the latest firmware / OAD

To manually check for the latest firmware:

1. Press the [] / [] button on the remote to select **Settings**, and then press the **[OK]** button to enter the Settings menu.
2. Go to **Support > System Upgrade > Check Firmware Upgrade / Check OAD Upgrade**

Troubleshooting

If the TV does not operate as usual or appears to be faulty please read carefully this section. Many operational issues can be resolved by users.

It is also advisable to unplug the TV from the AC socket on the wall for 60 seconds or more, then reconnect and start again. This simple procedure helps in restoring stable conditions for electric circuits and firmware of the unit.

Please contact Manufacturer Customer Care if the problem is unresolved or you have other concerns.

SYMPTOMS	POSSIBLE SOLUTIONS
No sound or picture.	<ul style="list-style-type: none"> • Check if the power cord is plugged into a powered AC outlet. • Check to see if LED light is red. If illuminated, power to TV is OK.
I have connected an external source to my TV and I get no picture and/or sound.	<ul style="list-style-type: none"> • Check for the correct output connection on the external source and for the correct input connection on the TV. • Make sure you have made the correct selection for the input mode for the incoming signal.
When I turn on my television, there is a few second delay before the picture appears. Is this normal?	Yes, this is normal. That is the TV searching for previous setting information and initializing the TV.
Picture is normal, but no sound.	<ul style="list-style-type: none"> • Check the volume settings. • Check if Mute mode is set “on”.
Sound but no picture or black and white picture.	<ul style="list-style-type: none"> • If black and white picture first unplug TV from AC outlet and replug after 60 seconds. • Check that the Color is set to 50 or higher. • Try different TV channels.
Sound and picture distorted or appear wavy	<ul style="list-style-type: none"> • An electrical appliance may be affecting TV set. Turn off any appliances, if interference goes away, move appliance farther away from TV. • Insert the power plug of the TV set into another power outlet.
Sound and picture is blurry or cuts out momentarily	<ul style="list-style-type: none"> • If using an external antenna, check the direction, position and connection of the antenna.

	<ul style="list-style-type: none"> • Adjust the direction of your antenna or reset or fine tune the channel.
Horizontal/vertical stripe on picture or picture is shaking.	Check if there is interfering source nearby, such as appliance or electric tool.
The plastic cabinet makes a "clicking" type of sound.	"Click" sound can be caused when the temperature of the television changes. This change causes the television cabinet to expand or contract, which makes the sound. This is normal and the TV is OK.
Remote control does not work.	<ul style="list-style-type: none"> • Confirm that TV still has power and is operational. • Change the batteries in the remote control. • Check if the batteries are correctly installed.
Smart Television with wireless network capability Wi-Fi fail to join a local network.	<ul style="list-style-type: none"> • Configure the local wireless router or access point for WPA-PSK security before attempting to connect the TV to the Wi-Fi network. • Follow instruction in the User Manual of the television to setup a wireless connection

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.