


User manual Coffee Maker

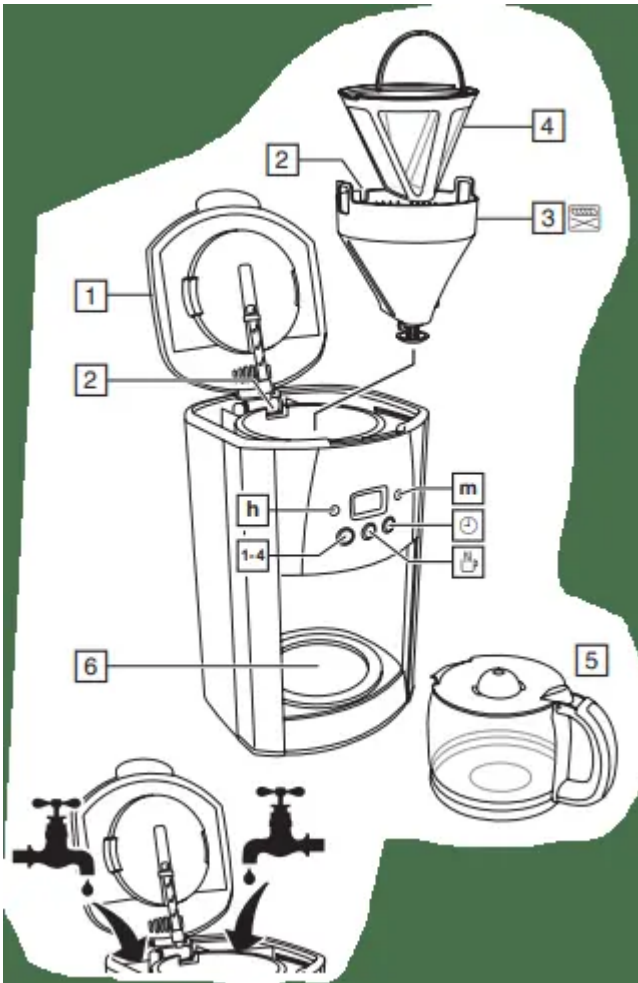

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/ instructed and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

Keep the appliance and cable out of reach of children under 8 years. Misuse of the appliance may cause injury.



The surfaces of the appliance will get hot. Residual heat will keep the surfaces hot after use.



Don't immerse the appliance in liquid.

If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

- Sit the appliance on a stable, level, heat-resistant surface.
- Keep the appliance and cable away from the edges of worktops.
- Don't use accessories or attachments other than those we supply.
- Don't use the appliance for any purpose other than those described in these instructions.
- Don't use the appliance if it's damaged or malfunctions.

HOUSEHOLD USE ONLY

PARTS

1. Lid
2. Slot
3. Filter holder
4. Permanent filter
5. Carafe
6. Hotplate



Dishwasher - top rack

BEFORE USING FOR THE FIRST TIME

Fill the reservoir to the max mark, and run the appliance without coffee.

FILLING

1. Remove the carafe from the hotplate.
2. Open the lid.
3. Fill the reservoir with the exact amount of water required. Note that the brewing process will use all of the water that you put in the reservoir.
4. Make sure that the filter holder is pressed down all the way into position. It will click when correctly installed.
5. The reservoir is calibrated to give 12 large cups (at 125ml per cup) and 18 small cups (at 83ml per cup). For each large cup, add 6g of ground filter coffee and for each small cup add 4g.

6. Close the lid.
7. Replace the carafe on the hotplate.

SET THE CLOCK


It isn't necessary to set the clock to use your coffee maker but you will need to set it if you want to use the timer functions.





1. Put the plug into the power socket.
2. Use the h and min buttons to set the correct time in 24 hour format.
 - The clock will retain its settings until the coffee maker is unplugged.

COFFEE STRENGTH

Pressing the 1-4 button will make the brewed coffee slightly stronger. You can also use it if you are only brewing a partial carafe of coffee (i.e. not completely filling the reservoir). Your coffee maker will then alter the brewing process so your coffee will have about the same strength as it would if you had made a full carafe.

MAKING COFFEE


Note: If you want to use the coffee strength feature press the 1-4 button before pressing the  button. The 1-4 button will light up.


1. Press the  button – the  icon will appear on the display. The  button will light up.
2. Shortly afterwards, coffee will start to drip into the carafe.
3. If you want to stop the coffee maker while it's brewing, press the  button.
4. Once brewed, the hotplate will keep the carafe warm for up to 40 minutes.




USING THE TIMER

Note: Make sure the clock is set to the correct time. Use the h and min buttons.



1. Set the timer to the time you want to start brewing.

- a) Press the  button .
- b) Use the h and min buttons to set the time you want brewing to start.

If you don't press either the h or min buttons within 5 seconds, the coffee maker will revert to "normal", and the current time will show. Press the  button to start again.

2. When the time is programmed, press the  button. The  button will light up and the  icon will appear on the display. Your coffee maker is now set to make coffee at the selected time.

3. If you want to use the coffee strength feature when using the timer, press the 1-4 button now. The 1-4 button will light up.

- If you want to cancel the timer before brewing has started, press the  button.
- If you want to stop the coffee maker while it's brewing, press the  button.

KEEP WARM/AUTO SHUT-OFF

1. Your coffee maker will keep the coffee warm for about 40 minutes.
2. 40 minutes after brewing your coffee maker will shut down and the time of day will be displayed.
3. To wake the appliance, press the min button.

A QUICK CUP

If you want a quick cup of coffee before the brewing cycle has finished:

1. You can remove the carafe at any time. The non-drip valve will prevent coffee dripping on to the hotplate.
2. To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds.
3. When you replace the carafe on the hotplate the non-drip valve opens to let any remaining coffee through.


CARE AND MAINTENANCE

1. Unplug the appliance and let it cool.
2. Tip the contents of the filter holder into the bin.
3. Wipe all surfaces with a clean damp cloth.
4. Press the lever at the rear of the carafe lid, above the handle, to open the carafe lid.
5. Hand wash the carafe and filter holder.
6. Replace the filter holder. Make sure that the filter holder is pressed down all the way into position. It will click when correctly installed.
7. Close the lid, and press down to lock it.



You may wash these parts in the top rack of a dishwasher.

DESCALING

- After 60 brewing cycles, the display will show CL, to indicate that the appliance needs descaling.
- To turn this function off, press the 1-4 and  buttons together, and hold them for 3 seconds.
- Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the package of descaler.
- Products returned under guarantee with faults due to scale will be subject to a repair charge.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.