 




## Getting Started

### Remote control

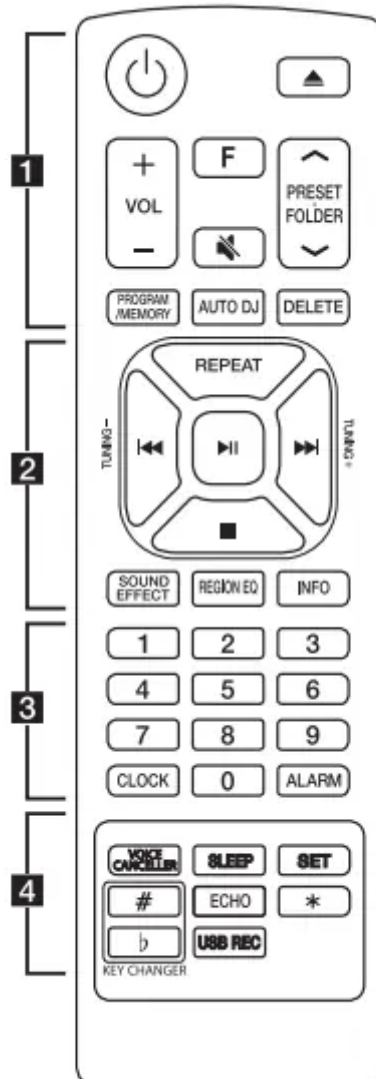

1.

 (Standby) : Turns the power on or off.

 (Open/Close) : Opens and closes the disc tray.

**VOL** (Volume) +/- : Adjusts speaker volume.

**F** (Function) : Selects the function and input source.

Input source / Function	Display
Disc	CD
USB	USB1 / USB2
AUX input	AUX
Portable input	PORTABLE
<b>Bluetooth</b>	BT
LG Sound Sync (Wireless)	LG TV
Radio	FM

 (Mute) : Mutes the sound.

**PRESET·FOLDER**  $\wedge / \vee$  :

- Chooses a preset number for a radio station. (Page 24)
- Searches for a folder of MP3/WMA files. When a CD/USB containing MP3/WMA files in several folders is being played, press PRESET·FOLDER  $\wedge / \vee$  to select the folder you want to play.

**PROGRAM/MEMORY** :

- Stores radio stations. (Page 24)
- Deletes all the saved stations.
- Selects a programmed list mode. (Page 28)
- Makes the programmed list.


**AUTO DJ** : Selects the AUTO DJ mode. (Page 18)

**DELETE** :

- Deletes MP3/WMA files. (USB only) (Page 18)
- Deletes a song on the programmed list.

**2.**

**REPEAT** : Listens to your tracks/files repeatedly or randomly.

 (Skip/Search) :

- Skips backward or forward.
- Searches for a section within a track/file.

**TUNING -/+** : Selects the radio stations.

 (Play/Pause) :

- Starts or pauses playback.
- Selects stereo/mono.

■ (Stop) :

- Stops playback.
- Cancels DELETE function.

**SOUND EFFECT** : Chooses sound impressions.

**REGION EQ** : Chooses region equalizer.

**INFO** :

- Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees Bluetooth device name of the unit in BT READY.
- Sees the name of connected all Bluetooth device in Bluetooth mode.
- In status of WIRELESS PARTY LINK Connection, device name of SLAVE (Secondary) unit appears in the MASTER (Primary) unit and device name of MASTER (Primary) unit appears in the SLAVE (Secondary) unit.

**3.**

**0 to 9 numerical buttons** : Selects numbered tracks, files, or preset number.

**CLOCK** : Sets a clock and checks a time.

**ALARM** : With the ALARM function you can turn on CD, USB play and tuner reception on at a desired time.

**4.**

**VOICE CANCELLER** : You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.

**SLEEP** : Sets the system to turn off automatically at a specified time. (Dimmer : The display window will be darkened by half.)

**SET** : Confirms the setting.

**KEY CHANGER**( # / b ) : Changes the key to suit your vocal range.

**ECHO** : Selects ECHO mode.

\* : The button is not available.


**USB REC** : Records to USB.

### **Replacement of battery**

Remove the battery cover on the rear of the remote control, and insert the battery with and matched correctly.

## Front panel

### Front panel

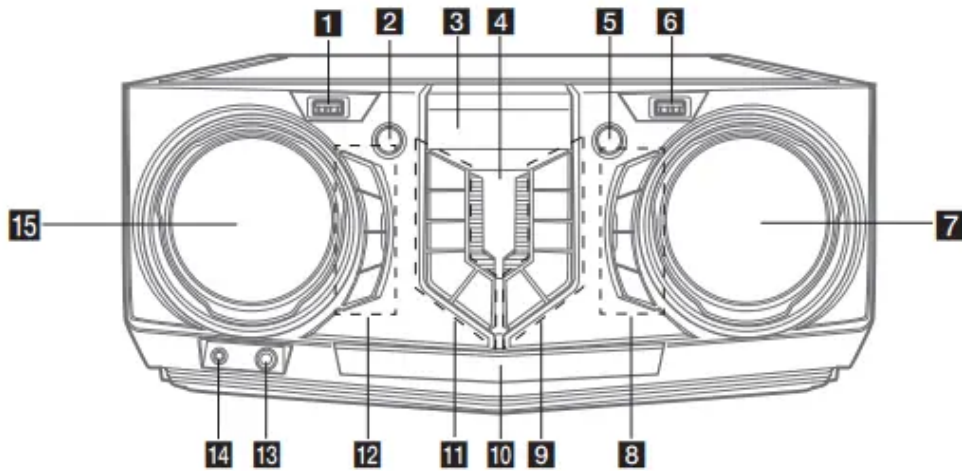

#### 1. USB 1 Port

You can play sound files by connecting the USB device.

#### 2. (Standby)

Turns the power on or off.

#### 3. Display window

#### 4. (Remote sensor)

#### 5. WIRELESS LINK

- Selects MAIN or OTHER on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode

#### 6. USB 2 Port

You can play sound files by connecting the USB device.

#### 7. VOLUME

- Adjust speaker volume.

#### 8. MIC (Microphone) +/-

- Adjust microphone volume.

#### VOICE CANCELLER

- You can reduce the vocal tones during music playback from various input sources.

#### ECHO

- Selects ECHO mode.

#### 9. F (Function)

Selects the function and input source

Input source / Function	Display
Disc	CD
USB	USB1 / USB2
AUX input	AUX
Portable input	PORTABLE
<b>Bluetooth</b>	BT
LG Sound Sync (Wireless)	LG TV
Radio	FM

**>||** (Play/Pause)

- Starts or pauses playback
- Selects stereo/mono.

**>>|** (Skip/Search)

- Skips forward.
- Searches for a section within a track/file.
- Selects the radio stations.

**KEY CHANGER ( # / b )**

Changes the key to suit your vocal range

## 10. Disc tray

### 11. USB REC / DEMO

- Records to USB.
- In power off status, if you press **USB REC / DEMO**, show demo mode.

**□** (Stop)

- Stops playback or cancels DELETE function.

**I<<** (Skip/Search)

- Skips backward.
- Searches for a section within a track/file.
- Selects the radio stations.

**△** (Open/Close)

- Opens and closes the disc tray.

## **AUTO DJ**

- Selects the AUTO DJ mode. (Page 18)

## **12. SOUND EFFECT**

- Chooses sound impressions.

## **REGION EQ / BASS BLAST**

- Chooses region equalizer.
- Press and hold to select BASS effect directly.

## **SEARCH**

- Moves to folder or file in selection mode.

## **OK**

- Selects a folder when searching a file.

**13. MIC** (Microphone) jack

**14. PORT.** (Portable) IN jack


**15. SEARCH**

Searches a folder or a file.

Turns clockwise or counterclockwise to control the SOUND EFFECT, REGION EQ mode.

## Rear panel

### Rear Panel

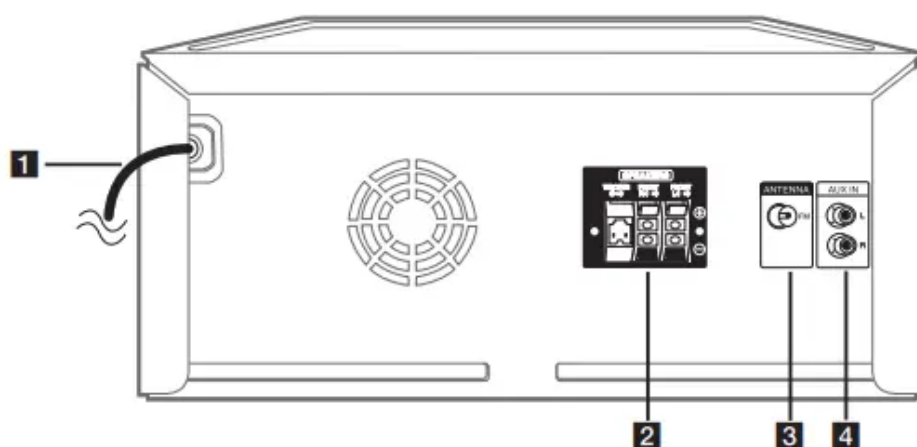

- 1** Power cord
- 2** SPEAKERS connector/terminals
- 3** ANTENNA (FM)
- 4** AUX IN (L/R)  
Connect an auxiliary device.

## Connecting

### Connecting to speakers

 
#### Attaching the speakers to the unit

To connect the cable to the unit, press each plastic finger pad to open the connection terminals on the unit. Insert the wire and release the finger pad.

Connect the black of each wire to the terminals marked - (minus) and the other end to the terminals marked + (plus).

#### Attaching the subwoofer to the unit

Connect a subwoofer cord to the player. When connecting a subwoofer cord to the player, insert the connector until it clicks.

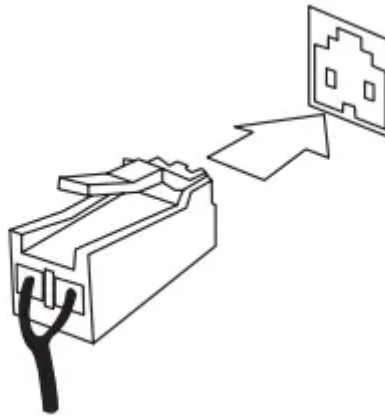


## Caution

- When you connect the speakers to the unit, make sure to connect the speaker's cable and plug to the corresponding speaker connector.
- Check the volume level before playing music to prevent infirm, child, and pregnant women from being shocked by the sudden and loud sound from the unit.
- Do not use the unit in a limited space. It may damage a person's hearing. It is recommended to use it in a wide space
- Be careful to make sure children do not put their hands or any objects into the \*speaker duct.  
\* speaker duct : A hole for plentiful bass sound on speaker cabinet (enclosure)
- Use the speaker supplied with this unit only. Using any other speaker may cause malfunction.
- The speakers contain magnet parts, so color irregularity may occur on the TV screen or PC monitor screen. Please use the speakers far away from either TV screen or PC monitor

## Optional Equipment Connection


### AUX IN Connection

Connect an output of auxiliary device (Camcorder, TV, Player, etc) to the AUX IN (L/R) connector. If your device has only one output for audio (mono), connect it to the left (white) audio jack on the unit.

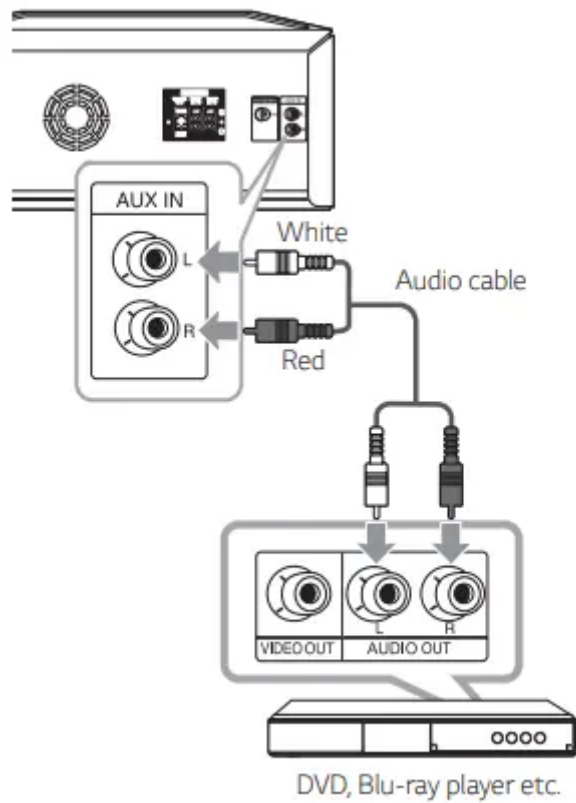

**PORT. IN Connection**

Connect an output (earphone or line out) of portable device (MP3 or PMP etc.) to the PORT.IN (3.5 mm) connector

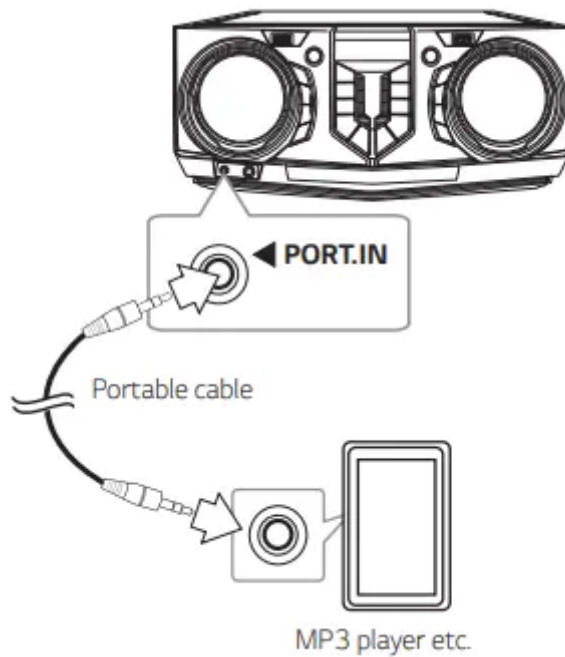

**Listening to music from your external device**

The unit can be used to play music from many types of external device.



1. Connect the portable player to the **PORT.IN** connector of the unit.

Or

Connect the external device to the **AUX IN (L/R)** connector of the unit

2. Turn the power on by pressing .


3. Press **F** to select AUX or PORTABLE function

4. Turn on the portable player or external device and start it playing.

**Note:** Automatically switches to the PORTABLE function when you connect the portable device to the PORT.IN connector


### USB Connection

Connect a USB device (or MP3 player, etc.) to the USB ports on the unit.

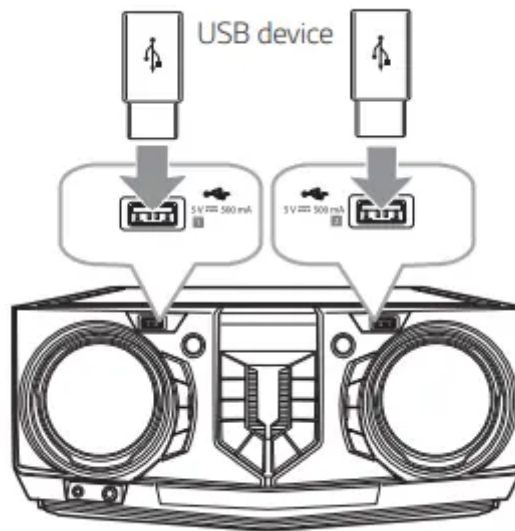

### Antenna Connection

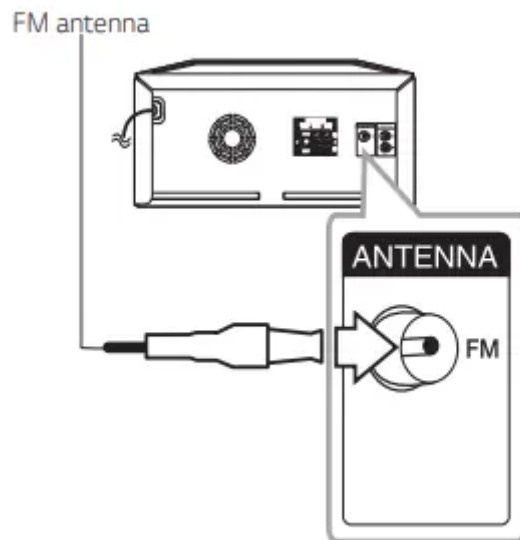

Connect the supplied FM antenna for listening to the radio



 



 

 
 
 
 
 

 
 


## Operating

### Basic Operations

#### CD/USB Operations

1. Insert the disc by pressing  on the remote control or  on the unit. . Or connect the USB device to the USB port.
2. Select CD or USB function by pressing **F**.



 

To	Do this
Stop	Press  on the remote control or  on the unit.
Playback	Press  on the remote control or  on the unit.
Pause	Press  on the remote control or  on the unit during playback.
Searching for a section within a track/file	Press and hold  on the remote control or  on the unit during playback and release it at the point you want to listen to.
Selecting a track/file directly	Press <b>0</b> to <b>9</b> numerical buttons on the remote control to go to the desired file or track directly.
Skipping to the next/previous track/file	<p>- In stop status, Press  on the remote control or  on the unit to go to the next/previous track/file.</p> <p>- During playback, press  on the remote control or  on the unit to go to the next track/file.</p> <p>Playing less than 2 seconds, press  on the remote control or  on the unit to go to the previous track/file.</p> <p>Playing after 3 seconds, press  on the remote control or  on the unit to go to the beginning of the track/file.</p>
Playing repeatedly or randomly	Press <b>REPEAT</b> on the remote control repeatedly. Refer to the note for details about the display change.

## Auto Play

- AUDIO/MP3/WMA CD is played automatically after disc tray is opened and then closed.
- Automatically the unit switches to the CD function if disc tray is opened and then closed even when there is no disc in disc tray

## Selecting a folder and an MP3/WMA file

On the unit


1. Press **SEARCH** and rotate  **SEARCH**  until a desired file appears. You can also search a folder if you press **SEARCH** again.
2. Press **OK** or  to play the selected file. When you search a folder, press **OK** to select a file in the folder, then press **OK** or  again. The selected file is played.

On the remote control

1. Press **PRESET·FOLDER** repeatedly until a desired folder appears.
2. Press **▶||** to play it. The first file of folder will be played

### Note

 - CD/USB Folders/Files are recognized as below.

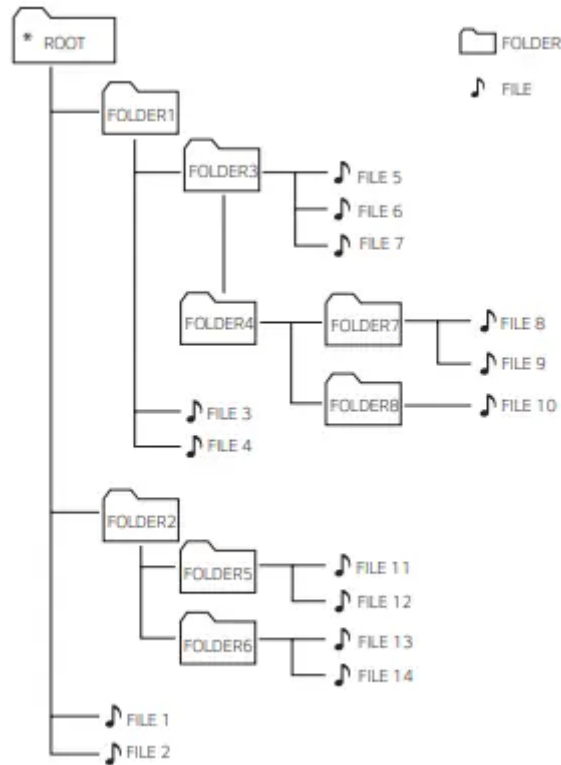

- If there is no file in a folder, the folder will not appear.
- Folders will be presented as the following order; ROOT -> FOLDER 1 -> FOLDER 3 -> FOLDER 7 -> FOLDER 8 -> FOLDER 5 -> FOLDER 6
- File will be played from file No.1 to file No.14 one by one.
- Files and folders will be presented in order recorded and may be presented differently according to the record circumstances.

\*ROOT: The first screen you can see when a computer recognize the CD/USB is "ROOT".

### Deleting a file/folder or format

You can delete file, folder or format by pressing DELETE on the remote control. This function is supported only in stop status. (USB only)


1.Select USB function by pressing **F**.

2.

-Deletes file : Select the file you want to delete and select "DEL FILE" by pressing DELETE on the remote control.

-Deletes folder : Select the folder you want to delete and select “DEL DIR” by pressing DELETE on the remote control.

-Formats USB : Select “FORMAT” by pressing DELETE on the remote control to format the USB device.

If you want to exit the current mode, press  on the remote control or  on the unit.

3. To delete file/folder or format, press and hold DELETE on the remote control.

### Caution

- Do not extract the USB device during operation. (play, delete, etc.)
- Regular back up is recommended to prevent data loss.
- The delete function may not be supported according to the USB status. (lock, etc.)

### AUTO DJ

AUTO DJ blends the end of one song into the beginning of another for seamless playback. It equalizes volume across tracks/files for uninterrupted playback.

Press AUTO DJ repeatedly, the display changes as followings.

AUTO DJ RANDOM → AUTO DJ SEQUENTIAL → AUTO DJ OFF

### (Mode-Display Window-Description)

- OFF- AUTO DJ OFF
- RANDOM-AUTO DJ RANDOM- The music is played randomly on this mode.
- REPEAT- AUTO DJ SEQUENTIAL- The music is played repeatedly on this mode

## Using BLUETOOTH® wireless technology

### About Bluetooth

**Bluetooth** is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the **Bluetooth** in the other rooms.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology

- Available Devices: Smart phone, MP3, Notebook, etc.
- Version: 4.0
- Codec: SBC

### Bluetooth Profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles.

This unit is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

## Listening to music stored on the Bluetooth devices

### Pairing your unit and Bluetooth device

Before you start the pairing procedure, make sure the Bluetooth feature is activated on your Bluetooth device. Refer to your Bluetooth device's user guide. Once a pairing operation is performed, it does not need to be performed again.

1. Turn on the unit.
2. Operate the Bluetooth device and perform the pairing operation. When searching for this unit with the Bluetooth device, a list of the devices found may appear in the Bluetooth device display depending on the type of Bluetooth device. Your unit appears as "LG CJ45 (XX)"
3. When this unit is successfully connected with your **Bluetooth** device, "PAIRED" appears on the display window and change to Bluetooth device name soon. Then "BT" will appear on the display window.
4. Listen to music. To play a music stored on your Bluetooth device, refer to your **Bluetooth** device's user guide.

### Note

- When using Bluetooth technology, you have to make a connection between the unit and the Bluetooth device as close as possible and keep the distance.  
However, it may not work well in certain situations as described below:
  - There is an obstacle between the unit and the Bluetooth device.
  - There is a device using same frequency with Bluetooth technology such as a medical equipment, a microwave or a wireless LAN device.
- You should connect your Bluetooth device to this unit again when you restart it.
- Even if this unit is connected to up to 3 Bluetooth devices in the Bluetooth mode, you can play and control music by using only one of the connected devices.

### Controls connected Bluetooth device

You can control connected Bluetooth device by the unit; play, pause, stop, skip.

## Radio Operations

Be sure that FM antenna is connected.

### Listening to the radio

1. Press F until FM appears in the display window.

The last received station is tuned in.

## 2. Auto tuning:

Press and hold **TUNING-/+** on the remote control or **⏪/⏩** on the unit until the frequency indication starts to change, then release. Scanning stops when the unit tunes in a station.

Or

Manual tuning:

Press **TUNING-/+** on the remote control or **⏪/⏩** on the unit repeatedly.

3. Adjust the volume by pressing **VOL +/-** on the remote control or rotating MASTER VOLUME knob on the unit repeatedly.

## Improving poor FM reception

Press **▶||** on the remote control or **>||** on the unit . This will change the tuner from stereo to mono and usually improve the reception.

## Presetting the Radio Stations

You can preset 50 stations for FM.

Before tuning, make sure to turn down the volume.

1. Press **F** until FM appears in the display window.
2. Select the desired frequency by pressing **TUNING -/+** on the remote control or **⏪/⏩** on the unit.
3. Press **PROGRAM/MEMORY** on the remote control. A preset number will blink in the display window.
4. Press **PRESET·FOLDER** on the remote control to select the preset number you want.
5. Press **PROGRAM/MEMORY** on the remote control. The station is stored.
6. Repeat steps 2 to 5 to store other stations.
7. To listen a preset station, press **PRESET·FOLDER** or **0 to 9** numerical buttons on the remote control.

## Deleting all the saved stations

1. Press and hold **PROGRAM/MEMORY** on the remote control for two seconds. "ERASEALL" will flash up on the unit display.
2. Press **PROGRAM/MEMORY** on the remote control to erase all the saved radio stations.

## Sound adjustment

### Setting the sound mode

This system has a number of pre-set equalizers. The displayed items for the equalizer may be different depending on sound sources and effects. You can select a desired sound mode by using EQUALIZER on the remote control

On Display	Description
BASS (BASS BLAST)	Reinforces the treble, bass and surround sound effect.
POP CLASSIC ROCK JAZZ	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock, pop, jazz or classic concert.
FOOT BALL	You can enjoy the sound effect FOOTBALL STADIUM.
STANDARD	You can enjoy optimized sound.

You can select a desired sound mode by using SPECIAL EQ on the remote control or SPECIAL EQ / BASS BLAST (or BASS BLAST+) on the unit

On Display	Region	Description
FUNK, REGUETON, SAMBA, MERENGUE, AXE, SALSA, SERTANEJ, FORRO	Latin America	Optimized sound effect for the music genre preferred in each region.
ARABIC	Middle East	
DANGDUT	Indonesia	
AFRO	Africa	
INDIA	India	

## Advanced Operations

### Recording to USB

You can record a various sound source to USB. (CD, USB 1, AUX 1, AUX 2, FM)

1. Connect the USB device to the unit.

2. Press F to select a function you want to record.

3. Start the recording by pressing USB REC on the remote control or USB REC/ DEMO on the unit

Function	Status	Result
CD, USB	Play/Pause	Recorded until stop
	Resume stop (Page 29)	Quick recorded the latest song
	Full stop	Quick recorded All songs In case below, scope is limited. - After File search (Page 17), quick recorded an indexed song - After Folder search (Page 17), quick recorded All songs on Folder - After the programmed list (Page 28), quick recorded All songs of the programmed list
AUX, PORTABLE, FM	-	Recorded until stop



- If you connect both USB1 and USB2, press USB REC on the remote control or USB REC / DEMO on the unit when USB1 or USB2 which you want to record blinks in the display window.

4. To stop recording, press and hold USB REC on the remote control or USB REC / DEMO on the unit for 3 seconds. Otherwise, the recording continues.

### Pausing recording

During CD/USB playback or pause, or external sound source recording, press USB REC on the remote control or USB REC / DEMO on the unit to pause recording. Press it again to restart recording.

### To select recording bit rate

1. Press and hold USB REC on the remote control or USB REC / DEMO on the unit for 3 seconds.
2. Press  on the remote control or  on the unit to select a bit rate

3. Press USB REC on the remote control or USB REC / DEMO on the unit to finish the setting.

**Note**

- When you stop recording, the file that has been recorded at that time will be stored. (Except when recording MP3/ WMA files that are in stop status.)
- Do not remove the USB device or turn off the unit during USB recording. If does not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like “NO USB”, “ERROR”, “USB FULL”, “NOT SUPPORT” or “FILE MAX” is displayed on the display window.
- Multi card reader device or external HDD can not be used for USB recording.
- A file is recorded by about 512 Mbyte when you record for a long term.
- You can record MIC. (Except when recording USB/ CD that are in stop status.)
- You can control recorded microphone sound according to microphone volume.
- You may not store more than 2,000 files.
- In case of the unsupported MP3/WMA file, the file recording may be stopped.
- When you are recording during playback, the sound now playing is output.
- It'll be stored as follows.

AUDIO CD	MP3/WMA
Play or pause status ■ CD_REC   AUDIO_0001   AUDIO_0002       	Play or pause status ■ FILE_REC   AUDIO_0001   AUDIO_0002       
The other status ■ CD_REC   TRACK_0001   TRACK_0002       	The other status ■ FILE_REC   ABC(File name)   DEF(File name)       
The other source* ■ OTHERS_REC   AUDIO_0001   AUDIO_0002       	Tuner ■ TUNERS_REC   AUDIO_0001_107.7FM     

\* AUX and the like.

Tuner: The current recording frequency is shown



**Programmed Playback**


The program function enables you to make a playlist of your favorite tracks/files from a disc or USB device.

A program can contain 20 tracks/files for each media. Possible to save a total of 60 tracks/files.





## Making Programmed list

1. Press PROGRAM / MEMORY on the remote control in stop status.
2. Select a track/file by pressing  on the remote control.
3. Press PROGRAM/MEMORY on the remote control to save the track/file.
4. Repeat steps 2 - 3 to store other tracks/files. (You can modify the list by pressing PRESET·FOLDER  on the remote control to select the program number.)
5. Press PROGRAM/MEMORY on the remote control once again.

To play the programmed list, press  on the remote control after you make the list.


## Editing Programmed list

1. Press PROGRAM/MEMORY on the remote control in stop status.
2. Press PRESET·FOLDER  or PROGRAM/ MEMORY on the remote control to select a track/file to edit.
3. Press  on the remote control.
4. Press PROGRAM/MEMORY on the remote control once again.
5. Repeat 2 to 4 to store the other tracks/files.

To play the programmed list, press  on the remote control after you edit the list.


## Deleting Programmed list

Deleting function only works in the edit mode.

1. Press PROGRAM/MEMORY on the remote control in stop status.
2. Select a song by pressing PRESET·FOLDER  or PROGRAM/MEMORY on the remote control repeatedly.
3. Press DELETE on the remote control while a song is selected.

## Other Operations

### Turn off the sound temporarily

Press  on the remote control to mute your sound.

You can mute your unit, for example, to answer the telephone, the "MUTE" will appear in the display window.

To cancel it, press  on the remote control again or change the volume level.

### DEMO

In the power off state, press USB REC / DEMO on the unit once. The unit will power on and display the each of functions in the display window.

To cancel the DEMO function, press USB REC / DEMO on the unit once more.

### **Resume stop**

The unit records the point where you pressed the ■ on the remote control or □ on the unit depending on the disc or USB.

If you press ■ on the remote control or □ on the unit twice, the unit will clear the stopped point.

### **Using Microphone**

1. Connect your microphone to the MIC jack.
2. Play the music you want.
3. Sing along with the accompaniment. Adjusts the microphone volume by pressing **MIC +/-** on the unit.

### **VOICE CANCELLER**

You can reduce the vocal tones during music playback from various input sources.

Press VOICE CANCELLER and "ON " will appear in display window.

To cancel it, press VOICE CANCELLER again.

The quality of the VOICE CANCELLER may be different depending on the recording conditions of music files.

### **KEY CHANGER**

You can adjust the key to 9 steps (4 steps higher, 4 steps lower and the original key).

- To sharp the key one by one, press KEY CHANGER( #) repeatedly during playback.
- To flatten the key one by one, press KEY CHANGER( ) repeatedly during playback.

### **ECHO**

When you connect your microphone to the MIC jack, you can give an echo effect to the sound from the microphones by pressing **ECHO**.

ECHO 1 -> ECHO 2 -> ECHO OFF

### **Sleep Timer Setting**

Press SLEEP on the remote control repeatedly to select delay time between 10 and 180 minutes. After the delay time, the unit will be turned off. To cancel the sleep function, press SLEEP on the remote control repeatedly until "OFF" appears.

### **Dimmer**

Press SLEEP on the remote control once. The display window will be darkened by half. To cancel it, press SLEEP on the remote control repeatedly until dim off

### **Auto power down**

This unit will turn itself off to save electricity in the case were the main unit is not connected to an external device and is not used for 15 minutes. The unit will also turns itself off after six hours if the main unit has been connected to another device using the analog inputs.

### **AUTO POWER On**

This unit automatically turns on by an input source : LG TV or Bluetooth

When you turn on your TV connected to this unit, this unit recognizes the input signal and selects the suitable function. You can hear the sound from the unit.

If you try to connect your Bluetooth device, this unit turns on and connects your Bluetooth device. You can play your music

### **Auto function change**

This unit recognizes input signals such as Bluetooth and LG TV or connected portable device, and then changes suitable function automatically

#### **When you try to connect Bluetooth device**

When you try to connect your Bluetooth device to this unit, Bluetooth function is selected. Play your music on the Bluetooth device.

#### **When PORT.IN connection is connected**

When you connect the portable device to the PORT.IN connector, PORTABLE function is selected. Play your music on the portable device.

#### **When LG TV is connected**

When you turn on your LG TV connected by LG Sound Sync, this unit changes the function to LG TV. You can hear the sound from your TV.

## **Setting the Clock**

1. Turn the unit on.
2. Press and hold CLOCK on the remote control.
3. Select time mode by pressing **⏪/⏩** on the remote control.
  - AM 12:00 (for an AM and PM display) or 0:00 (for a 24 hour display)
4. Press SET on the remote control to confirm your selection.
5. Select the hours by pressing **⏪/⏩** on the remote control.
6. Press SET on the remote control.
7. Select the minutes by pressing **⏪/⏩** on the remote control.
8. Press SET on the remote control.

## **Setting the Clock through “Music Flow Bluetooth” App**

Install “Music Flow Bluetooth” app on your Android device. (Page 22-23) Your unit’s clock will be automatically synchronized with your device by activating Bluetooth connection through “Music Flow Bluetooth” app

### Using your player as an alarm clock

1. Turn the unit on.
2. Press and hold ALARM on the remote control.
3. Press **⏪/⏩** on the remote control to change the hours and minutes and press SET on the remote control to save.
4. Press **⏪/⏩** on the remote control to select function and press SET on the remote control to save.
  - Press **⏪/⏩** on the remote control to select a preset number when you select tuner and then, press SET on the remote control. If there is no preset number, this step is skipped.
5. Press **⏪/⏩** on the remote control to change the volume and press SET on the remote control to save.

### LG Sound Sync



You can control some functions of this unit by your TV’s remote control with LG Sound Sync. It is compatible with LG TV that supports LG Sound Sync. Make sure your TV has the LG Sound Sync logo. Controllable function by LG TV’s remote control: Volume up/down, mute.

Refer to the TV’s instruction manual for the details of LG Sound Sync.

1. Turn on the unit by pressing .
2. Press F until LG TV function is selected.
3. Set up the sound output of TV to listen to the sound through this unit:

TV setting menu [Sound] -> [TV Sound output] -> [LG Sound Sync (Wireless)]

“PAIRED” appears on the display window for about 3 seconds and then you can see “LG TV” on the display window if the TV and this unit are connected normally.

# Troubleshooting

## General



Problem	Cause & Correction
<b>The unit does not work properly</b>	<ul style="list-style-type: none"> <li>• Turn off the power of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and turn them on again.</li> <li>• Disconnect the power cord of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and then try connecting again.</li> <li>• Previous setting may not be saved when device power is shut off.</li> </ul>
<b>No Power</b>	<ul style="list-style-type: none"> <li>• The power cord is not plugged in. Plug in the power cord.</li> <li>• Check whether electricity failed. Check the condition by operating other electronic devices using the same AC outlet.</li> </ul>
<b>No sound</b>	<ul style="list-style-type: none"> <li>• Check whether you select right function. Press function button and check if you have selected the right function.</li> <li>• Check to see if the speakers are connected correctly. Speaker cables connected correctly.</li> </ul>
<b>The unit does not start playback</b>	<ul style="list-style-type: none"> <li>• An unplayable disc is inserted. Check the playable disc.</li> <li>• No disc is inserted. Insert a disc.</li> <li>• The disc is dirty. Clean the disc.</li> <li>• The disc is inserted upside down. Place the disc with the label or printed side facing upwards.</li> </ul>
<b>Radio stations cannot be tuned in properly</b>	<ul style="list-style-type: none"> <li>• The antenna is positioned or connected poorly. Connect the antenna securely.</li> <li>• The signal strength of the radio station is too weak. Tune to the station manually.</li> <li>• No stations have been preset or preset stations have been cleared (when tuning by scanning preset channels). Preset some radio stations .</li> </ul>

<b>The remote control does not work properly</b>	<ul style="list-style-type: none"><li>• The remote control is too far from the unit. Operate the remote control within about 7 m.</li><li>• There is an obstacle in the path of the remote control and the unit. Remove the obstacle.</li><li>• The batteries in the remote control are exhausted. Replace the batteries with new ones.</li></ul>
<b>LG Sound Sync does not work</b>	<ul style="list-style-type: none"><li>• Check whether your LG TV supports LG Sound Sync.</li><li>• Check connection of LG Sound Sync.</li><li>• Check sound setting of your TV and this unit.</li></ul>

### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.