


## FEATURES AND BENEFITS

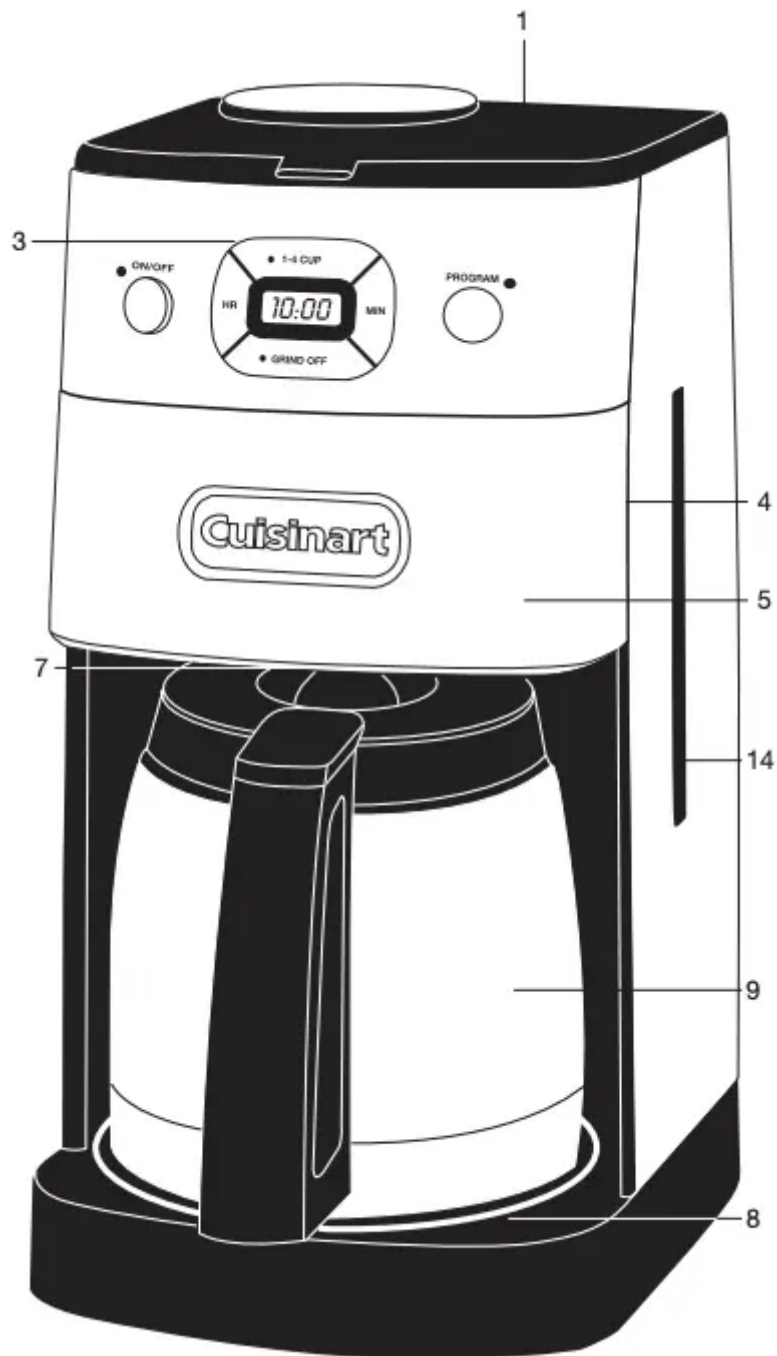

### 1. Reservoir Cover with Release Button

Flips back for easy filling of the water reservoir and access to the grinder compartment. See detailed drawing on page 6.

### 2. Showerhead (not shown)

Distributes water evenly over coffee, reducing temperature loss as water passes through grounds.

### **3. Control Panel**

See detailed drawing on page 6.

### **4. Filter Basket Compartment**

See detailed drawing on page 6.

#### **Contains:**

Filter Basket

Filter Basket Cover

Cuisinart Gold Tone Commercial

Style Filter

### **5. Filter Basket Door**

### **6. Filter Basket Door Release Button (not shown)**

### **7. Brew Pause**

Stops flow of coffee from basket when carafe is removed from resting plate, so a cup can be poured in mid-brew, if desired.

### **8. Resting Plate**

Scratch resistant with nonstick coating.

### **9. Thermal Carafe with Hands-Free Lid**

An easy-pour, dripless double-wall insulated 10-cup thermal carafe with ergonomic handle. Coffee brews through and pours through a unique lid that seals out air to preserve fresh-brewed flavor. No need to turn or adjust lid.

### **10. Cord Storage (not shown)**

### **11. Measuring Scoop with Brush (not shown)**



### **12. #4 Basket Paper Filters included (not shown)**

### **13. Charcoal Water Filter (not shown)**

Charcoal water filter eliminates chlorine, bad tastes and odors from tap water.

**NOTE:** Follow directions for preparing and inserting filter on page 9.

### **14. Water Reservoir with Water Level Indicator**

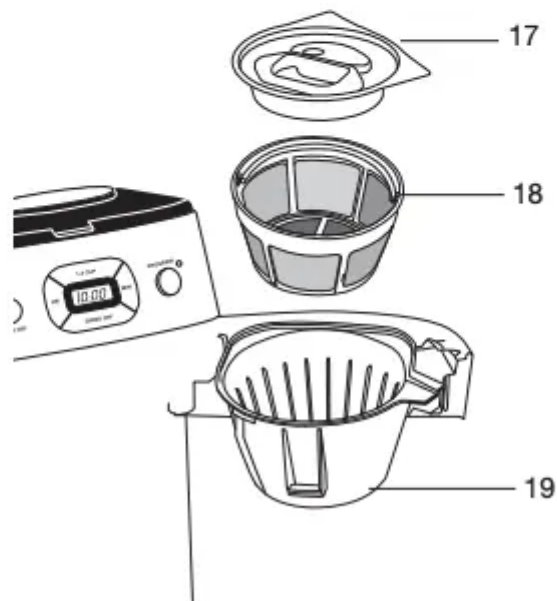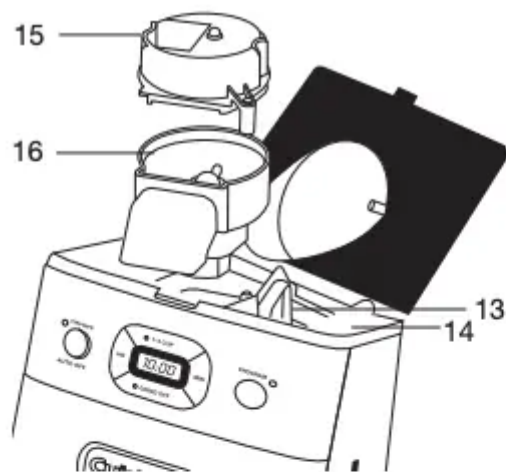

### 15. Grinder Basket Lid

Use the recess on each side of the lid to remove lid for easy addition of beans.

**Note:** Lid must be in place for unit to operate.

### 16. Grinder Basket

### 17. Filter Basket Cover

To put on or remove, grasp cover in area indicated by arrows.

**NOTE:** COVER MUST BE IN PLACE FOR UNIT TO OPERATE CORRECTLY. Cover becomes hot after coffee is brewed. Use caution when removing cover.

### 18. Gold Tone Cuisinart Commercial Style Filter

A note about filters: When using our permanent filter, position handle toward front of the unit so it does not interfere with the flow of coffee into the filter basket. Also note: using our permanent

goldtone filter may allow some fine coffee grounds to fall into, and appear as sediment in the carafe.

### **19. Filter Basket**

Holds our commercial style permanent filter or paper filter. Removable for easy cleaning.

**NOTE:** FILTER BASKET HOLDER MUST BE IN PLACE FOR UNIT TO OPERATE CORRECTLY.

## **GETTING TO KNOW YOUR CONTROL PANEL**

(Detailed programming instructions on page 7.)



### **Clock/LCD Display**

Displays time of day and Auto On times.

### **On/Off button with LED Indicator**

Manually turns coffeemaker on or off.

### **Audible Tone (not shown)**

An audible tone sounds 5 times when brew cycle is complete.

### **1-4 Cup Setting**

Improves extraction, flavor and temperature when brewing fewer than 5 cups.

### **Hour and Minute Buttons**

Use to program clock and Auto On function.

### **Grind Off Button with LED Indicator**

Turns off the grinder when using pre-ground coffee.

### **Program Button with LED Indicator**

Sets and/or displays programmed Auto On time.

# PROGRAMMING YOUR COFFEEMAKER

## SETTING THE CLOCK

When the coffeemaker is plugged in, 12:00 will appear until you set the time.

### Entering Time Set Mode

Hold down the Hour or Minute button until the clock begins flashing. Press either button to select the desired time. Hold buttons down to scroll through the digits, or press and release to advance one digit at a time. When scrolling, the numbers will advance slowly and then speed up.

When the number displayed approaches the desired time, press and release to advance one digit at a time. Be sure the PM indicator is on if a PM time is desired.

### Exiting Time Set Mode

- a. Press any function button besides Hour or Minute to exit mode.
- b. If you do nothing for a period of five seconds the mode will be exited.

## SETTING THE PROGRAM TIME

When you press the Program set button, it displays a previously selected auto-on time, or the default time (12:00pm).

### Entering Set Program Time Mode

Press and hold the Program set button until the green light and LCD display begin to flash. You are now in Set Program Time mode. Set the time you want coffee to begin brewing by following the instructions in "Entering Time Set Mode."

The coffeemaker will start to brew at the programmed time. The Program mode cannot be entered if the coffeemaker is in its brew cycle.

### Exiting Set Program Time Mode

- a. Press and release Program button.
- b. Press any function button besides Hour or Minute to exit mode and activate the selected function.
- c. If you do nothing for a period of five seconds the mode will be exited.

## BEFORE BREWING YOUR FIRST POT OF COFFEE

We recommend flushing out the system before brewing your first pot of coffee. Simply follow "Making Coffee with PreGround Beans," page 9. Skip step #1 and be sure to use only water and a paper filter...no coffee! Once you've done that, brew a pot of real coffee and get ready to enjoy Cuisinart at its best!

## MAKING COFFEE WITH WHOLE BEANS

Follow instructions in “Before Brewing Your First Pot of Coffee” above.

### 1. Insert Charcoal Water Filter

Follow directions for the preparation and insertion of the charcoal water filter on page 9.

### 2. Fill the Water Reservoir

Open the reservoir cover and pour in water, using the water level window indicator to measure the number of cups desired.

**NOTE:** Do not exceed the 10-cup line. Doing so could cause carafe to overflow.

### 3. Add Beans

Lift the grinder basket lid, using the recess on either side. Fill the basket with the desired quantity of beans.

**NOTE:** Use 1 level scoop of whole beans per cup. For 1 to 4 cups, use 1½ level scoops per cup. Do not add over 14 scoops. This could cause the grinder to malfunction and/or the coffeemaker to overflow.

### 4. Insert Coffee Filter

Press the filter basket door release button to open door.

- Paper filter - place a #4 basket paper filter in the basket, making sure the filter is completely open and touching the side walls and bottom of basket.
- Be sure the filter handle is facing away from the grinder basket, so it does not interfere with the flow of ground coffee into the filter basket. **NOTE:** Some ground coffee may flow into the carafe

### 5. Put Filter Basket Lid in Place and Close Filter Door

### 6. Close Reservoir Cover Lid

Press down to lock. This coffeemaker is equipped with a safety interlock system, which prevents the unit from operating if the cover is open or the grinder cover is left out. If you try to turn the unit on with the cover open, the unit will beep continuously until the missing parts are installed and you close the lid. If you open the cover during the grinding process, it will beep, the grinder will stop grinding and, if brewing, the brewing will stop. Once the missing parts are in place and the cover is closed, the beeping stops. The brewing process can be restarted by pressing the On button. Restarting the process will not affect coffee results. If you do not want the grinder to come on again, press the Grind Off button before pressing the On button.

## 7. Prepare the Carafe

Remove thermal carafe lid by turning in the direction of the “unlock” arrow. PREWARM CARAFE BY RINSING IT OUT WITH HOT WATER. PREWARMING THE CARAFE WILL HELP KEEP THE COFFEE HOTTER. Return the carafe lid to the carafe and lock by turning it in the direction of the “lock” arrow until it fits tightly on carafe and arrow lines up in the center of the pour spout. This ensures cover is closed and in the proper position for brewing and pouring. Make sure you have replaced the thermal carafe in its position on the resting plate.

## 8. Brewing

### To Brew Right Away

- a. Push the 1-4 cup button if you are brewing fewer than 5 cups.

**NOTE:** Coffeemakers traditionally produce cooler coffee when brewing small pots because the heater doesn't have time to warm up. This setting double heats water for piping hot coffee.

- b. Press On/Off button. Red LED will light up and brewing will begin.

### To Program Brew Time

- a. To select the time you want coffee to start brewing, press the Program button and hold it. The time displayed in the window is the programmed start time. To change time, follow “Setting The Program Time” instructions on page 7.
- b. Push the 1-4 cup button if you are brewing fewer than 5 cups.
- c. Press and release Program button. Green LED indicates that the unit is in programmed-start mode and the brew cycle will begin at the time you selected.

## 9. After Brewing

When brew cycle is complete, five beeps will sound and unit will automatically shut itself off. Coffee will continue to stream from the filter for several seconds. The thermal carafe will keep coffee hot for hours. Bottom of thermal carafe is hot to touch for several minutes after brewing. Use caution

### TIPS AND HINTS


- If you buy large portions of beans, separate them into one or two week portions and store them in airtight containers in the freezer. Preserve freshness by minimizing exposure to air, light, and moisture. Once beans are removed from the freezer, keep them in a sealed container at room temperature, since damaging condensation can occur when beans move from cold to warmer temperatures.

## CHARCOAL WATER FILTER

Your coffeemaker comes with a charcoal water filter that eliminates chlorine, bad tastes and odors from tap water.

### Inserting the Water Filter

- Remove the filter from polybag and soak it, fully immersed, in cold tap water for 15 minutes.
- Lift the water filter holder out of the water reservoir (see page 6, #13 and #14).
- Press down on the filter compartment and pull toward you to open.
- Place filter into the holder and snap it closed. Be careful - improper placement can tear the filter skin.
- Flush filter by running cold tap water through holes in bottom of compartment for 10 seconds.
- Allow the filter to drain completely.
- Slide the water filter holder back into the channel in the water reservoir, pushing it down to the base of the unit.

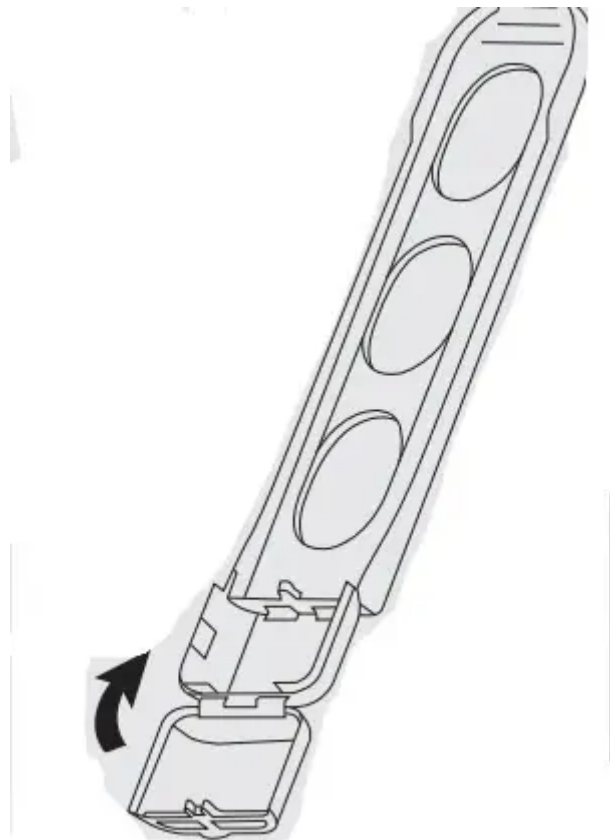

**NOTE:** We recommend changing the water filter every 60 days or after 60 uses, and more often if you have hard water. Replacement filters can be purchased in stores, by calling Cuisinart customer service, or at cuisinart.

- Some experts feel freezing dark-roast beans can cause oils to coagulate; others disagree. You'll have to decide that one for yourself!

## **MAKING COFFEE WITH PRE-GROUND BEANS**

Follow instructions in “Before Brewing Your First Pot of Coffee,” page 7.

### **1. Fill the Reservoir and Insert Filter**

See steps #1 and #3 in “Making Coffee with Whole Beans,” page 7.

### **2. Add Pre-Ground Coffee**

Our recipe suggestion: Use 1 level scoop of ground coffee per cup. Adjust the recipe according to taste.

**NOTE:** The maximum capacity for ground coffee is 16 level scoops, using either a paper or permanent filter. Exceeding that amount may cause overflow if the coffee is too finely ground.

### **3. Press Grind Off Button**

When this function is activated, an amber LED will come on.

### **4. Follow steps #4 through #8 in “Making Coffee with Whole Beans.”**

#### **Brew Pause™ Feature**

Our Brew Pause™ feature interrupts the flow of coffee from the basket to let you pour that first cup mid-brew. Be aware that using this feature will weaken the flavor strength of the finished pot, because the flavor profile of coffee brewed at the beginning of the cycle differs from coffee made at the end.

**NOTE:** Removing carafe for more than 20 seconds may cause filter basket to overflow.

## **CLEANING AND MAINTENANCE**

### **COMPLETELY CLEAN AND DRY ALL PARTS AFTER EVERY USE**

Always turn coffeemaker OFF and remove the plug from the electrical outlet before cleaning.

Open the reservoir lid\*. Remove the grinder basket lid by using the recessed area on each side of the lid. Then remove grinder basket. Open filter basket door. Remove filter basket cover, filter basket and filter basket holder. The grinder basket, grinder basket lid, filter basket and filter basket cover can be washed in warm soapy water and rinsed thoroughly, or cleaned in the upper rack of the dishwasher. Dry all parts after every use. Do not put any water in the unit once the grinder basket has been removed. Wipe the area under the grinder basket with a damp cloth. If water gets

into the grinder motor, the motor may become damaged and may malfunction. Once clean, reverse the above steps. Remove the carafe from the resting plate. Discard any remaining coffee. The carafe and lid can be washed in warm soapy water and rinsed thoroughly, or placed in a dishwasher.

The carafe and carafe lid should be placed on the upper rack only. Do not use scouring agents or harsh cleansers on any part of the coffeemaker. Never immerse base unit in water or other liquid. To clean base, simply wipe with a clean, damp cloth and dry before storing.

Wipe resting plate with a clean, damp cloth. Never use rough, abrasive materials or cleansers to clean the resting plate. Do not dry the inside of the water reservoir with a cloth, as lint may remain.

**\*Note:** Reservoir lid can also be removed for easy cleaning. Open the lid 60° and gently pull toward you. To replace, reverse steps.

## DECALCIFICATION

Decalcification refers to removing the calcium deposits which form over time on the metal parts of the coffeemaker.

For best performance from your coffeemaker, decalcify the base unit from time to time. The frequency depends upon the hardness of your tap water and how often you use the coffeemaker.

To clean, fill the water reservoir to capacity with a mixture of 1/3 white vinegar and 2/3 water. Turn the coffeemaker on by pressing the ON button. One cycle should be sufficient to adequately clean the coffeemaker. When the cycle is completed and five beeps sound, turn coffeemaker off. Repeat operation, this time using fresh cold water.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.