


CONTROL PANEL

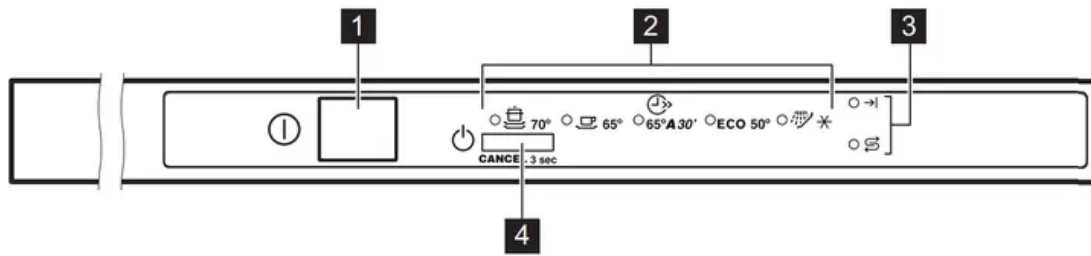

- 1** On/off button
- 2** Programme indicators
- 3** Indicators
- 4** Programme button

INDICATORS







End indicator.



Salt indicator. It is always off while the programme operates.

PROGRAMMES


Programme	Degree of soil Type of load	Programme phases	Consumption values 1)		
			Duration (min)	Energy (kWh)	Water (l)
ECO 2)	Normal soil Crockery and cutlery	<ul style="list-style-type: none"> ▪ Prewash ▪ Wash 50 °C ▪ Rinses ▪ Dry 	225	0.778	9.9
	Heavy soil Crockery, cut- lery, pots and pans	<ul style="list-style-type: none"> ▪ Prewash ▪ Wash 70 °C ▪ Rinses ▪ Dry 	160 - 168	1.1 - 1.3	13-14
	Normal soil Crockery and cutlery	<ul style="list-style-type: none"> ▪ Prewash ▪ Wash 65 °C ▪ Rinses ▪ Dry 	130 - 140	1.0 - 1.2	14-15
	Fresh soil Crockery and cutlery	<ul style="list-style-type: none"> ▪ Wash 60 °C or 65 °C ▪ Rinses 	30	0.7	8
 4)	All	<ul style="list-style-type: none"> ▪ Prewash 	14	0.1	4

1. The pressure and the temperature of the water, the variations of the mains supply, the options and the quantity of dishes can change the values.

2. With this programme, you have the most efficient use of water and energy consumption for crockery and cutlery with normal soil. (This is the standard programme for test institutes).
3. With this programme, you can wash a load with fresh soil. It gives good washing results in a short time.
4. Use this programme to quickly rinse the dishes. this prevents the remaining food to bond on the dishes and bad odours to come out from the appliance. Do not use detergent with this programme.

SETTINGS

PROGRAMME SELECTION MODE

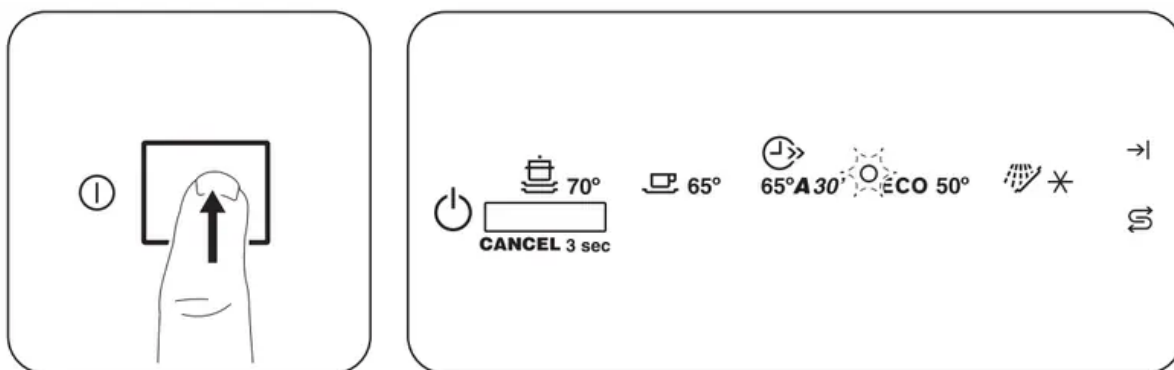

The appliance is in programme selection mode when the programme indicator flashes. After activation, the appliance is in programme selection mode by default . If not, set the programme selection mode the following way:

1. Press and hold the programme button for 3 seconds.

CANCEL FUNCTION

Press the programme button until the appliance is in programme selection mode. With this function, you can cancel the running programme.

USER MODE

While the appliance is in programme selection mode:

1.



Press and hold the programme button until the indicator flashes, and the



indicators



and

are on.

Settings available in the user mode:

- The level of the water softener according to the water hardness.
- The activation or the deactivation of the acoustic signal for the end of programme.
- The activation or the deactivation of AirDry.

As the appliance stores the saved settings, there is no need to configure it before every cycle.

ADJUSTING THE WATER SOFTENER

1.




While the appliance is in user mode, wait until the indicators and



are off.

- The indicator  still flashes.

- The current setting is indicated by the number of flashes of the indicator  (e.g. 5 flashes + pause + 5 flashes... = level 5).

2. Press the programme button to change the setting. Each pressing of the programme button increases the level number. After reaching level 10, the count starts again from level 1.
3. Press the on/off button to confirm the setting.

THE WATER HARDNESS TABLE

German degrees (°dH)	French degrees (°fH)	mmol/l	Clarke degrees	Water softener level
47 - 50	84 - 90	8.4 - 9.0	58 - 63	10
43 - 46	76 - 83	7.6 - 8.3	53 - 57	9
37 - 42	65 - 75	6.5 - 7.5	46 - 52	8
29 - 36	51 - 64	5.1 - 6.4	36 - 45	7
23 - 28	40 - 50	4.0 - 5.0	28 - 35	6
19 - 22	33 - 39	3.3 - 3.9	23 - 27	5 (1)
15 - 18	26 - 32	2.6 - 3.2	18 - 22	4
11 - 14	19 - 25	1.9 - 2.5	13 - 17	3
4 - 10	7 - 18	0.7 - 1.8	5 - 12	2
<4	<7	<0.7	< 5	1 (2)

1) Factory setting

2) Do not use salt at this level.

ACTIVATING THE ACOUSTIC SIGNAL FOR THE END OF PROGRAMME


By default, the acoustic signal is deactivated but it is possible to activate it. While the appliance is in user mode, within about 5 seconds:

1. Press the programme button


•  and  are on.

• The indicator  SS flashes

2. Wait until the indicators  and  are off.

• The indicator  is off = the acoustic signal is deactivated.

3. . Press the programme button to change the setting.

• The indicator  is on = the acoustic signal is activated.

4. Press the on/off button to confirm the setting.


ACTIVATING AIRDRY

AirDry improves the drying results with less energy consumption.

By default, AirDry is activated with all programmes excluding



(if applicable) but it is possible to deactivate it.

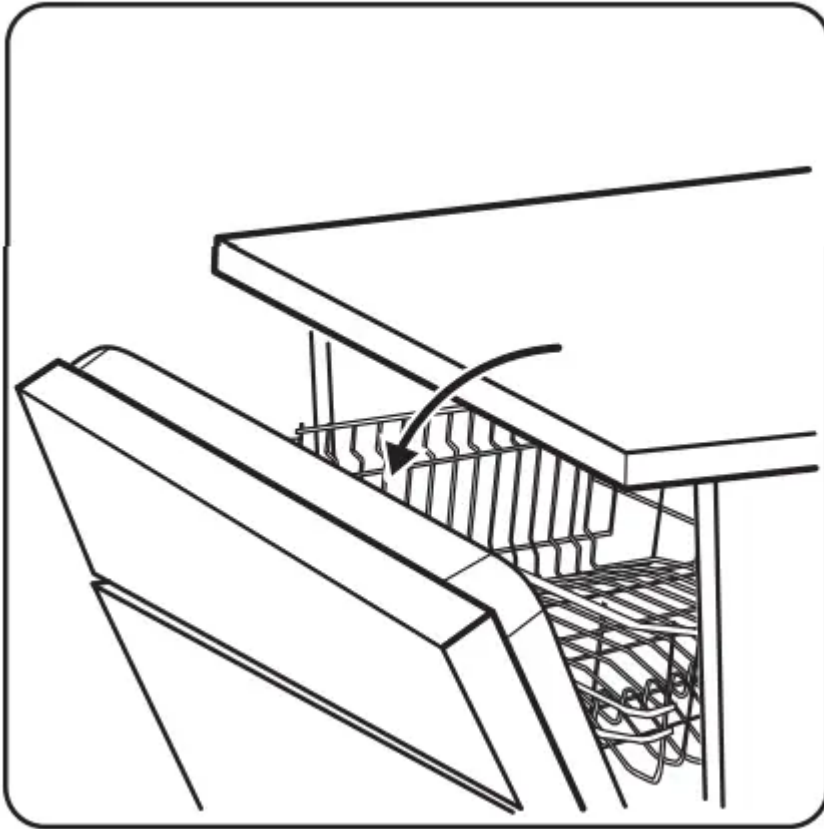

While the drying phase operates, the device opens the appliance door. The door is then kept ajar.

While the appliance is in user mode, within about 5 seconds:

1. Press the programme button twice.

- The indicators  and  are on.

- The indicator  SS flashes

2. Wait until the indicators  and  are off

- The indicator  is on = AirDry is activated

3. Press the programme button to change the setting.

•
The indicator  is off = AirDry is deactivated.

4. Press the on/off button to confirm the setting.



BEFORE FIRST USE


1. Make sure that the current level of the water softener agrees with the hardness of the water supply. If not, adjust the level of the water softener.
2. Fill the salt container.
3. Fill the rinse aid dispenser.
4. Open the water tap.
5. Start a programme to remove any processing residuals that can still be inside the appliance

Do not use detergent and do not load the baskets.

After starting a programme, it may take up to 5 minutes for the appliance to recharge the resin in the water softener. It seems that the appliance is not working. The washing phase starts only after this procedure is completed. The procedure is repeated periodically.

ADDING SALT

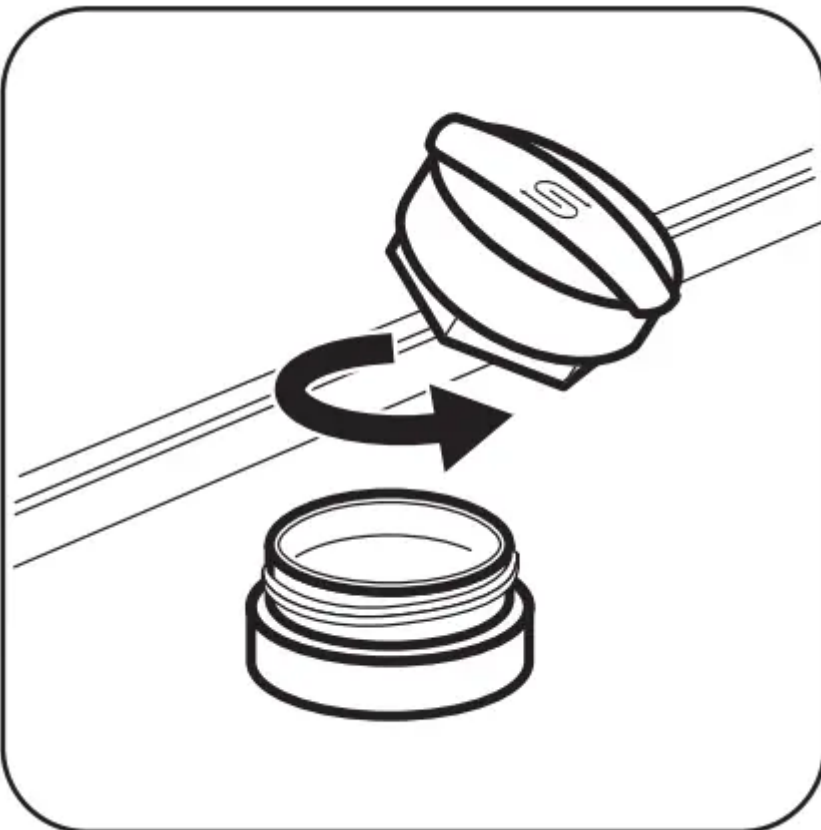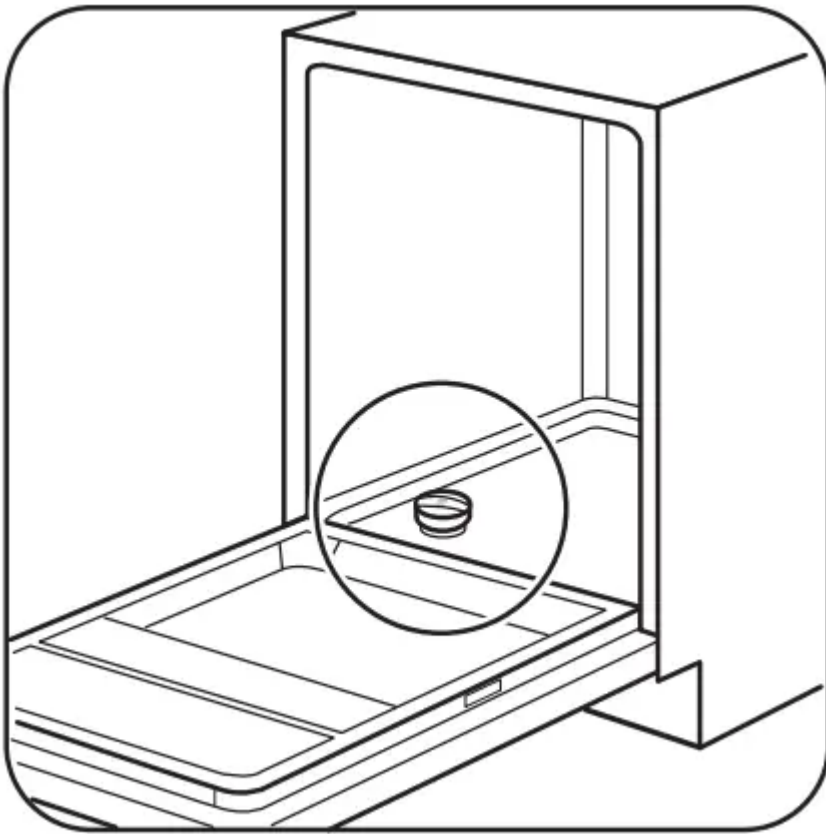

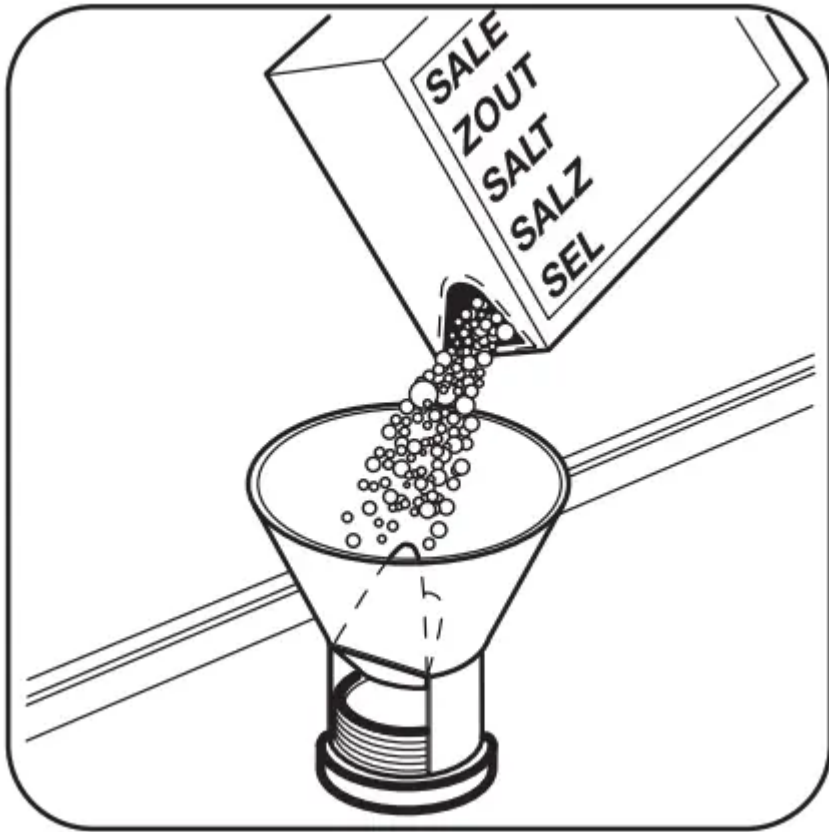



Before the first use, put one litre of water in the salt container



CAUTION!

Water and salt can come out of the salt container during filling. To prevent corrosion, start a programme immediately after filling the salt container.

ADDING RINSE AID

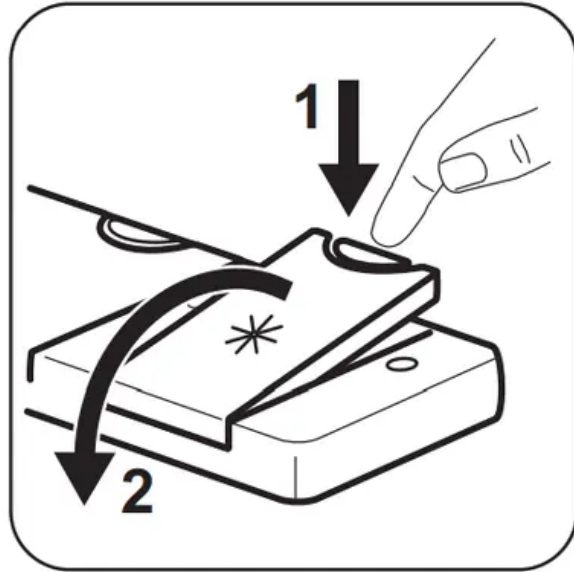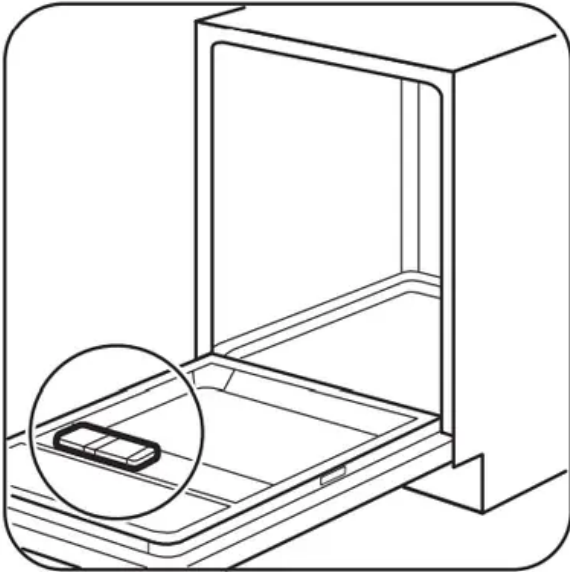

The rinse aid helps to dry the dishes without streaks and stains. It is automatically released during the hot rinse phase. Fill the rinse aid dispenser when the lens (A) is clear.

DAILY USE

1. Open the water tap.

2. Press the on/off button to activate the appliance.

Make sure that the appliance is in programme selection mode.





- If the salt indicator is on, fill the salt container

3. Load the baskets.

4. Add the detergent.





5. Set and start the correct programme for the type of load and the degree of soil.

ADDING DETERGENT

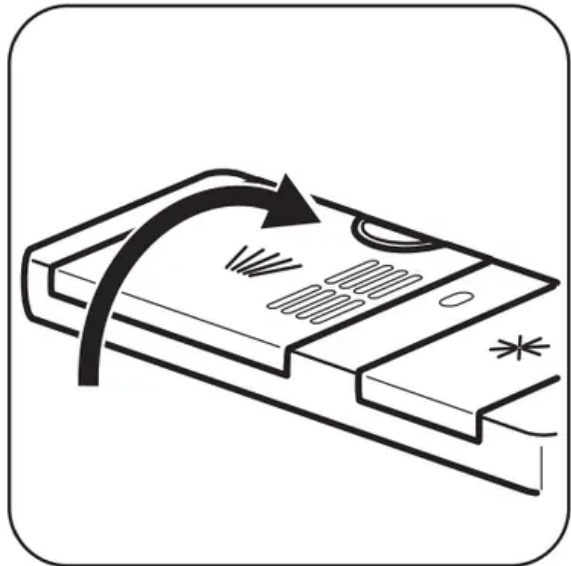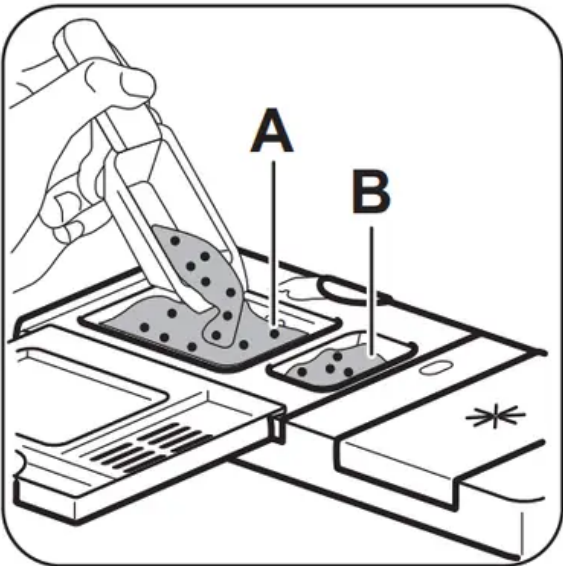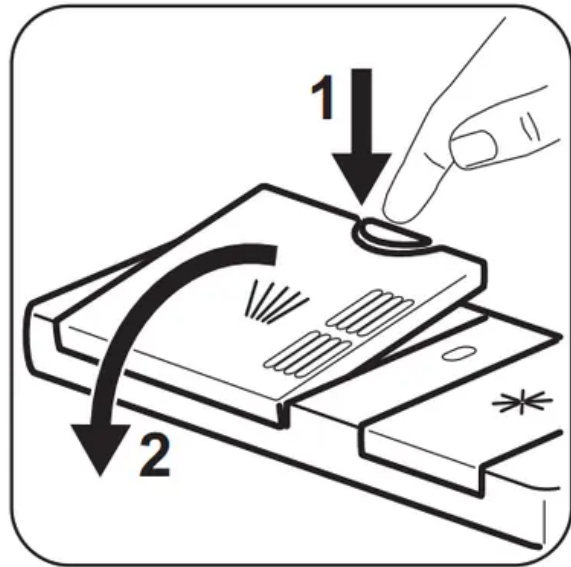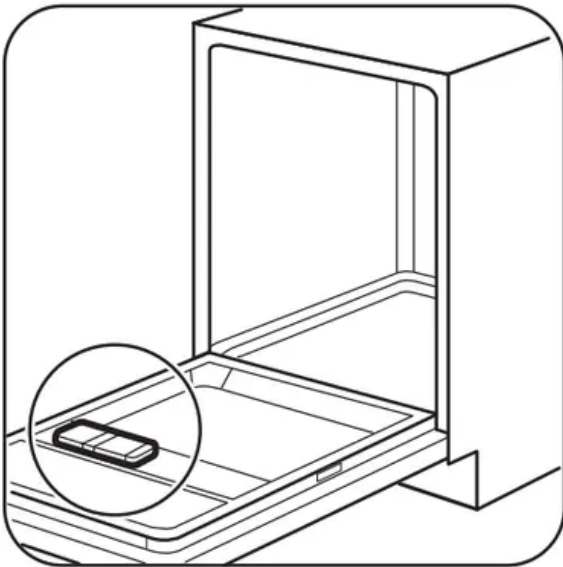

If the programme has a prewash phase, put a small quantity of detergent also in compartment B

ADDING MULTI-TABLETS

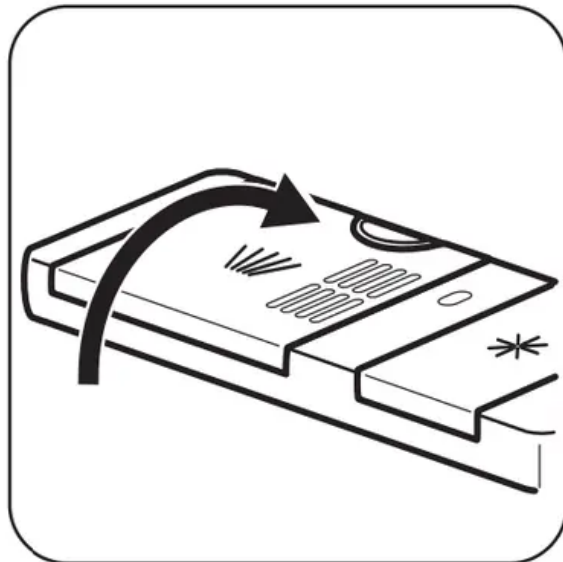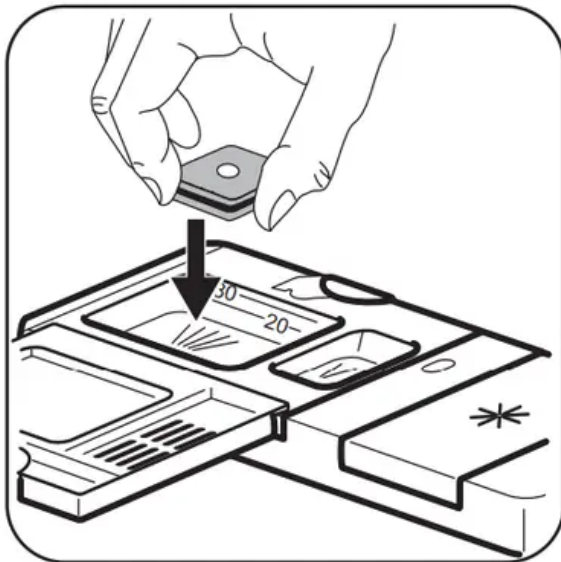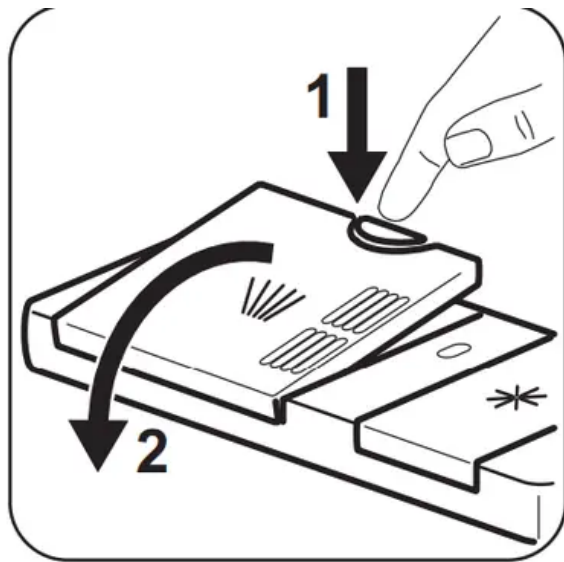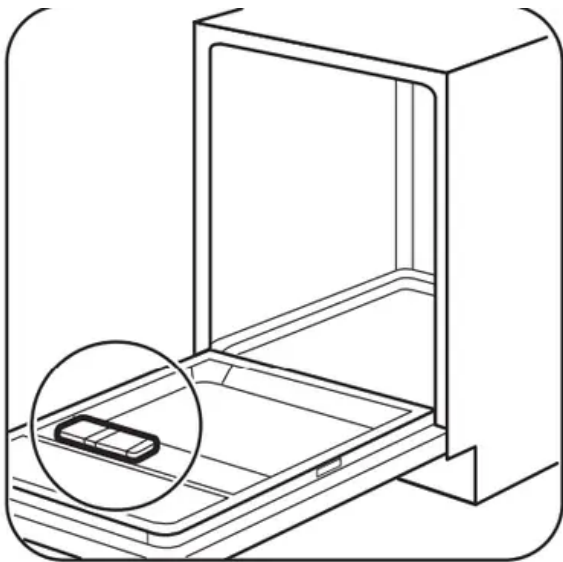

- Do not fill the salt container and the rinse aid dispenser.
- Set the rinse aid dispenser to the lowest position.

SETTING AND STARTING A PROGRAMME

Starting a programme

1. Keep the appliance door ajar.
2. Press the on/off button to activate the appliance. Make sure that the appliance is in programme selection mode.
3. Press the programme button until the indicator of the chosen programme is flashing.
4. Close the appliance door to start the programme.


Opening the door while the appliance operates

Opening the door while a programme is running stops the appliance. It may affect the energy consumption and the programme duration. After closing the door, the appliance continues from the point of interruption.



If the door is opened for more than 30 seconds during the drying phase, the running programme ends. It does not happen if the door is opened by AirDry function.

End of the programme

When the programme is completed the indicator  is on

1. Press the on/off button or open the door to deactivate the appliance.
2. Close the water tap.



After 5 minutes of non-use, the appliance enters standby mode and all the indicators are off. It decreases the energy consumption.



Do not try to close the appliance door within 2 minutes after AirDry automatically opens it, as this may cause damage to the appliance. If, afterwards, the door is closed for another 3 minutes, the running programme ends.


CARE AND CLEANING



WARNING! Before maintenance, deactivate the appliance and disconnect the mains plug from the main socket.



Dirty filters and clogged spray arms decrease the washing results. Make a check regularly and, if necessary, clean them.

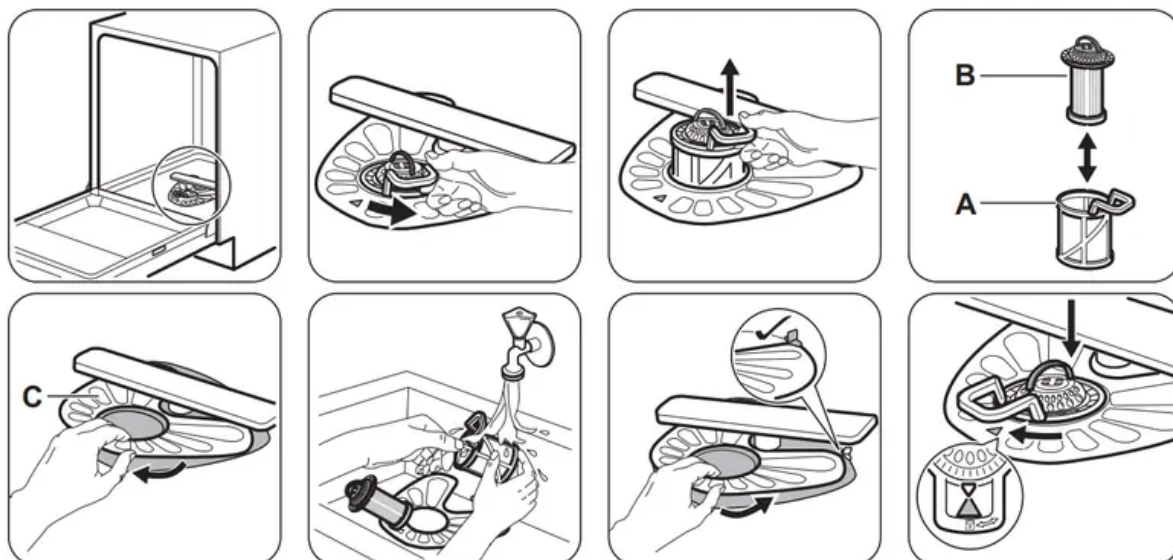

- Make sure that there are no residues of food or soil in or around the edge of the sump.
- Put back in place the flat filter (C). Make sure that it is correctly positioned under the 2 guides.
- Reassemble the filters (A) and (B).
- Put back the filter (A) in the flat filter (C). Turn it clockwise until it locks.



An incorrect position of the filters can cause bad washing results and damage to the appliance

CLEANING THE SPRAY ARMS

Do not remove the spray arms. If the holes in the spray arms are clogged, remove remaining parts of soil with a thin pointed object

EXTERNAL CLEANING

- Clean the appliance with a moist soft cloth.
- Only use neutral detergents.
- Do not use abrasive products, abrasive cleaning pads or solvents.

INTERNAL CLEANING

- Carefully clean the appliance, including the rubber gasket of the door, with a soft damp cloth.

TROUBLESHOOTING

If the appliance does not start or it stops during operation, before you contact an Authorised Service Centre, check if you can solve the problem by yourself with the help of the information in the table.

With some problems the end indicator flashes intermittently indicating a malfunction. The majority of problems that can occur can be solved without the need to contact an Authorised Service Centre



WARNING! Repairs not properly done may result in serious risk to the safety of the user. Any repairs must be performed by qualified personnel.

Problem and alarm code	Possible cause and solution
<p>You cannot activate the appliance.</p>	<ul style="list-style-type: none"> • Make sure that the mains plug is connected to the mains socket. • Make sure that there is no damaged fuse in the fuse box.
<p>The programme does not start.</p>	<p>Make sure that the appliance door is closed.</p> <p>The appliance has started the procedure to recharge the resin inside the water softener. The duration of the procedure is approximately 5 minutes.</p>
<p>The appliance does not fill with water.</p> <p>The end indicator flashes 1 time intermittently.</p> <p>Acoustic signal sounds 1 time intermittently.</p>	<p>Make sure that the water tap is open.</p> <p>Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority.</p> <p>Make sure that the water tap is not clogged.</p> <p>Make sure that the filter in the inlet hose is not clogged.</p> <p>Make sure that the inlet hose has no kinks or bends.</p>
<p>The appliance does not drain the water.</p> <p>The end indicator flashes 2 times intermittently.</p> <p>Acoustic signal sounds 2 times intermittently.</p>	<p>Make sure that the sink spigot is not clogged.</p> <p>Make sure that the drain hose has no kinks or bends.</p>
<p>The appliance does not drain the water.</p> <p>The end indicator flashes 2 times intermittently.</p> <p>Acoustic signal sounds 2 times intermittently.</p>	<p>Make sure that the sink spigot is not clogged.</p> <p>Make sure that the drain hose has no kinks or bends.</p>
<p>The anti-flood device is on.</p> <p>The end indicator flashes 3 times intermittently.</p>	<p>Close the water tap and contact an Authorised Service Centre.</p>

Acoustic signal sounds 3 times intermittently.	
The appliance stops and starts more times during operation.	It is normal. It provides optimal cleaning results and energy savings.
Small leak from the appliance door.	The appliance is not levelled. Loosen or tighten the adjustable feet (if applicable). The appliance door is not centred on the tub. Adjust the rear foot (if applicable).
The appliance door is difficult to close.	The appliance is not levelled. Loosen or tighten the adjustable feet (if applicable). Parts of the tableware are protruding from the baskets
Rattling/knocking sounds from inside the appliance.	The tableware is not properly arranged in the baskets. Refer to basket loading leaflet. Make sure that the spray arms can rotate freely.
The appliance trips the circuit-breaker	The amperage is insufficient to supply simultaneously all the appliances in use. Check the socket amperage and the capacity of the meter or turn off one of the appliances in use. Internal electrical fault of the appliance. Contact an Authorised Service Centre.



Refer to "Before first use", "Daily use", or "Hints and tips" for other possible causes.

Once you have checked the appliance, deactivate and activate the appliance. If the problem occurs again, contact an Authorised Service Centre.

THE WASHING AND DRYING RESULTS ARE NOT SATISFACTORY

Problem	Possible cause and solution
<p>Poor washing results.</p>	<p>Refer to "Daily use", "Hints and tips" and basket loading leaflet.</p> <p>Use more intensive washing programmes.</p> <p>Clean spray arm jets and filter. Refer to "Care and Cleaning".</p>
<p>Poor drying results.</p>	<p>Tableware has been left for too long inside a closed appliance.</p> <p>There is no rinse aid or the dosage of rinse aid is not enough. Set the rinse aid dispenser to a higher level.</p> <p>Plastic items may need to be towel dried.</p> <p>For the best drying performance activate AirDry.</p> <p>We recommend to always use rinse aid, even in combination with multi-tablets.</p>
<p>There are whitish streaks or bluish layers on glasses and dishes.</p>	<p>The release quantity of rinse aid is too much. Adjust the rinse aid level to a lower level.</p> <p>The quantity of detergent is too much.</p>
<p>There are stains and dry water drops on glasses and dishes.</p>	<p>The released quantity of rinse aid is not sufficient. Adjust the rinse aid level to a higher level.</p> <p>The quality of the rinse aid can be the cause.</p>
<p>The dishes are wet.</p>	<p>For the best drying performance activate AirDry.</p> <p>The programme does not have a drying phase or has a drying phase with low temperature.</p> <p>The rinse aid dispenser is empty.</p> <p>The quality of the rinse aid can be the cause.</p> <p>The quality of the multi-tablets can be the cause. Try a different brand or activate the rinse aid dispenser and use rinse aid and multi-tablets together.</p>
<p>The interior of the appliance is wet.</p>	<p>This is not a defect of the appliance. it is caused by the humidity in the air that condenses on the walls.</p>

<p>Unusual foam during washing</p>	<p>Use the detergent for dishwashers only.</p> <p>There is a leak in the rinse aid dispenser. Contact an Authorised Service Centre.</p>
<p>Traces of rust on cutlery</p>	<p>The detergent tablet got stuck in the dispenser and therefore was not completely washed away by water.</p> <p>Water cannot wash away the detergent from the dispenser. Make sure that the spray arm is not blocked or clogged.</p> <p>Make sure that items in the baskets do not impede the lid of the detergent dispenser from opening.</p>
<p>Odours inside the appliance</p>	<p>Refer to "Internal cleaning".</p>
<p>Limescale deposits on the tableware, on the tub and on the inside of the door.</p>	<p>The level of salt is low, check the refill indicator.</p> <p>The cap of the salt container is loose.</p> <p>Your tap water is hard. Refer to "The water softener".</p> <p>Even using multi-functional tabs use salt and set regeneration of the water softener. Refer to "The water softener".</p> <p>If lime scale deposits still remain, clean the appliance with appliance cleaners which are particularly suitable for this purpose.</p> <p>Try different detergent.</p> <p>Contact the detergent manufacturer.</p>
<p>Dull, discoloured or chipped tableware.</p>	<p>Make sure that only dishwasher-safe items are washed in the appliance.</p> <p>Load and unload the basket carefully. Refer to basket loading leaflet.</p> <p>Place delicate items in the upper basket</p>



Refer to "Before first use", "Daily use" or "Hints and tips" for other possible causes.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

