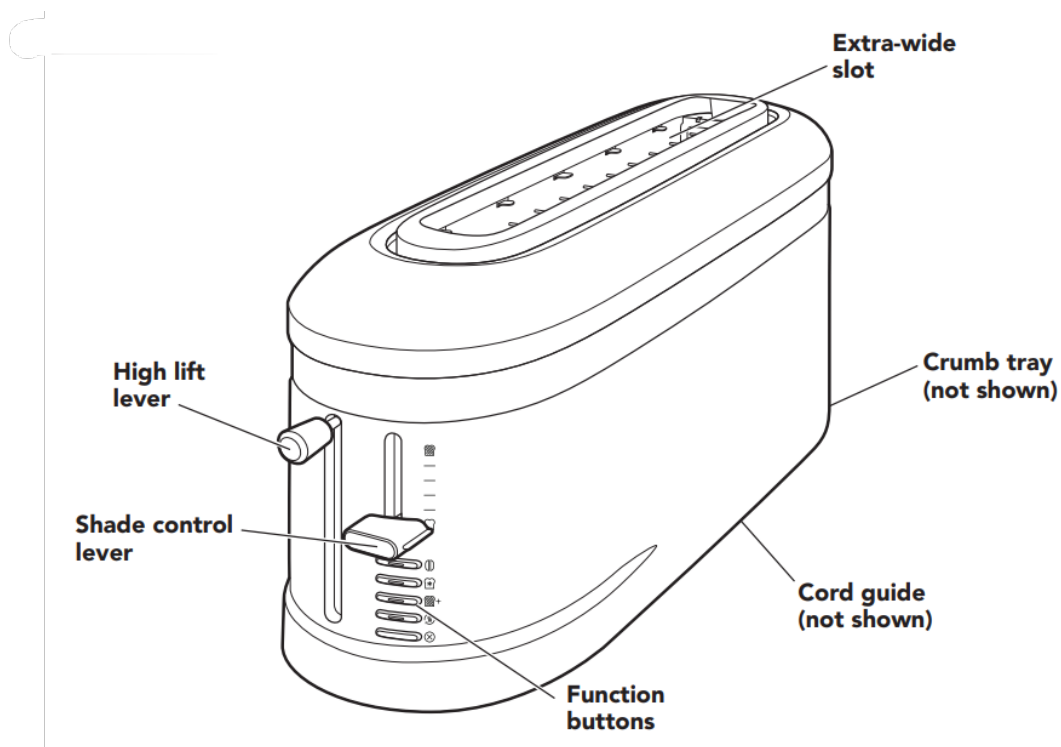


PARTS AND FEATURES

 



 
PARTS AND ACCESSORIES

2-slice (KMT3115)



USING THE TOASTER

 
FUNCTION BUTTONS

	BAGEL Toasts the inside of a cut bagel without burning the bagel's outside surface.
	DEFROST Defrosts and toasts frozen food.
	A LITTLE LONGER Allows you to toast something for just "a little longer".
	REHEAT Quickly reheats previously toasted food.
	CANCEL Cancels the toasting cycle and raises your bread for removal.

GETTING STARTED

Before using your Toaster for the first time, check the extra-wide slot(s) and remove any packing or printed material that might have fallen inside during shipping or handling.

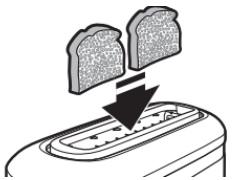

IMPORTANT: To avoid damage to the Toaster, do not probe inside the toaster slots with any metal objects, including utensils.

1		Tuck the power cord into the channel of the cord guide on the bottom of the Toaster so that it exits from the rear of the Toaster beneath the crumb tray. Plug into a grounded 3 prong outlet.
---	---	--

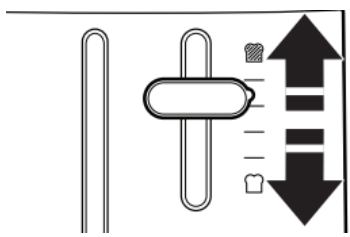
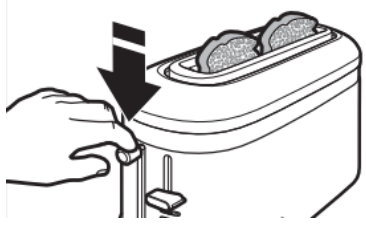
NOTE: You may see light smoke the first time you use the Toaster. This is normal. The smoke is harmless and will soon dissipate.

TOASTING

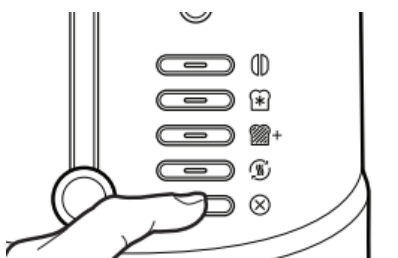

NOTE: All images shown are of the 2-slice Toaster, model KMT3115.

1		<p>Insert bread or other food to be toasted into the slot(s).</p> <p>TIP: For even toasting, toast only one bread type and thickness at a time. If toasting bagels, be sure to press the Bagel button (). See “Toasting bagels.”</p>
---	---	---

NOTE: The age, type, and moisture level of different breads may require different shade settings. For example, dry bread will brown more rapidly than moist bread and will require a lighter setting.

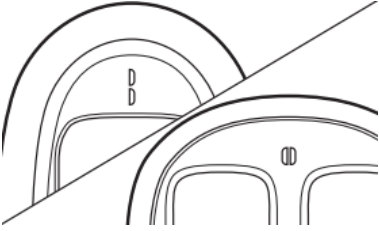
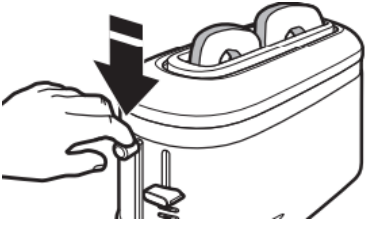
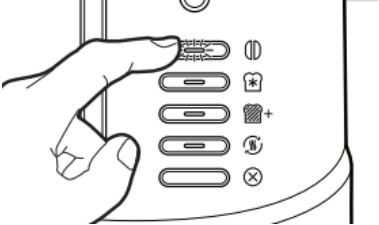

2		<p>Select your desired shade by raising the shade control lever for darker toasting or lowering the lever for lighter toasting.</p>
3		<p>Press down on the high lift lever to start the toasting cycle. The toast will pop up automatically at the end of the cycle and the Toaster will turn off.</p>

NOTE: If using a function button, you must lower the high lift lever first before selecting the function. The LED light next to the function will be lit while the function is in use.

4		<p>To cancel toasting at any time, press  (Cancel). The toast will pop up and the Toaster will turn off.</p> <p>TIP: For smaller items, lift up on the high lift lever to raise toast above the top of the Toaster.</p>
---	---	--

TOASTING BAGELS

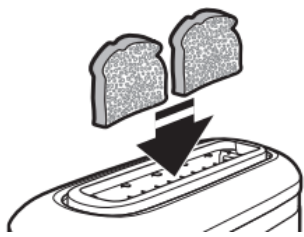
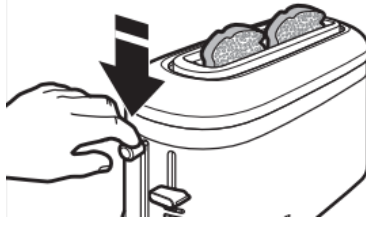
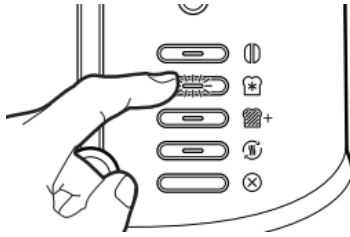

Your Toaster features a special setting for bagels, ensuring optimal heating time for the best results. The heating elements will adjust to nicely toast the inside of a cut bagel without burning the outside surface.

1		Insert bagels as indicated by the bagel icon on top of the Toaster.
2		With the shade control lever set to your desired shade, press down on the high lift lever to start the toasting cycle.
3		Press  ; the Bagel indicator light will glow. The bagel(s) will pop up automatically at the end of the cycle and the Toaster will turn off.

TIP: The Bagel function can be used at the same time as the Defrost function.

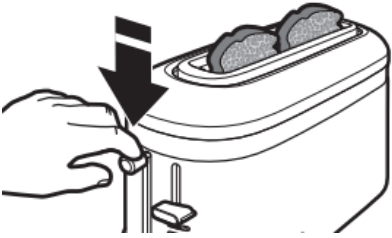
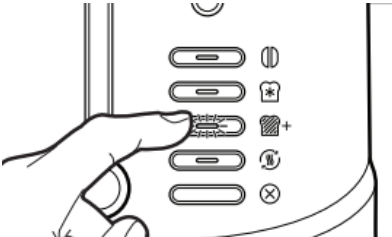

DEFROST

The Defrost function adds extra time to the toasting cycle to defrost frozen items before toasting them.

1		<p>Insert bread or other food to be toasted into the slot(s).</p>
2		<p>With the shade control lever set to your desired shade, press down on the high lift lever to start the toasting cycle.</p>
3		<p>Press  ; the Defrost indicator light will glow. The toast will pop up automatically at the end of the cycle and the Toaster will turn off.</p>

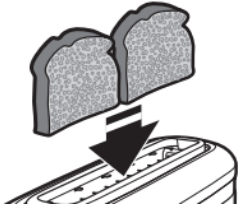

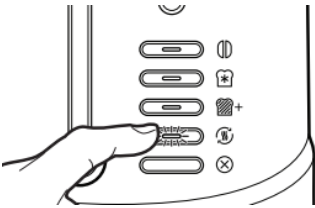


A LITTLE LONGER

This function allows you to toast something for just “a little longer” at the touch of a button without changing your favorite setting. Use this function after the toasting cycle is complete and the toast has risen.

1		<p>Press down on the high lift lever to lower the toast again into the Toaster to resume toasting.</p>
2		<p>Press +. The toast will pop up automatically at the end of the cycle and the Toaster will turn off.</p>

REHEAT

This function allows you to quickly reheat previously toasted foods.

1		<p>Insert the previously toasted food into the slot(s).</p> <p>NOTE: Do not place food with butter or any other topping in the Toaster. Use the Reheat function with dry foods only</p>
2		<p>Press down on the high lift lever to start the toasting cycle.</p>
3		<p>Press . The toast will pop up automatically at the end of the cycle and the Toaster will turn off, or you may press  at any time to cancel the function.</p> <p>NOTE: No shade adjustment is necessary — the Reheat function overrides whatever shade level you have set.</p>


CARE AND CLEANING

CLEANING THE TOASTER

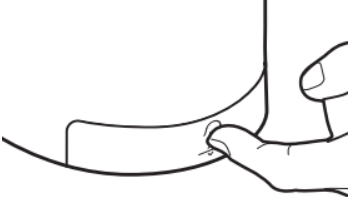

IMPORTANT: The crumb tray will be hot immediately following a toasting cycle. Allow the Toaster to cool before emptying the crumb tray.

IMPORTANT: Unplug the Toaster and let it cool before cleaning.


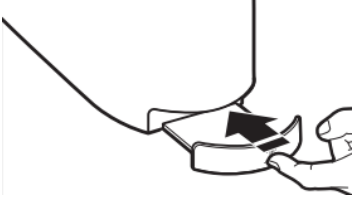
NOTE: For consistent browning results, empty the crumb tray after each use.

1		Wipe the Toaster with a soft, damp cotton cloth. Do not use paper towels, abrasive cleansers, or liquid cleaning products. Do not immerse the Toaster in water.
---	---	---

NOTE: If grease or oil splatters on the Toaster, wipe splatters away immediately using a clean, damp cotton cloth.

2		Press the “push” icon located in the center of the crumb tray.
3		Once the crumb tray has opened slightly, slide it out of the Toaster and shake the crumbs into a waste container.

IMPORTANT: Be sure to open the crumb tray by pressing the “push” icon. Forcing the crumb tray open may damage the crumb tray.

4		The crumb tray should be hand washed only
5		<p>Replace crumb tray by sliding it back into its slot, and pressing in on the center of the crumb tray until it clicks into place.</p> <p>NOTE: Do not use the Toaster without the crumb tray installed.</p>

NOTE: KitchenAid does not recommend the use of a toaster cover.

TOASTER SAFETY

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or Toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. **WARNING** - To prevent electric shock, unplug before servicing.
7. Do not operate the Toaster with a damaged cord or plug, or after the Toaster malfunctions or is dropped or damaged in any manner. Return the Toaster to the nearest Authorized Service Center for examination, repair, or adjustment.
8. Do not use outdoors.
9. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
10. The use of accessories not recommended or sold by KitchenAid may cause fire, electric shock, or injury
11. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.

13. Do not use Toaster for other than intended use.
14. Oversized foods, metal foil packages, or utensils must not be inserted in the Toaster as they may involve a risk of fire or electric shock.
15. A fire may occur if the Toaster is covered with or touching flammable material, including curtains, draperies, walls and the like when in operation.
16. Do not attempt to dislodge food when the Toaster is plugged in.
17. Do not operate Toaster unattended.
18. When heating toaster pastries, always use the lightest toast color setting.

ELECTRICAL REQUIREMENTS

Voltage: 120 V~

Frequency: 60 Hz

Wattage: KMT3115 900 W

KMT5115 1600 W

NOTE: Your Toaster has a 3 prong grounded plug. To reduce the risk of electrical shock, this plug will fit in an outlet only one way. If the plug does not fit in the outlet, contact a qualified electrician.

Do not modify the plug in any way

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or technician install an outlet near the appliance.

A short power supply cord (or detachable power supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.