




PRODUCT DESCRIPTION

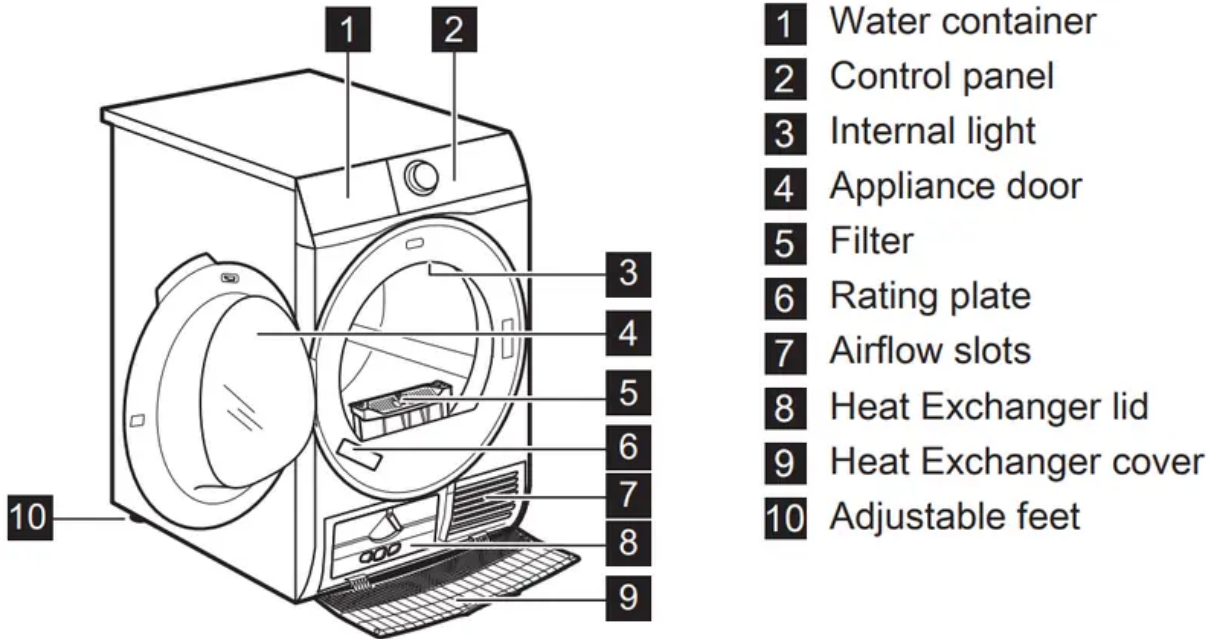

Note: For ease of loading laundry or ease of installation the door is reversible. (see separate leaflet).

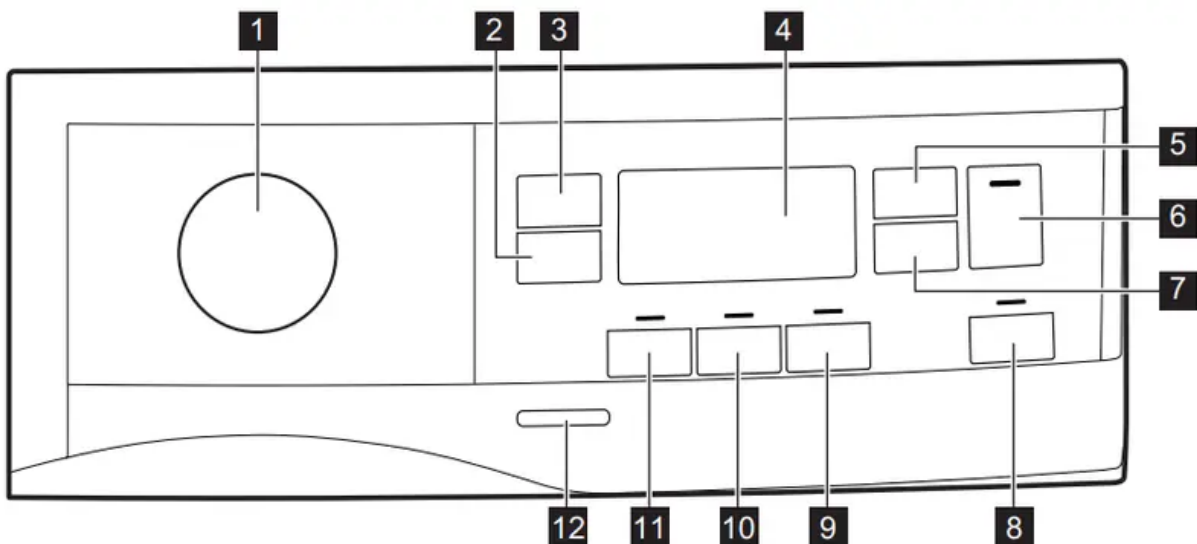



 




 



 
 
CONTROL PANEL



<ol style="list-style-type: none">1. Programme knob2. Extra Anticrease touch button3. Dryness Level touch button4. Display5. Time Dry touch button6. Start/Pause touch button	<ol style="list-style-type: none">7. Delay Start touch button8.  Remote touch button9. End Alert touch button10. Reverse Plus touch button11. Extra Silent touch button12. On/Off button
--	--

Note: Press the touch buttons with your finger in the area with the symbol or name of the option. Do not wear gloves when you operate the

Display

Symbol on the display	Symbol description
	laundry dryness option: iron dry, cupboard dry, extra dry
	time drying option on
	delay start option on
	indicator: Wi-Fi connection
	remote start option on
	indicator: check Heat Exchanger
	indicator: clean filter
	indicator: drain the water container
	child lock on
	wrong selection
	indicator: drying phase
	indicator: cooling phase
	indicator: anti-crease phase
	programme duration
	extension of default anti-crease phase: +30min, +60min, +90min, +2h)

: 10 - 2 : 00	time drying selection (10min-2h)
1h - 20h	delay start selection (1h-20h)



WI-FI - CONNECTIVITY SETUP

This chapter describes how to connect the smart appliance to the Wi-Fi network and to link it to a mobile devices.

By this functionality you can receive notifications, monitor and control your tumble dryer from your mobile devices.

To connect the appliance to enjoy the full range of features and services you need:

- Wireless network at home with internet connection enabled.
- Mobile device connected to wireless network.

Frequency	2.4 GHz according to local country regulation
Protocol	IEEE 802.11b/g/n
Max power	According to local country regulation

Minimum requirements: Operating system compatibility iOS 9.3/Android 5.1 and above. Install the My Electrolux app, create an account and accept the Terms and Conditions and Electrolux's Privacy Policy to use the connected features. Stable Internet and good WiFi connection with 2.4GHz wireless frequency is required. Minimum requirements, apps and services are subject to change without notice.

Installing and configuring My Electrolux

When connecting the tumble dryer to the application, stand near it with Your smart device.







Make sure that your smart device is connected to the wireless network.

1. Go to the App Store on your smart device.
2. Download and install App My Electrolux .
3. Make sure you started a Wi-fi connection in the dryer. If not go to the section below.


4. Start the application. Select the country and language and login with Your email and password. If you do not have an account, create a new one following the instructions in My Electrolux.
5. Follow the instructions on the App for the appliance registration and configuration. A message appears on the appliance display to confirm that the configuration was successful.

Configuring the dryer wireless connection


Have My Electrolux downloaded and installed on your smart device.

1. Press the on/off button for a few seconds to activate the appliance.
2. Select a programme by turning the programme dial.
3. Press and hold  Remote touch button for **3** seconds. The text  pop up for about 5 seconds and the icon  starts flashing and wireless module begins starting up. It may takes about 45 seconds before it is ready. When the wireless module is ready, the text  (**Access Point**) is on to inform you, that the access point will be open for about 3 minute.
4. Configure the My Electrolux app on your smart device.
5. If the connectivity is configured,  (**Access Point**) symbol is off and the icon  will stop blinking and lit steadily to confirm that the configuration was successful.

Every time you switch the appliance on, the appliance takes 45 seconds to connect to the network automatically. When the indicator stops blinking the connection is ready.

To switch the wireless connection off, Press and hold  Remote touch button for **3** seconds until the first acoustic signal: **OFF** appears on the display.

Note: If you switch the appliance off and on again, the wireless connection is automatically off.


To remove the wireless credentials, Press and hold Remote touch button for **10** seconds until the second acoustic signal:  appears on the display.


Remote Start

When the App is installed and the wireless connection is complete, you can start and stop a drying programme remotely by activate remote start.

The Remote Control activates automatically when you press the **Start/Pause** button to start the programme, but it is also possible to start a drying programme


Activate Remote Start

1. Press the  **Remote** button and the indicator **APP** appears on the display.
2. Press the **Start/Pause** button to activate the Remote Start.

The indicators  appears on the display. Now it is possible to start the programme remotely.

Deactivate Remote Start

Press the **Remote** touch button and confirm by pressing the **Start/Pause** button.

The  icon is off and the remote start is deactivated.

Note: If the door is open, the **Remote Start** is deactivated.

Over-the-air update

The App may propose an update for downloading new features. The update is accepted via App only.

If a programme is running, the App notifies that the update will start at the end of the programme.

During the update, the appliance shows **UPD** in the display.

The appliance will usable again at the end of the update, without any notification about successful update.

If an error occurs, the appliance shows **Err** in the display: just press any buttons or turn the knob to return to normal use.

OPTIONS



Extra Antcrease

Extends the anti-crease phase by 30,60, 90 or 2 hours at the end of the drying cycle. This function reduces creases. The laundry can be removed during the anti-crease phase.

Dryness Level

This function helps to increase dryness of the laundry. There are 3 options:

-  Extra Dry

-  Cupboard Dry
-  Iron Dry

Time Dry

You can set the programme duration, from a minimum of 10 minutes to a maximum of 2 hours. The required duration is related to the quantity of laundry in the appliance.

We recommend that you set a short duration for small quantities of laundry or for only one item.

Time Dry on Wool programme

Option suitable for Wool programme to adjust final dryness level.

Time Dry on Drying Rack programme

Option suitable for Drying Rack programme .

You can set the programme duration, from a minimum of 10 minutes to a maximum of 2 hours. The setting of the duration is related to the quantity of laundry in the appliance.

We recommend that you set a short duration for small quantities of laundry or for only one item.

End Alert

The buzzer sounds at the:

- cycle end
- start and end of the anti-crease phase
- cycle interruption

The buzzer function is by default always on. You can use this function to activate or deactivate the sound.

You can activate the End Alert option with all programmes.






Reverse Plus

Increase drum reversing frequency to reduce items twisting and entanglement. To increase uniformity of drying result and help reduce creases. Recommended for large or long items (e.g. sheets, trousers, long dresses)"


Extra Silent


The appliance operates with low noise without effect on the drying quality. The appliance operates slowly with longer cycle time.

Options table

Programmes ¹⁾	Dryness Level			Extra Anti-crease	Extra Silent	Re-verse Plus	Time Dry
							
Favourite 	Depends on a memorised programme						
Cottons	■	■	■	■	■	■	■
Mixed +	■	■		■		■	■
Bedding +	■	■	■	■		■	
Energy Saver		■		■			
Refresh				■			
App Program	Depends on a selected programme in the app						
Drying Rack							■ 2)
Sports		■		■			
Silk		■		■			
Synthetics	■	■	■	■	■	■	■
Wool 							■ 3)
Delicates		■		■			

SETTINGS

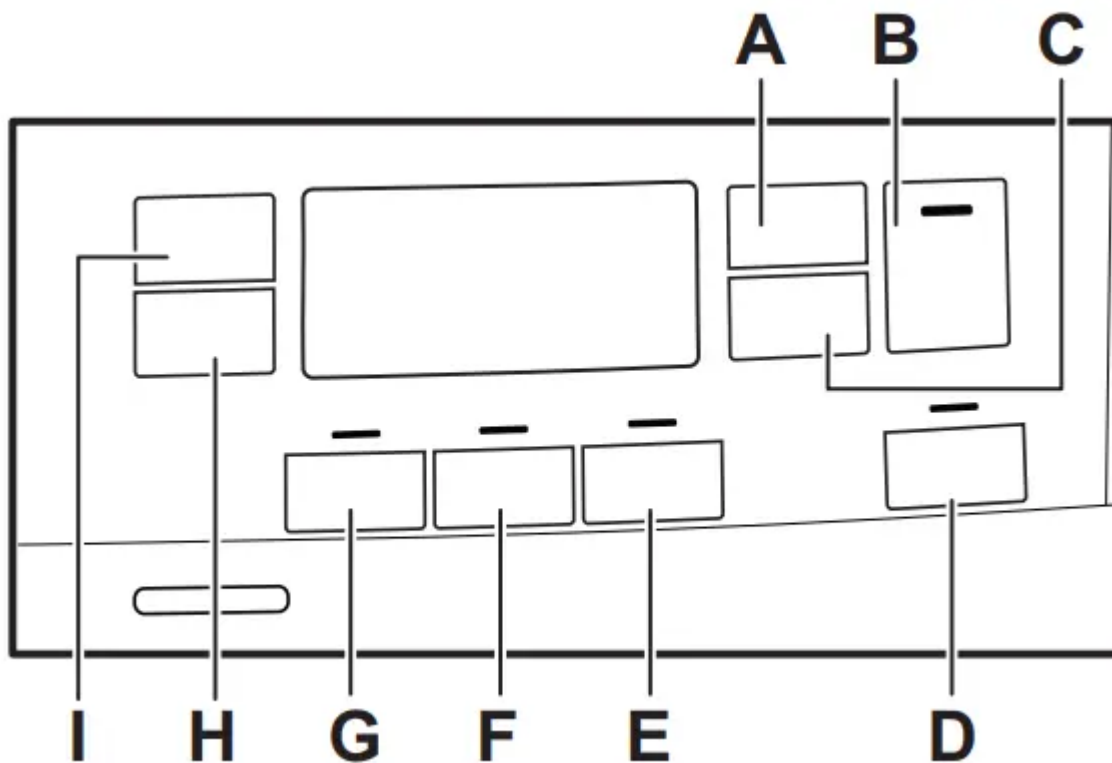

- A. Time Dry touch button
- B. Start/Pause touch button
- C. Delay Start touch button
- D.  Remote touch button
- E. End Alert touch button
- F. Reverse Plus touch button
- G. Extra Silent touch button
- H. Extra Anticrease touch button
- I. Dryness Level touch button

Child lock function

This option prevents children playing with the appliance while a programme is operating. The touch buttons are locked.

Only the on/off button is unlocked.

Activating the child lock option:

1. Press the on/off button to activate the appliance.
2. Press and hold touch button (E) for a few seconds.

The child lock indicator comes on.

Note: It is possible to deactivate the child lock option while a programme operates. Press and hold the same touch buttons until the child lock indicator goes off. The Child Lock function isn't available for 8 s after switching on the appliance.

Favourite

Note: App Program cycle cannot be saved as a Favourite on the appliance.


You can do your configuration of programme and options and memorise in the appliance memory.

To memorise your configuration:

1. Press the on/off button to activate the appliance
2. Set the programme and available options.
3. Press the (F) button for some seconds.

The sound and the message on the display confirm that the configuration is memorised.




To activate your memorised configuration:

1. Press the on/off button to activate the appliance.
2. Use the programme knob to set
Favourite  position.

Previously memorised configuration of programme and options will be restore.



Adjustment of the remaining moisture

The appliance allows you to chose between 3 levels corresponding to different ranges of water hardness.

Dryness level	ppm	the results from the included water hardness kit.
	< 150	C01-C03
	150 - 300	C04-C05
	> 300	C06-C07

 Depending on the country, the water hardness is expressed in equivalent scales: e.g. French degrees (°f), German degrees (°d), English degrees (°e), mmol/l and ppm




If necessary, please contact your local water authority to check the water hardness in your area.

Every time you enter in the "Adjustment of remaining laundry moisture" mode, previously set degree of remaining moisture will change into next value (e.g previously set  will change into )

To change the default degree of remaining moisture:

1. Press the on/off button to activate the appliance.
2. Use the programme knob to set any programme.
3. Wait approximately 8 seconds.
4. Press and hold buttons (F) and (E) at the same time.




 


One of these indicators comes on:

-  maximum dryness
-  more dry laundry
-  standard dry laundry

5. Press and hold buttons (F) and (E) again until the indicator of the correct level comes on.

Note: If the display returns to the normal mode (the time of the selected programme from step 2. will be displayed), while setting the degree of remaining moisture, press and hold buttons (F) and (E) once again to enter to the "Adjustment of remaining laundry moisture" mode (previously set degree of remaining moisture will change into next value).

6. To accept the selected degree of remaining moisture, wait 5 s and the display returns to the normal mode.

Dryness level	Display symbol
 maximum dryness	
 more dry laundry	
 standard dry laundry	

Water container indicator

By default, the water container indicator is on. It comes on when the programme is completed or when it is necessary to empty the water container.

If a draining kit is installed (additional accessory), the appliance automatically drains the water from the water container. In this case we recommend that you deactivate the indicator of the water container.

Deactivating the water container indicator:

1. Press the on/off button to activate the appliance.
2. Wait approximately 8 seconds.
3. Press and hold touch buttons (A) and (C) at the same time.

The display shows one of these 2 configurations:

- The display shows "Off". After 5 s the display returns to normal mode.
- The display shows "On". After 5 s the display returns to normal mode.

BEFORE FIRST USE

Note: Rear drum locks are removed automatically when dryer is activated for the first time. Possible to hear some noise.

To unlock the rear drum locks:

1. Switch on the appliance.
2. Set any programme.

3. Press the Start/Pause button. Drum starts to rotate. Rear drum locks are deactivated.

Before you use the appliance to dry items:

- Clean the tumble dryer drum with a moist cloth.
- Start a 1 hour programme with moist laundry.

Note: At the beginning of the drying cycle (first 3-5 min) there could be a slightly higher sound level. This is due to the compressor starting up. This is normal for compressor powered appliances such as refrigerators and freezers.

DAILY USE

Start a programme without delay start

1. Prepare the laundry and load the appliance.

CAUTION! Make sure that when you close the door, the laundry does not get caught between the appliance door and the rubber seal.

2. Press the on/off button to activate the appliance.

3. Set the correct programme and options for the type of load. The display shows the programme duration.

Note: Real drying time will depend on type of the load (quantity and composition), the room temperature and the humidity of your laundry after spin drying phase.

4. Press the Start/Pause touch button. The programme starts.

Starting the programme with delay start

1. Set the correct programme and options for the type of load.

2. Press the delay start button again and again until the display shows the delay time you want to set.

Note: You can delay the start of a programme from a minimum of 30 minutes to a maximum of 20 hours.

3. Press the Start/Pause touch button.

The display shows the countdown of the delay start.

When the countdown is completed, the programme starts.

 



Change a programme

1. Press the on/off button to deactivate appliance
2. Press the on/off button to activate the appliance.

3. Set the programme.

At the end of the programme





When the programme is completed:

- An intermittent acoustic signal operates.
- The display shows 
- The indicator  is on.
- The indicators  Filter and  Tank may come on.
- The Start/Pause indicator is on. The appliance continues to operate with the anti-crease phase for approximately 30 minutes or more if Extra Anticrease option was set (see chapter Option - Extra Anticrease).

The anti-crease phase reduces creasing.

You can remove the laundry before the anti-crease phase is completed. We recommend, for better results, that you remove the laundry when the phase is almost completed.

When the anti-crease phase is completed:

- The display still shows 
- The indicator  is off.
- The indicators  Filter and  Tank remain on.
- Start/Pause indicator goes off.

1. Press the on/off button to deactivate the appliance.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

Note: Always clean the filter and empty the water container when a programme is completed.

Stand-by function





To reduce energy consumption, this function automatically deactivates the appliance:

- After 5 minutes if you do not start the programme.
- After 5 minutes from the end of the programme.

HINTS AND TIPS

Preparing the laundry

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.
- Turn items with the internal layer made of cotton inside out. Cotton layer must be faced outwards.
- Always set the programme suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable programme for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in the programmes chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.

Fabric label	Description
	Laundry is suitable for tumble drying.
	Laundry is suitable for tumble drying at higher temperatures.
	Laundry is suitable for tumble drying at low temperatures only.
	Laundry is not suitable for tumble drying.


CARE AND CLEANING

Cleaning the filter

To achieve the best drying performances clean the filter regularly, clogged filter lead

CAUTION! Avoid the use of water to clean the filter. Instead throw away lint in the dustbin (avoid dispersion of plastic fiber in water ambient).


Note: To achieve the best drying performances clean the filter regularly , clogged filter lead to longer cycles and energy consumption increase. Use your hand to clean the filter , and if necessary , a vacuum cleaner .

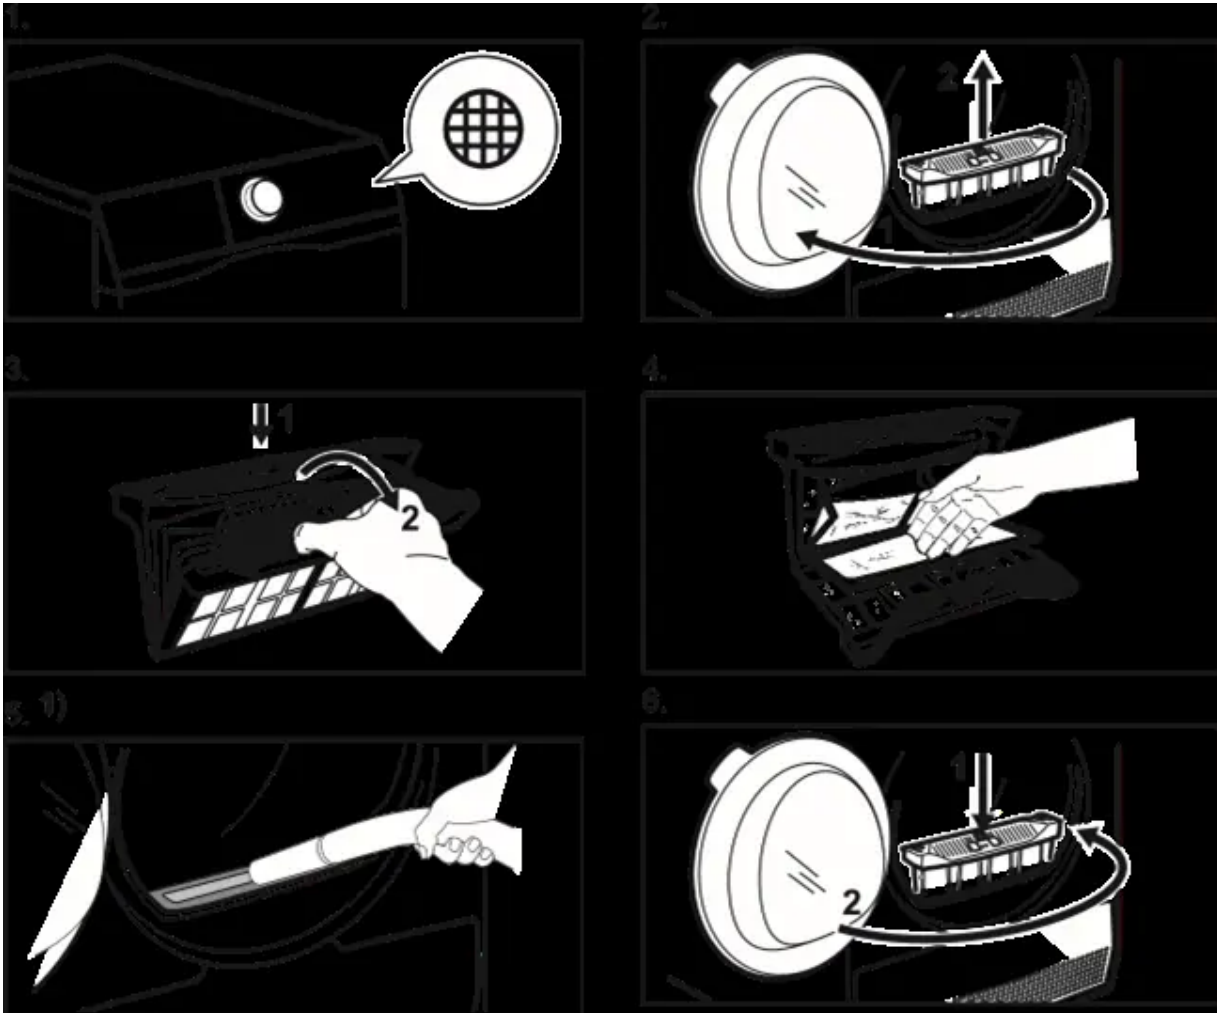


1) If necessary remove fluff from the filter socket and gasket. You can use a vacuum cleaner.

Emptying the water container


1.

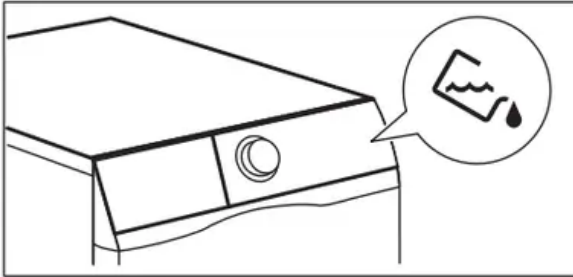


2.

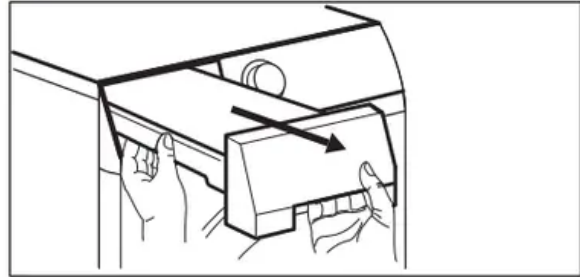

3.

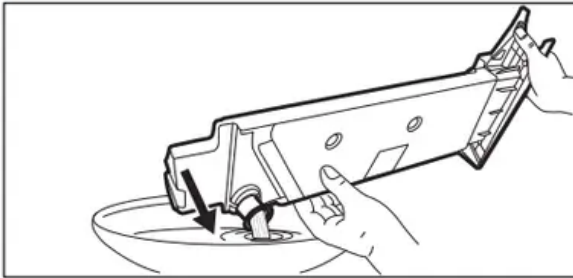


4.

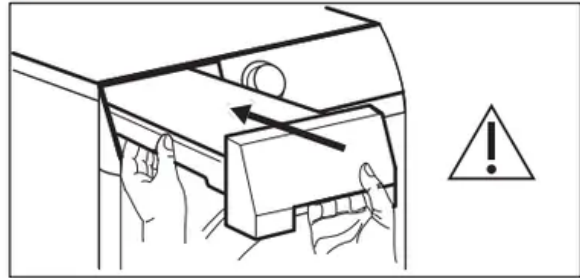


Note: You can use the water from the water container as an alternative to distilled water (e.g. for steam ironing). Before you use the water, remove dirt residues with a filter.

Cleaning the Heat Exchanger


1.

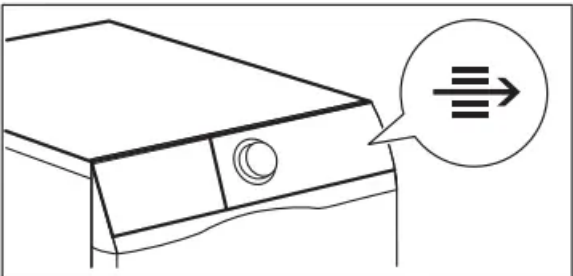


2.

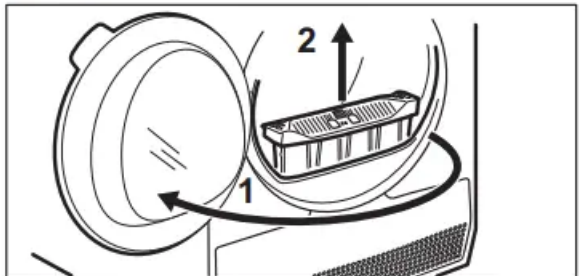


3.

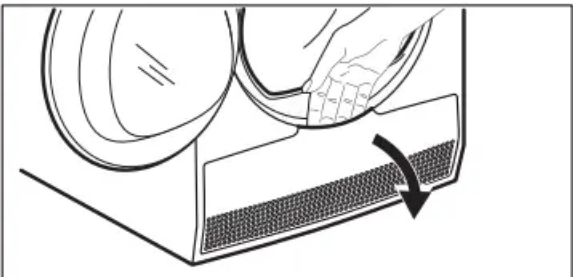


4.

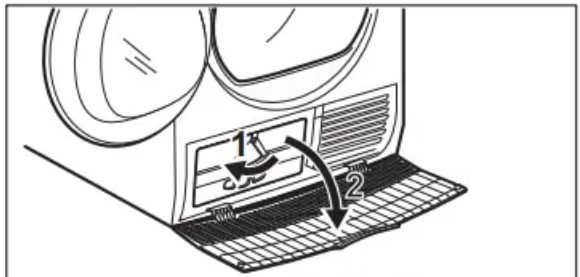


5.

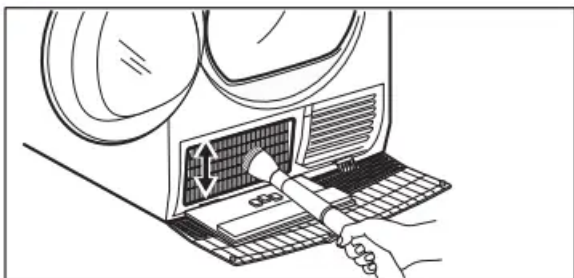


6.

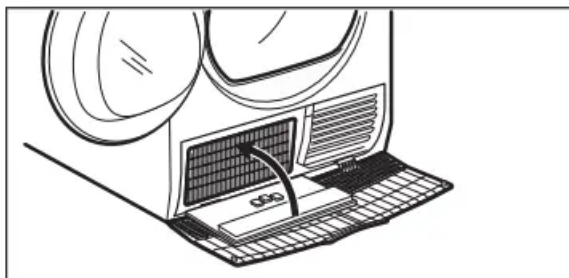


7.

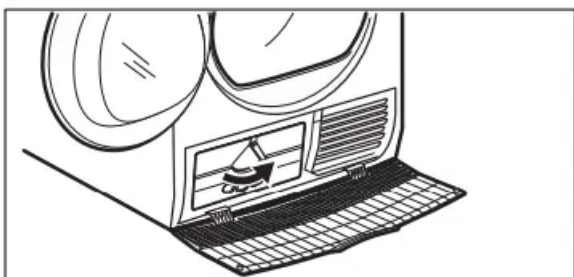

8.

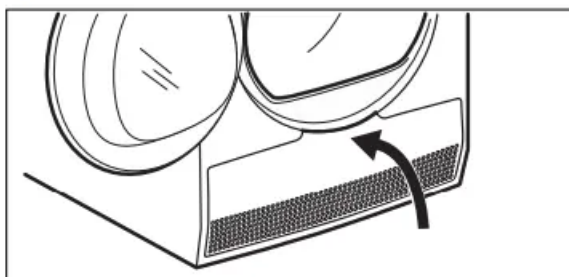

9.

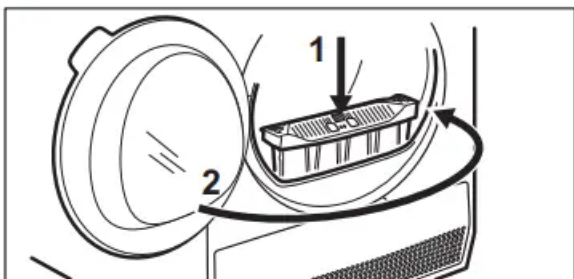

CAUTION! Do not touch the metal surface with bare hands. Risk of injury. Wear protective gloves. Clean carefully to avoid damaging the metal surface.

Cleaning the drum

WARNING! Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.

CAUTION! Do not use abrasive materials or steel wool to clean the drum.

Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.

CAUTION! Do not use furniture cleaning agents or cleaning agents which can cause corrosion.


Cleaning the airflow slots

Use a vacuum cleaner to remove fluff from the airflow slots.

TROUBLESHOOTING



Problem	Possible solution
You cannot activate the appliance.	Make sure that the mains plug is connected to the mains socket.
	Check fuse in fuse box (domestic installation).
The programme does not start.	Press Start/Pause.
	Make sure that the appliance door is closed.
The appliance door does not close.	Make sure that the installation of the filter is correct.
	Make sure that the laundry is not caught between the appliance door and the rubber seal.
The appliance stops during operation.	Make sure that the water container is empty. Press Start/Pause to start the programme again.
	Load is too small, increase the load or use the Time Drying programme.
The cycle time is too long or unsatisfactory drying result. 1)	Make sure that the weight of the laundry is suitable for the duration of the programme.
	Make sure that the filter is clean.
	The laundry is too wet. Spin the laundry in the washing machine again.
	Ensure that the room temperature is higher than +5°C and lower than +35°C. Optimal room temperature is 19°C to 24°C.
	Set the Time Drying or the Extra Dry programme. 2)

<p>The App cannot connect to the dryer.</p>	<p>Check if your smart device is connected to the wireless network.</p> <p>Check your home network and router.</p> <p>Restart the router.</p> <p>Contact your wireless service provider if there are problems with the wireless network.</p> <hr/> <p>The dryer, the smart device, or both, need to be configured again.</p>
<p>The App frequently cannot connect to the dryer.</p>	<p>Try to move the home router as near the dryer as possible or consider purchasing a wireless range extender.</p>
	<p>Turn the microwave off. Avoid using the microwave and the Remote Control of the oven at the same time. The microwaves disrupt the Wi-Fi signal.</p>
<p>The display shows</p> 	<p>If you want to set a new programme, deactivate and activate the appliance.</p> <hr/> <p>Make sure that the options are suitable for the programme.</p>
<p>The display shows Error code (e.g. E51).</p>	<p>Deactivate and activate the appliance. Start a new programme. If the problem occurs again, contact the Service centre.</p>

1) After maximum 5 hours, the programme ends automatically.

2) It can happen that some area remains humid when drying big items (e.g. bed sheets).


If the drying results are not satisfactory

- The set programme was incorrect.
- The filter is clogged.
- The Heat Exchanger is clogged.
- There was too much laundry in the appliance.

- The drum is dirty.
- Incorrect setting of the conductivity sensor (See chapter "Settings - Adjustment of the remaining laundry moisture degree " for better setting).
- The airflow slots are clogged.
- Room temperature is too low or too high (optimal room temperature 19°C to 24°C)

QUICK GUIDE


Daily use

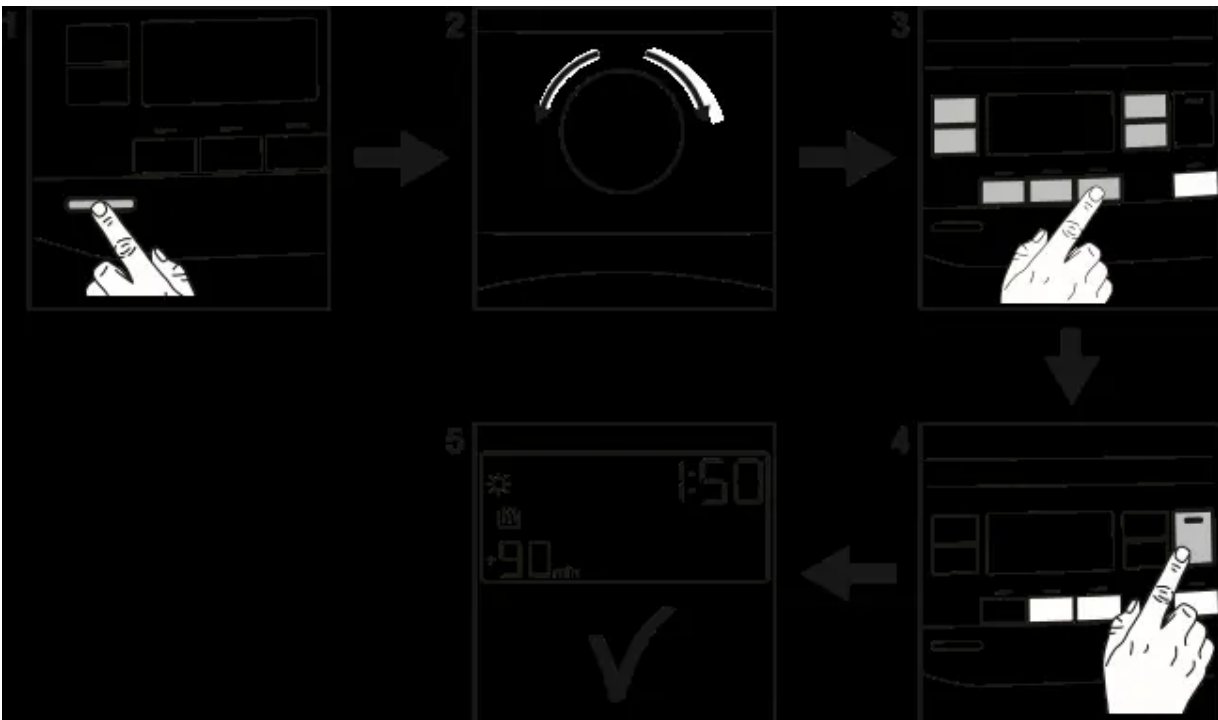

1. Push the On/Off button to turn on the appliance.
2. Use the programme dial to set the programme.
3. Together with the programme you can set 1 or more special options. To activate or deactivate an option touch the relevant button.
4. To start the programme , Touch the **Start/Pause** button.
5. The appliance starts

Cleaning the filter



At the end of each cycle the filter symbol  appears on the display and you must clean the filter.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.