 


CONTROL PANEL AND FEATURE

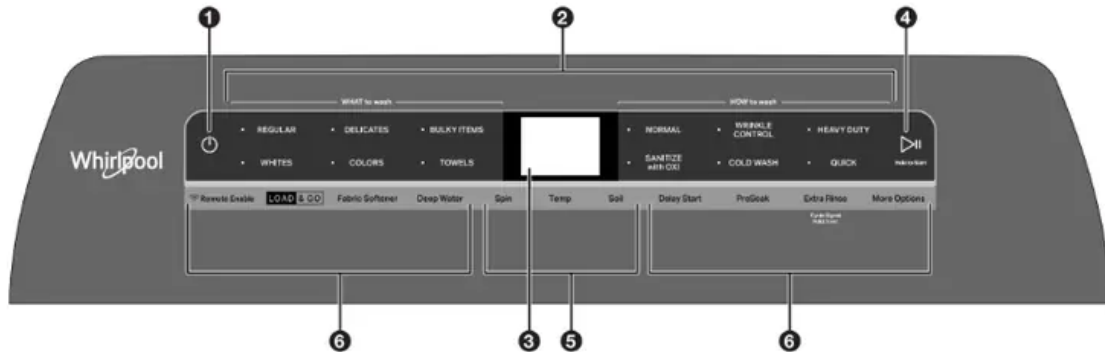

Appearance may vary depending on model.

1. POWER

Touch to turn on/off or to stop/cancel a cycle.

2. WHAT TO WASH/HOW TO WASH

First select a cycle from the “WHAT to wash” and then select the “HOW to wash” to get the best combination cycle available for the type of items you are going to wash. See “Cycle Guide” for cycle details.

3. LCD TIME/STATUS DISPLAY

The display shows the time required for the cycle to complete.

Factors such as load size and water pressure may affect the time shown in the display. Tightly packed loads, unbalanced loads, or excessive suds may cause the washer to adjust the cycle time as well.

If you have set a delay start to the cycle, the display will show the delay time adjusted.

ADD GARMENT

When Add Garment is lit, you may pause the cycle, open the lid, and add items. Touch and hold the START/PAUSE button to start the cycle again.

4. START/PAUSE

Touch and hold the START/PAUSE to start cycle. Touch during a cycle to pause cycle and unlock lid.

NOTE: If machine is spinning it may take longer to unlock lid.

5. CYCLE MODIFIERS (Not all modifiers are available on all cycles)

SPIN

Touch to modify the cycle’s available spin speeds (Off, Medium, Fast).

TEMP

Touch to modify the cycle's available water temperatures (Tap Cold, Cold, Cool, Warm, Hot).

SOIL

Touch to modify the cycle's available soil levels. Increase soil level for heavily soiled items and decrease soil level for lightly soiled items (Extra Light, Light, Normal, Heavy, Extra Heavy).

6. CYCLE OPTIONS (Not all options are available on all cycles)

REMOTE ENABLE

Touch each time you want to remotely control via the Whirlpool® app. Follow the instructions in the "GET THE WHIRLPOOL® APP AND GET CONNECTED" section below for more details. Opening the lid cancels "Remote Enable".

LOAD & GOTM Bulk Dispenser

The LOAD & GOTM dispenser holds 1L of detergent and determines the best time and amount to add detergent to the load. See "Using the Dispensers" section for more information.

FABRIC SOFTENER

Touch "Fabric Softener" button to let the machine know when you have added fabric softener to the appropriate dispenser.

DEEP WATER

Touch "Deep Water" button to add more water to the washer from the cycle's auto sensed level (Auto, Medium, High, Max Fill).

NOTE: Expect longer cycle times due to extended fill times when using the Deep Water option.

DELAY START

Touch to delay the start of the wash cycle for up to 12 hours.

PRESOAK

Touch to add a presoak period to any cycle to help loosen tough stains. The washer will fill, pause to soak, and then begin the selected cycle (15 minutes, 30 minutes, 60 minutes, minutes).

EXTRA RINSE

Touch to automatically add a second rinse available on most cycles.

CYCLE SIGNAL

Touch to turn the end of cycle signal on/off and adjust the tone volume when a button is touched.

MORE OPTIONS

- Drain & Spin
- Rinse & Spin
- Clean Washer with affresh®
- Favorite Cycle.

GET THE WHIRLPOOL® APP AND GET CONNECTED

Once installed, launch the app and you will be guided through the steps to subscribe and create your user account to connect to your appliance. If you have any problems or questions, call Whirlpool® Connected Appliances at 1-866-333-4591.

1. CONNECTING UNIT TO INTERNET

To connect your unit to the internet please download the Whirlpool® App and press Remote Enable.



2. ALLOWING REMOTE CONTROL AND INTERACTION

User must press Remote Enable when connected in order to allow remote control and interaction.



USING YOUR WASHER



1. SORT & LOAD LAUNDRY

See Loading. Recommendation section below.

2. ADD HE DETERGENT & LAUNDRY PRODUCTS TO DISPENSERS*

Dispenser Drawer. Remove inside tray for powder HE detergent.



3. TOUCH POWER TO TURN ON THE WASHER


4. SELECT THE DESIRED CYCLE FOR YOUR LOAD*



5. ADJUST CYCLE SETTINGS, IF DESIRED*




6. SELECT ADDITIONAL OPTIONS

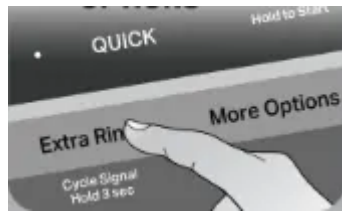

7. TOUCH AND HOLD START/PAUSE TO BEGIN CYCLE




LOADING RECOMMENDATION

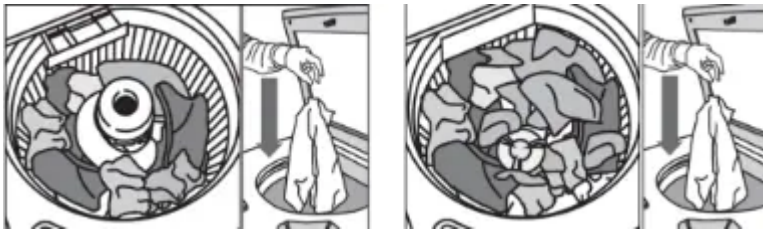

For best performance, it is recommended to load items by dropping them in loose heaps evenly around the washplate and agitator. Do not lay items length-wise around the washplate or agitator.


RINSING BEFORE RUNNING A WASH CYCLE

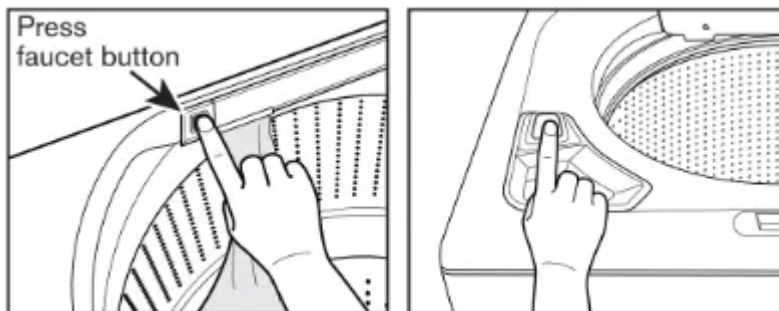

Water Faucet Operation


- Press the faucet button once to turn on and press again to turn off.
- Faucet will automatically shut off after 10 minutes or when max water level is reached.
- Water will automatically drain if water level becomes too high or if the lid is left open for 10 minutes.
- On LOAD & GOTM models when the faucet is on touch Temp button to select water temperature or touch LOAD & GOTM button to manually dispense a dose of detergent.

Fabric Brush

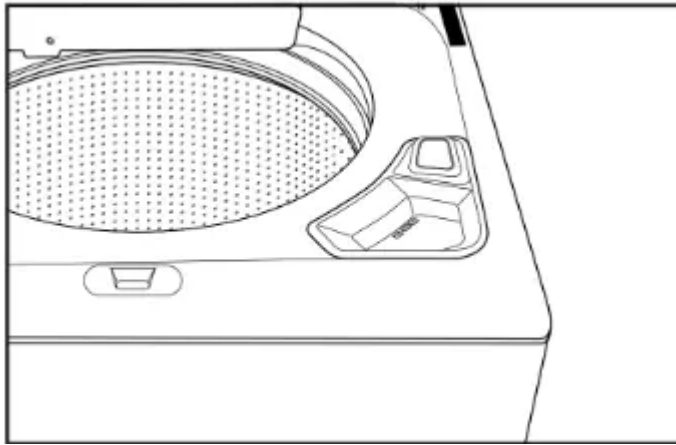

1. Turn brush from body to open.
2. Add liquid laundry detergent.
3. Turn to close.
4. To dispense detergent from fabric brush push button.

MORE WATER WHEN YOU WANT IT

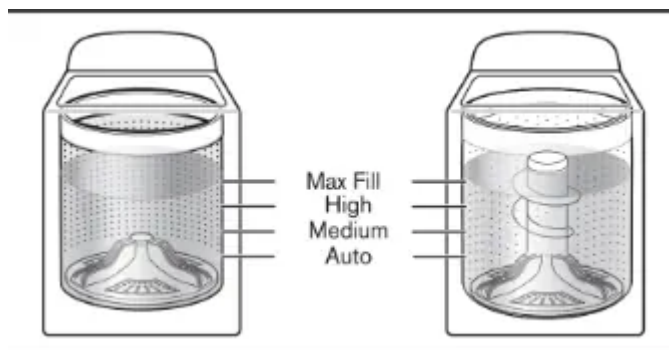

Auto Sensing & Deep Water Wash


- The washer will adjust the water level to the optimal amount for a High Efficiency wash of the detected load size.
- Touch "Deep Water" to add more water to the wash load.
- There are four levels of Deep Water "Auto", "Medium", "High", "Max Fill".
- Not all levels are available on all cycles.
- The washer dampens and moves the load, the level of the items will settle in the basket. This is normal, and does not indicate that more items should be added.

IMPORTANT: You will not see a washer basket full of water as with your past agitator-style washer. It is normal for some of the load to be above the water line.


USING THE DISPENSER

- LOAD & GOTM feature will default On for each cycle unless disabled.

- Touch LOAD & GOTM button to view detergent dispensing options.
- Hold LOAD & GOTM button on the control panel to choose a detergent concentration between 2X and 10X. Hold for seconds.
- Pull the drawer completely out for easy refilling.

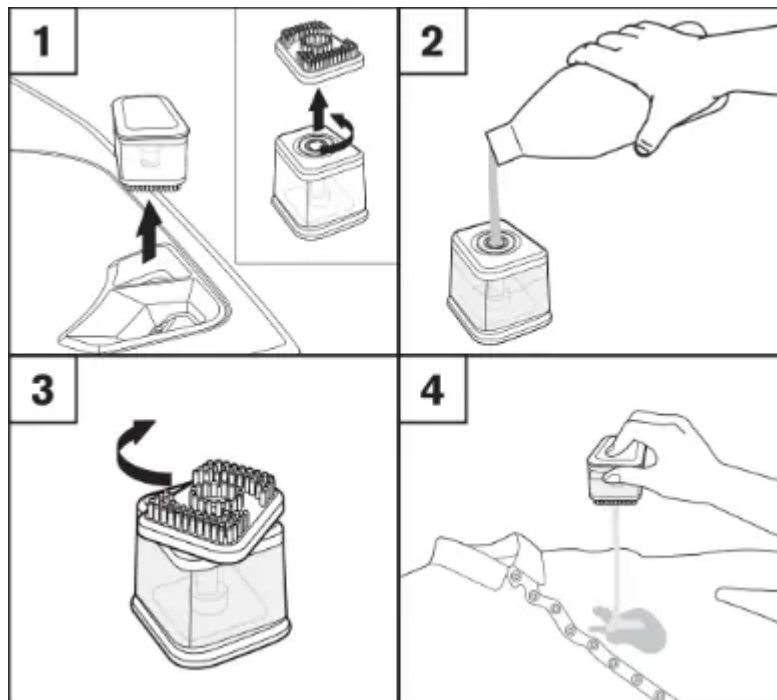

IN-1 REMOVABLE AGITATOR

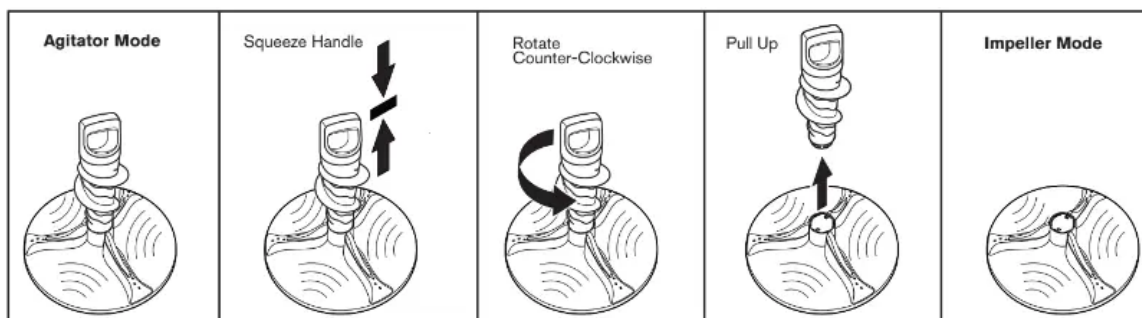

- Keep it in (Agitator mode) when you want increased mechanical action to remove and rinse away loose soils. You can use this mode anytime but it's especially suited for everyday mixed loads.
- Take it out (Impeller mode) when you need added space and/or a thorough, gentle clean. You can use this mode anytime but it's especially suited for bulky items such as bedding and delicate items such as undergarments.

USING THE REMOVABLE AGITATOR

- Squeeze handle, rotate counter-clockwise, and pull up to remove.
- Push down and rotate clockwise to re-install. The agitator should lock into place.

WASHER ICONS








Image	Description	Status
	Door Locked	Alert State
	LOAD & GO™ Warning	Off One Cycle
		Off Always
		Detergent Low
		Remote Enable
	Delay Start	On
	PreSoak	On









Image	Description	Status
	Smartgrid, Peak rates in effect	On
		Smart Delay
		Smart Pause
	WiFi Status Indicator	Connected
		Disconnected
	Fabric Softener	Off
	Extra Rinse	Off
	PreSoak	Off




















Image	Description	Status
	Deep Water	On - Auto
		On - Auto Medium
		On - Auto High
		On - Max Fill
	Fabric Softener	On
	Extra Rinse	On
	LOAD & GO™	50%
		75%
		Full

Image	Description	Status
	Favorite Cycle	
	Download & Go Cycle	
	Cycle Signal	Off
		Low
		Medium
		High
	Clean Washer	
	Remote Enable	Off
	Faucet	On
		Off

NOTE: Not all features and options are available on all models.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

