

# Installation and User Guide for Kwikset 907-2/200BL

## Table of Contents

- Required tools
- Kwikset Technical Support
- Parts List
- Prepare the door and check dimensions
- Install the latch and strike
- Prepare keypad and mounting plate (only for doors with smaller holes)
- Install exterior assembly
- Install interior assembly
- Set locking and unlocking direction
- Optional: Re-key the lock
- Quick Setup and Use
- Additional Programming Features
- Regulatory Compliance
- Troubleshooting
- Important Safeguards

## Quick Setup and Use

Move swiftly during programming. If no digit is pressed for 10 seconds, the system will time out and you will need to restart the procedure

### **How to delete all User Codes**

**CAUTION:** A User Code is used to unlock the door while a Mastercode is a password for making changes to the lock features.

1. Make sure the lock is unlocked and the door is open.
2. Enter your existing Mastercode - for new install, default is 0-0-0-0.
3. Press . You will hear one beep.
4. Press 5.
5. Press . You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly.

### **How to add User Codes**

A total of 6 User Codes (and a temporary one-time User Code) may be programmed. Do not program a User Code that is the same as your Mastercode.

**CAUTION:** A User Code is used to unlock the door while a Mastercode is a password for making changes to the lock features.

1. Make sure the lock is unlocked and the door is open.
2. Enter your Mastercode - for new install, default is 0-0-0-0.
3. Press . You will hear one beep.
4. Press 1.
5. Press . You will hear one beep.
6. Enter a new User Code. It must be 4-10 digits.
7. Press . You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly.
8. Test the code: While your door is open, lock it. Enter your new User Code, then press . The door should unlock.

### **How to change your Mastercode**

The Mastercode will not unlock your door. It is an added security feature that is used to set up all functions. The default Mastercode is 0-0-0-0. It is recommended that you change it to a code of your own.

1. Make sure the lock is unlocked and the door is open.
2. Enter your Mastercode - for new install, default is 0-0-0-0.
3. Press . You will hear one beep.
4. Press 7.
5. Press . You will hear one beep.
6. Enter a new Mastercode. It must be between 4 and 10 digits.
7. Press . You will hear two beeps if successful. If you hear three beeps, it was unsuccessful. Repeat from step 1 slowly.

## **Additional Programming Features**

### **How to enable/disable Auto-Lock**

The Auto-Lock feature automatically re-locks your door 30 seconds after unlocking. This feature is off by default.

1. Make sure the lock is unlocked and the door is open.
2. Enter your existing Mastercode.

3. Press . You will hear one beep.
4. Press 1 - 1.
5. Press . You will hear two beeps if successful. If you hear three beeps, it was unsuccessful.  
Repeat from step 1 slowly

### **How to enable/disable User Codes**

If User Codes are disabled (example: when you go on vacation), the lock can only be operated by the key and turnpiece until they are enabled again.

1. Make sure the lock is unlocked and the door is open.
2. Enter your existing Mastercode.
3. Press . You will hear one beep.
4. Press 1 - 7.
5. Press . You will hear two beeps if successful. If you hear three beeps, it was unsuccessful.  
Repeat from step 1 slowly.

### **How to add a one-time User Code**

A one-time user code may be used only once, and then it will be deleted immediately after use.

1. Make sure the lock is unlocked and the door is open.
2. Enter your existing Mastercode.
3. Press . You will hear one beep.
4. Press 1 - 9.
5. Press . You will hear one beep.
6. Enter a new User Code. It must be 4-10 digits.
7. Press . You will hear two beeps if successful. If you hear three beeps, it was unsuccessful.  
Repeat from step 1 slowly.

### **How to change Auto-Lock time delay**

You can set the Auto-Lock time delay to 10, 20, 30, 40, or 50 seconds.

1. Make sure the lock is unlocked and the door is open.
2. Enter your existing Mastercode.
3. Press . You will hear one beep.
4. Press 1 - 3.
5. Press . You will hear one beep.
6. For 10 seconds, press 1.

For 20 seconds, press 3.

For 30 seconds, press 5.

For 40 seconds, press 7.

For 50 seconds, press 9.

7. Press . You will hear two beeps if successful. If you hear three beeps, it was unsuccessful.  
Repeat from step 1 slowly

### **How to delete individual User Codes**

The lock is pre-programmed with a default User Code of 1-2-3-4. It is recommended that you delete this code.

1. Make sure the lock is unlocked and the door is open.

2. Enter your existing Mastercode.

3. Press . You will hear one beep.

4. Press 3.

5. Press . You will hear one beep.

6. Enter the User Code you wish to delete.

7. Press . You will hear two beeps if successful. If you hear three beeps, it was unsuccessful.  
Repeat from step 1 slowly.

8. Test the code: While your door is open, lock it. Enter the User Code, then press . The door should not unlock.

### **How to mute/unmute lock**

If the lock is muted, you will not hear beeping during programming, normal operation, low battery indicators, or system alerts.

1. Make sure the lock is unlocked and the door is open.

2. Enter your Mastercode.

3. Press . You will hear one beep.

4. Press 1 - 5.

5. Press . You will hear two beeps if successful. If you hear three beeps, it was unsuccessful.  
Repeat from step 1 slowly

### **How to restore default settings**

This procedure will delete all User Codes associated with the lock, and the default Mastercode (0-0-0-0) and User Code (1-2-3-4) will be restored.

1. Make sure the door is open and unlocked. Press and hold the Reset button for 5 seconds, until you hear 3 long beeps.
2. Enter the default Mastercode (0-0-0-0).
3. Press . You will hear one beep.
4. Press 0.
5. Press . The latch bolt will extend and retract to learn the orientation of the door. If successful, the keypad will flash green and you will hear 2 beeps. If unsuccessful, the keypad will flash red and you will hear 3 beeps (make sure the door is open and unlocked and that you are using a fresh set of batteries).
6. Test the lock: With the door open and unlocked, press . Make sure it locks the door.
7. Test the default User Code: Enter the default User Code (1-2-3-4), then press . Make sure it unlocks the door.

**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

