 


## GETTING TO KNOW YOUR STEAM IRON

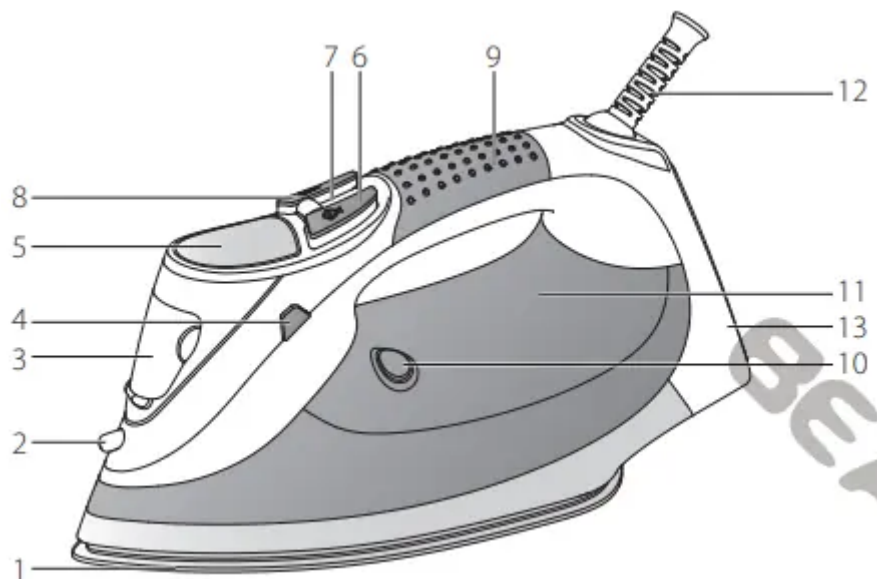

1. Soleplate
2. Spray Nozzle
3. Water Tank Opening
4. Power/Temperature Setting Button
5. Digital Display
6. Steam Burst Button
7. Variable Steam Knob
8. Spray Mist Button
9. Handle
10. Self Clean Button
11. Water Tank
12. Cord Sleeve
13. Heel Rest

Product may vary slightly from what is illustrated.

## HOW TO USE

This product is intended for household use only

### Getting Started

**IMPORTANT:** This product was thoroughly tested by our factories QA team prior to shipping. Some residual water from the testing might remain in the unit or the water tank. This is normal and we guarantee this is a brand new product.

- Remove all labels, stickers and tags attached on the body and soleplate of the iron.
- Use ordinary tap water for ironing.
- For optimum performance, turn the iron on and let it stand for 90 seconds before beginning to iron.
- Always stand the iron on its heel rest when powered on but not in use

### **Filling with Water**

**IMPORTANT:** This product was thoroughly tested by our factories QA team prior to shipping. Some residual water from the testing might remain in the unit or the water tank. This is normal and we guarantee this is a brand new product.


- Tilt the iron and using a clean filling cup, pour water into the water tank opening until the water reaches the MAX level as indicated on the water tank. Refill as needed.

Note: If you need to add water while ironing, unplug the iron from power and follow the above steps

### **Setting the Temperature**

 
1. Plug in the iron. The power indicator light will turn red and beep. The iron will be in Standby mode and “OFF” will appear on the LCD display.



2. To select a temperature setting, press the Temperature Setting  button until you reach your desired setting from 1 to 9.

Note: See the fabric guide on the LCD display and read the garment's label to help you determine which temperature setting to use.

3. The digital display will show the setting number and fabric type. The fabric type will flash on the display when heating.

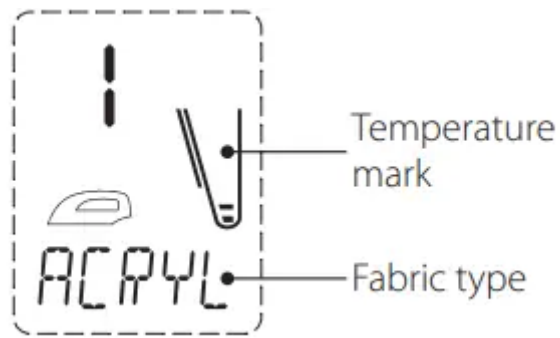


4. When your set temperature is reached, the iron will beep once and the fabric type will stop flashing.

5. To change temperature settings while ironing, just press the Temperature Setting button. When a lower setting is selected, fabric type will flash until the iron temperature has lowered to the correct level for that setting.

## LCD Display
 
### Normal Status

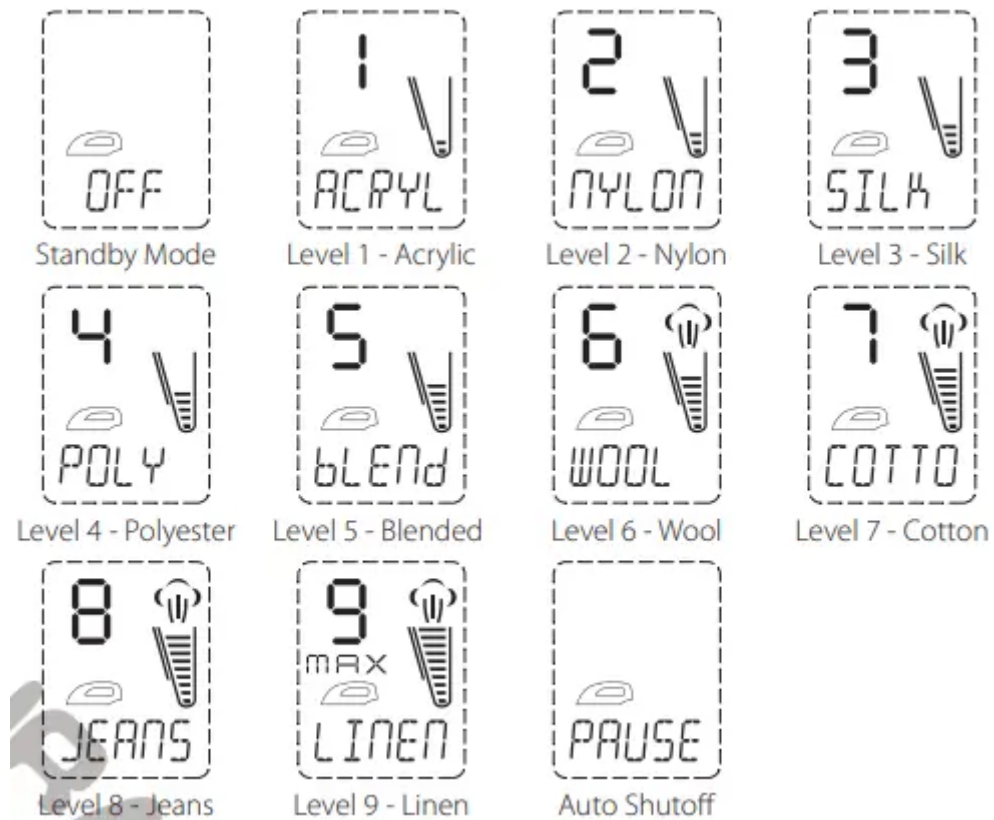

### Error Status



NTC short-circuit



NTC lower than 50°C




Soleplate over 270°C±15°C

- Unplug the iron from the power when the LCD panel shows an error status. Plug the iron in again once the soleplate has cooled.
- If the LCD panel still shows an error status, contact qualified technicians to check and repair the iron or contact our customer service.

Note: NTC stands for Negative Temperature Coefficient.


### Ironing with Steam

1. For steam ironing, make sure the water tank is filled to Max.

2. Make sure the Variable Steam Knob is slid to  position, press the Temperature Setting button to appropriate steam setting for your fabric.

Note: See the fabric guide on the LCD display and read the garment's label to help you determine which steam setting to use.

3. Once the selected temperature setting is reached, toggle the Variable Steam Knob to desired position and start ironing.


4. When finished ironing, toggle the Variable Steam knob off .

Note: Ironing with steam is only possible when temperature setting is between level 6 to level 9. Level 1 to level 5 are for dry ironing only.

### Steam Burst


#### Horizontal

**Tip:** Use to remove stubborn creases.

1. With the water tank filled to the Max level and make sure the Variable Steam knob is slid to  position, press the Temperature Setting button to appropriate steam setting for your fabric.

Note: See the fabric guide on the LCD display and read the garment's label to help you determine which steam setting to use.

2. Once the selected temperature setting is reached, press to Steam Burst button to start ironing with steam burst.


3. For best performance, press the Steam Burst  button at 5-second intervals.

4. When finished ironing, stand the iron on its heel and unplug the iron.

Note: Ironing with steam is only possible when temperature setting is between level 6 to level 9. Level 1 to level 5 are for dry ironing only.

### Vertical


**Tip:** Use for removing wrinkles from hanging clothes and drapes.

1. With the water tank filled to the Max level and make sure the Variable Steam knob is slid to  position, press the Temperature Setting button to appropriate steam setting for your fabric.

Note: See the fabric guide on the LCD display and read the garment's label to help you determine which steam setting to use.

2. Hang the garment to be steamed on a clothes hanger. Curtains or drapes can be steamed once they are hung.

3. Hold the iron close to, but not touching, the fabric. It is suggested to hold the iron vertically between 15 to 30mm (0.59 to 1.18in) away from hanging fabric.

4. Pull the fabric tight in your free hand and press the Steam Burst  button as you move the iron over the fabric.

5. When finished ironing, stand the iron on its heel and unplug the iron.


### Dry Ironing

To iron without steam, set the Variable Steam knob off .

 
### Using Spray Mist

**Tip:** For fabrics other than silk, use to dampen tough wrinkles at any setting.

1. Be sure the iron is filled with water.

2. On first use, press the Spray button  several times.

### 3-Way Auto Shutoff

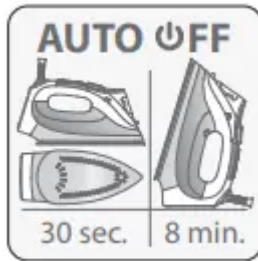

The automatic shutoff feature works as follows:

1. Once the iron reaches appropriate temperature, it will:
  - switch off after 8 minutes of inactivity when the iron is placed in a vertical position.
  - switch off after 30 seconds of inactivity when the iron is placed in a horizontal position. 30 sec. AUTO OFF 8 min.
  - switch off after 30 seconds of inactivity when the iron is tipped over on its side.
2. Once shut off, the iron will beep 6 times and the color of the digital display will turn from blue to red and the screen will flash “PAUSE”.
3. As soon as you pick up the iron, it will start heating again to the set temperature setting. Wait for the iron to reheat completely before resuming operation.

### Manual Shutoff

When the iron is in normal working status, you can shutoff the iron manually as follows:

1. Press and hold the Temperature Setting ▲ button for 3 seconds.
2. Press the Temperature Setting ▼ button from high to low until it shuts off

### Emptying the Water Tank

Note: It is recommended to empty the water tank after each use. This will prolong the iron's lifespan.

1. Unplug the iron and let it cool.
2. To empty the water, hold the iron over a sink with the tip pointing down. Water will empty out of the water tank opening.

## CARE AND CLEANING



This product contains no user-serviceable parts. Refer service to qualified service personnel.

### Cleaning


1. Make sure the iron is unplugged and has cooled down completely. Wipe the soleplate and outer surfaces with a soft cloth dampened with water and mild household detergent. Never use abrasive, heavy-duty cleansers, vinegar or scouring pads that may scratch or discolor the iron.
2. After cleaning, steam iron over an old cloth to remove any residue from the steam vents.

### **Auto-Cleaning System**

To keep the steam vents free of any buildup, it is recommended to use the self clean function once every two weeks by doing the following:

1. Fill the water tank well below the Max level and toggle the Variable Steam knob to the off  position.
2. Plug in the iron.
3. Press the Temperature Setting  button to level 9 and stand the iron on its heel rest. Allow it to heat for about 3 minutes.
4. Unplug the iron and hold over a sink with the soleplate facing down.
5. Press and hold the Self Clean button. Be careful, as hot water and steam will come out from the steam vents.
6. Continue to press the Self Clean button until all water has emptied. If necessary, rock the iron side-to-side and front-to-back.
7. When finished, release the Self Clean button, stand the iron on its heel rest and plug it in. Heat for about 2 minutes to dry out any remaining water.

### **Storing**

1. Unplug the iron and let it cool completely.
2. Check that the Variable Steam knob is toggled to the off  position.
3. Store the iron on its heel rest. Storing the iron on its soleplate can cause leaks or damage.

## **SPECIFICATIONS**

Modelr: 724NA-0001, YPZ-801

For US:

Rated Voltage: AC 120V~60Hz

Rated Power: 1800W

For UK/EU:

Rated Voltage: AC 220-240V~ 50/60Hz

Rated Power: 2020-2400W

Dimensions: 28.7x12.4x14.6cm (11.3x4.8x5.7in)

Weight: 1.25kg (2.75lbs)

Temperature Range: 60~220°C (140~428°F)

Water Tank Capacity: 340ml (11.4oz)

## **TROUBLESHOOTING**

### **Water drips from the holes in the soleplate.**

- You are using steam while the iron is not hot enough.
  - Wait until the fabric type on LCD display stops flashing.
- You are using the Steam Burst button too often.
  - Press the Steam Burst button at 5-second intervals.
- You have stored the iron horizontally, without emptying it and without setting it to position.
  - Always store your iron on its heel and set it on position to avoid leaking while off.

### **Brown streaks come through the holes in the soleplate and stain the linen**

- You are using ironing water additives (eg. scented water, starch).
  - Never use ironing water additives as these will permanently damage your steam iron.
- You are not using the right type of water.
  - Perform a self cleaning operation and use tap water.
- Your linen has not been rinsed sufficiently or you have ironed a new garment before washing it.
  - Make sure that your laundry is rinsed sufficiently in order to remove any deposits of soap or chemical products on new clothes.

### **The soleplate is dirty or brown and can stain the linen.**

- You are ironing with an inappropriate temperature selection (temperature too high).
  - Clean the soleplate and select the appropriate temperature.

- You have ironed over a printed area of a garment.
  - Never iron printed areas or applications- always iron the reverse side of such a garment.

**Steam or water come from the iron as you finish filling the tank.**

- The Variable Steam Knob is not slid to the position.
  - Make sure the Variable Steam Knob is slid to the position.
- The water tank is overfilled.
  - Never exceed the Max level.

**There is little or no steam**

- The water tank is empty.
  - Fill the water tank to Max level.

**The spray does not spray**

- The water tank is not filled enough.
  - Fill the water tank to Max level.

## **IMPORTANT SAFETY INSTRUCTIONS**

When using this iron, basic safety precautions should always be followed. These include:

- READ ALL INSTRUCTIONS BEFORE USE.
- Use the iron only for its intended purpose.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
- The iron should always be turned to the minimum setting before plugging or unplugging from the outlet. Never yank the cord to disconnect from the outlet; instead grasp the plug and pull to disconnect.
- Do not allow the cord to touch hot surfaces. Let the iron cool completely before putting away. Loop cord loosely around the iron when storing.
- Always disconnect the iron from the electrical outlet when filling with water or emptying, and also when not in use.
- Do not operate the iron if the power cord is damage or if the iron has been dropped or damaged. To avoid a risk of electric shock, do not disassemble the iron. Take it to a qualified service person for examination and repair, or contact our customer service. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave the iron unattended while connected to power or on an ironing board.

- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down or use a burst of steam as there may be hot water in the reservoir.
- Avoid rapid movement of iron to minimize hot water spillage.
- The iron must not be left unattended while it is connected to power.
- The plug must be removed from the power outlet before the water tank is filled with water.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if leakage.

### **SPECIAL INSTRUCTIONS**

- To avoid circuit overload, do not operate another high-wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. Cords rated for less amperage may overheat. Care should be taken to arrange the extension cord so that it cannot be pulled or tripped over.

### **SAVE THESE INSTRUCTIONS**

#### **SAFETY FEATURES POLARIZED PLUG (FOR US ONLY)**

This appliance has a polarized plug (one pin is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet in only one orientation. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

#### **TAMPER-RESISTANT SCREW**

**WARNING:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electrical shock, do not attempt to remove the outer cover. There are no userserviceable parts inside. Repairs should be done only by authorized service personnel.

Note: If the power cord is damaged, it should be replaced by qualified personnel

#### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)