 













Quick reference guide

Note: The appliance must be correctly installed and connected.  Page 13

| | | | | | |
|----------|---------------------------------------|---|--|---|--|
| 1 | Before starting the programme: |  |  |  | |
| | | Sort the laundry. | Switch on the appliance. | Select a programme. | |
| | | 2 |  |  |  |
| | | | Open the door and place the laundry in the drum. | Close the door. | If necessary: Adjust the programme settings. |
| 3 | Once the programme has ended: |  |  |  | |
| | | Switch off the appliance. | Open the door and remove the laundry. | Empty the condensation container. | |
| | | 4 |  | | |
| | | | Remove the fluff. | | |


Familiarising yourself with your appliance

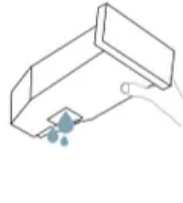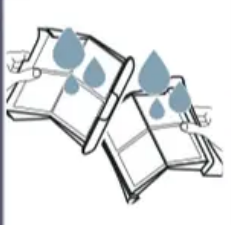Appliance overview

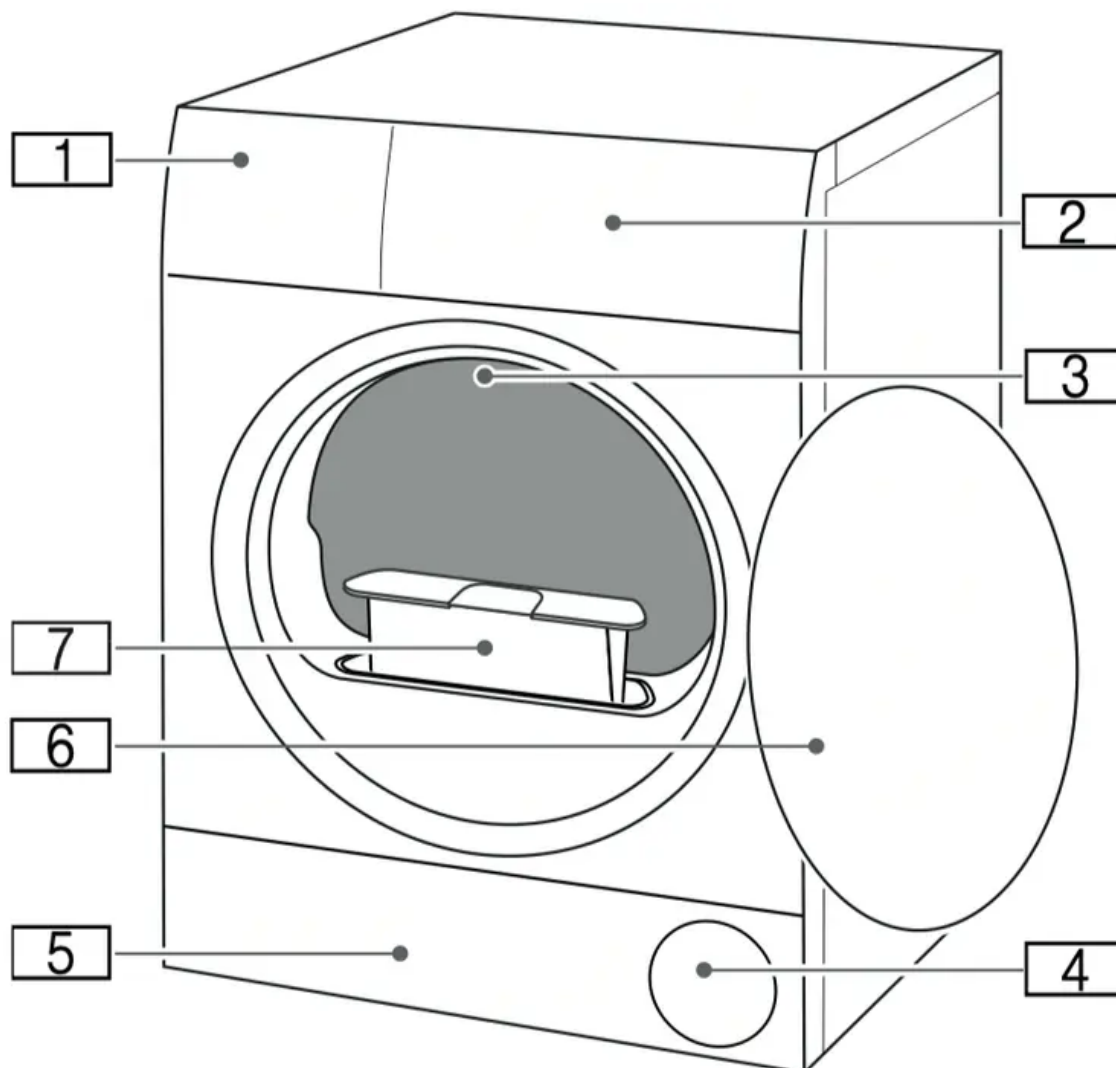

- 1** Condensation container
- 2** Control panel
- 3** Drum interior lighting (depending on the model)
- 4** Air inlet
- 5** Maintenance flap on the base unit
- 6** Door
- 7** Fluff filter

Fascia

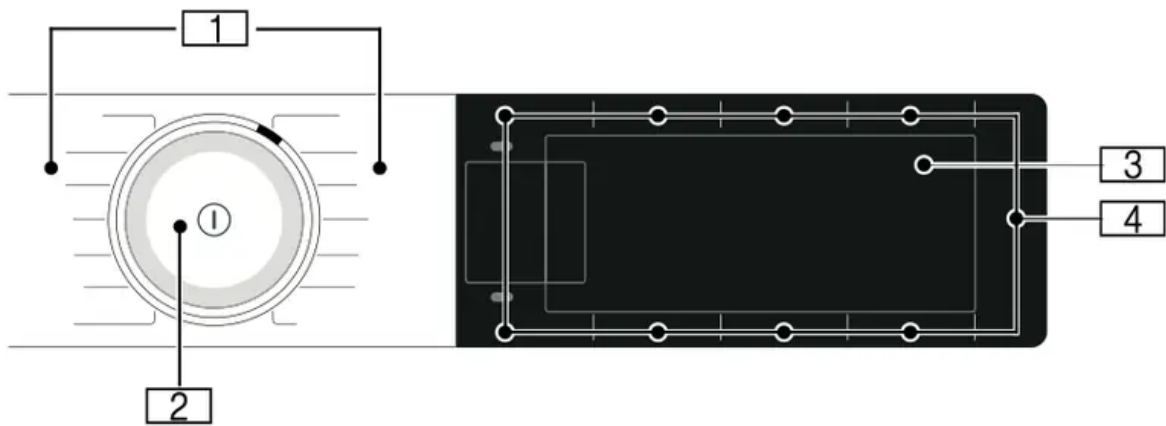

1 Programmes

2 Programme selector

- Turn: Set a programme
- Press: Switch the appliance on/off


3 Display











Displays settings and information

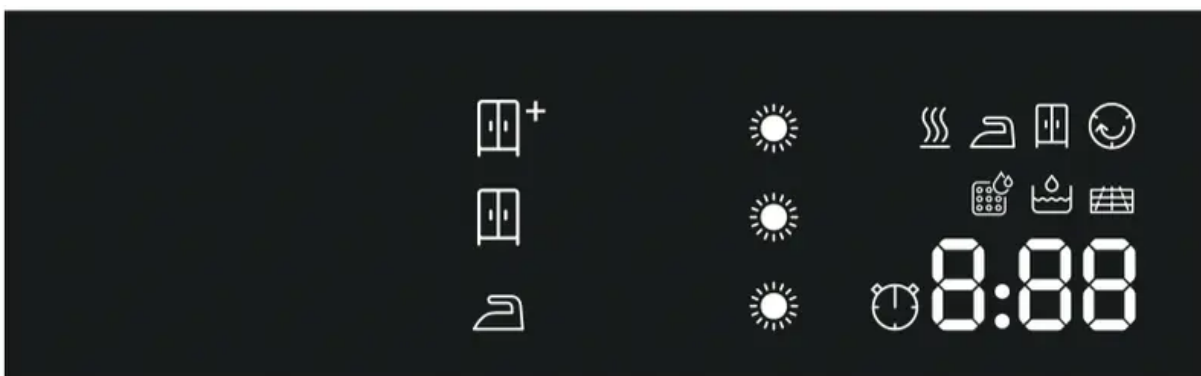




4 Buttons

        for programme settings and additional functions/appliance settings






 
 
Display



 

 

 


| Indicator/ symbol | Description | Information |
|---|---|--|
| | Programme status: | Continuously lit: Status indicator |
|  | Drying | |
|  | Dryness level: Iron Dry | |
|  | Dryness level: Cupboard Dry | |
|  | Dryness level: Cupboard Dry Plus | |
|  | Anti-Crease | |
|  | Pause | |
| <i>End</i> | Program end | |
| 00:00 | Programme duration | Expected programme duration in hours and minutes. |
| e.g.  02:45 | Programme delay | Appears when altering and activating the "Ready in" time |
|  | Empty the condensation container → <i>Page 30</i> | <ul style="list-style-type: none"> ■ Empty the condensation container and then reinsert it. → <i>Page 30</i> Then press  Start/Pause. ■ Clean the filter in the condensation container. ■ If the optional drain hose* is installed, make sure that the drain hose: <ul style="list-style-type: none"> - Is correctly connected. → <i>Page 34</i> - Is not kinked or bent. - Is not blocked or clogged, e.g. by deposits. ■ Run the intensive appliance care programme. ■ Check that no debris has found its way into the base unit. Open the maintenance flap and remove any debris. |
|  | Fluff filter | Remove the fluff → <i>Page 31</i> |

| | | |
|---|--------------------------------|--|
|  | Automatic heat exchanger rinse | The heat exchanger is cleaned automatically. Do not pull out the condensation container or cancel the programme while this is displayed. |
|  | Rinsing progress indicator | |
|  | Basic appliance care programme | Not a fault. After a certain period, the appliance will automatically recommend that you run the basic appliance care programme. Run the basic appliance care programme. → Page 43 |
|  | Appliance settings | Alter the appliance settings |
|  | CoolDown | <p>The appliance can reach high temperatures when drying. To cool the laundry, the CoolDown process reduces the temperature in the drum. If the door is not opened, the CoolDown process automatically starts after 30 seconds in the following cases:</p> <ul style="list-style-type: none"> ■ Pause the programme ■ Cancel the programme <p>You can continue to operate the appliance during the CoolDown process.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ The drum continues to rotate during the CoolDown process, even if you have paused the programme. ■ Do not change the programme during the CoolDown process. ■ Temperature regulation can take up to 10 minutes. |














Overview of programmes

 
















| Programme | Maximum load |
|---|--|
| Programme name Brief explanation of the programme and the items for which it is suitable. | Maximum load based on the dry weight of the items |
| Cottons  Hard-wearing items and heat-resistant items made of cotton or linen. | 8 kg |
| Easy Care  Items made of synthetic or blended fabrics. | 3.5 kg |
| Mixed  Mixed load consisting of items made from cotton and synthetic fabrics. | 3 kg |
| Delicates  Delicate, washable items, e.g. made from satin, or synthetic or blended fabrics. | 2 kg |
| Wool Finish  Machine-washable items made of wool or containing wool. Notes <ul style="list-style-type: none"> ■ Laundry becomes fluffier but not dry. ■ Remove laundry once the programme has ended and allow to dry. | 0.5 kg |
| Timed Program Cold  Timed programme for all types of fabric except for wool and silk. For loosening up or airing clothing that has hardly been worn. For drying individual items of laundry. Note: You can adjust the programme duration. | 3 kg |
| Timed Program Warm  Timed programme for all types of fabric except silk. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry. For drying individual items of laundry. Notes <ul style="list-style-type: none"> ■ Dry woollens, sports shoes and soft toys only with the basket for woollens. ■ In the timed programme, the laundry's remaining moisture is not automatically detected. If the laundry is still too damp when the drying programme has ended, repeat the programme and, if required, extend the programme duration. | 3 kg Max. load for woollens/soft toys in the basket: 1 basket load Max. load for shoes in the basket: 1 pair |

| | |
|--|---------------|
| Shirts/Blouses  | 1.5 kg |
| <p>Shirts/blouses made of cotton, linen, or synthetic or blended fabrics.</p> <p>Note: Once the laundry is dry, iron it or hang it up. This will allow the residual moisture to be distributed evenly.</p> | |
| Quilt/Duvet  | 2.5 kg |
| <p>Clothing, pillows, quilts or bedspreads filled with synthetic fibres.</p> <p>Note: Dry large items individually. Follow the instructions on the care label.</p> | |
| Down Wear  | 1.5 kg |
| <p>Clothing, bedspreads or eiderdowns stuffed with down.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ Dry large items individually. ■ Once the programme has ended, shake the items of laundry to distribute the stuffing and eliminate any pockets of moisture. Restart the programme if necessary. | |
| Sportswear  | 1.5 kg |
| <p>Self-drying sportswear made of performance fibres, microfibres and synthetics.</p> | |
| Towels  | 6 kg |
| <p>Hard-wearing towels and dressing gowns made of cotton.</p> | |
| Super 40'  | 1 kg |
| <p>Mixed load of synthetic fabrics and light cottons.</p> | |
| AllergyPlus  | 4 kg |
| <p>Hard-wearing items.</p> <p>Note: The programme reaches high temperatures. Particularly suitable for strict hygiene requirements.</p> | |

Settings



| Programme setting | Function |
|--|---|
| <p>Note: Not all settings can be activated in every programme. The activated settings are displayed on the buttons or highlighted brightly in the display. You can change or deactivate the activated settings by repeatedly pressing on the relevant buttons on the display.</p> | |
| <p>Drying Target :</p> | <p>The dryness level defines how damp or dry the laundry is after the programme ends.</p> <p>If you have set a dryness level, this is retained even after the appliance has been switched off for the relevant programme. Exception: The settings are not saved for Cottons.</p> |
| <p> Cupboard Dry Plus</p> | <p>Multi-layered, thick laundry that does not dry readily.</p> |
| <p> Cupboard Dry</p> | <p>Normal, single-layered laundry.</p> |
| <p> Iron Dry</p> | <p>Normal, single-layered laundry that still needs to be damp after drying and is suitable for ironing or hanging up.</p> |
| <p>Drying Level </p> | <p>If you think the laundry is still too damp when the drying programme has ended, you can adjust the degree of dryness to achieve a particular dryness level. To increase the dryness level, set the degree of dryness to between  and   . This extends the programme duration but the temperature remains the same.</p> <p>Once you have adjusted the degree of dryness for a dryness level, this setting is retained even after the appliance is switched off.</p> |
| <p>Finished in  </p> | <p>Before starting the programme, you can delay the time at which the programme ends by up to 24 hours using  and .</p> <p>The set time in hours, e.g. 8 h, is shown in the display and counts down until the programme starts. Once the programme has started, the programme duration is displayed.</p> |

| | |
|--|---|
| | Note: Observe the information about the ambient temperatures  Page 52. |
|  Finished in   | The drying time for  timed programmes can be extended in 10-minute increments using  and  . |
|   | You can use the  and  selection buttons to adjust the setting values. |
| Easy Iron 60'  Easy Iron 120'  | The drum moves the laundry at regular intervals after drying to prevent creasing. You can activate or deactivate the automatic Anti-Crease function for 60 minutes (using Easy Iron 60' ) or for 120 minutes (using Easy Iron 120' ). |
| Low Heat  | Reduced temperature for delicate fabrics, e.g. polyacrylic or elastane, may increase the drying time. |
|  Start/ Pause | Starting, cancelling and interrupting a programme. |

Laundry

Preparing laundry

Warning Risk of explosions/fire!

Certain objects may ignite when drying is in progress, or even cause the appliance to catch fire or explode. Remove any lighters or matches from pockets on items of clothing.

Caution!

 
Risk of damage to the drum and laundry Leaving objects in the pockets of your clothing can cause damage to the drum and laundry when the appliance is in operation. Remove all objects (e.g. metal items) from clothing pockets.

Prepare the laundry as follows:

- Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Close zips, hooks, eyelets and buttons. Button up large items of laundry, such as covers.

- Always dry very small items of laundry, e.g. babies' socks, together with large items such as towels.
- Use timed programmes for single items.
- Knitted items, such as T-shirts and jerseys, often shrink slightly the first time they are tumble-dried. Use a gentle programme.
- Do not overdry easy-care laundry. This leads to increased creasing of your laundry.
- Some detergents and care products, e.g. starch or softeners, contain particles that may accumulate on the moisture sensor. This may impair the sensor's performance and, in turn, the drying result.

Notes





- When washing laundry to be tumble-dried, use the correct amount of detergent and care products as specified in the manufacturer's instructions.
- Clean the moisture sensor regularly  Page 38.

Sorting laundry

 
Note: Load the laundry item by item into the appliance. For more effective drying, do not stuff an entire bundle of laundry into the dryer at once.

Caution!

Risk of material damage to the dryer or laundry Laundry that is unsuitable for tumble-drying may damage the appliance and the laundry when it is dried. Before you dry it, sort the laundry according to the information given on the care label:

-  Suitable for tumble drying
-  Dry at normal temperature
-  Dry at low temperature
-  Do not tumble-dry

When sorting the laundry to be dried, take the following points into account:

- To achieve an even drying result, only dry laundry of the same type of fabric and texture together. If you dry thin, thick and multilayered fabrics together, they will dry to differing degrees.
- Use the fabric descriptions given for the individual drying programmes to help you choose the most appropriate programme.  "Overview of programmes" on page 23

Note: You can select a timed programme to add extra drying time for laundry that is still damp.

Caution!

Risk of material damage to the appliance and laundry


Do not tumble-dry the following items or fabrics in the appliance:


- Laundry contaminated with solvents, wax or grease.
- Unwashed items.
- Items made from non-breathable fabrics (e.g. rubber-coated).
- Items made from delicate fabrics, such as silk and curtains made of synthetic material.

Operating the appliance


Loading laundry and switching on the appliance

Note: The appliance must be correctly installed and connected. → Page 13


1. Prepare and sort the laundry.
2. Press  to switch on the appliance.

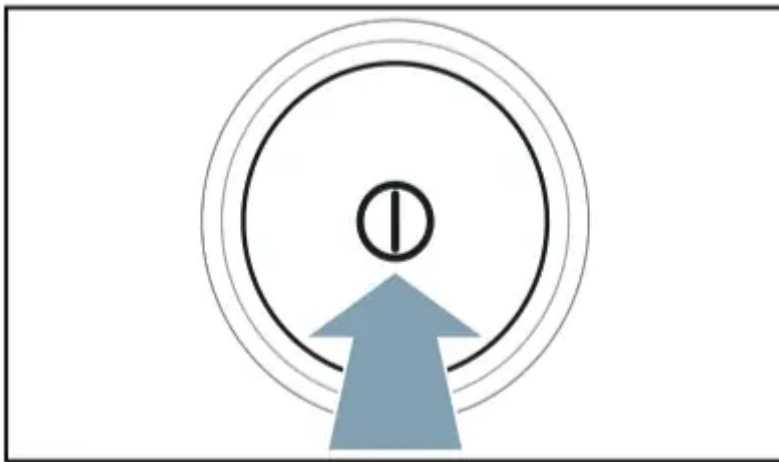


3. Open the door. Check that the drum has been completely emptied. Empty it if necessary.

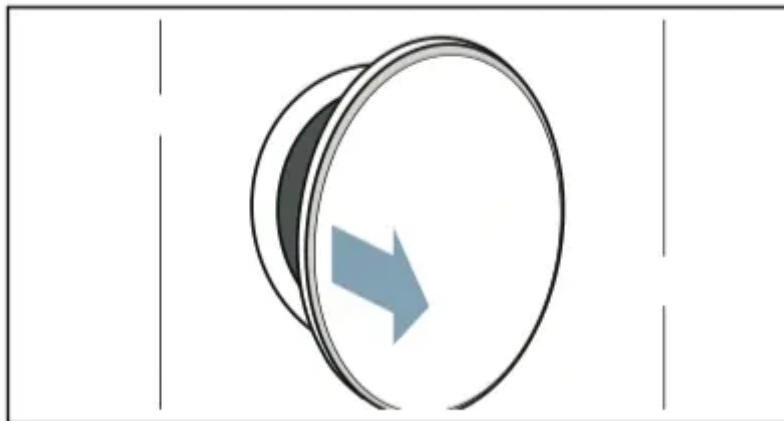

4. Load the laundry unfolded into the drum.

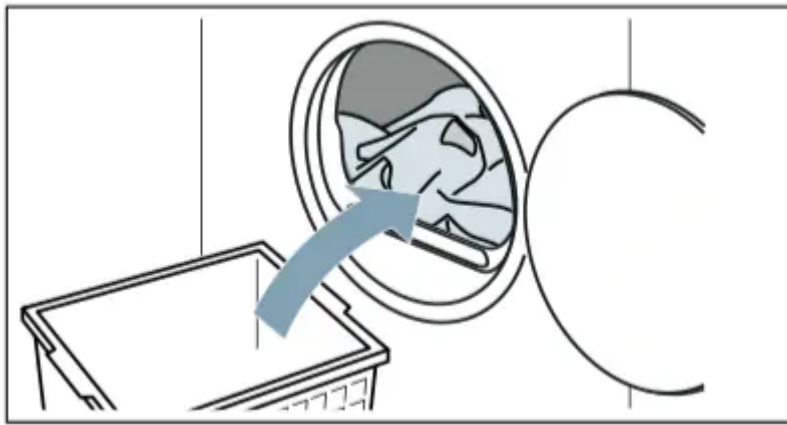

5. Close the appliance door.

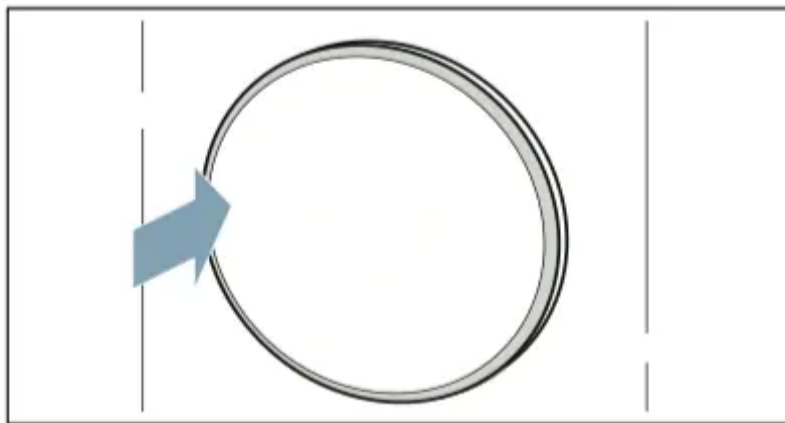

Caution!

Risk of material damage to the appliance or laundry.

Make sure that laundry is not trapped in the door.




Note: The appliance's drum is lit up after the door is opened and closed and once the programme has started. The drum's interior light goes out on its own (depending on model).

Setting a programme

Note: If you have activated the childproof lock, you must deactivate it before you can set a programme. → Page 33

1. Set the programme you require.

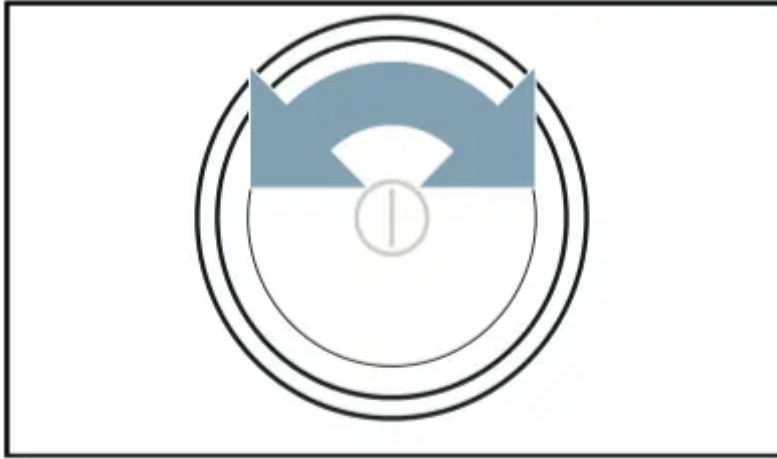

The programme settings will appear on the display.

2. Adjust the programme settings, if required.

Starting the programme

Press  Start/Pause.

Note: If you want to prevent the programme from being adjusted inadvertently, activate the childproof lock. → Page 33


Programme progress

The programme status will be indicated on the display.

Note: When a programme is selected, the expected drying time for the maximum permitted load is displayed. The moisture sensor measures the residual moisture in the laundry as it is being dried. The programme duration and the remaining time indicated on the display are automatically adjusted as the programme progresses, depending on how damp the laundry is (exception: Timed programmes).

Changing the programme or adding more laundry

You can remove or add laundry and change or adjust the programme at any time during drying.

1. Open the door or press  Start/ Pause to pause the programme. **Note:** The drum will continue to rotate when the CoolDown process is in progress, even if you have paused the programme. You can stop the CoolDown process at any time by opening the door.

2. Add or remove laundry.

3. If required, select a different programme or a different programme setting. →
"Overview of programmes" on page 23


Note: Do not change the programme during the CoolDown process.

4. Close the appliance door.

5. Press  Start/Pause.

Note: The programme duration is updated on the display, depending on the load and on the residual moisture in the laundry. The values displayed may change when the programme or load is changed.

Cancelling the programme

The programme can be cancelled at any time by opening the door or pressing  Start/Pause.

Caution!

Risk of fire. Laundry may catch fire.


If you cancel the programme, remove all items of laundry from the dryer and spread them out to allow the heat to dissipate.


End of programme


End appears in the display.

Removing laundry and switching off the appliance

1. Remove the laundry.

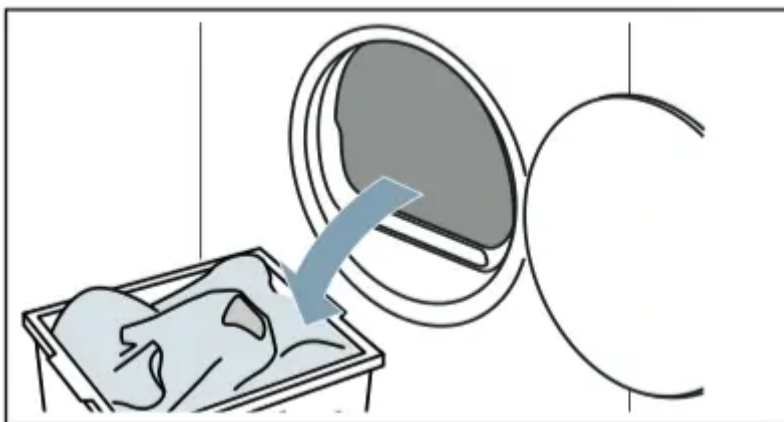

2. Press  to switch off the appliance.

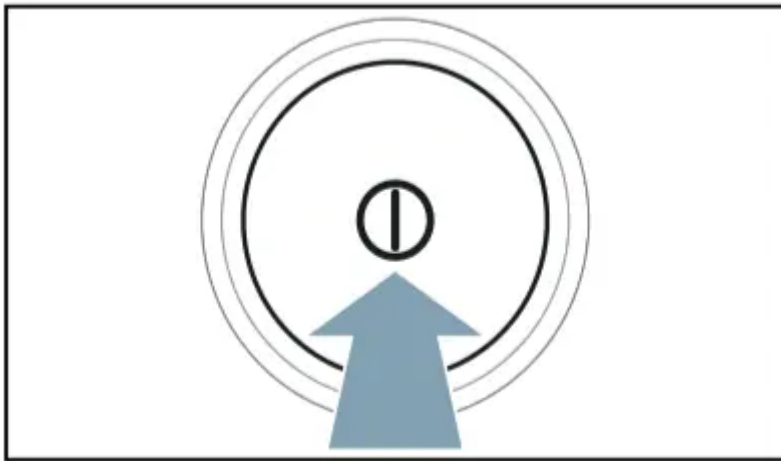


Emptying the condensation container


Condensation will form in the appliance as it dries the laundry.

If there is no drain hose connected to the appliance, the condensation water from the appliance will run into the condensation container. In this case, you will need to empty the condensation container each time the dryer finishes drying the laundry, and also if it becomes full before drying is complete.

1. Pull out the condensation container horizontally.

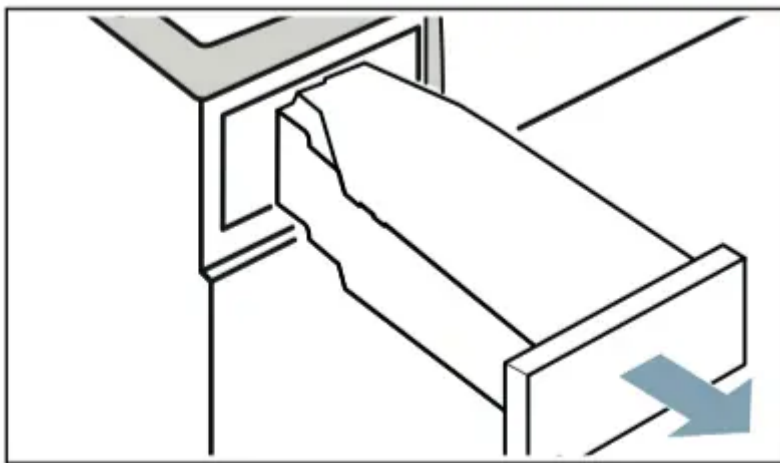

2. Pour out the condensation water.

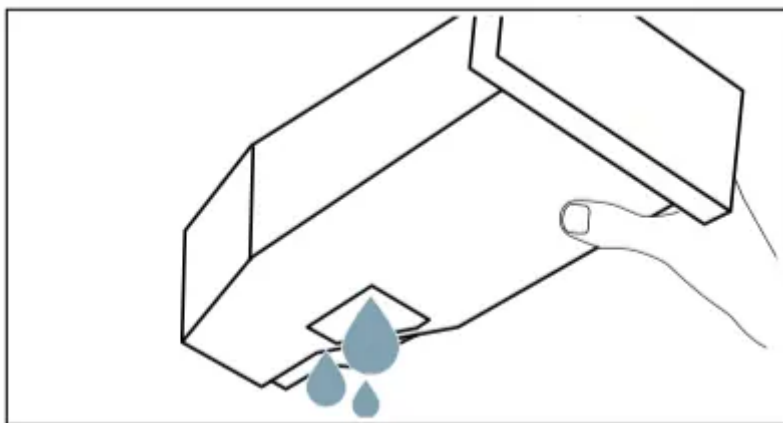


Caution!

Risk of harm to health and material damage

Condensation water is not suitable for drinking and may be contaminated with fluff. Contaminated condensation water may be harmful to your health and cause material damage. Do not drink the condensation water or reuse it.

3. Push the condensation container back into the appliance until you feel it lock into place.

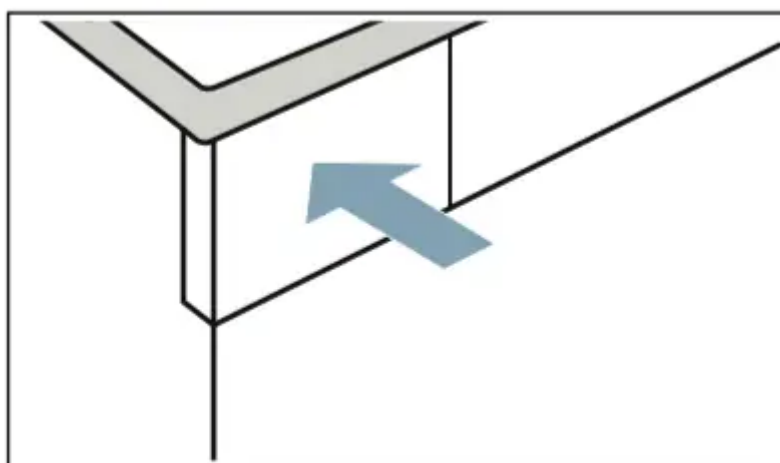

Note: The filter in the condensation container filters the condensation water, which is used during the appliance's automatic cleaning cycle. The filter is cleaned by emptying out the condensation water. You should still check the filter regularly for any buildup, and remove this if necessary.

→ "Cleaning the filter in the condensation container" on page 39


Removing the fluff

Note: During drying, fluff and hair from the laundry is trapped by the fluff filter. If the fluff filter is clogged or dirty, this reduces the flow of air, preventing the appliance from achieving optimal drying results. Dirty fluff filters increase the power consumption and increase the required drying time.


Clean the fluff filter after each drying cycle:

1. Open the door and remove all fluff from it.


2. Pull out the two-part fluff filter.

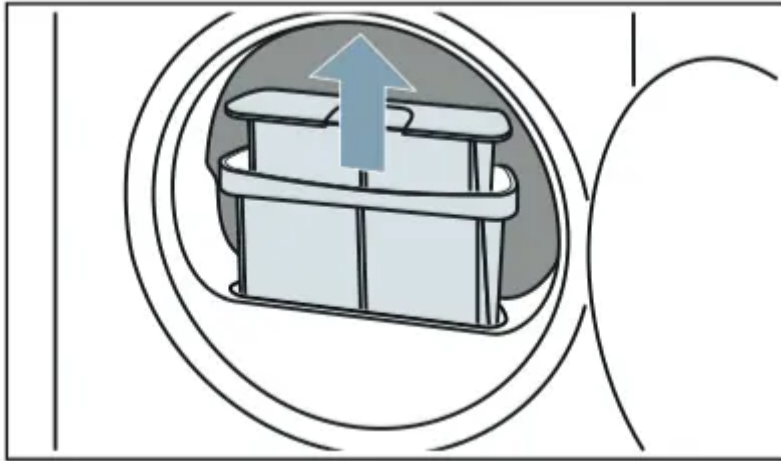


3. Remove the fluff from the fluff filter recess. Ensure that no fluff falls into the open shaft.

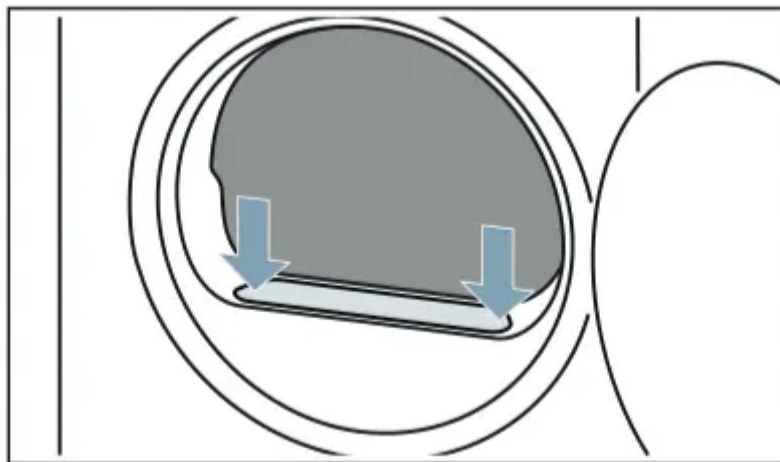


4. Pull the two-part fluff filter apart.

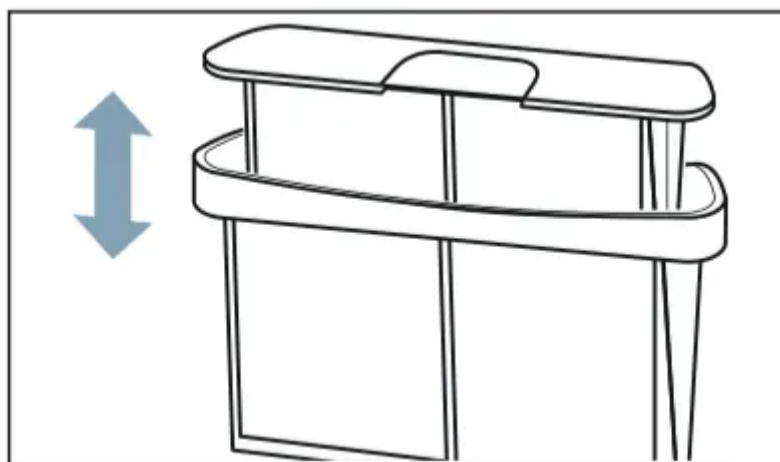


5. Open the two parts of the filter.

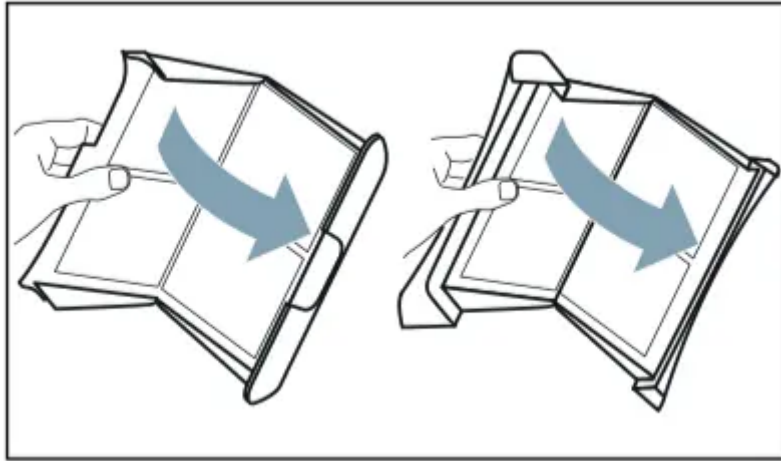


6. Remove all fluff from both parts of the filter.

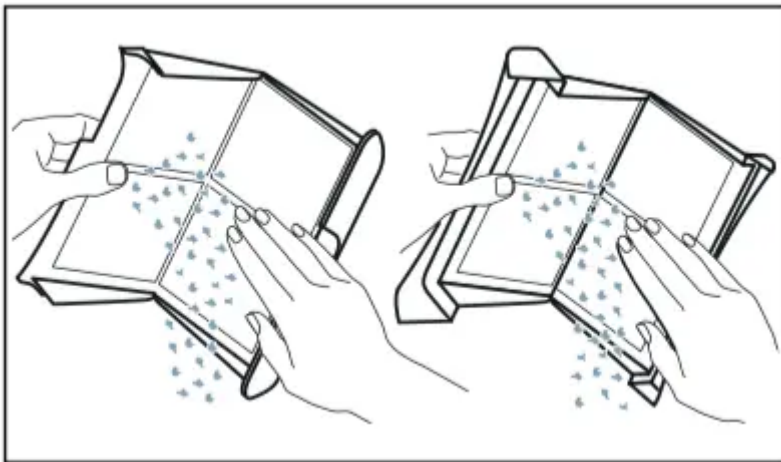

7. Rinse off fluff under warm, running water.

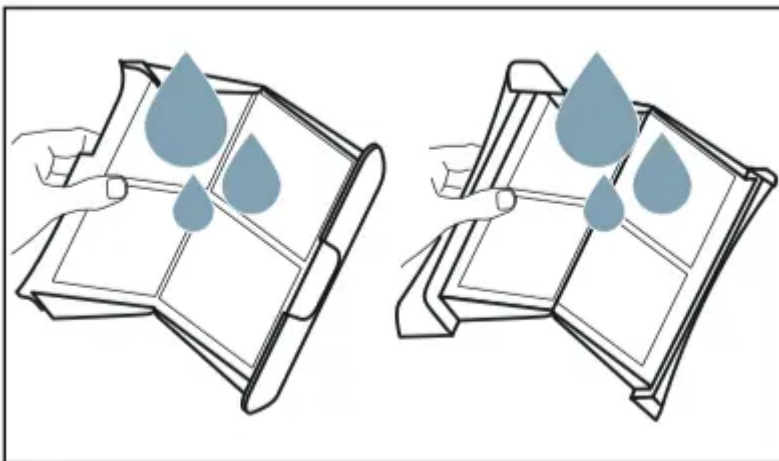

8. Dry the two parts of the fluff filter, snap them shut and reinsert the filter.

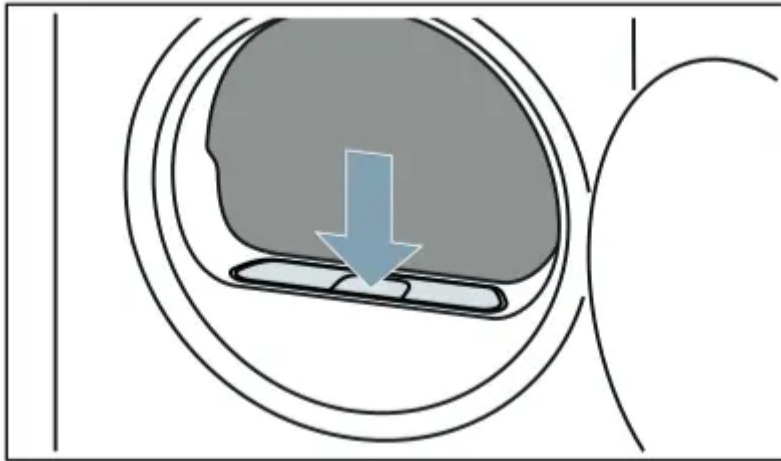

Caution!

Material damage/damage to the appliance

If you operate the appliance without a fluff catcher (e.g. fluff filter, fluff depot, depending on appliance specifications), or if the fluff catcher is incomplete or defective, this may result in damage to the appliance.

Do not operate the appliance without a fluff catcher, or with a fluff catcher that is incomplete or defective.

Appliance settings

You can activate/deactivate the childproof lock and adjust the basic settings (e.g. signals).

Childproof lock

Activating the childproof lock prevents the settings from being accidentally changed on the control panel.

Activating/deactivating the childproof lock:

- Press and hold Child Lock push 3 sec  for 3 seconds.

Note: The childproof lock will remain active, even once the appliance has been switched off. If you wish to change settings on the control panel when you turn on the appliance, you will need to deactivate the childproof lock.

Notification signal

You can activate or deactivate the notification signal at the end of the programme. If you activate this setting, an audible signal will sound once the programme has ended.

Activate/deactivate the appliance setting as follows:

Press End Signal  .


The notification signal at the end of programme is activated/deactivated.



Note: If a signal does not sound when the programme ends even though the notification signal is activated, you can change the appliance setting.

Basic settings


You can adjust certain basic settings on the appliance. To make adjustments, you first need to call up the setting mode :

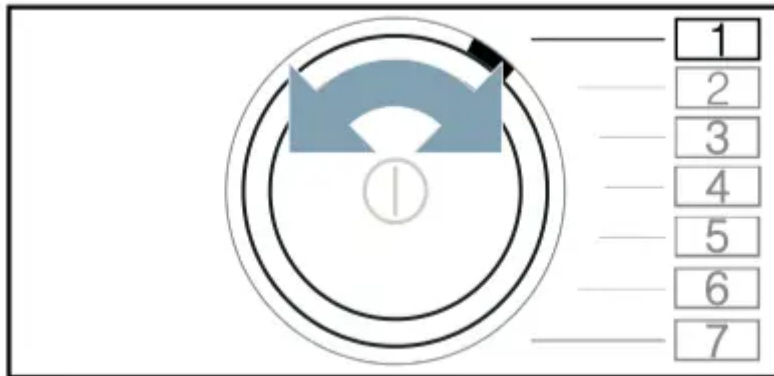1. Set the programme to the position.




2. Press  Drying Target  and, at the same time:

3. Set the programme to the position.

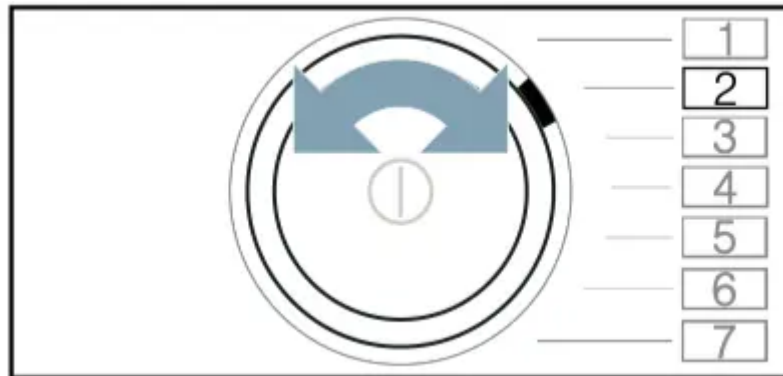

4. Release  Drying Target  . Setting mode is now activated.

The basic settings are assigned to the following programme positions:

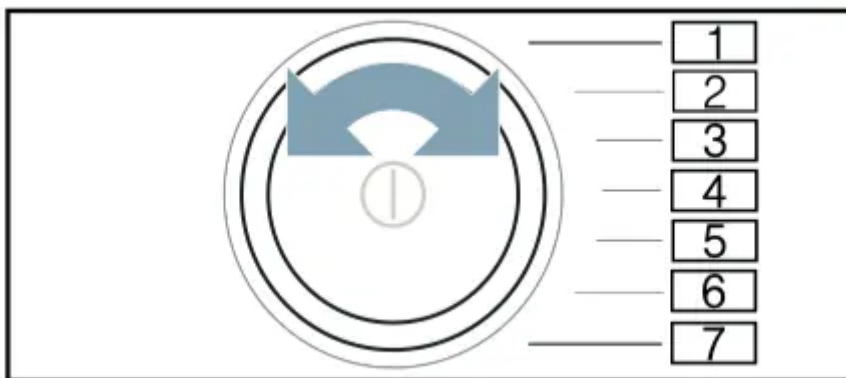

| Position | Basic setting |
|----------|---|
| 2 | Adjust the volume of the audible notification signals (e.g. at the end of a programme). |
| 3 | Adjust the volume of the audible operating signals. |

Settings:

- 0 Off
- 1 Low
- 2 Medium
- 3 High
- 4 Very high

Adjust and activate/deactivate the basic settings as follows

1. Position of the required basic setting.
2. Change the setting using: **- +**
3. Adjust any additional basic settings you require or save and exit the basic settings.

Save and exit the basic settings as follows

Switch off the appliance.

Note: The selected settings are retained even after the appliance has been switched off.

Draining the condensation water

Condensation will form in the appliance as it dries the laundry.


You must ensure that the drain hose is connected when you operate the appliance.




If there is no drain hose connected to the appliance, the condensation water from the appliance will run into the condensation container. In this case, you will need to empty the condensation container each time the dryer finishes drying the laundry, and also if it becomes full before drying is complete.

Connect the drain hose as follows:


1. Remove any accessories from the drum.

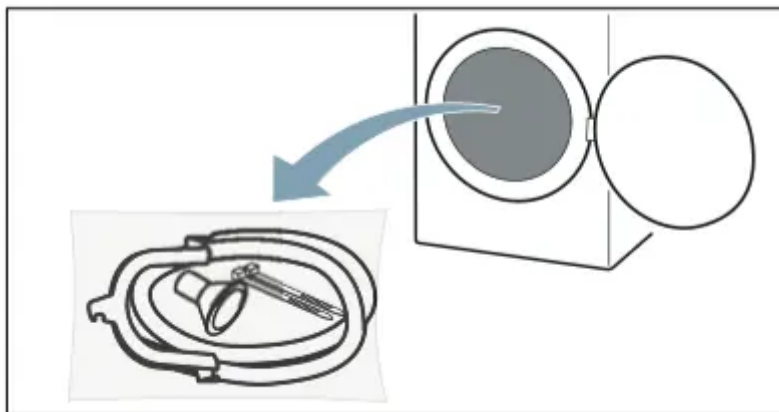

2. Remove all items from the bag.

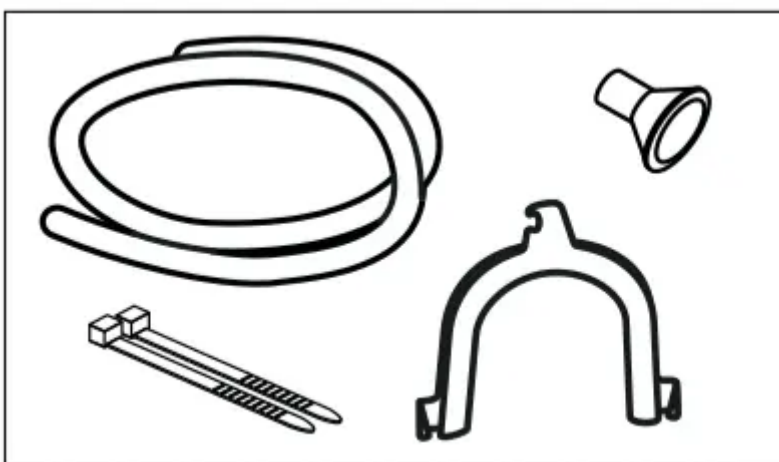


3. Remove the cap from the socket.

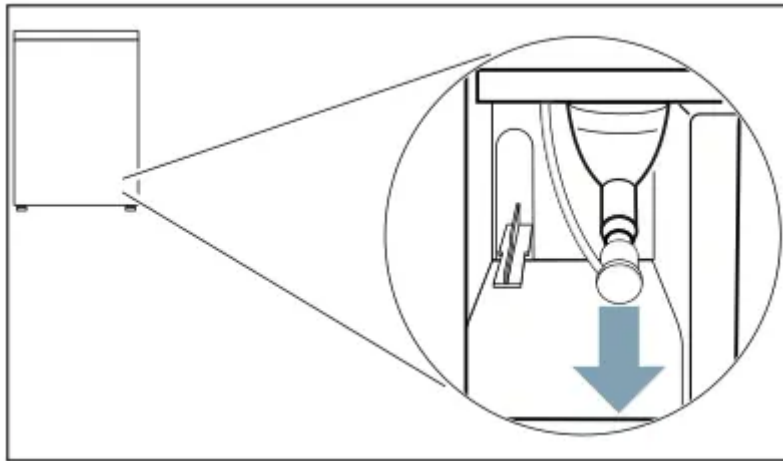


Notes

- The appliance is supplied with the cap fitted on the socket.
 - When removing the cap, a little liquid may issue from the socket.
4. Push the cap into its "park position".

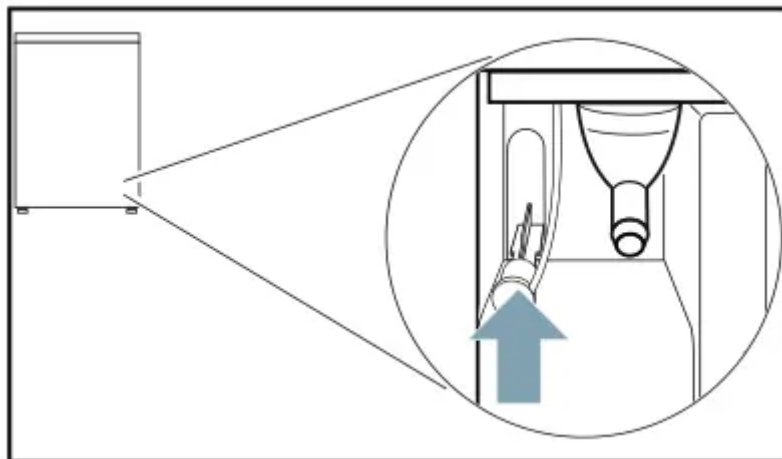


5. Push the drain hose as far as it will go onto the uncovered socket.

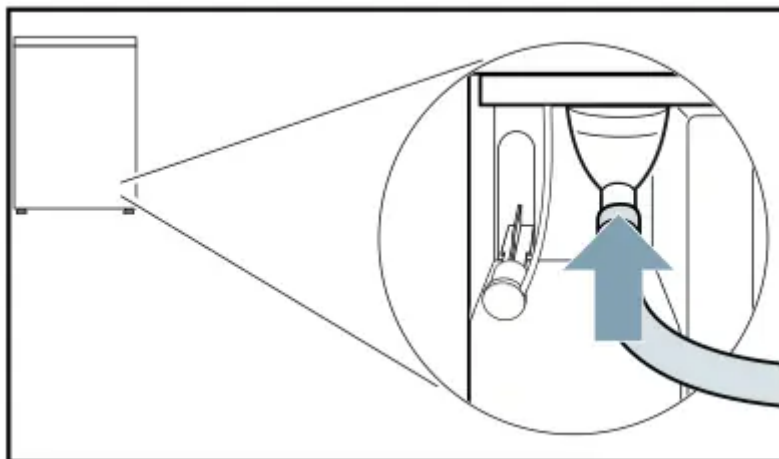


6. Secure the other side of the drain hose using the remaining accessories, depending on the connection situation.

Washbasin:

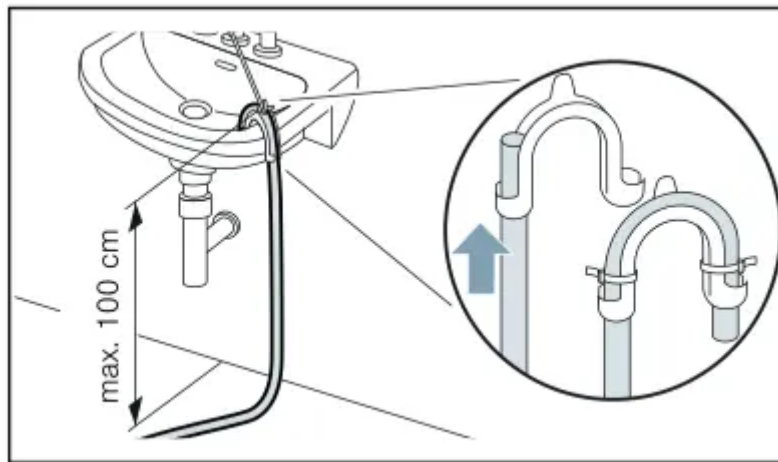

Siphon:

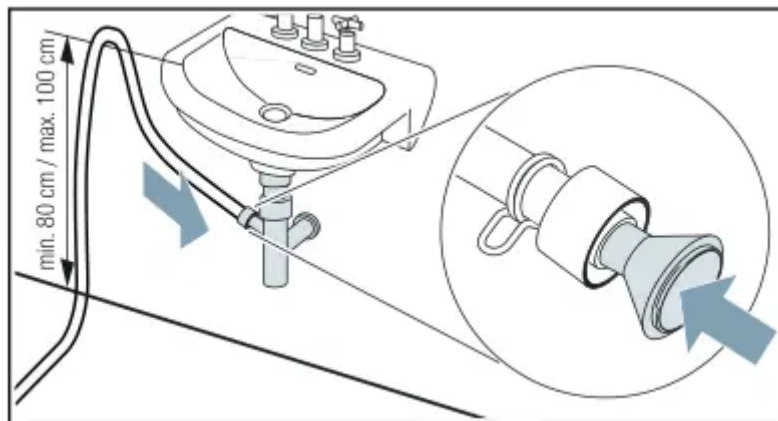


The connection point must be secured using a hose clamp (1222 mm clamping range, available from specialist retailers).

When connecting to a siphon, make sure that the drain hose is routed at a height of at least 80 cm, but no more than 100 cm.

Tip: Y-connection adapter for the water outlet If you have a washing machine connected to the same outlet, you can secure the water outlet hose and the drain hose (from the connection kit) to the adapter on the drain. Order number: 15000490

Floor drain:

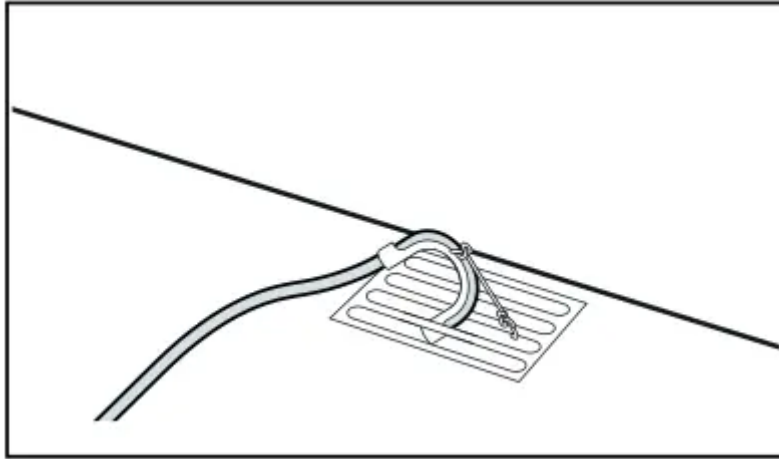

Caution!

Risk of material damage due to leaks or draining water.


Secure the drain hose to prevent it from slipping out. Do not kink or bend the drain hose. The height difference between the surface on which the appliance is installed and the drain hose must be no more than 100 cm.

Caution!


Risk of accumulated water being drawn back into the appliance and causing material damage.

Check that the water drains away quickly. The drain must not be sealed or blocked.


7. Pull out the condensation container horizontally and empty it.

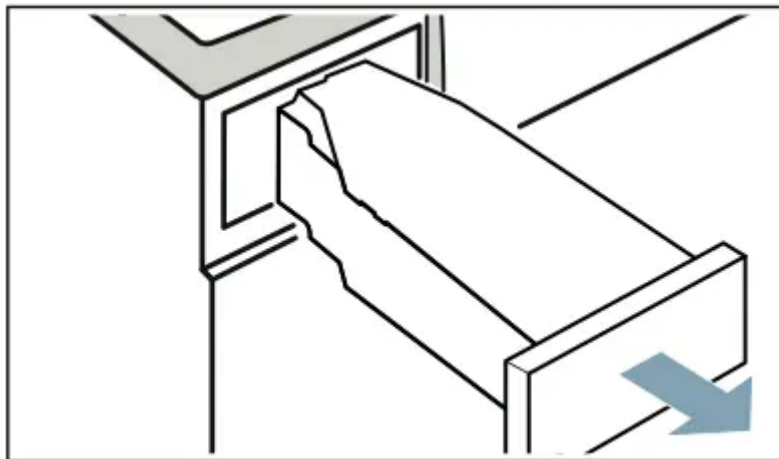


8. Turn the condensation container 180° onto its underside and remove the stopper that is fitted.

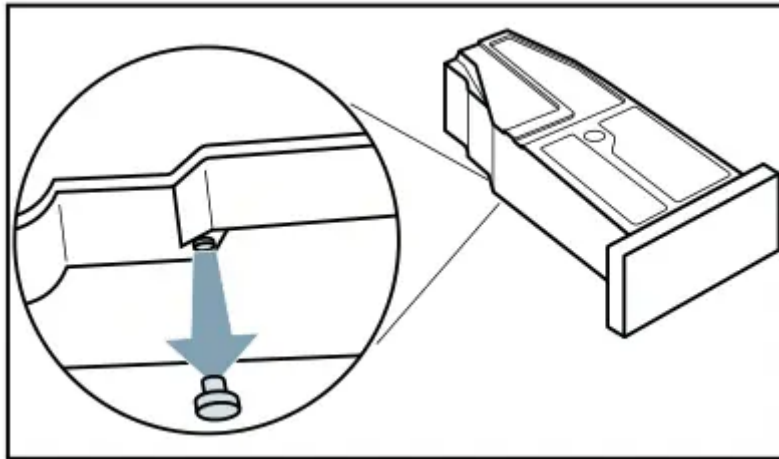

9. Turn the condensation container 180° again and insert the stopper into the recess in the top of the condensation container.

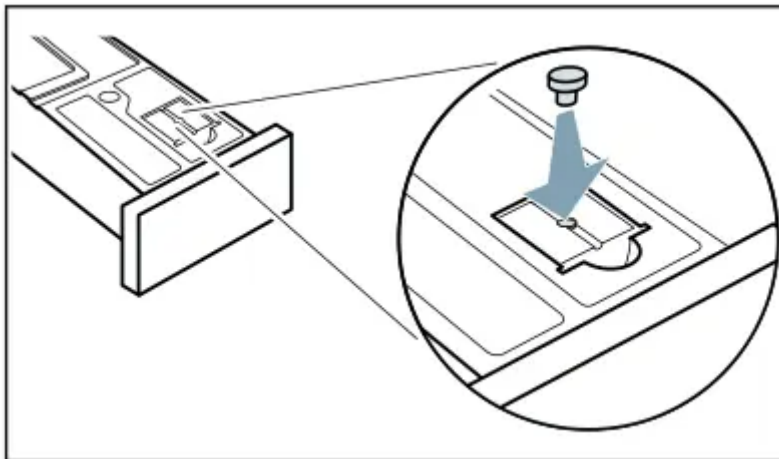

10. Slide in the condensation container until it clicks into place.

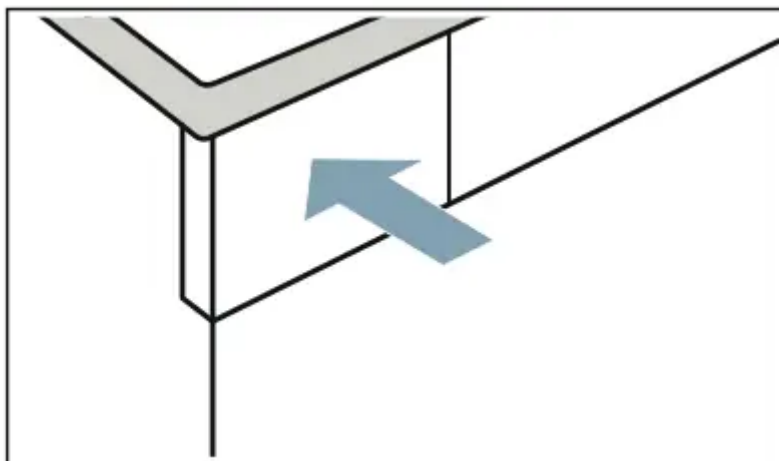

The condensation water is now discharged via the drain hose into the waste-water system or into a washbasin.

Note: If you want to drain the condensation water back into the condensation container, reverse these steps.

Caution!

Risk of material damage/damage to the appliance

If you are draining condensation water into the condensation container, liquid may issue from the socket and cause material damage. Before using the appliance, plug the cap into the socket.

Cleaning and maintenance

Cleaning the appliance

Warning

Risk of death!

The appliance is powered by electricity. There is a risk of electric shock if you come into contact with live components. Therefore please note:

- Switch off the appliance. Disconnect the appliance from the power supply (pull out the plug).
- Never take hold of the mains plug with wet hands.
- When removing the mains plug from the socket, always take hold of the plug itself and never the mains cable, otherwise this may damage the mains cable.
- Do not make any technical modifications to the appliance or its features.
- Repairs and any other work on the appliance must only be conducted by our customer service or by an electrician. The same applies for replacing the mains cable (when necessary).
- Spare mains cables can be ordered from our customer service.

Warning Risk of poisoning!

Poisonous fumes may be given off by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

Warning Risk of electric shock/material damage/damage to the appliance!

If moisture penetrates the appliance, this may cause it to short circuit.

Do not use a pressure washer, steam cleaner, hose or spray gun to clean your appliance.

Caution!

Material damage/damage to the appliance


Cleaning agents and agents for pretreating laundry (e.g. stain removers, prewash sprays, etc.) may cause damage if they come into contact with the surfaces of the appliance. Therefore please note:

- Do not allow these agents to come into contact with the surfaces of the appliance.
- Clean the appliance with nothing but water and a soft, damp cloth.
- Remove any detergent, spray or other residues immediately.


Cleaning the moisture sensor

Note: The moisture sensor measures the amount of moisture in the laundry. After long periods of usage, the moisture sensor may become covered by a fine layer of limescale or detergent and care product residue. These deposits must be removed regularly, otherwise the drying results may not be optimal.

1. Open the door.

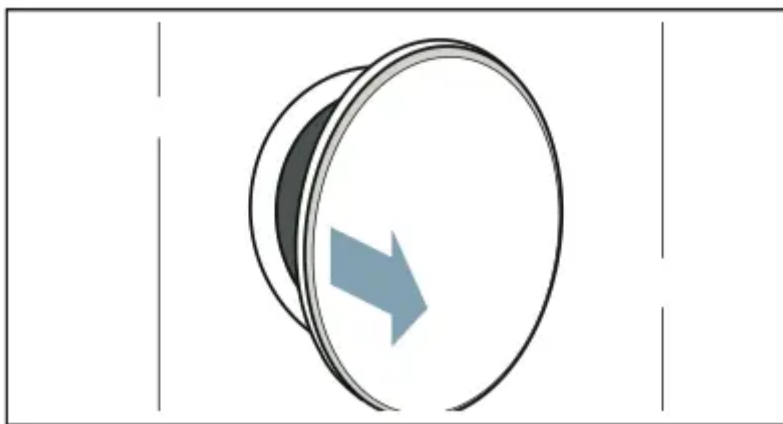

2. Clean the moisture sensor with a rough sponge.

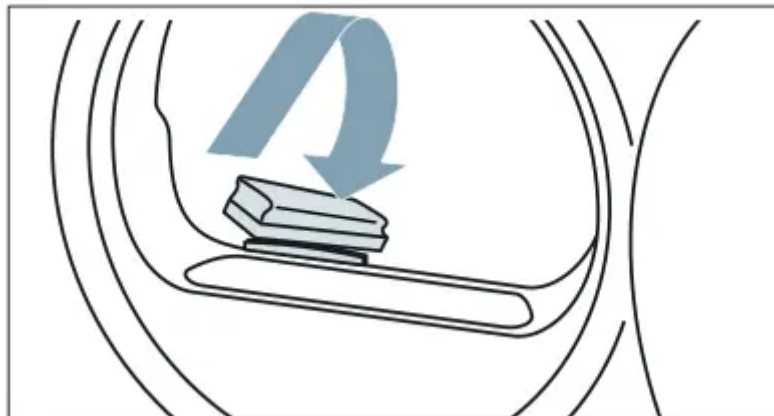


Caution!

Risk of damaging the moisture sensor. The moisture sensor is made from stainless steel. Do not clean the sensor with abrasive cleaning products or wire wool.

Cleaning the filter in the condensation container


Note: The filter in the condensation container cleans the condensation water, which is used during the appliance's automatic cleaning cycle.

1. Pull out the condensation container horizontally.

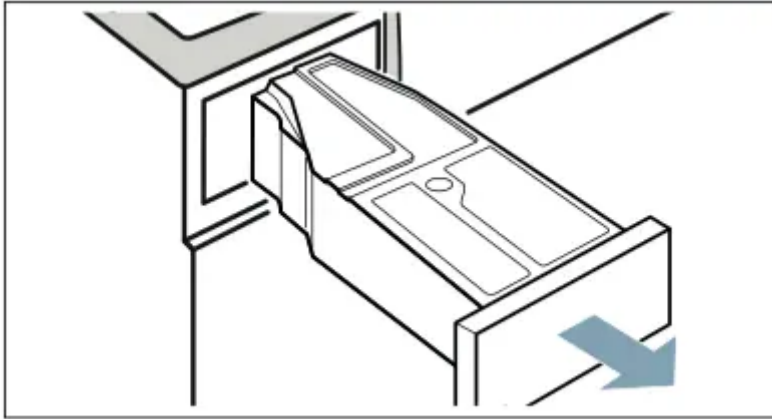

2. Pour out the condensation water.


3. Remove the filter.

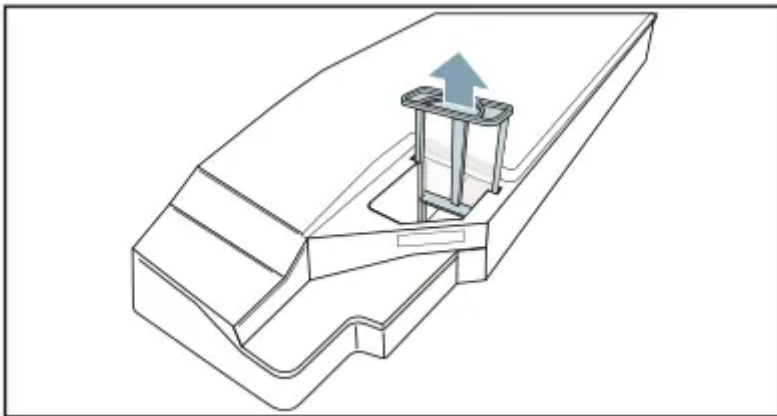

4. Clean the filter under warm, running water or in the dishwasher.

Note: You can use a soft brush to clean off more stubborn dirt.

5. Push the filter in until you feel it lock into place.

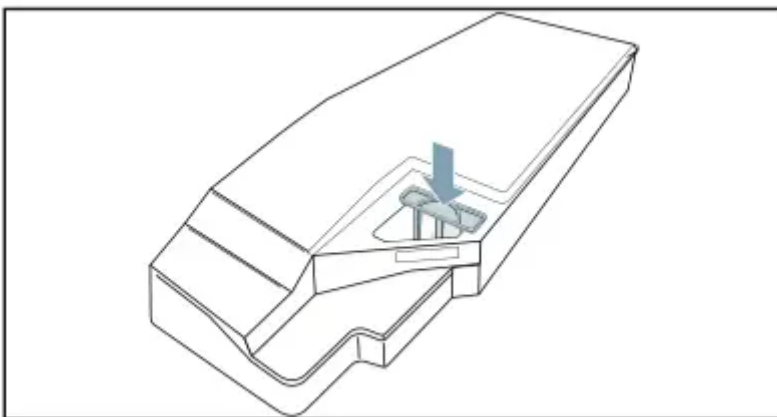

Caution! If the filter is not inserted, fluff can find its way inside the appliance and damage it.

Only operate the appliance with the filter inserted.

6. Push the condensation container in until you feel it lock into place.


Cleaning the base unit

You can clean the appliance's base unit if it has fluff in it, for example.


Note: Allow the appliance to cool down for approximately 30 minutes after use before commencing cleaning.

Clean the base unit as follows:


1. To open the maintenance flap, take hold of it at the top at both sides and pull it down.

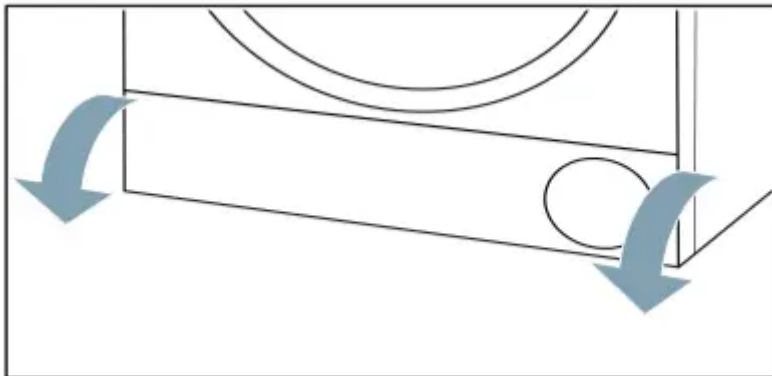


2. Clean the maintenance flap with a soft, damp cloth.

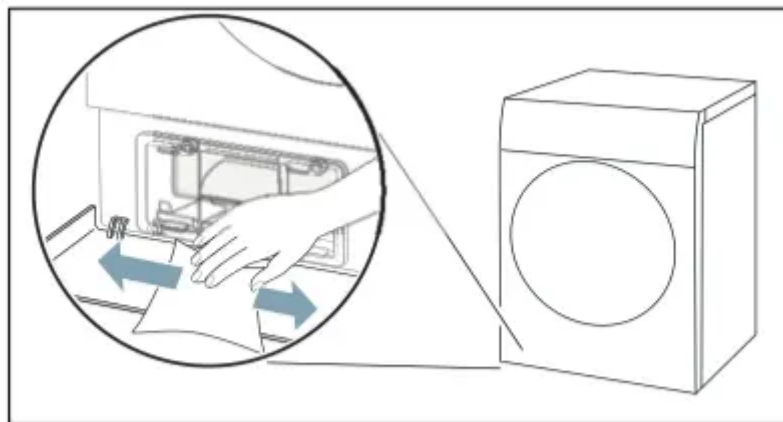

3. Unlock the levers on the heat exchanger cover.

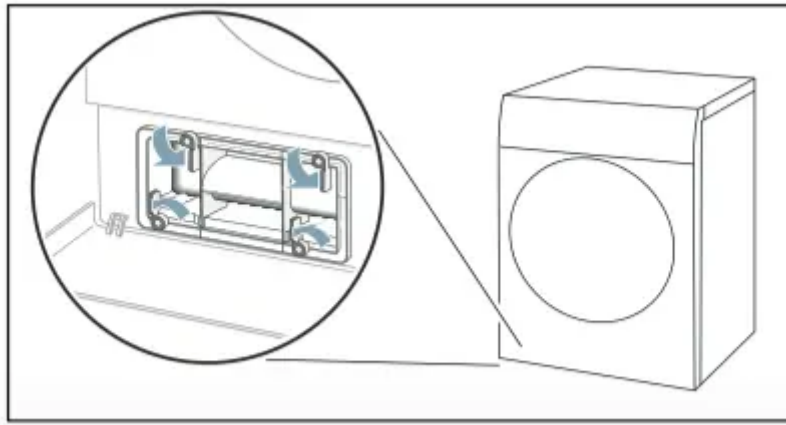


4. Pull the heat exchanger cover out by its grip.

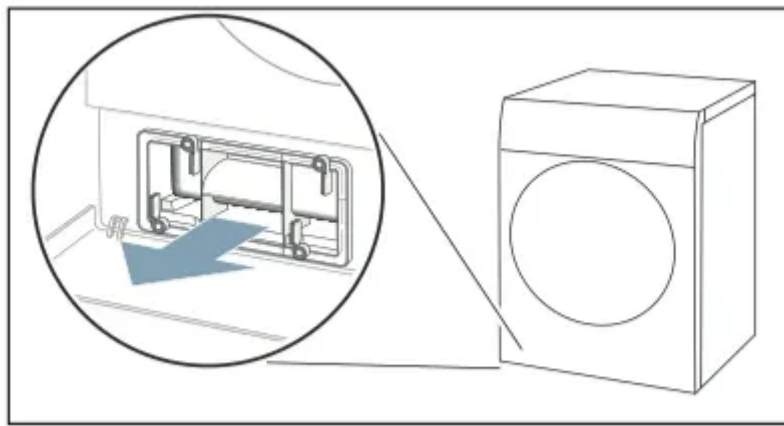


5. Use a soft brush to clean the heat exchanger cover.

Note: Make sure that no dirt or debris is left on the seal.


6. Pull the insert out horizontally.

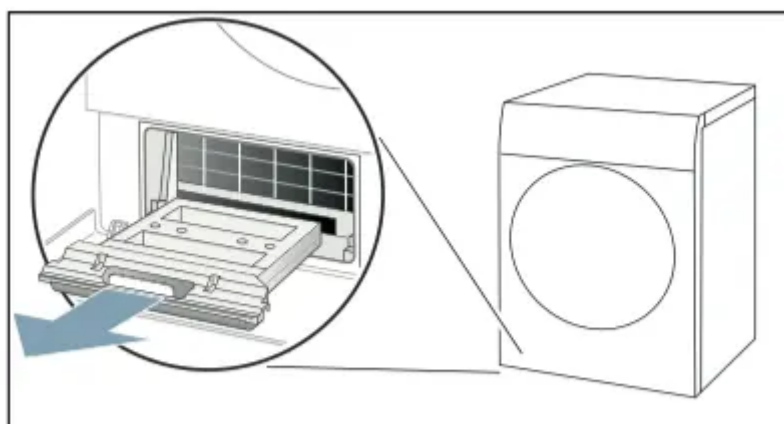

7. Rinse the insert under running water and dry it off.

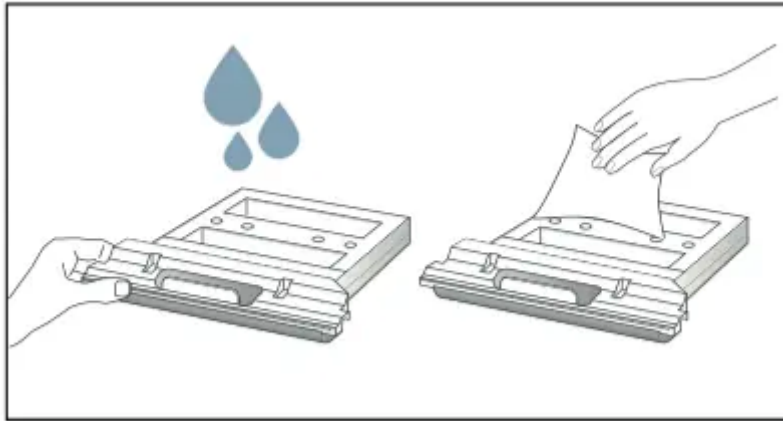


8. Clean the opening in the appliance with a soft, damp cloth.

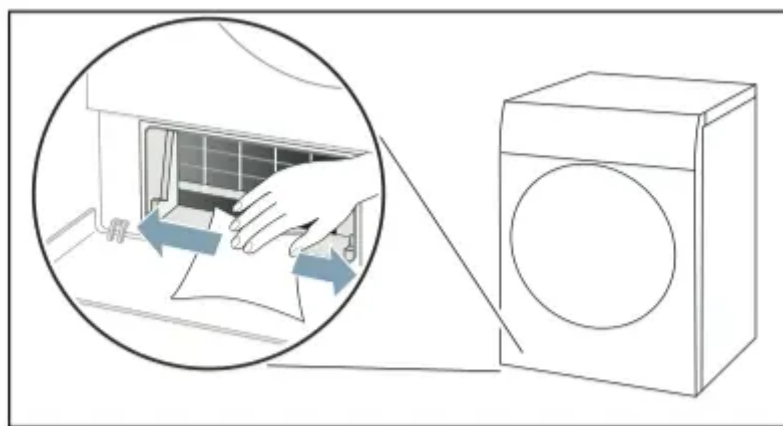


Notes

- Be careful not to damage the heat exchanger, as it is exposed.
- Thanks to the appliance's self-cleaning function, you do not need to clean the heat exchanger.

9. Slide the insert in horizontally as far as it will go.

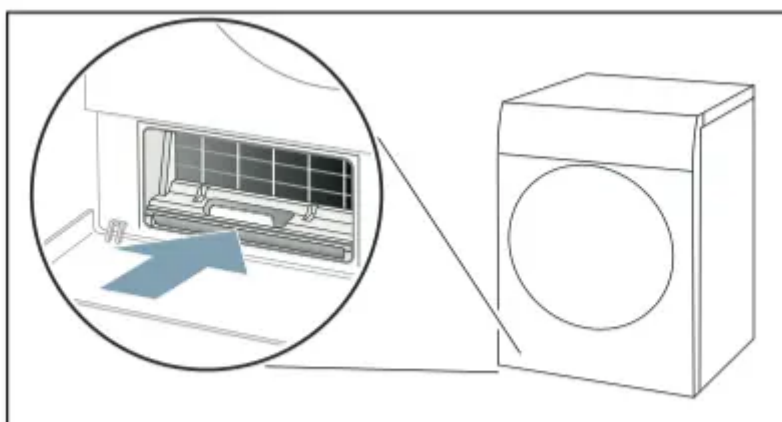


10. Slide the heat exchanger cover in by its grip.

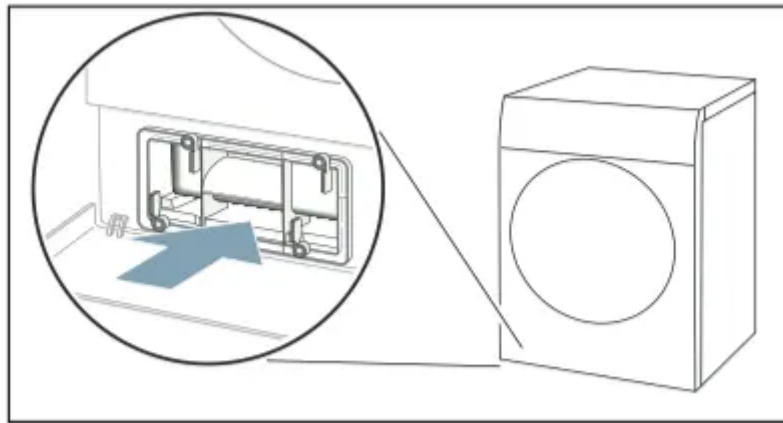


Note: You can only slide the heat exchanger cover in if the insert is in the appliance.

11. Lock the levers on the heat exchanger cover.

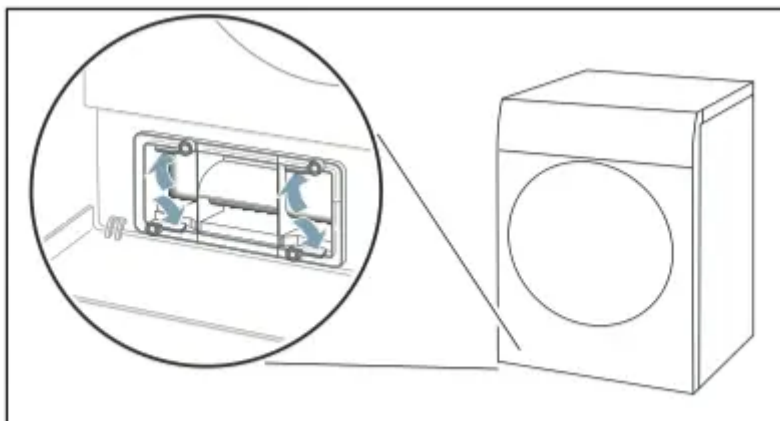

12. Close the maintenance flap.

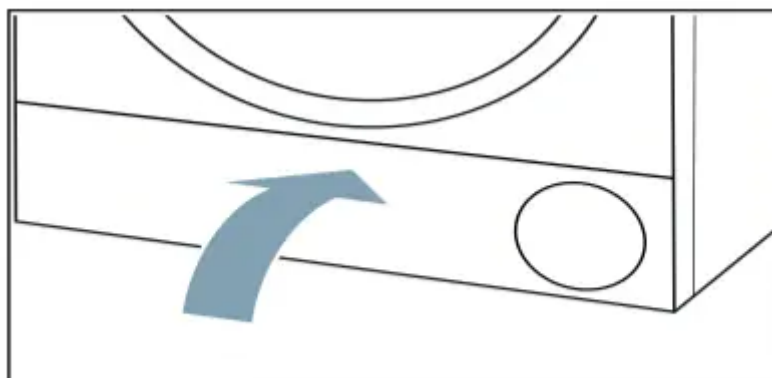



You have now finished cleaning the appliance's base unit.

Appliance care

Preparing the appliance for appliance care

The appliance offers the following settings for the appliance care programme:

You can use the appliance setting  Quick Care to call up and run the basic appliance care programme. This is an additional cleaning programme to remove any light dirt deposits in the appliance.

You can use the appliance setting  Indepth Care to call up and run the intensive appliance care programme. This is an additional cleaning programme to remove any stubborn dirt in the appliance and any odours after a downtime of more than one month.

Before running the appliance care programme, the appliance must be suitably prepared.

Warning Risk of scalding/material damage/ damage to the appliance!

Boiling or hot water can cause severe scalding as well as material damage and damage to the appliance if it is spilled or leaks out.

Do not use boiling water for this appliance or its components or accessories. Do not allow hot water or steam to come into contact with your skin.

Warning Risk of poisoning/material damage!

Condensation water is not suitable for drinking and may be contaminated with lint. Contaminated condensation water may be hazardous to health and may cause material damage.


Do not drink or reuse.

Preparing the appliance for appliance care

The appliance must be prepared before you can run a basic or intensive appliance care programme.

Prepare the appliance for appliance care as follows:


1. Remove the laundry.

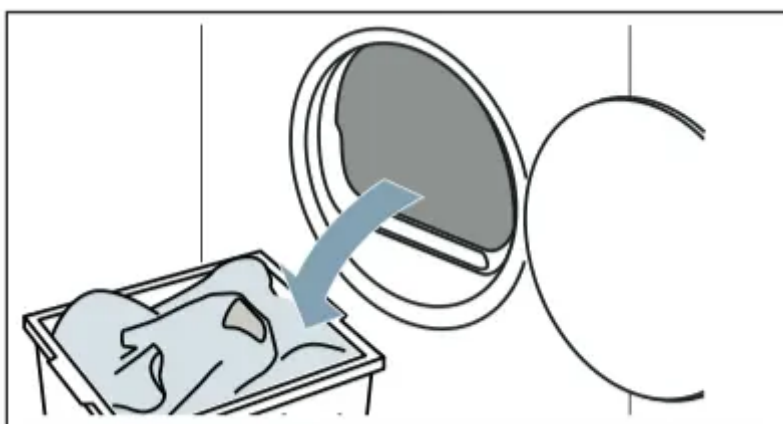


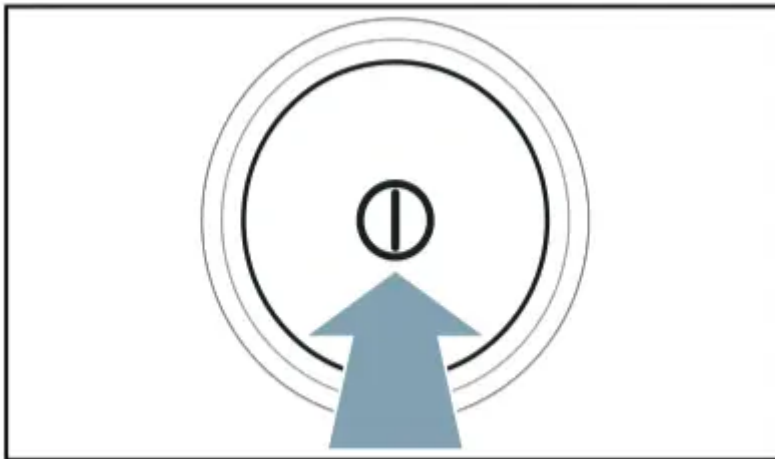
2. Clean the fluff filter. → Page 31

3. Close the appliance door.

4. Pull out the condensation container horizontally and empty it.

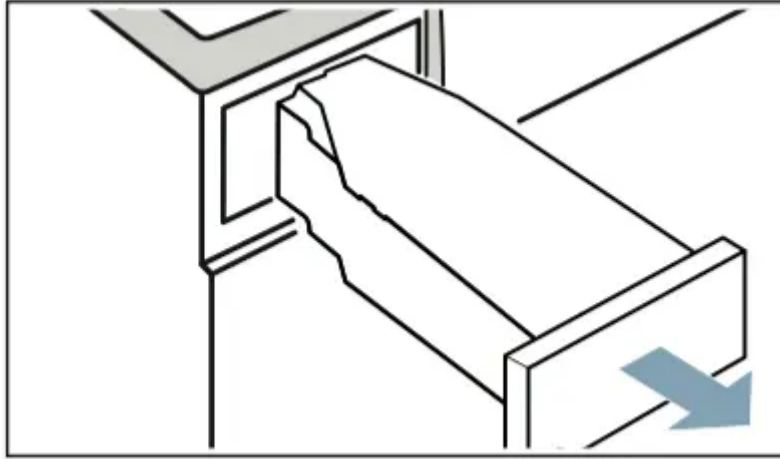

5. Press  to switch on the appliance.



The appliance is now ready to run the appliance care programme.

Running the basic appliance care programme


To remove any dirt deposits in the appliance, you can run the basic appliance care programme.

Notes

- After a certain period, your appliance will automatically recommend that you run the basic appliance care programme. **CrE** will then appear on the display for 5 seconds before the programme starts, and again once the programme ends. This message will appear repeatedly until you have run the basic appliance care programme through to the end.
- The basic appliance care programme runs for approximately one hour.

Run the appliance care programme as follows:


1. Prepare the appliance for appliance care.
2. Set the programme to position 1.

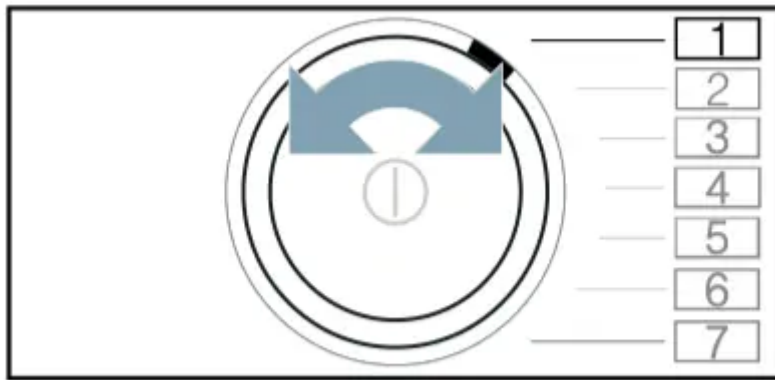

3. Press and hold Drying Target  .


At the same time:

4. Set the programme to position 4.

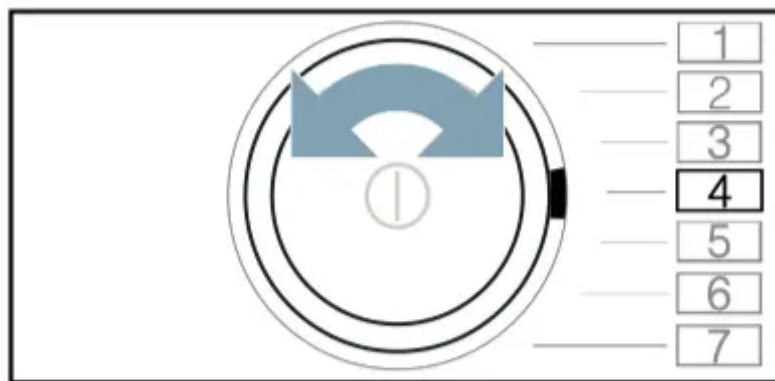


CP 1 and the programme duration will now alternate on the display.

5. Pour approx. 1 1/2 litre of warm tap water into the condensation container.

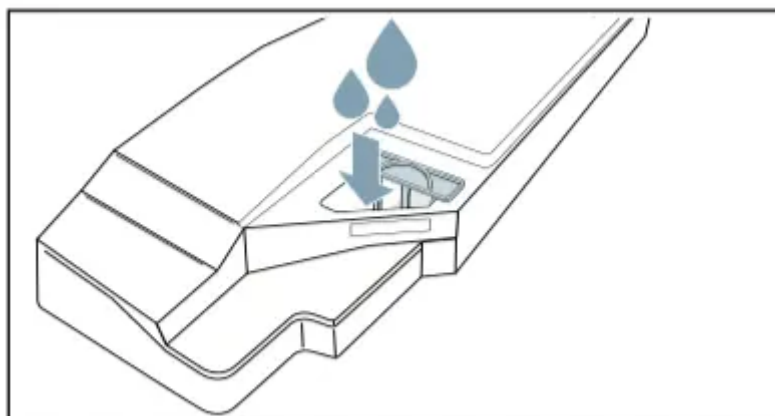

Note: Hold the full condensation container horizontally at all times so that no liquid spills out.


6. Slide in the condensation container until it clicks into place.

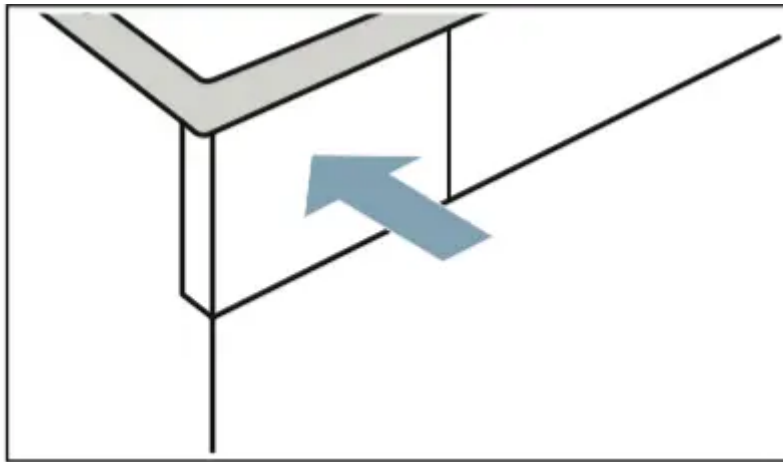


7. Press  Start/Pause.


The appliance care programme will start and an audible signal will sound. *End* will appear on the display once the appliance care programme has ended and an audible signal will sound.


8. Pull out the condensation container horizontally and empty it.

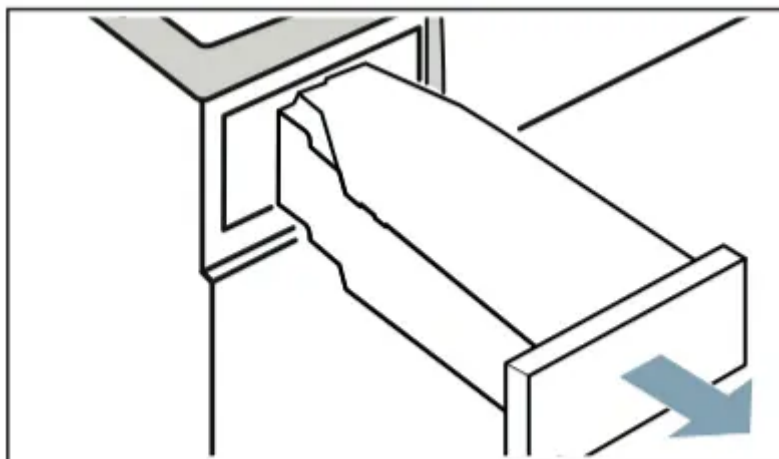

9. Slide in the condensation container until it clicks into place.

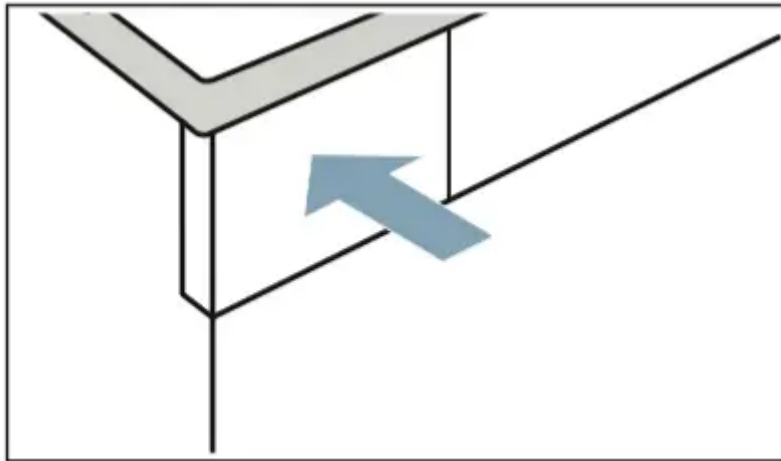

10. Press  to switch off the appliance.

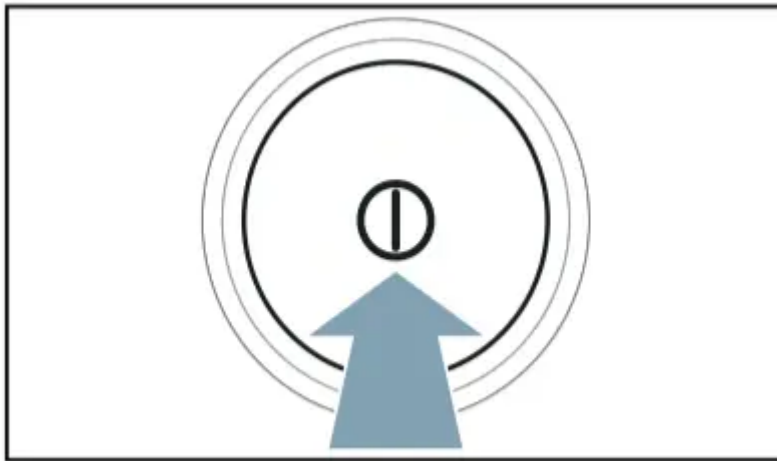

You have now completed the appliance care programme.

Running the intensive appliance care programme

You can run the intensive appliance care programme to remove any stubborn dirt deposits in the appliance and odours after a downtime of more than one month.

Notes

- The intensive appliance care programme runs for approximately 4 hours. The programme may take longer if you do not carry out the necessary steps in good time while the programme is running.
- Once it has started, the intensive appliance care programme should not be cancelled.
- When you run the intensive appliance care programme, you will need to use the original appliance care product. This can be ordered from our after-sales service using spare part number 00311829. Contact information for all countries can be found in the enclosed aftersales service directory.

Warning

Risk of injury/material damage/ damage to the appliance!

The use of spare parts and accessories supplied by other brands is dangerous and may result in injury, material damage or damage to the appliance. For safety reasons, use genuine spare parts and accessories only.


Caution!


Material damage/damage to the appliance

If you pour the wrong quantity of detergent or cleaning agent into the appliance, this may result in material damage or damage to the appliance. Use detergents/care products/cleaning agents and softeners in accordance with the manufacturers' instructions.

Run the appliance care programme as follows:


1. Prepare the appliance for appliance care.
2. Set the programme to position 1.

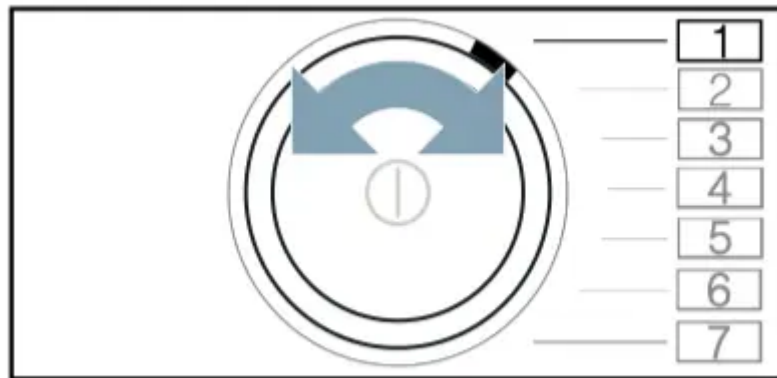

3. Press and hold Drying Target  .


At the same time:

4. Set the programme to position 4.

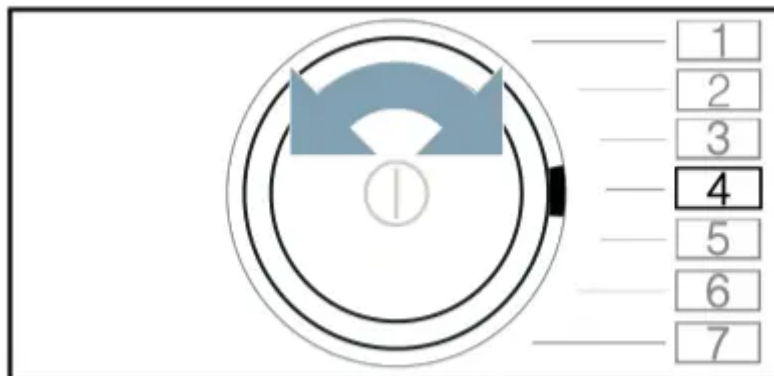


CP 1 and the programme duration will now alternate on the display.

5. Press **+** **CP2** and the programme duration now alternate in the display.
6. Pull out the condensation container horizontally and empty it.

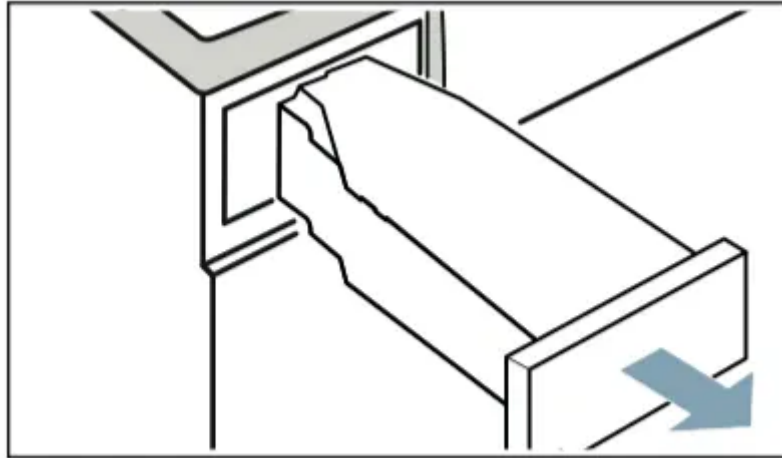


7. Pour a bottle of the original appliance care product and approx. 1½ litre of warm tap water into the condensation container.

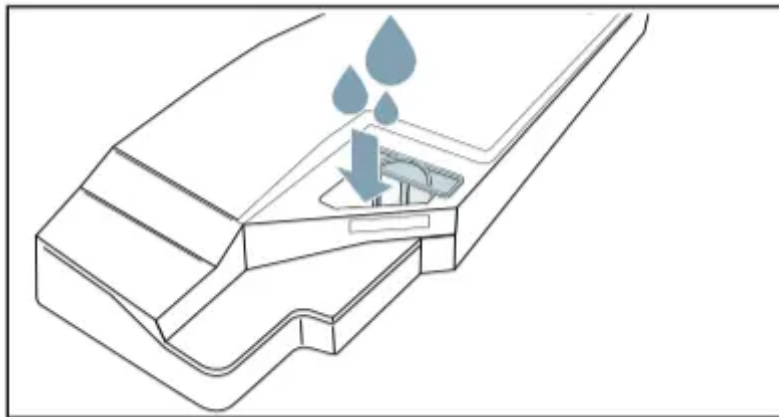

Note: Hold the full condensation container horizontally at all times so that no liquid spills out.

8. Slide in the condensation container until it clicks into place.

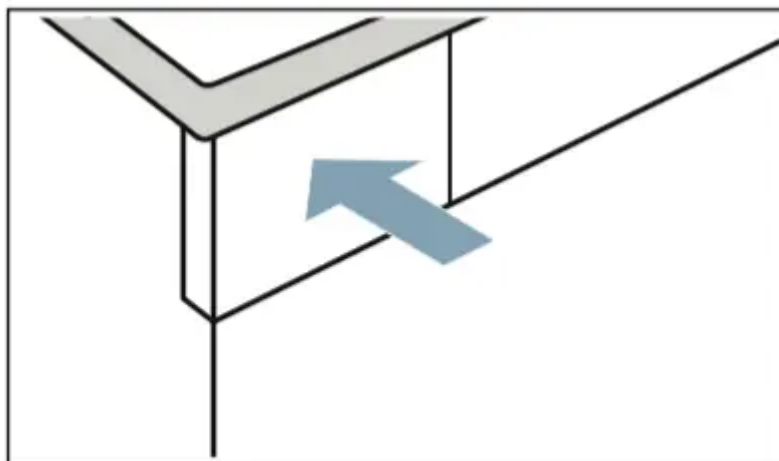


9. Press  Start/Pause.


The appliance care programme will start and an audible signal will sound.

After approx. three hours, the appliance pauses the appliance care programme and the remaining programme duration flashes in the display.

10. Pull out the condensation container horizontally and empty it.

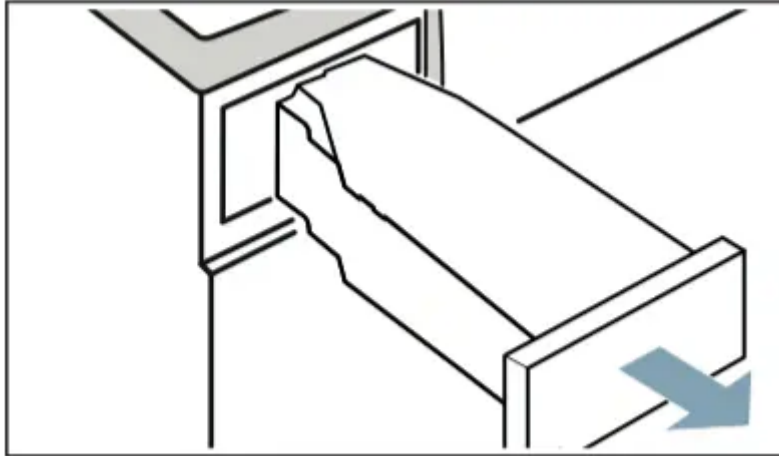


11. Pour approx. 1½ litre of warm tap water into the condensation container.

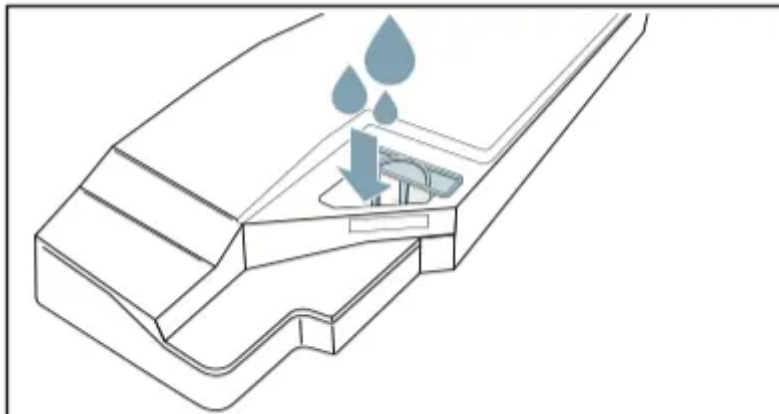


Note: Hold the full condensation container horizontally at all times so that no liquid spills out.

12. Carefully swing the condensation container round horizontally and empty it to dispose of any remaining original appliance care product.

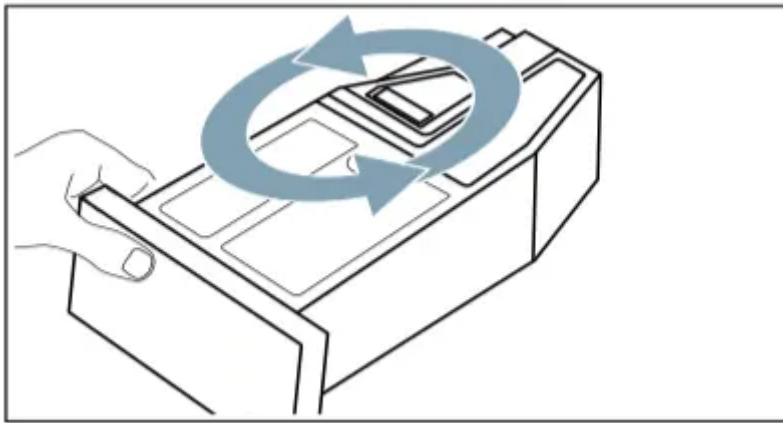

13. Pour approx. another 1½ litre of warm tap water into the condensation container.

14. Slide in the condensation container until it clicks into place.

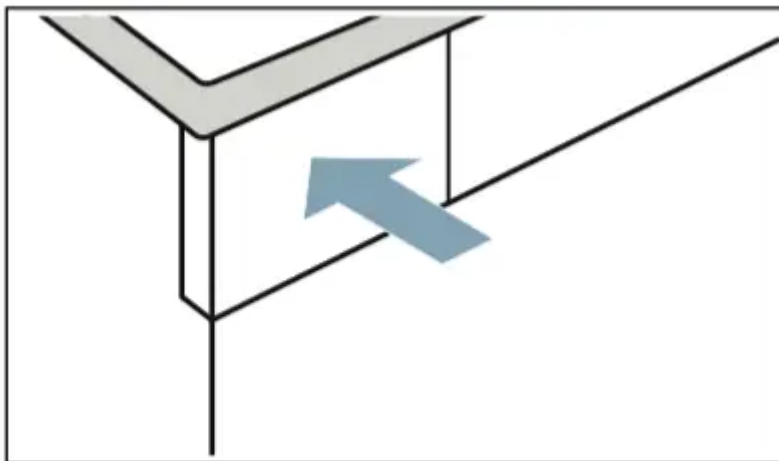


15. Press  Start/Pause.


The appliance care programme will then be resumed.


End will appear on the display once the appliance care programme has ended and an audible signal will sound.

16. Empty the condensation container again.

17. Slide in the condensation container until it clicks into place.

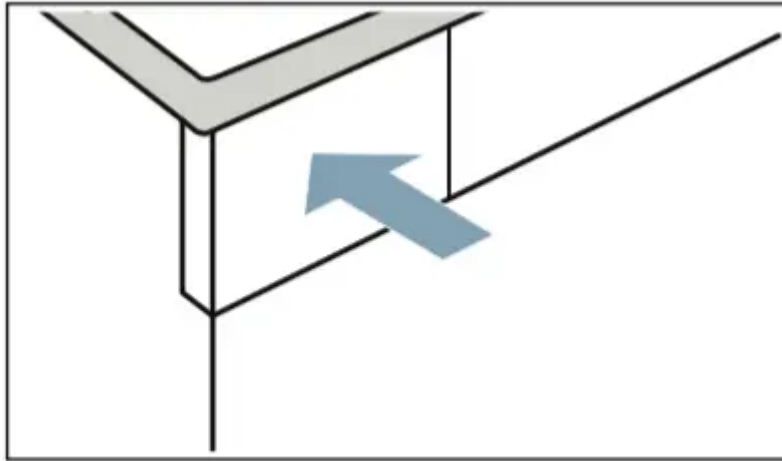



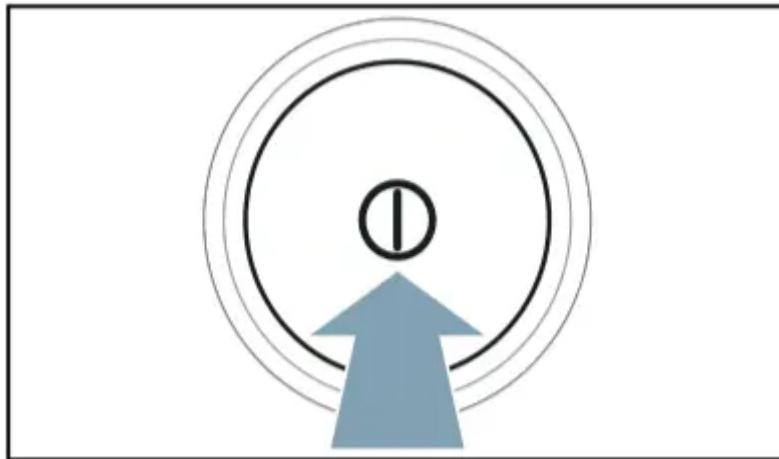


18. Press  to switch off the appliance.



You have now completed the appliance care programme.

Help with the appliance

| Faults | Cause/Remedy |
|---|--|
| Appliance does not start | Check the mains plug and the fuses. |
| Creasing. | <ul style="list-style-type: none"> ■ Load exceeded or incorrect programme selected for a type of fabric. All the required information can be found in the programme table. → Page 23 ■ Remove laundry from the drum as soon as the drying programme has finished. Creasing occurs when clothing is left in the drum. |
| Water is leaking out. | <ul style="list-style-type: none"> ■ The appliance may be positioned at an angle. Level the appliance. ■ In the base unit, make sure that: <ul style="list-style-type: none"> – The heat exchanger cover is properly locked. – There is no dirt or debris on the heat exchanger cover's seal. → Page 40 ■ If the optional drain hose* is installed, make sure that the drain hose is correctly connected. → Page 34 |
| Programme duration displayed changes as drying progresses. | Not a fault. The moisture sensor measures the residual moisture in the laundry and adjusts the programme duration (with the exception of timed programmes). |
| Laundry is not dried properly or is still too damp. | <ul style="list-style-type: none"> ■ After the programme has ended, warm laundry feels damper than it actually is. Spread out the laundry and let it cool down. ■ Adjust the drying time or increase the degree of dryness. This will extend the drying time but the temperature will remain the same. ■ Select a timed programme to add extra drying time for laundry that is still damp. ■ Select timed program for a small load and individual items of laundry. ■ Do not exceed the maximum load for a programme. → Page 23 |

| | |
|--|--|
| | <ul style="list-style-type: none"> ■ Clean the moisture sensor in the drum. The sensor may become covered in a fine layer of limescale or detergent and care product residue, which then impairs its performance. → Page 38 ■ Drying has been interrupted as a result of a power cut, because the condensation container is full or because the maximum drying time has been exceeded. <p>Note: See also the laundry tips. → Page 26</p> |
| <p>The programme does not start</p> | <p>Make sure that:</p> <ul style="list-style-type: none"> ■ The door is closed ■ The Child Lock push 3 sec.  has been deactivated ■ You have pressed  Start/Pause <p>Note: If the programme has been delayed by setting  Finished in  , the programme starts at a later point.</p> |

| | |
|--|---|
| <p>Drying is taking too long.</p> | <ul style="list-style-type: none"> ■ The appliance may have fluff in it. This will increase the required drying time. Remove the fluff. → Page 31 ■ The heat exchanger may have fluff in it. Run the basic appliance care programme. → Page 43 ■ If the air inlet on the appliance is blocked or not fully open, this may increase the drying time. Make sure that the air inlet remains unobstructed. ■ If the ambient temperature is lower than 15 °C or higher than 30 °C, this may increase the drying time. ■ Inadequate air circulation in the room may increase the drying time. Make sure the room is adequately ventilated. |
| <p>Unpleasant odour in the appliance</p> | <p>Run the intensive appliance care programme. → Page 44</p> |
| <p>The appliance is paused but the drum is turning.</p> | <p>The appliance has detected a high temperature and has started the CoolDown process. Temperature regulation can take up to 10 minutes. You can cancel the CoolDown process at any time by opening the door.</p> |
| <p>Unusual noises when drying.</p> | <p>When drying is in progress, the pump and compressor generate noise when operating normally. This does not indicate that the appliance is malfunctioning.</p> |
| <p>The appliance feels cold despite drying.</p> | <p>Not a fault. The appliance can dry effectively at low temperatures using a heat pump.</p> |
| <p>Drying programme is stopped.</p> | <p>If the drying programme is stopped due to a power failure, restart the programme or remove the laundry and spread it out.</p> |
| <p>Residual water in the condensation container despite the appliance being connected to the drain hose*.</p> | <p>If the optional drain hose is installed, residual water remains in the condensation container due to the appliance's self-cleaning function.</p> |

* Depending on how the appliance is equipped or the available accessory

Note:

If you cannot rectify the fault yourself by turning the appliance off and then on again, please contact our after-sales service. → Page 53

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

