


User manual Dash Cam

Front camera installation:



Connect the car charger with camera , then hide extra cable into interior panel.

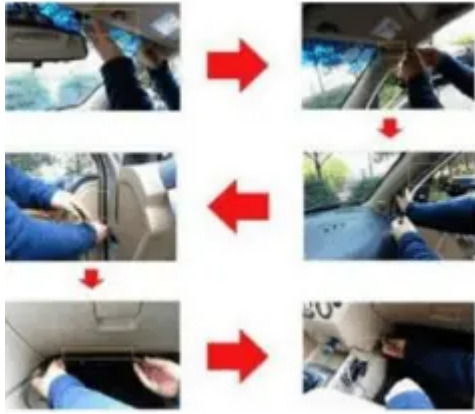


2 way of run the wire for rear cam



2 way of install rear cam, inside of car & outside of car



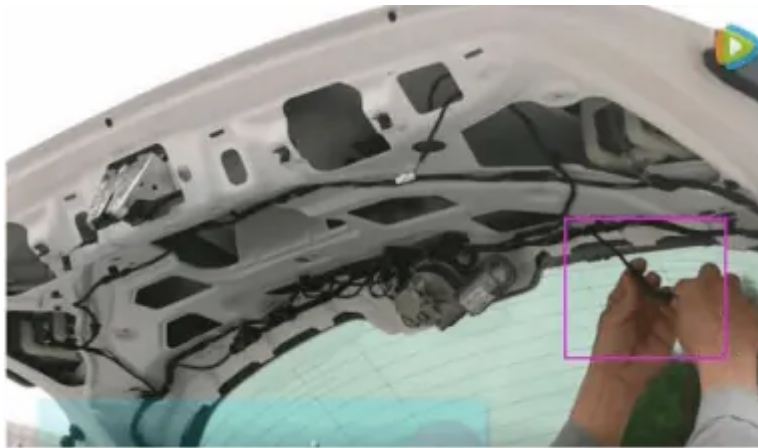

After wired the rear cam cable, then connect rear cam with rear cam cable.




2 situation you may meet





Situation 1: If your car does NOT have a built-in reverse system monitor display screen, you need this dash cam reverse function. Please connect the rear cam cable red wire to the car reversing lamp positive terminal. When you reverse the car, the display screen will switch to a full screen of the rear view.

Situation 1

1. Find out the car reversing lamp wire.
2. Connect the red wire to the car reversing lamp positive electrode.

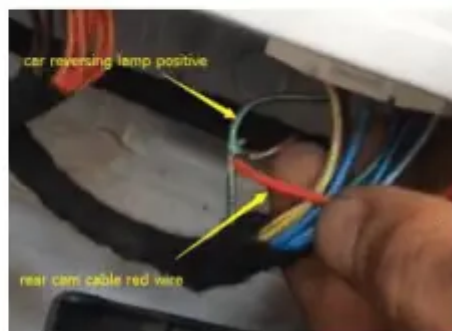

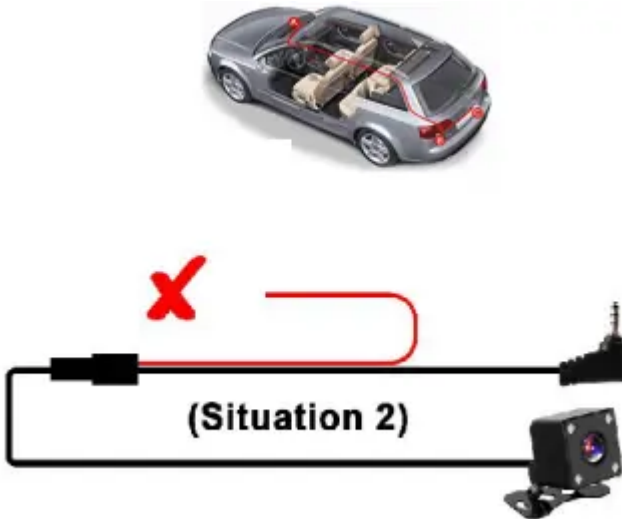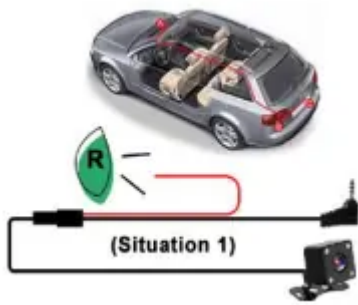

Situation 2: If your car already have reverse system display monitor, just need this dash cam record rear view when you are driving, please ignore the rear cam cable red wire, it no need connect to anywhere. When you drive forward or reverse car, the dash cam display screen will always show picture in picture of both front and rear view.

Fix the rear camon licenceplate





Footage picture



Before use the car camera you should know


1. Find a 32GB,class 10 micro SD card,
2. Charge dash cam 2 ~ 3 hours,
3. Insert card first (poke the card with a slim needle or credit card deeply till it clicked in the card slot),then power on camera & format card on it,



How to format micro SD card on dash cam?



1. Click OK button to stop recording first, then click mune button enter mune page,

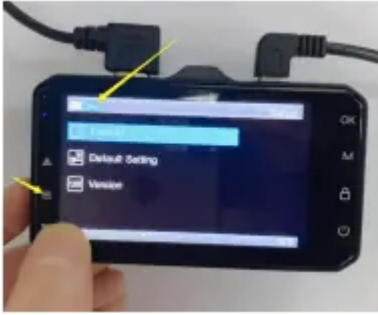

2. Click menu button again to enter settings page,



3. Click OK button to format card.

About settings

1. How to enter setting/menu page

without card inserted: click mune button directly



with card inserted:

1. click OK button to stop recording



2. Click mune button to enter mune page,



Q&A

1. How to view playback video? (on dash cam)



1. stop recording



2. MOVA is front camera video




3. MOVB is rear cam video



4. LOCB is rear cam locked video

View playback on laptop in 2 methods:

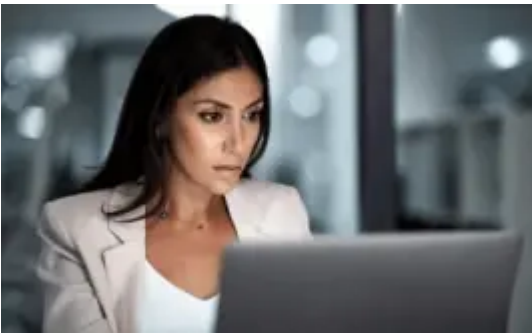

Method 1: Use card reader to view playback video on laptop

Step 1: Insert card into card reader,





Step 2: Connect card reader with laptop






Method 2: Connect dash cam with laptop directly with package included mini USB data cable

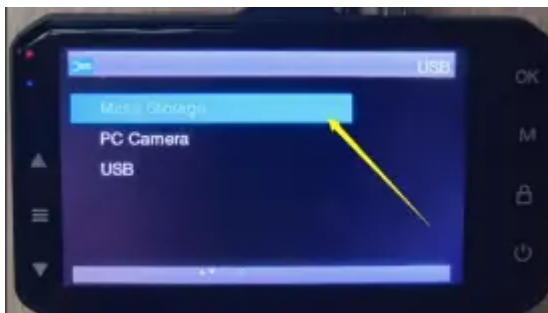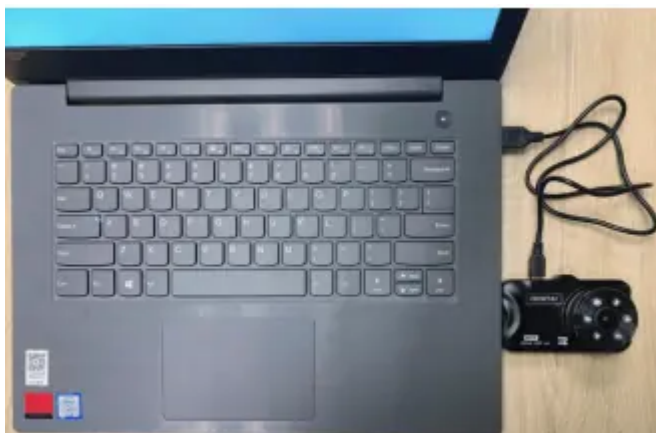



Suggestion: Download VLC media player, to view the playback video on PC more smoothly

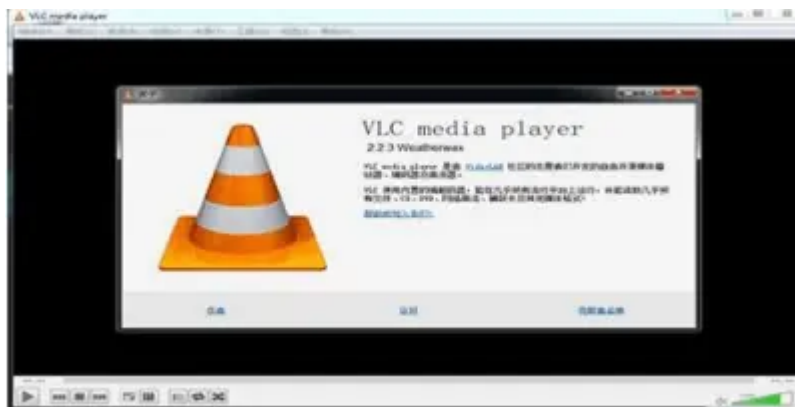



2. Why my dash cam saying “card full”?

Answer: If you turn on G sensor and parking mode, too many locked file will result card full, just turn off G sensor, motion detection & parking mode is fine.

3. Why my dash cam turn off randomly?

Answer: The first reason is might be power connection not stable, just well connected power supply is ok. another reason is card full, when card full the camera have no space to store new files so it turn off which to remind you format card. We suggest you format card monthly to extend its life span.

4. Dash cam keeps on and off when i am driving, what's happend?

Answer: It's might be the power connection is not stable, please make sure connect power cord/cigar lighter car charger tight with car cigar lighter socket, and keep continuously power supply. If well connected but still have this situation, it's the power cord car charger defective, just contact us and we will send you a new charger replacment.

5. Camera saying “ please insert a C6 card” after inserted a card,why?

Answer: there are 2 reason will result this problem,

- 1): the card is low speed or bad quality card, change a high speed good quality card is OK,
- 2): insert card when camera turn on, dash cam could not recognize card, just turn off camera and insert card, then turn on camera is OK.

6. The camera could not turn on?

Answer: there are 3 reason will result this problem,

- 1). the dash cam need continuous power supply, just check power connection if it is OK,
- 2). the camera need reset, just connect power supply and click reset button, then start camera is OK, we attached below 2 picture for your better understanding,




3).the card defective will result camera could not turn on, just take out card or change a new card to insert camera,

7. The rear cam does not work?

Answer: there are 2 reason will result this problem,

1). the rear cam wire is not well connected, just check all wire connection part and make them connected tight.

2). the rear cam or rear cam wire is defective, please kindly contact us to get a new wire or rear cam,

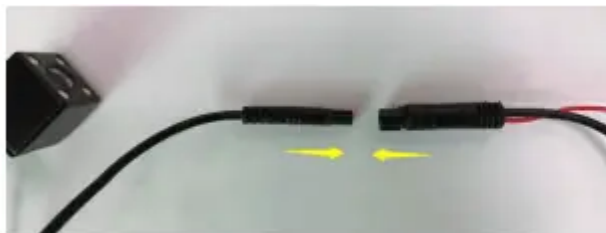

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.