 
 


About Your Amarey A900

 
Top View

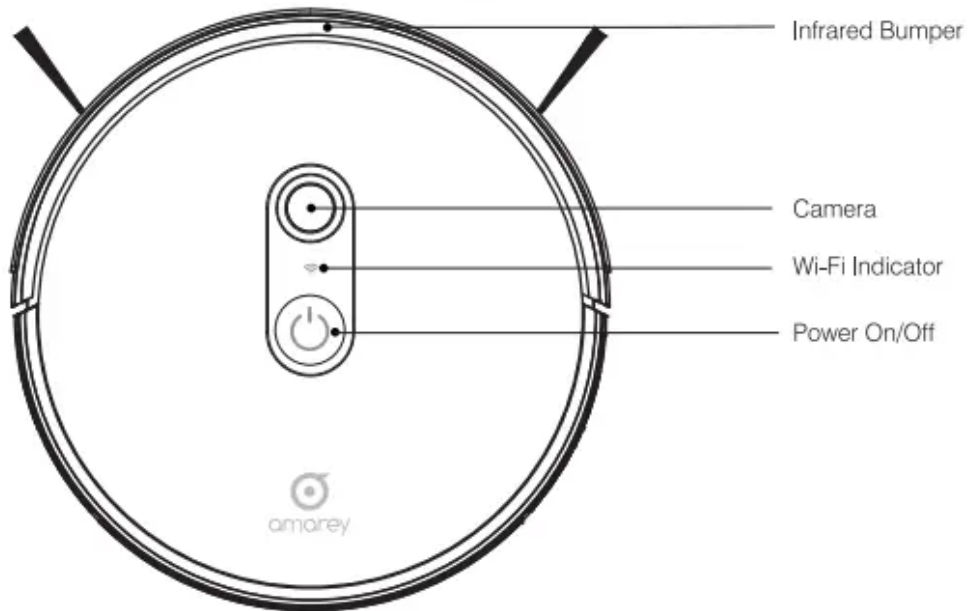


Bottom View

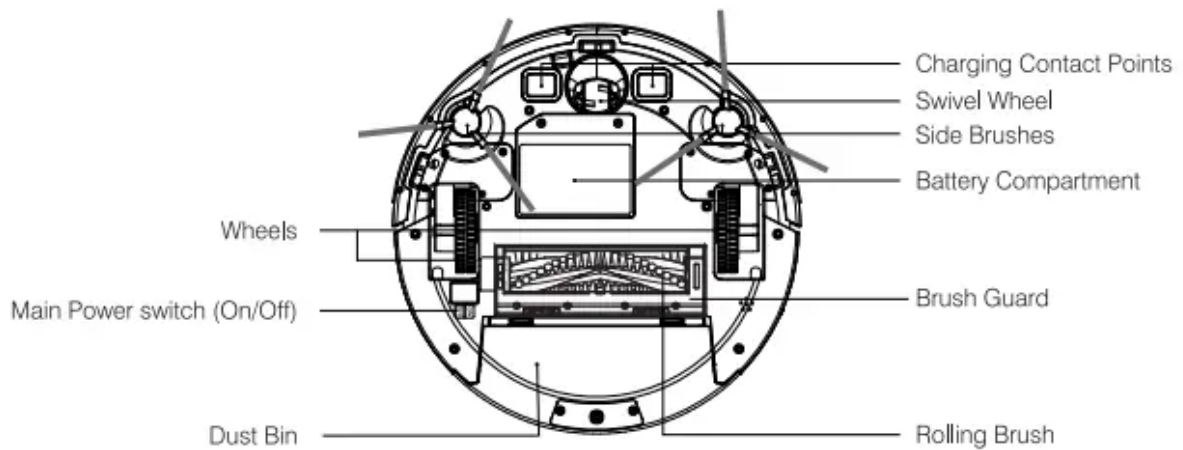


2 Charging Dock/Adapter

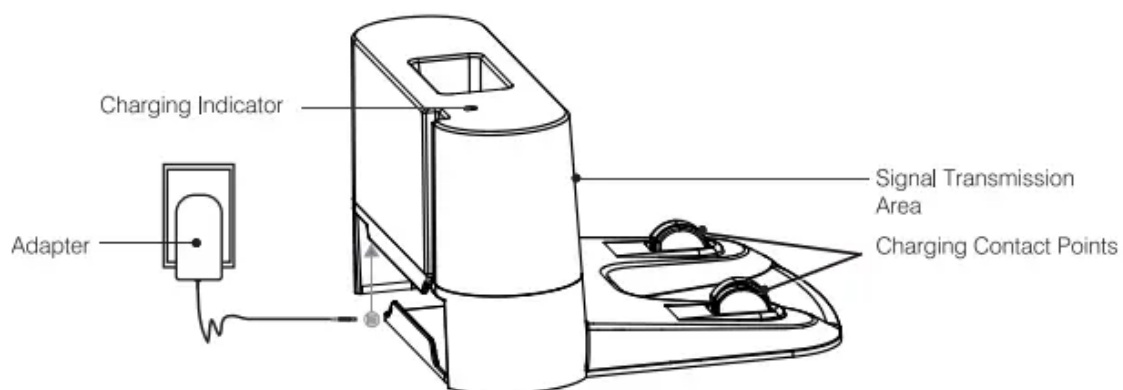

3 Dust Bin

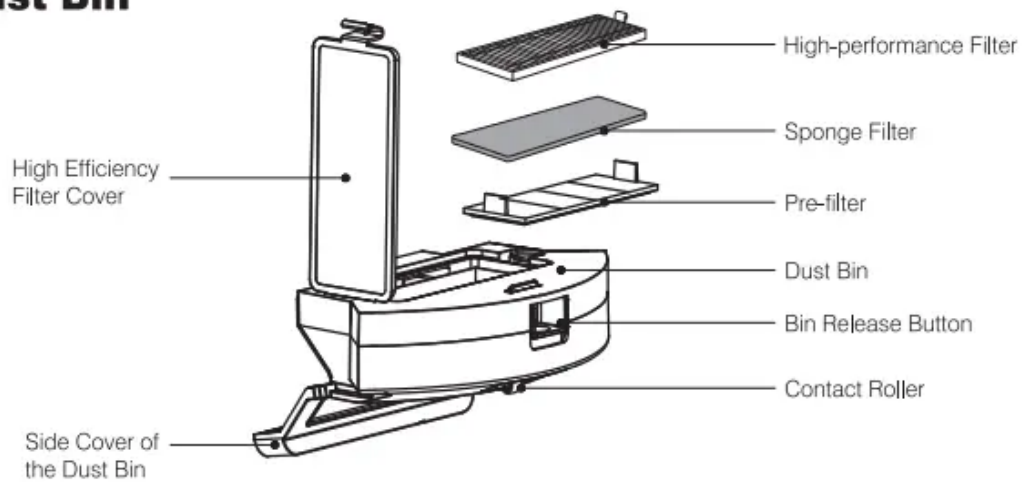 

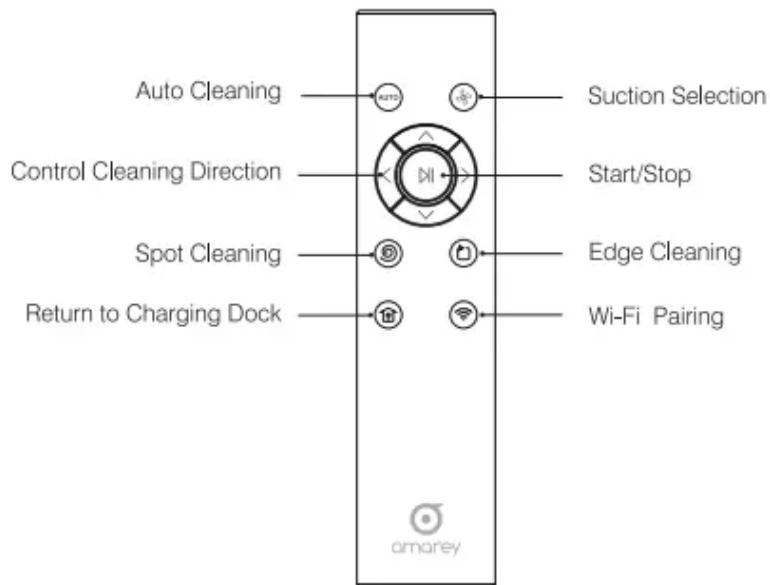 

Install 2 AAA batteries before using the Remote Control for the first time. Ensure the positive and negative ends are facing the correct polarity direction as marked in the battery compartment. Please aim the Remote Control directly at the Robot within 5m/16ft when pressing.

1. Auto Cleaning

Press "Auto" on the Remote Control to start cleaning in Auto mode when A900 is turned on.

2. Suction Selection

In Auto mode, press the "⊕" on the Remote Control repeatedly to select the three suction power levels.

3. Control Cleaning Direction

You can press the directional buttons on the Remote Control to move Robot in standby mode .

(* ^ " Move forward / " v " Move backward / " < " turn left / " > " turn right). In other modes the directional buttons do not work in order not to disturb its automatic routing.

4. Start/Stop

Press "Pll" on the Remote Control to start/stop cleaning.

5. Spot Cleaning

Press "⊙" on the Remote Control to start cleaning in Spot mode. A900 will stop cleaning after 2 minutes or less.

6. Edge Cleaning

Press "Ⓜ" on the Remote Control to start cleaning in Edge mode.

7. Return the Charging Dock

Press "Ⓜ" on the Remote Control to start recharging mode.

8. Wi-Fi Pairing

Press "📶" on the Remote Control about 3 seconds to start Wi-Fi Connecting.




Specifications

Product Model	A900
Battery Type	2600 mAh
Charging Type	Auto Recharge
Dust Bin Capacity	0.5L
Cleaning Mode	Auto, Edge, Spot, Schedule
Adapter Input Voltage	AC 100 ~ 240V (EN) , AC 100~120V (USA)
Rated Power	28W
Noise	<60dB
APP Control	Yes
Boundary Strip	Yes

Using Your Amarey A900

 Important Tips Before Using A900

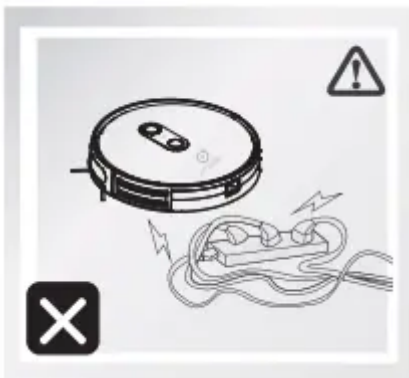

Remove power cords and small objects from the floor that may entangle A900



A900 is not suitable for use on long-pile carpet . Before using Robot near a short pile rug with tasseled edges, please tuck the fringe underneath.



 
Keep A900 away from spaces lower than 3 inches to prevent A900 from getting stuck. If necessary, place a barricade to block off the area or elevate your appliance.



Anti-drop sensors prevent A900 from tumbling down stairs and steep drops. They may work less effectively if dirty or used on reflective/very dark-colored floors. It is recommended to apply the Boundary Strips to block off areas where A900 may fall.


Preparations

1. Position the Charging Dock on a hard level surface and against a wall.

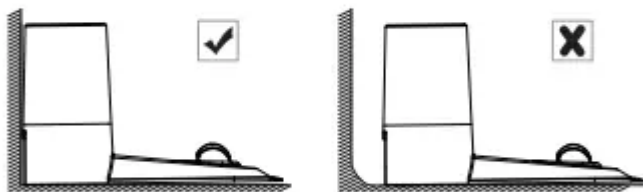


2. Ensure the place is an open & uncluttered area leaving at least:

 
- 6 feet in front of the Charging Dock.
- 3 feet on both sides of the Charging Dock.

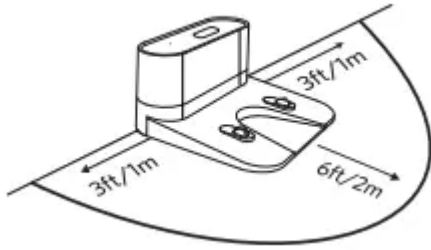

 
3. Connect the round connector of the adapter into the power socket on the Charging Dock and the other end into a wall outlet.

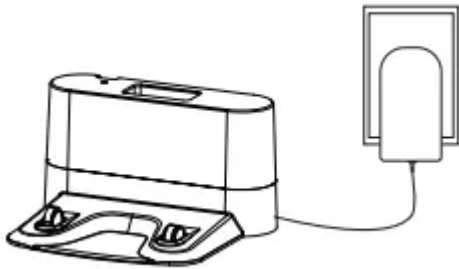

4. Attach Side Brushes to the bottom of Robot by pressing a brush into each slot until you hear the voice "click".

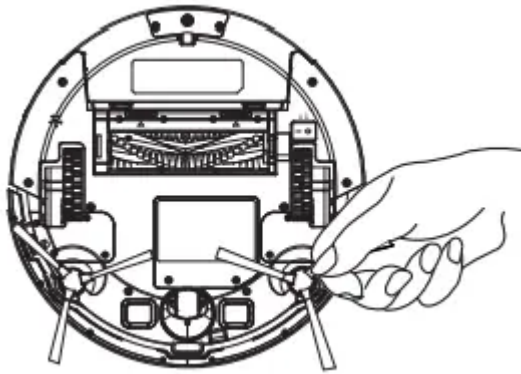 

 5. Turn on the Main Power Switch at the bottom of Robot. After Robot says "I am ready now" it is ready for use

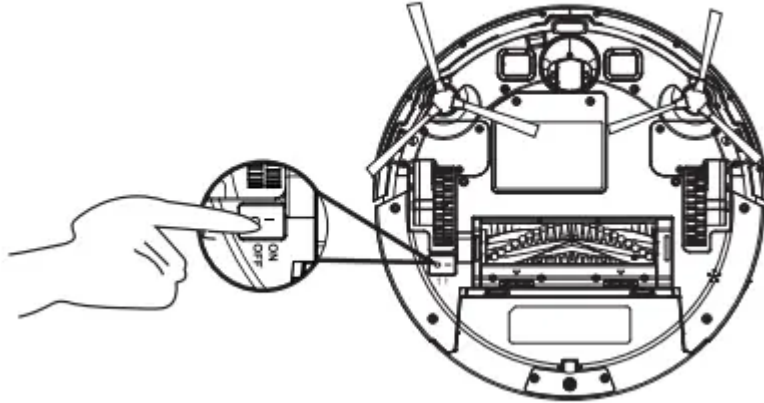






Charging Robot

 
Place Robot onto the Charging Dock, ensure the metal Charging Contacts Points on the Charging Dock match up with those underneath Robot. If successful you will hear a “peep”. Please charge your Robot for 3.5 hours at least until the light turns blue.




Clean Mode

 
1. Auto Cleaning

Press the  button on Robot (or press the  button on Remote Control or through APP) and Robot says “Start Auto Cleaning”. Robot intensely cleans with its automatic routing. Before cleaning, ensure Robot's  button lit blue and it is in standby mode. If not, please wake it up firstly by press the  button on Robot or the  button on Remote Control.

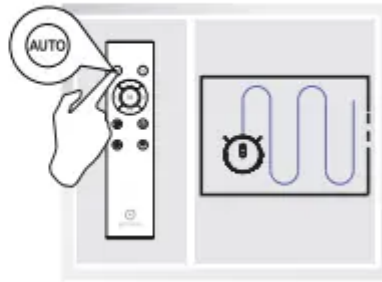


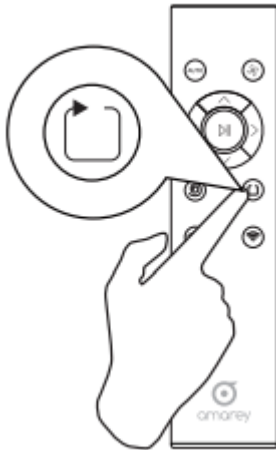 
2. Spot Cleaning

Press the  button on Remote Control or through APP and Robot says “Start Spot Cleaning”. Robot intensely cleans a localized area. After cleaning is finished, Robot will keep in standby mode.

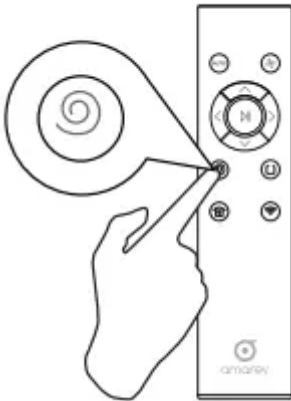

3. Edge Cleaning

Press the  button on Remote Control or through APP and Robot says “Start Edge Cleaning”. Robot intensely cleans along walls and around furniture legs. After cleaning is finished, Robot will keep in standby mode.




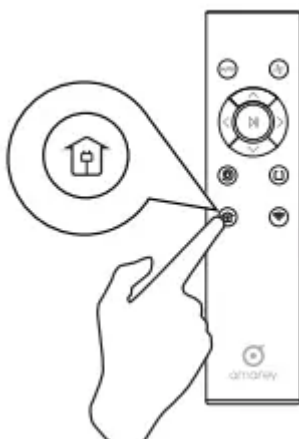 
4. Schedule Cleaning

You can only set schedule cleaning by APP. Please set schedule cleaning by following the APP Operation Guide.

Auto Recharge

 
When the battery level is low, Robot will say "Battery is Low, Returning to Charging Dock" and then return to the Charging Dock to recharge.

Press the  button on Remote Control or through APP, Robot will say "Returning to Charging Dock" and then return to the Charging Dock to recharge.




Power Off

Turn off the Main Power Switch at the bottom of Robot if you will not use Robot for a long time.

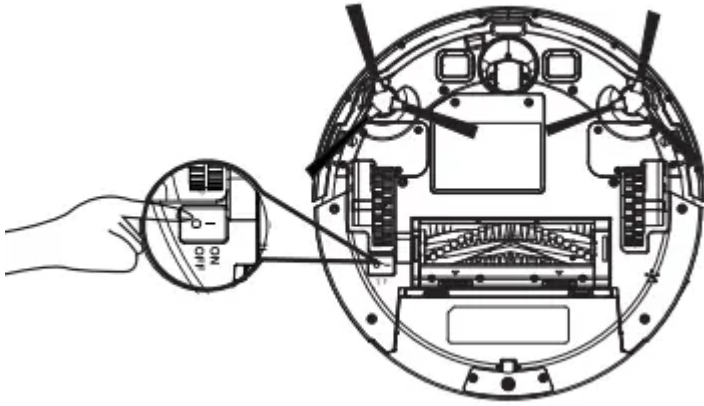


Use the Boundary Strip

 You can cut the boundary strip to a proper length.

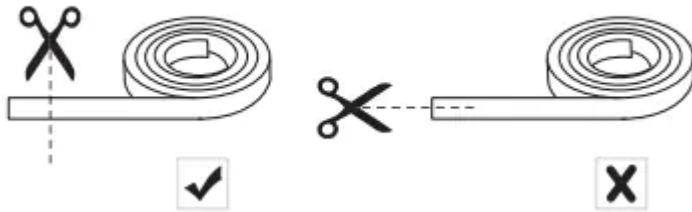

Lay the boundary strips (flat side down) on the floor to block off the space: the Robot recognizes the strips and avoids the area.

 Tips: You can use the tape to keep boundary strips flat on the floor.

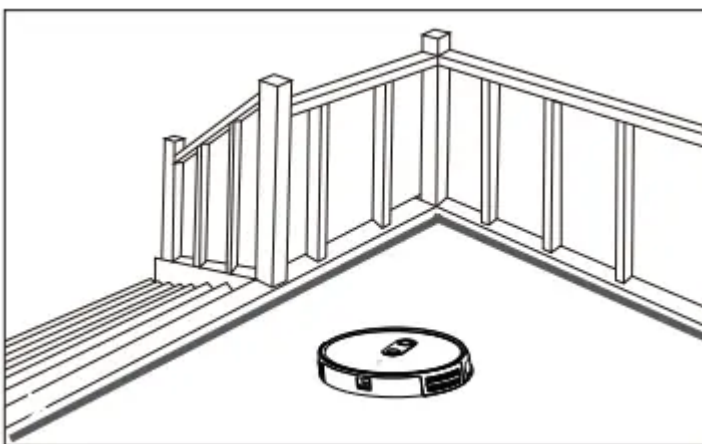


Amarey A900 Robot Maintenance

To keep Robot running at peak performance, perform the following care procedures.


Dust Bin

 Press Bin Release Button to remove it. Open Dust Bin's door to empty it.

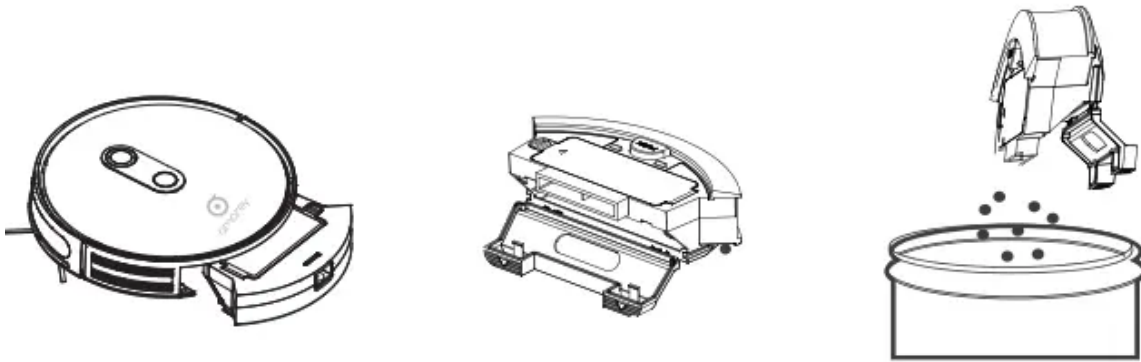

Filters

 1. Pull the filters out from the Dust Bin. Clean the Dust Bin and filters with provided Cleaning Tool

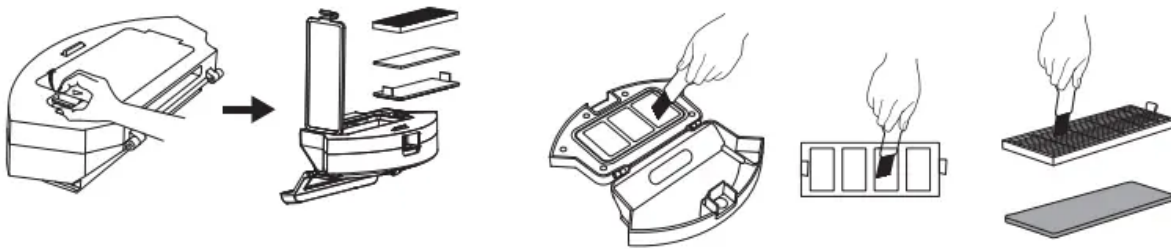


2. Put the filters back together in the Dust Bin




Tips: Clean the filter once every week and replace it usually every 1-2 months. Pre-filter and sponge filter are washable.

Rolling Brush

 1. Take out the Rolling Brush, clean the vacuuming aisle by a cloth.

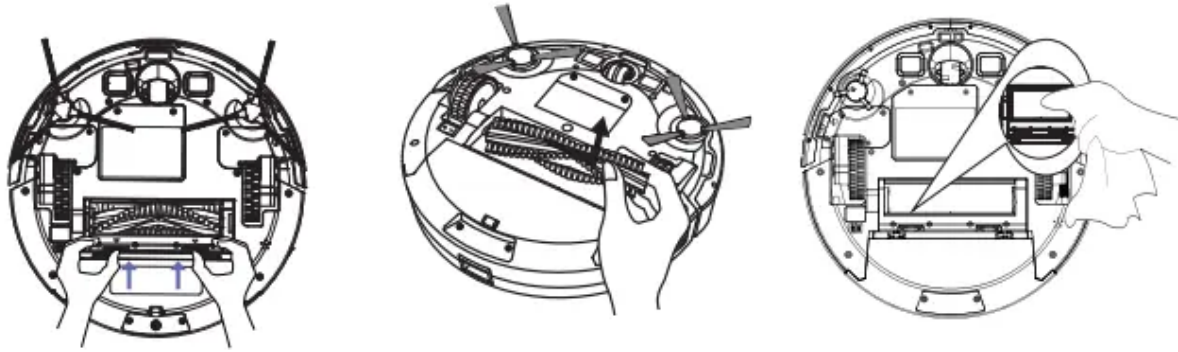

 2. Clean the Rolling Brush. Cut down the hair wadded in the Rolling Brush with the knife of Cleaning Tool.

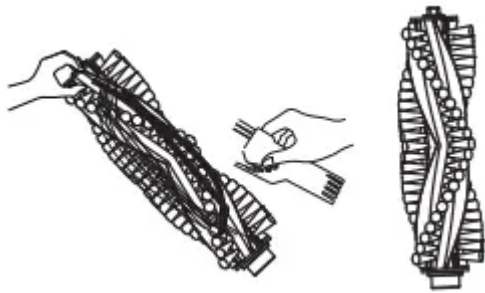

Side Brush

 
Cut down the hair wadded in the Side Brush with the knife of Cleaning Tool and use a cloth to remove the dust from the brush.



Tips: Clean the Rolling Brush and Side Brush once every week and replace the Rolling Brush usually every 6-12 months and the Side Brush every 3-6 months.


Swivel Wheel

Pull out the Swivel Wheel, then clean the Swivel Wheel with a cloth.

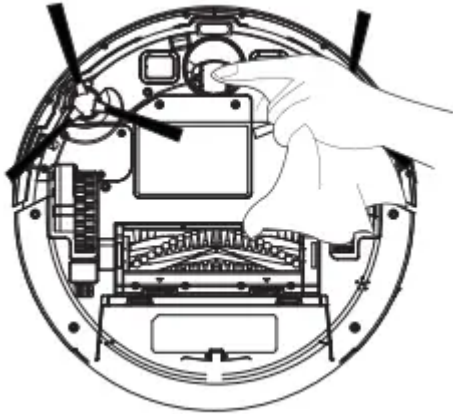

Sensors

 Use a cloth to clean sensors to maintain the peak performance.

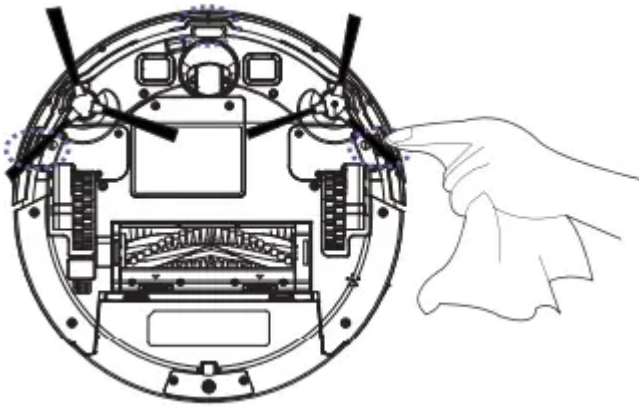

Troubleshooting

Refer to the chart as below to resolve Robot's problem. If the problem is not resolved, please contact our amarey Customer Service Center for more assistance

Robot can not be charged.

- Charging Dock has no electricity.
 - Ensure the charging cord is plugged into the dock and wall outlet, and the light on the Charging Dock is white.
- The poor connection with the points
 - Clean the charging connection points on both Charging Dock and bottom of the cleaner with a dry cloth.

Robot gets stuck.

- Get stuck under furniture.
 - Robot's slimmer body would work with most of the furniture but it still probably stuck. Notice: the lowest height is 3 inches.
- Get stuck by objects.
 - Pick up objects like clothing, loose paper, pul cords, and fragile objects to avoid Robot stuck before it starts working.
- Get stuck on carpet.
 - Robot is not suitable for use on long-pile carpet. Before using Robot near an area rug or on a prevent on a short pile area rug with tasseled edges, please fold area rug's edges under themselves to prevent Robot from tangling.

Robot can not dock.

- Charging Dock has no electricity.
 - Ensure to aim the Remote Control directly at the Robot within 5m when pressing.
- The location of Charging Dock is not correct.
 - Position the Charging Dock on a hard level surface (not on a dark-colored surface or high-pile carpet)and in an area where Robot has a clear path to return at the end of a cleaning cycle, not hidden behind a kitchen or other furniture.

Remote Control failure.

- The batteries are dead.
 - Replace with new batteries in the Remote Control.
- The Main Power Switch at the bottom of Robot is off.
 - Turn on the Main Power Switch at the bottom of Robot.
- It is over effective range.
 - Ensure the charging cord is plugged into the dock and wall outlet, and the light on the Charging Dock is white.
- The Infrared Emitter and the Infrared
 - Use a dry cloth to wipe the Infrared Emitter on Remote Control and the Infrared Receiver on Robot.

Side Brush fell from Robot when working.

- Installed incorrectly.
 - Attach Side Brush to the bottom of Robot by pressing a brush into slot until you hear the voice "click".

Suction power is weak.

- The suction inlet is blocked.
 - Take out Dust Bin and Rolling brush, clean the suction inlet.
- The Dust Bin is full.
 - Empty the Dust Bin.
- The filters are blocked.
 - Clean the filters with a cleaning brush, and air-dry the filters completely before use if the filters are wet or change a new filter.

You can not schedule cleaning.

- The Main Power Switch on the bottom of Robot is off.
 - Turn on the Main Power Switch on the bottom of Robot.
- Power is too low to start cleaning.
 - Charging Robot.
- The scheduled time have been set incorrectly.
 - According to APP Operation Guide to set schedule cleaning.

Left/right wheel is abnormal.

- Left/right wheel is stuck or entangled
 - Clean left/right wheel.

Left/right side brush is abnormal.

- Left/right Side Brush is stuck or entangled.
 - Clean left/right Side Brush.

Rolling brush is abnormal.

- Rolling Brush is stuck or entangled.
 - Clean Rolling Brush.

Robot is suspended in the air.

- Robot is hanging.
 - Put it down to the ground

Camera is abnormal.

- Camera is dirty.
 - Wipe camera with alcohol cotton ball gently.

Bumper is abnormal.

- The bumper is not flexible.
 - Check the bumper.

Dust Bin is abnormal.

- Dust Bin is installed incorrectly.
 - Install Dust Bin again.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.