 
 
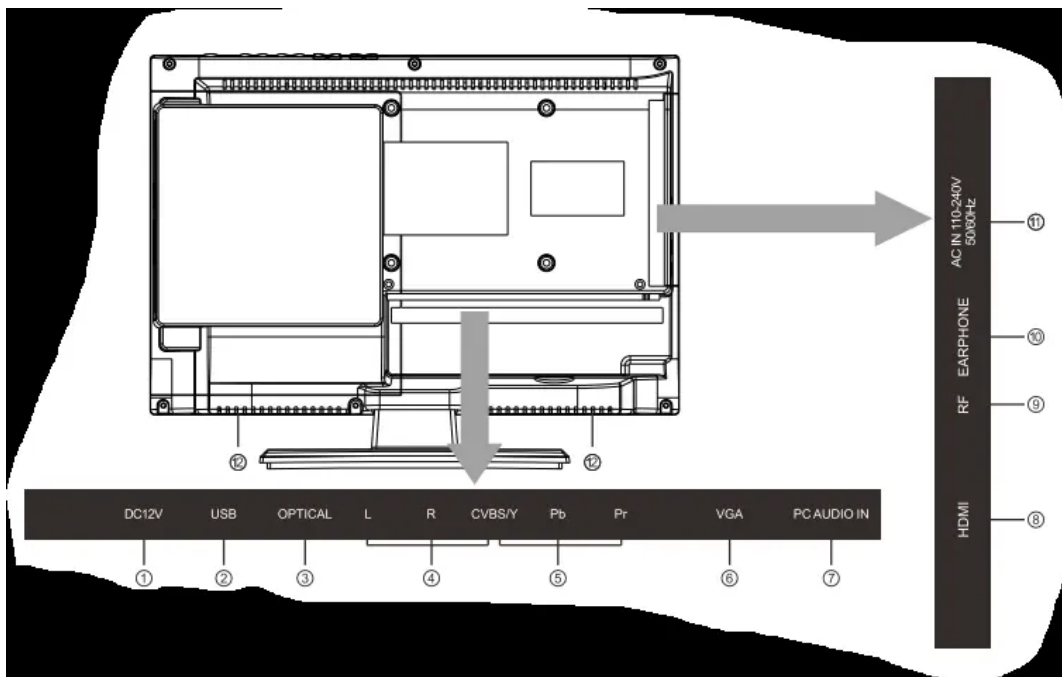 



GENERAL PART

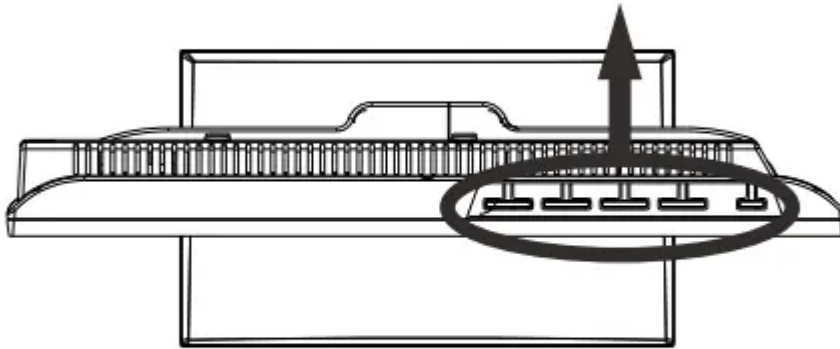

1. DC12V: DC12V input.
2. USB: Connect a USB device here to play its media files.
3. OPTICAL: Digital audio out.
4. AV INPUT: External AV signal input and relevant right/left sound channel .
5. YPbPr: Connect to the composite terminal of your DVDA/CR.
6. VGA: PC analog signal input.
7. PC AUDIO INPUT: Audio input when VGA input in use.
8. HDMI: Digital signal input from HDMI video connector.
9. RF: Connect the antennal/cadle TV input(75A/HF/UHF).
10. EARPHONE: When earphones are plugged in, speakers are disabled.
11. AC IN 110-240V 50/60Hz: AC power input.
12. Built-in speakers.

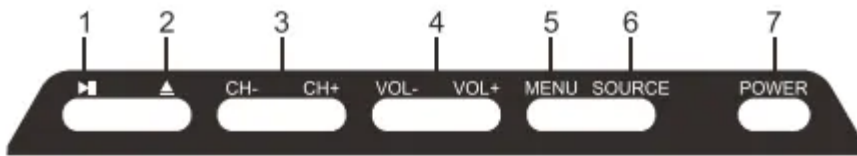


1. **▶||** : Play / Pause(DVD mode)
2. **▲** : Press **▲** to eject or insert a DVD disc.
3. **CH+/-**: Selecting Channel
4. **VOL+/-**: Adjusting Volume
5. **MENU**: Display main menu and confirm menu its selection

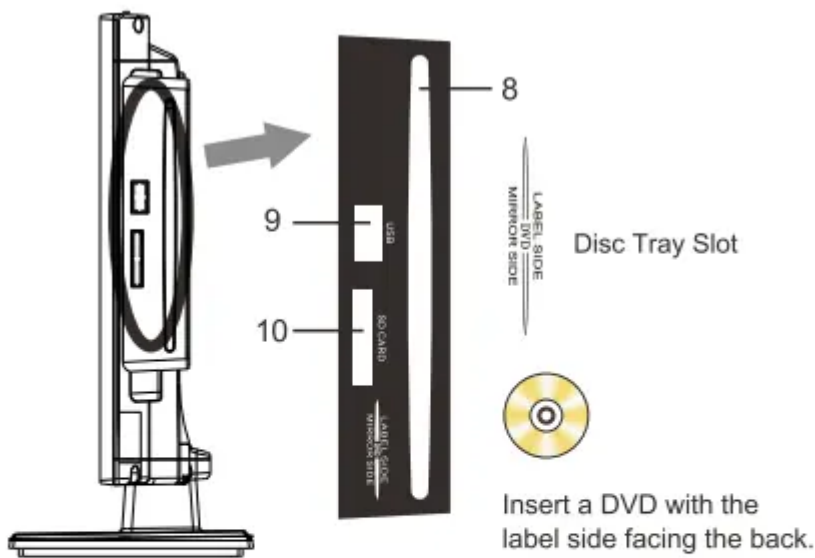 

6. **SOURCE**: External signal input selection
7. **POWER**: Turn ON/OFF power.
8. Disc tray slot.
- 9/10. **USB/SD CARD**: Compatible with USB and SD/MMC/MS card for Movie, Music and Photo playback(DVD mode)

 REMOTE CONTROL

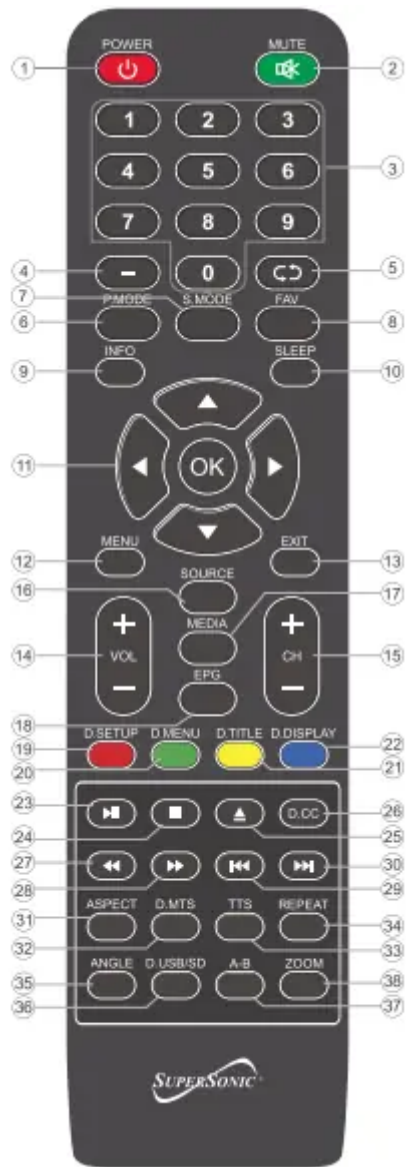

1. POWER: Turn on or standby.
2. MUTE: Silence status.
3. 0-9: Choose channel.
4. **■** : Press to select channel.
5. **↺**: Switch to the previously viewed channel.
6. P.MODE: Picture will change as following: Standard-Mild-Personal. Press once, the current picture setup will be shown.
7. S.MODE: Sound will change as following: Standard-Music-Movie, Sports-Personal, Press once, the current sound setup will be shown.
8. FAV: Show the favorite channel list.
9. INFO: Press to display information to the TV screen.
10. SLEEP: Press this key to select time for auto turn off, selection as following: OFF-10-20-30-60-90-120-180-240-OFF.
11. **◀OK▶**: Confirmation button, select the OSD menu option
12. MENU: Main menu.
13. EXIT: Exits the current menu or function.
14. VOL+/-: Increase/decrease the sound volume.
15. CH+/-: Scans up or down through the current channel list. Press once to change the channel up or down; press and hold to continue changing channels.
16. SOURCE: Displays the source list of input signal.
17. MEDIA: Press to enter media.
18. EPG: Display the EPG.
19. D.SETUP: DVD To go to or exit setup menu.
20. D.MENU: DVD To enter or exit root menu.
21. D.TITLE: DVD To display title information.
22. D.DISPLAY: Press this key to display the DVD present information
Red/Green/Yellow/Blue: Press these buttons directly to select corresponding function on the screen.
23. **⏮** : Play/Pause.
24. **■** : Stop
25. **▲** : Press **▲** to open or close the disc tray.
26. D.CC: CC: Press to select closed caption. / DVD to display the subtitle which is broadcast with the program.
27. **◀◀**: Backward.
- 28: **▶▶**: Forward.
29. **◀◀**: Previous.
30. **▶▶**: Next.
31. ASPECT: Switches between the preset screen size mode.
32. D.MTS: Press to select MTS mode. / DVD to select audio language.
33. TTS: Voice prompts
34. REPEAT: DVD To repeat playing title, chapter or track.
35. ANGLE: To change viewing angle when playing disc with multi-angle.
36. D.USB/SD: DVD to go to USB or SD card.
37. A-B: Repeat a specific portion from point A to B, press it again to cancel repeat playing.
38. ZOOM: To zoom in/out the image during the playback.

REMOTE CONTROL PREPARATION

BATTERY INSTALLATION

Install the batteries as the following pictures. Be sure + and - terminals are positioned as indicated in the battery compartment (Fig1).

SERVICE LIFE OF BATTERIES

The batteries normally last for one year although this depends on how often the remote control is used.

If the remote control fails to work even when it is operated near the player, replace the batteries.

Use two size AAA dry batteries._

NOTE:

- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- If the remote control is not going to be used for a long time, remove the batteries.

REMOTE CONTROL OPERATION

Point the remote control from no more than about 6m from the remote control sensor and within about 60° of the front of the player(Fig2).

NOTES:

- The operating distance may vary according to the brightness of the room.
- Do not point bright light at remote control sensor.
- Do not place objects between the Remote control and the remote control sensor.
- Do not use this remote control while simultaneously operating the remote control of any other equipments.

Fig1




Fig2



BASIC CONNECTION


- Ensure all the cables are disconnected from the main unit before connecting to power source.
- Read through the instructions before connecting other equipments.

 AC 110-240V 50/60HZ & DC 12V COMPATIBILITY

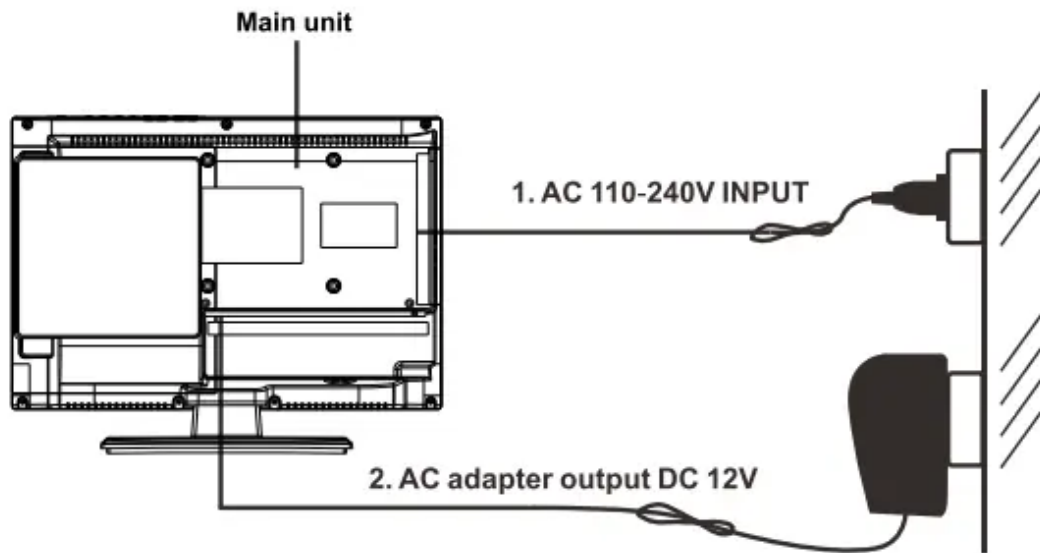


CONNECT EXTERNAL ANTENNA TO UNIT

 
Install external antenna into antenna jack for best picture.

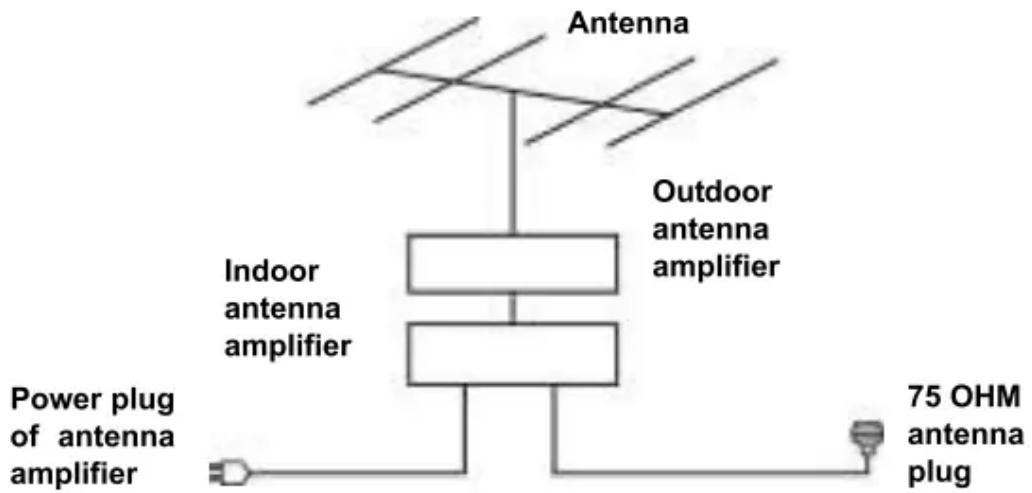


COMPOSITE AV CONNECTION

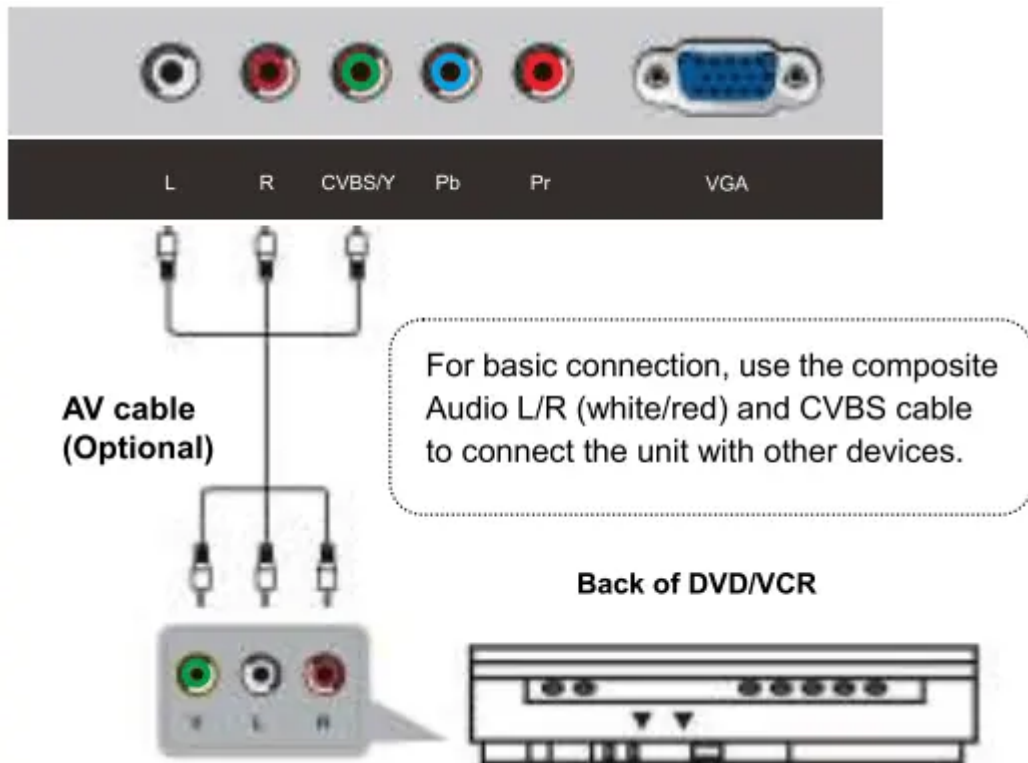 


YPbPr CONNECTION

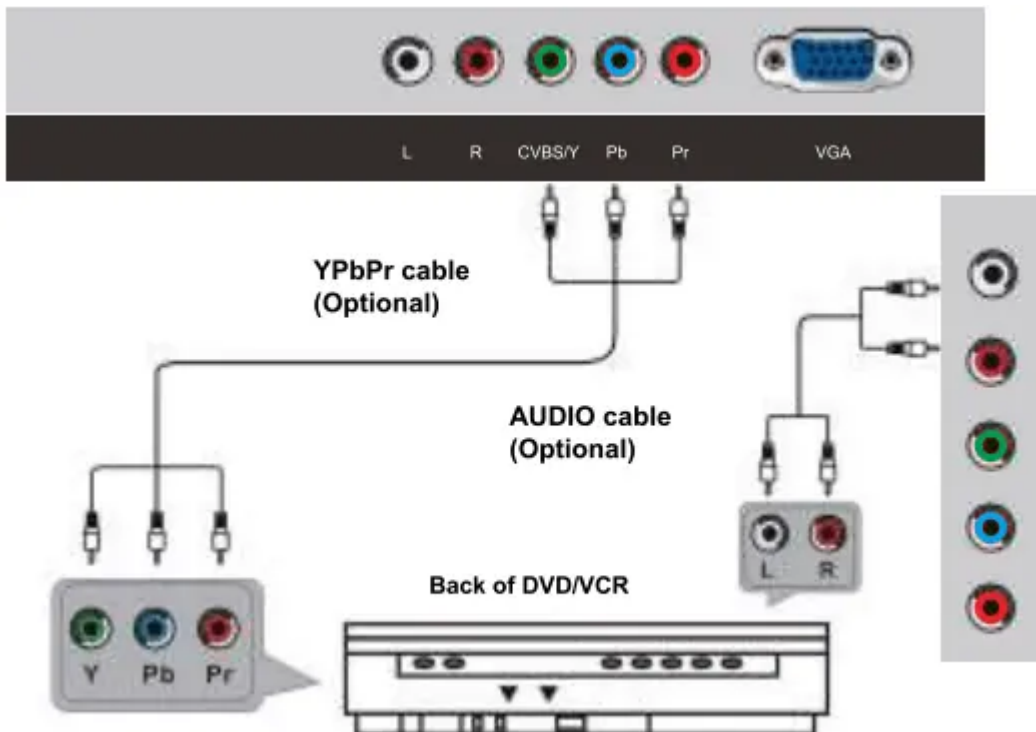 


HDMI CONNECTION

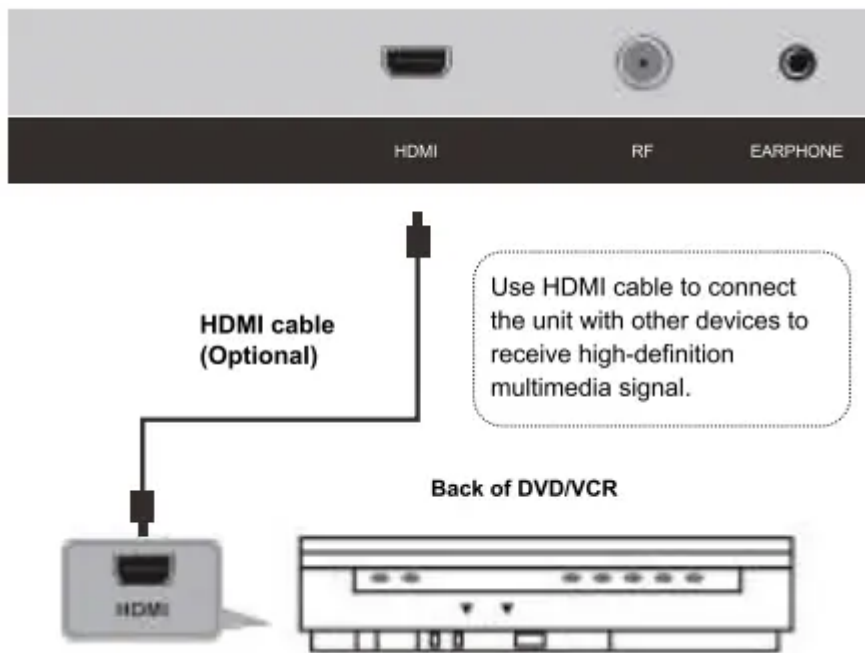 

PC/VGA CONNECTION

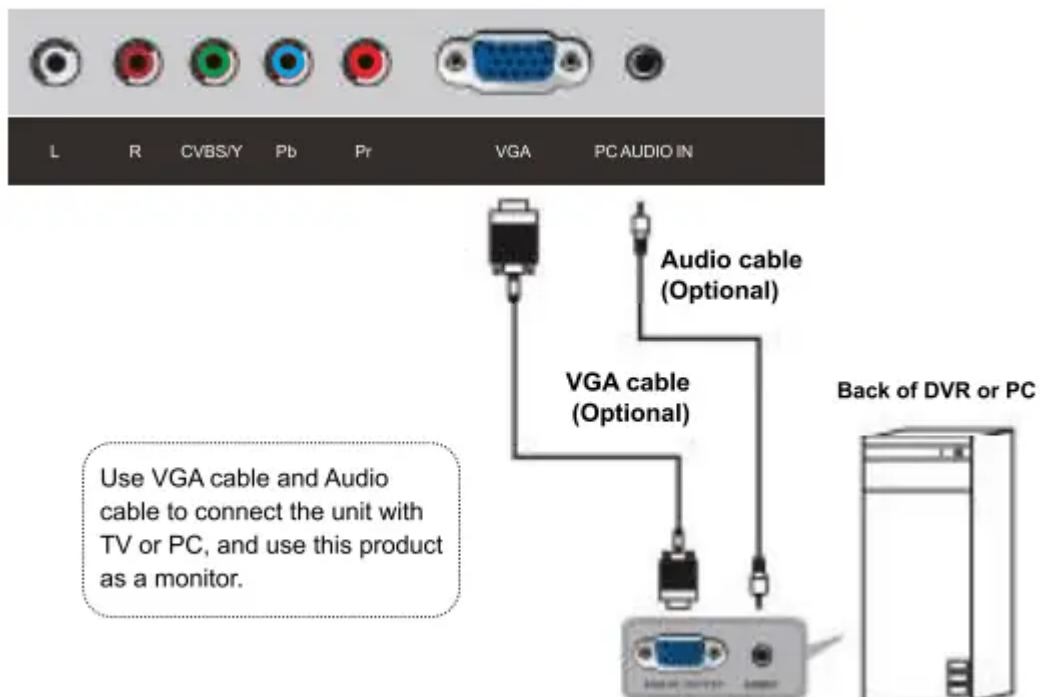 

OPTICAL OUT CONNECTION

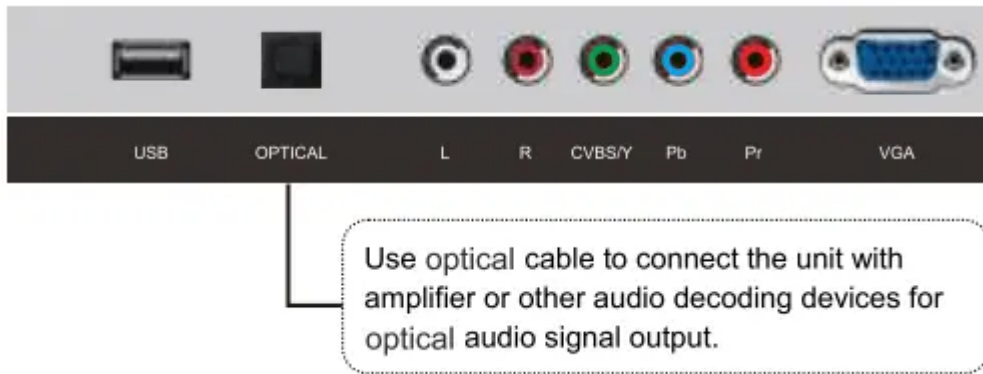 

EARPHONE CONNECTION



 
CONNECTING TO USB MEMORY DEVICE



USB AND CARD CONNECTION (DVD)

Insert a USB or SD/MMC/MS memory device for multimedia files playback.



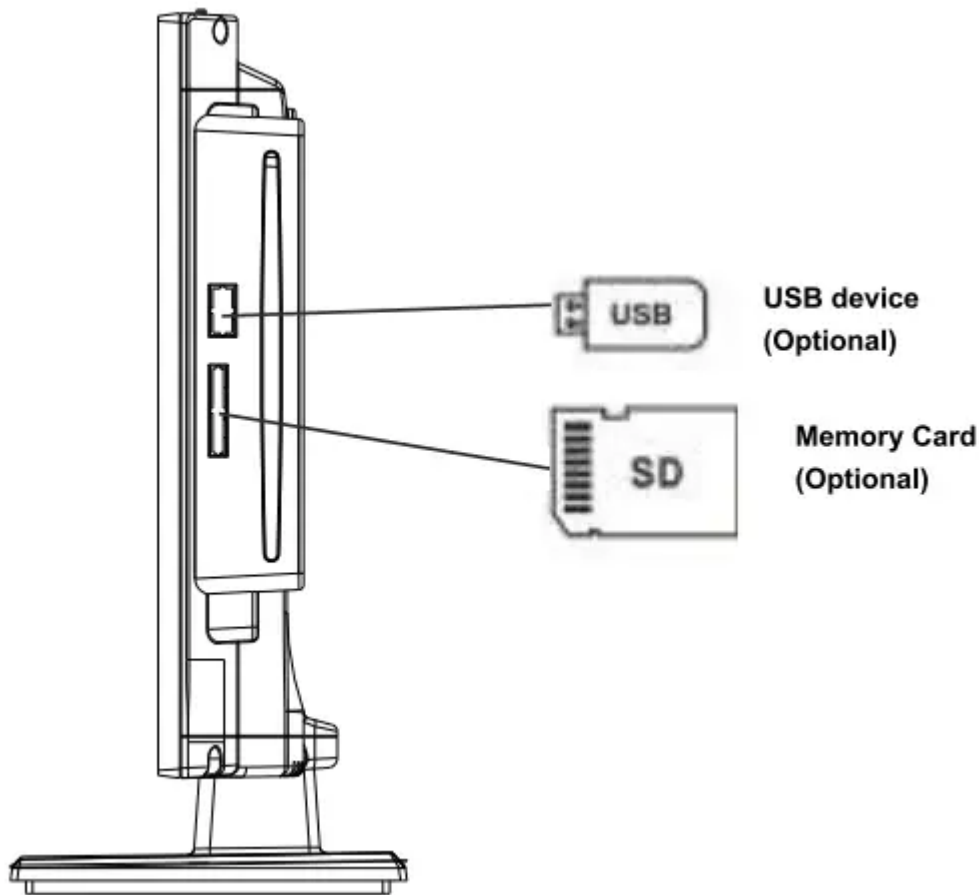


BASIC OPERATIONS

Press POWER button on the unit or remote control to power ON the unit (indicator will glow blue); press it again to power OFF (standby mode) the unit (indicator will glow red).

Compatible with DVD

Press SOURCE button on the unit or remote control to set the unit in DVD mode.

Basic play

- a) Make sure the disc compartment has no disc. Place a disc into the disc compartment. Hold the disc without touching either of its surfaces, position it with the readable (mirror) side facing towards you, then the disc will automatically enter into the disc compartment; or you can press  button on the unit or remote control to enter the disc into the disc compartment.
- b) Once the disc is in the disc compartment, the player starts to read the disc immediately.
- c) When a menu screen appears on the unit, press the navigation buttons or press the number buttons to select preferred track number, then press ENTER button to confirm.
- d) To stop playing and return to the menu screen, press TITLE or DVD/MENU button.

Stopping play

Press ■ (STOP) button to stop playing.

NOTE: When player is stopped, the player records the point where STOP was pressed (RESUME function). Press ■ (PLAY) button again, playback will resume from this point. When the tray is taken out or ■ (STOP) is pressed again, the RESUME function will be cleared.

 
Skipping ahead or backward

Skipping ahead

During playback, press ⏩ button to skip the next chapter (DVD) or a track (Video CD/CD).

Skipping backward


During playing, press ⏪ button to skip the previous chapter (DVD) or track (Video CD/CD).

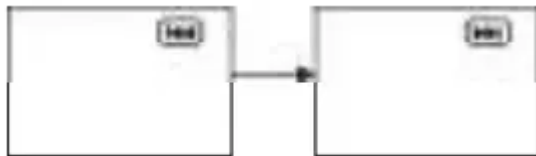

Fast forward/Fast backward

During playback, press ⏩ button or ⏪ button to fast forward/backward.

 Press ■ (PLAY) button to resume normal play.

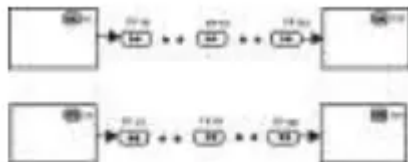


Pause/play

During playback, press ■ button to pause playing, press it again to resume normal playback.



 Compatible with Video CD with playback control

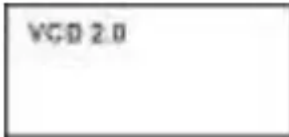

- a) When playing VCD 2.0 with PBC, the player will show the VCD version.



b) Press DVD/MENU button on remote control repeatedly to set PBC ON or OFF.

c) Press numeric buttons to select corresponding track.

Example: Track 9, press 0 and 9, several seconds later, it will automatically switch to track 9. Track 15, press and 5, several seconds later, it will automatically switch to track 15.

d) Press  button or  button, the player will play the next or previous track.

Compatible with USB playback



a) Insert USB memory device containing the files in music, picture or movie format to be played.

b) Press SOUND (MEDIA) button to switch the unit in USB reader mode.

c) After several seconds, all the folders in the USB will display on monitor screen.

d) Select a folder you want to play using the navigation buttons and press the ENTER button to confirm.

e) The files in this folder are displayed and select the desired file by navigation buttons, then press the ENTER button to start to play.

f) In file selecting page, press  or  button to turn the current menu page to the next or previous menu page.

g) Press CC (REPEAT) button to select repeat playing mode.

- SHUFFLE: all the files will be randomly sorted and played by the order.

- RANDOM: randomly select any file to play.

- SINGLE: play one file only.

- REPEAT ONE: repeat one file.

- REPEAT FOLDER: all the files in the folder will be played repeatedly.

- FOLDER: all the files in the folder will be played.

NOTE: The USB slot of this unit can not connect to removable tray.

GOTO

 
Press GREEN (GOTO) button continuously to select the item you want to set and enter a time number, chapter number, track number, etc. Accordingly, the disc will be played from the selected point.

Change subtitle language (compatible with DVD only)

It is possible to change the subtitle language to a different language from the one selected at the initial settings. (This operation works only with discs on which multiple subtitle languages are recorded)

1. Press SUBTITLE button during play, the screen will display the current language.
2. Press SUBTITLE button again to change language or turn off.

NOTE: When no subtitles are recorded, press this button will not work.

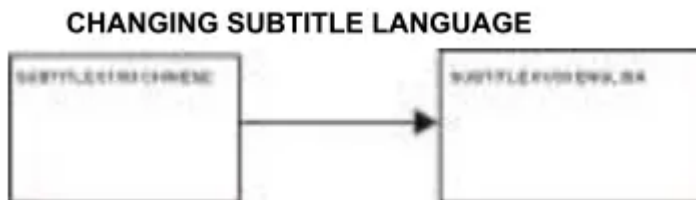

Changing audio soundtrack language (compatible with DVD/VCD/CD disc)

It is possible to change the audio soundtrack language to a different language from the one selected at the initial settings (This operation works only with discs on which multiple audio soundtrack languages are recorded).

- Press MTS/AUDIO (LANGUAGE) button while playing DVD disc the screen will display the number of current soundtrack languages, pressing the button again will change the language.
- Pressing MTS/AUDIO (LANGUAGE) button while playing VCD/CD disc will change audio output mode: LEFT MONO, RIGHT MONO, MIX-MONO and STEREO soundtrack.

NOTE: When no soundtrack languages are recorded, pressing this button will not work.

When the power is turned on or the disc is removed, the language heard is the one selected at the initial settings.

SETUP WIZARD

Connect RF cable to your TV Aerial socket.

TV LOCATION

Set the TV Mode to Home or Retail display use.

Press ◀ / ▶ button to select (Home / Store).

Press ▼ / ▲ button to select and press ENTER/ ▶ button to enter the sub-menu.



Note: This page is only enable when you have Energy Star request.

SELECT LANGUAGE

Press ◀ / ▶ button to select the language to be used for menus and message. Press ▼ / ▲ button to select and press **ENTER/▶** button to enter the sub-menu.



SELECT TIME

Press ▼ / ▲ button to select the time zone, daylight saving time and time format you want.

Press ◀ / ▶ button on the remote control to adjust.

Press ▼ / ▲ button on the remote control to select and press **ENTER/▶** button to enter the sub-menu.



AUTO SCAN

Press ◀ / ▶ button to select the antenna type.

Press ▼ / ▲ button to select and press ENTER/▶ button to start auto scan.





SELECT INPUT SOURCE

If you have your TV connected with a Cable box or Satellite Receiver box or any other Video Input source you don't need to run a channel scan, please follow the procedure below;

 
1. Power on TV and press "SOURCE" button on TV Remote.
2. Press UP/DOWN navigation button on TV Remote to select AV or HDMI input source and press OK button to enter it.



Press **SOURCE** button to display the input source list.
 Press **▼ / ▲** button to select the input source you want.
 Press **OK** button to enter the input source.
 Press **EXIT** button to quit.



MAIN MENU

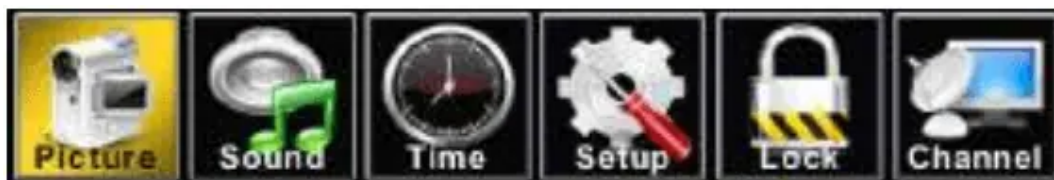

Press **MENU** to display the main menu or return to the previous menu or close the main menu.

Press **◀ / ▶** to highlight the desired menu icon, and press **OK** to select.

If no buttons are pressed, the menu will close automatically after about 10 seconds.

MAIN MENU OPERATION

PICTURE MENU

Press **MENU** to enter the main menu, Press **◀ / ▶** button to select. Press **OK / ▼** to enter.

Press **MENU** again to exit or back to parent menu.



Press ▼/▲ button to select among Picture Mode /Brightness/ Contrast / Color / Tint / Sharpness / Color Temperature/Advanced Settings.

Press OK / ▼ to enter.

Press ◀ / ▶ button to adjust.

Press MENU again or back to parent menu.

PICTURE MODE

Adjust picture mode to change picture appearance.

Press ◀/▶ button to select(Standard / Dynamic / Soft / User/Power Saving).

BRIGHTNESS

Adjust the visual perception output of the entire picture, it will effect the iuminousness of the picture.

CONTRAST

Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

COLOR

Adjust the saturation of the color based on your own like.

TINT

Adjust the hue(Red, Green, Blue) of the picture.

SHARPNESS

Adjust the peaking in the detail of the picture.

COLOR TEMPERATURE

Increase or reduce warm color of the picture personally(red),and the cool color personally(blue) according to your like.

Normal Increase the sex-linked colors for the white.

Warm Increase the red color for the white.

Cool Increase the blue tone for the white.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

