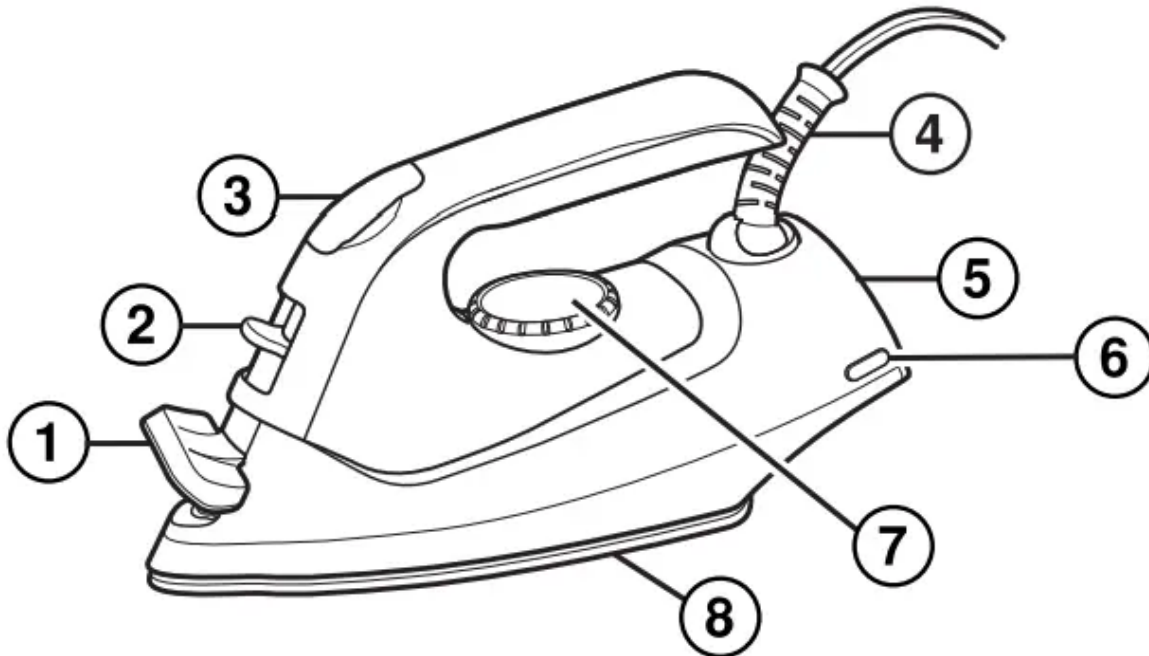 


Parts and features



1. Steamer Nozzle
2. Steam Lever Control (Steamer, Dry Iron, or Steam Iron)
3. Water Fill Door
4. Swivel Power Cord
5. Heel Rest
6. Power On Light
7. Temperature Control Dial
8. Nonstick Soleplate

How to dry iron

1. Move steam lever to DRY IRON.
2. Turn Temperature Control Dial to desired temperature. Allow 2 minutes to reach temperature.

How to steam iron or garment steam

1. Start with iron unplugged. Open Water Fill Door; fill water tank to MAX fill line. Plug into outlet.
2. To avoid water dripping from soleplate during STEAM IRON, turn Temperature Control Dial to desired temperature. Allow 2 minutes to reach temperature.
3. Select Steamer or Steam Iron by moving the Steam Lever up or down.
4. To garment steam: Always use MAX temperature for steaming. Move Steamer Lever to STEAMER. Hang garment in a location that is not susceptible to damage from heat or moisture. Do not hang in front of wallpaper, a window, or mirror. Slowly move steamer vertically from top to bottom of garment.
 - **CAUTION** Burn Hazard: Steam is hot. Always point nozzle away from yourself and others. Never steam clothes while they are being worn.
5. Move steam lever back to DRY IRON and wait until steam stops.
6. Turn Temperature Control Dial to OFF (O). Unplug.
7. Empty water from iron. See "Care and cleaning."

WATER: Use ordinary tap water. If using extremely hard water, alternate between tap water and distilled water.

Care and cleaning

1. Turn Temperature Control Dial to OFF (O). Unplug and cool.
2. Empty water from iron; over sink, turn iron upside down with water fill door open until all water runs out.
3. Store iron in upright position to avoid damaging soleplate.

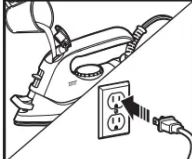
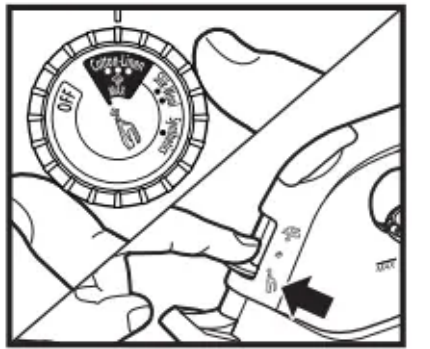
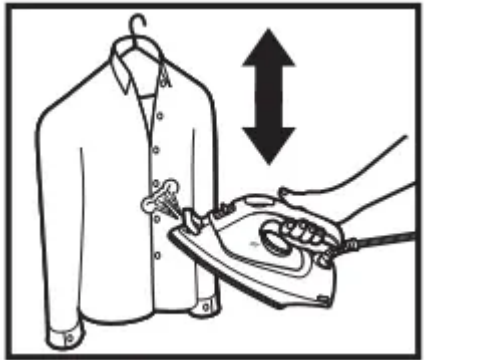

NOTICE: To avoid damage to soleplate:

- Never iron over zippers, pins, metal rivets, or snaps.
- Wipe with a soapy cloth to clean occasional buildup on soleplate. Never use abrasive cleansers or metal scouring pads, as they may scratch the surface.
- Always rotate cord to left or right for iron to store on heel rest.


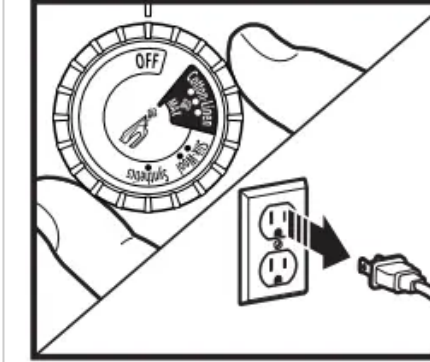
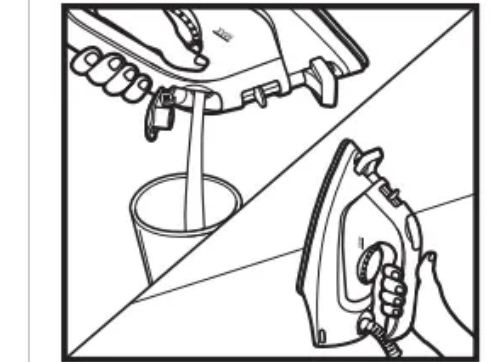

How to Steam a Garment

CAUTION

Burn Hazard. Steam is hot. Always point nozzle away from yourself and others. Never steam clothes while they are being worn

		
<p>Fill water tank to MAX. Plug into outlet.</p>	<p>Turn temperature dial to MAX. Allow 2 minutes to preheat. Move lever to STEAMER </p>	<p>Hang garment in a location not susceptible to heat or moisture. Slowly move iron vertically up and down.</p>

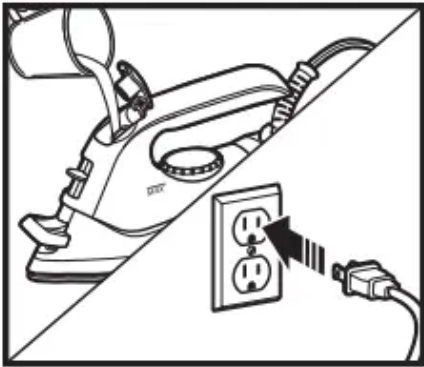
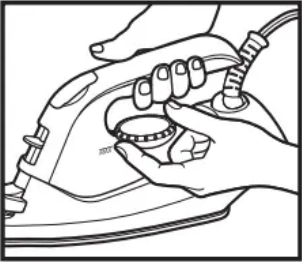
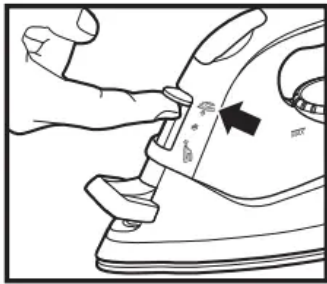

How to Store Iron

		
<p>Move lever to DRY IRON </p>	<p>Turn temperature dial to OFF (). Unplug and cool.</p>	<p>Empty water from iron. Store iron in upright position.</p>

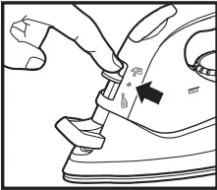
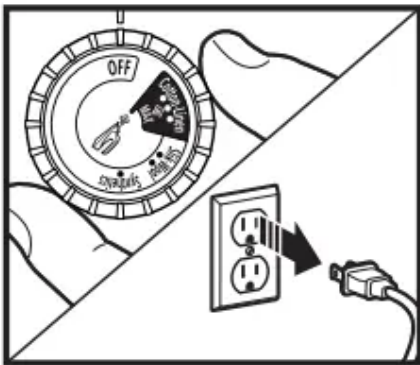
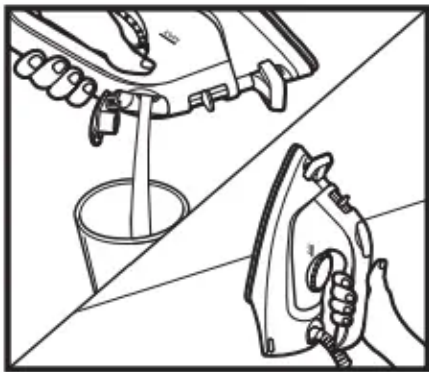

How to Steam Iron

CAUTION

Burn Hazard. Attempting to steam iron on a lower temperature setting or failing to allow the iron to preheat for 2 minutes can result in hot water dripping from the soleplate.

		
<p>Fill water tank to MAX. Plug into outlet.</p>	<p>Allow 2 minutes to preheat.</p>	<p>Move lever to STEAM IRON. </p>

How to Store Iron

		
<p>Move lever to DRY IRON </p>	<p>Turn temperature dial to OFF (). Unplug and cool.</p>	<p>Empty water from iron. Store iron in upright position.</p>

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.

3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Only use an iron for its intended use.
5. To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
6. Always turn the iron to OFF (O) before plugging or unplugging the iron from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
7. Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away.
8. Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron is not in use.
9. Do not operate the iron with a damaged cord or in the event the iron has been dropped or damaged or there are visible signs of damage or it is leaking. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.
10. The iron must be used and rested on a stable surface.
11. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
12. Do not leave the iron unattended while the iron is connected or on an ironing board.
13. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down—there might be hot water in the reservoir.
14. To avoid a circuit overload, do not operate an iron on the same circuit with another high-wattage appliance.
15. If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.

Limited warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free of defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this



warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.