


Owner's Guide Remote Control



Button Functions



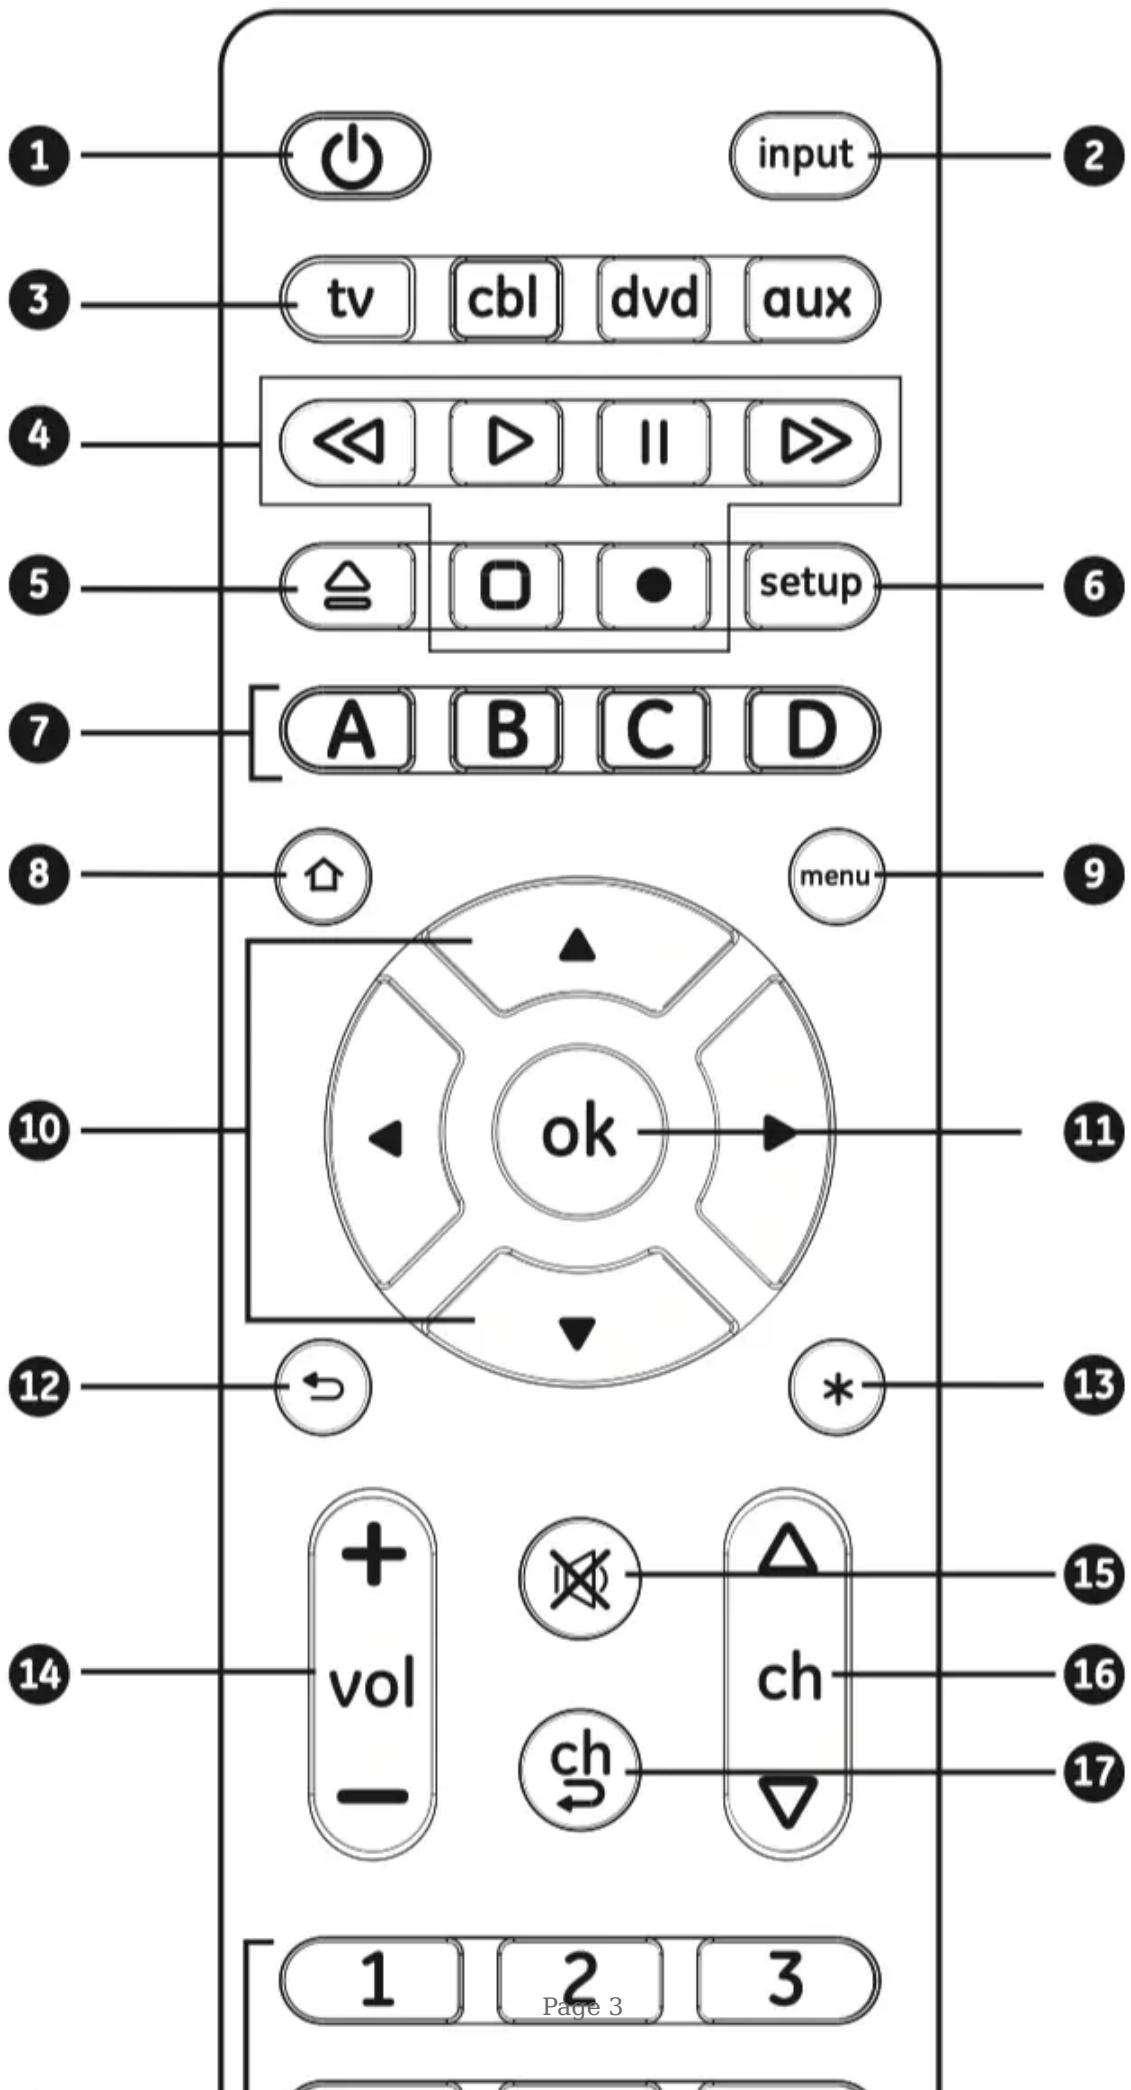

1. **Power** - turns devices ON/OFF
2. **Input** - Selects video inputs
3. **TV, cbl, dvd, aux** - Selects the device to control
4. **Record, play, stop, rewind, fast forward, pause**
5. **DVD/Blu-ray™ open/close** - open/close a player, or List features on cable/satellite receivers
6. **Setup** - Used to program the remote
7. **ABCD** - Access additional features for DVRs, cable and satellite receivers
8. **Home/Guide** - Easily access features on today's streaming devices, or Guide on cable/satellite receivers
9. **Menu** - Displays the on-screen menu
10. **Up/Down/Left/Right menu navigation**
11. **Ok** - Selects menu items for the controlled device
12. **Exit** - Exit on-screen menus
13. **Info** - Displays on-screen show/content information
14. **Volume Up/Down**
15. **Mute** - Mutes sound
16. **Channel Up/Down**
17. **Previous Channel** - Returns to the previously selected channel
18. **Numbers** - Enter numbers for direct channel selection
19. **Dot (•)** - Used to select digital channels, e.g., 4.1
20. **Enter** - Some devices require enter to be pressed after channel selection

Programming Your Remote

Your remote is designed to control multiple audio/video devices. To use, you will need to program the remote for your devices. There are two different methods you can use to program the remote, **Direct Code Entry** or **Auto Code Search**.

- The **Direct Code Entry** method is the recommended method as it is the simplest and quickest method in most cases.
- The **Auto Code Search** method searches through all the codes in the remote to find a code for your device.

Note: This remote comes preprogrammed for Samsung TVs. Press TV for Samsung TVs.

Direct Code Entry (Recommended)

1. Locate the Code List included with your remote. Find the section for the type of device you wish to control, (for example TV, cbl, dvd, aux). Locate the brand of your device and circle all the remote codes for the brand.
2. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.




Note: The red light will either be a small light at the top of the remote or the power ON/OFF button.

3. Press in and release the device button on the remote for the type of device you wish to control, (for example **TV, aux cbl, dvd, aux**). The red light will blink once and remain on.



Note: Any of the device buttons on the remote can be programmed to control any of your devices. For setup example, you can use the CBL device button on the remote to control a Satellite Receiver, Digital Converter Box, Streaming Media Player or any device category in the Code List.

4. Use the number buttons on the remote to enter the first 4-digit remote code you circled in the **Code List** in Step 1. The red light will turn off after entering the fourth digit.

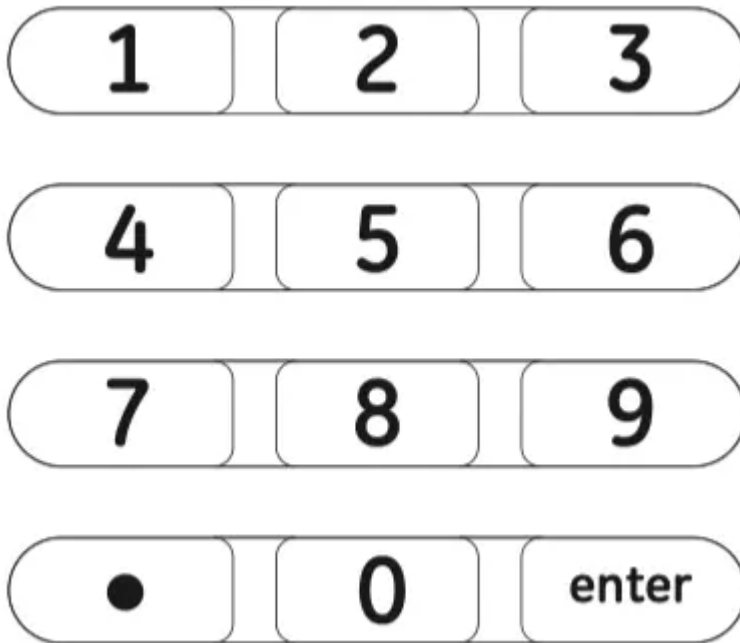

5. Point the remote at the device. Test the buttons on the remote to see if the device responds as you would expect. If the buttons do not operate the device, return to Step 2 above and use the next code that you circled for that device.



6. Repeat Steps 1 – 5 for each device you wish to control.

Programming Notes

- Some codes may operate only a few functions of your device. There may be another code in the **Code List** that controls more functions. Test other codes in the **Code List** for more functionality.
- If you do not find a remote code that works your device or there are no codes in the **Code List** for your device, use the **Auto Code Search** method in the next section to program your remote.
- For combination devices such as a TV/DVD combo or TV/ VCR combo, you may have to enter a code for each device. (See **Controlling Combo Devices.**)
- Write down the remote codes used to program the remote for future reference.

Auto Code Search

The Auto Code Search is a process where you can search through all the codes stored in the remote to find a code for your device. It is recommended that you read through all the steps below to familiarize yourself with the **Auto Code Search** before starting the process.

1. Manually turn on the device you wish to control.

Note: The Auto Code Search process cannot be used for devices without power ON/OFF capability. Use the Direct Code Entry method in these cases.

2. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.

Note: The red light will either be a small light at the input top input of the remote or the power ON/OFF button.




3. Press and release the device button on cbl dvd aux the remote for the type of device you wish to control, (for example **TV, cbl, dvd, aux**). The red light will blink once setup and remain on.



4. With the remote pointed at the device, press and release the **POWER** button on remote. The remote will send 10 different codes to the device. The red light will blink once for each code and dvd aux remain on after sending the 10 codes.



5. Manually turn the device back on.
6. With the remote pointed at the device, press and release the **VOL +** button. The remote will re-send the first code of the 10 codes from Step 4. The red light will blink once and remain on.

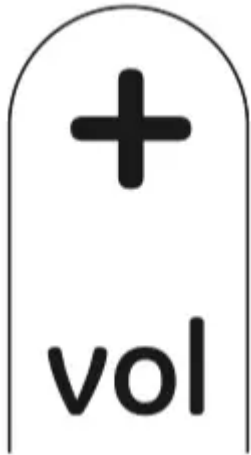

Did the device turn off?

- If **YES**, you have found a code for the device. **Press and release the same device button you pressed in Step 3.** This will store the code in the remote. Go to Step 7.
- If **NO**, continue to press and release the exit **VOL +** button until the device turns off to test the other 9 codes from Step 4. Be sure to wait approximately **3 seconds** after each **VOL +** button press to allow the device time to respond to the code. When the device turns off, you have found a code for your device. **Press and release the same device button pressed in Step 3.** This will store the code in the remote. Go to Step 7.

Notes:

- The VOL – button can be used to go backwards through each batch of 10 codes.
- The red indicator light will flash 2 times after testing the first or last code in each batch of 10.

7. Use the remote to turn the device back on.

Test the buttons on the remote to see if the device responds as you would expect. input If the buttons do not operate the device, cbl return dvd to aux Step 2 and repeat this process to search for a better code to operate the device.



8. Repeat this process for each device you wish to control.

Using Your Remote

Master Volume Feature

The Master Volume Feature allows you to select a setup single input device that the volume buttons always control. For example, the remote can be in TV mode while the volume buttons control the volume on your audio receiver or sound bar instead of your TV.

Enabling the Master Volume Feature

1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the input **SETUP** button. The red light will remain on.




2. Press and release the device button (**TV, aux, etc.**) on the remote for the device you wish to control the volume.



3. Press and release the **MUTE** button.



4. Press and release the **VOL+** button. The red light will blink twice and turn off.

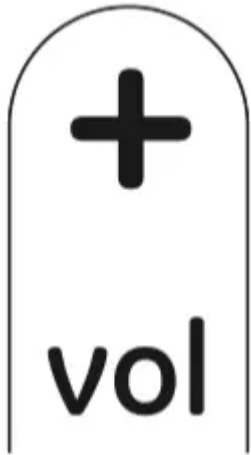

Disabling the Master Volume Feature

1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.



2. Press and release the device button exit (**TV, aux, etc.**) programmed to control the Master Volume Feature.



3. Press and release the **MUTE** button.



4. Press and release the **VOL -** button. The red light will blink twice and turn off.



Code Identification

1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.



2. Press and release the desired device button (TV, cable, dvd, aux) you would like the code for.




3. Press and release the **ENTER** button.



4. Press and release the **#1** button.

Count the number of times the remote light flashes. This is the number corresponding to the first digit of the code. Repeat the process by pressing the **#2**, **#3** and **#4** buttons for the remaining digits.

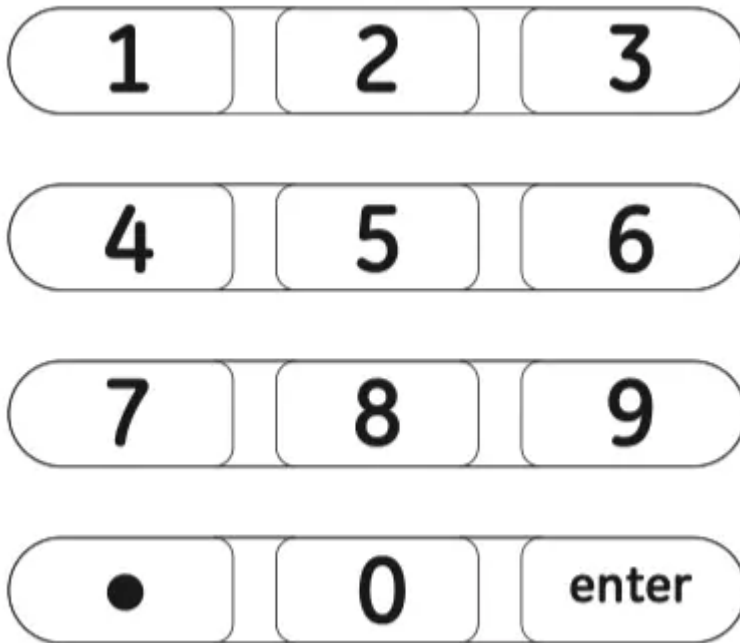

5. Press and release the **ENTER** button to exit this mode.



Reset to Factory Settings

1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.



2. Press and release the **MUTE** button.



3. Press and release the number #0 button. The red indicator light will flash twice.



Troubleshooting

Remote does not operate your device.

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device, and make sure that there are no obstructions between the remote and device.
- Make sure you select the appropriate device on the remote you wish to control; TV for TV and CBL for cable box.
- Try programming the remote with a different code. See **Direct Code Entry** section.
- Remote may not be compatible with your device.

Remote does not operate some features of your device.

- Sometimes a particular code might operate a few features but not all. Try programming the remote with a different code from the **Code list**. See **Direct Code Entry** section.
- Remote may not be able to operate all features of your device or button names may be different than that of your original remotes.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.