


Overview

Basic operation

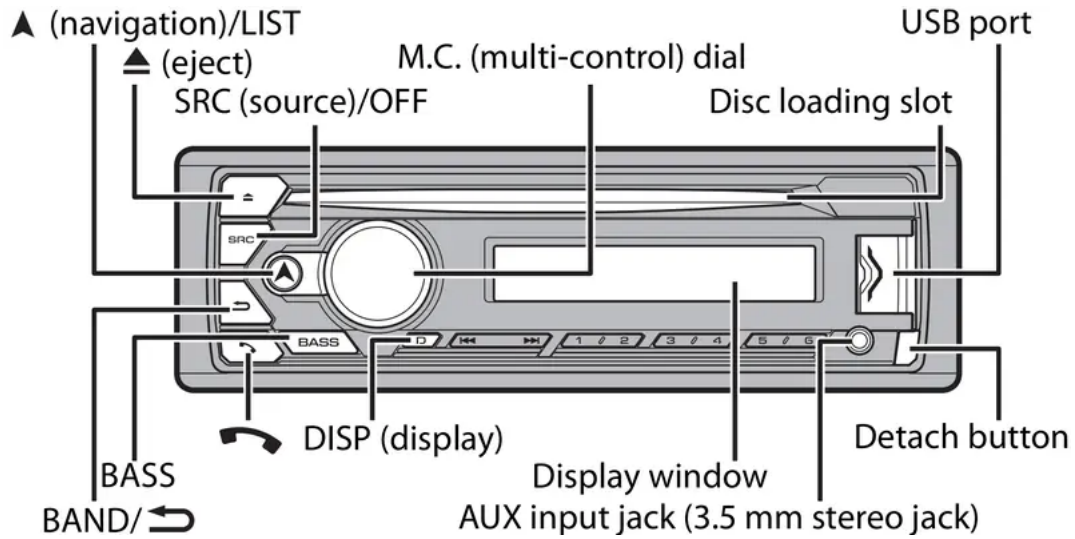





Optional remote control

The remote control CD-R510 is sold separately.

Frequently used operations





The available buttons vary depending on the unit.



Purpose	Operation
Turn on the power*	Press SRC/OFF to turn on the power. Press and hold SRC/OFF to turn off the power.
Adjust the volume	Turn the M.C. dial.
Select a source	Press SRC/OFF repeatedly.
Change the display information	Press DISP repeatedly.
Return to the previous display/list	Press BAND/  .
Return to the normal display from the menu	Press and hold BAND/  .
Change the display brightness	Press and hold BAND/  .
Answering a call	Press any button.
Ending a call	Press  .
Boost the bass level	Press BASS . <ul style="list-style-type: none"> You can select the bass level ([HI] or [LOW]) in [D.BASS]


* When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off.

Display indication

Indication	Description
	Appears when a lower tier of the menu or folder exists.
BASS	Appears when the BASS function is activated.
	Appears when random/shuffle play is set (except when BT AUDIO is selected as the source).
	Appears when repeat play is set (except when BT AUDIO is selected as the source).
	Appears when a Bluetooth connection is made.
APP	Appears when a Pioneer Smart Sync connection is made

Detaching the front panel

Detach the front panel to prevent theft. Remove any cables and devices attached to the front panel and turn off the unit before detaching it.

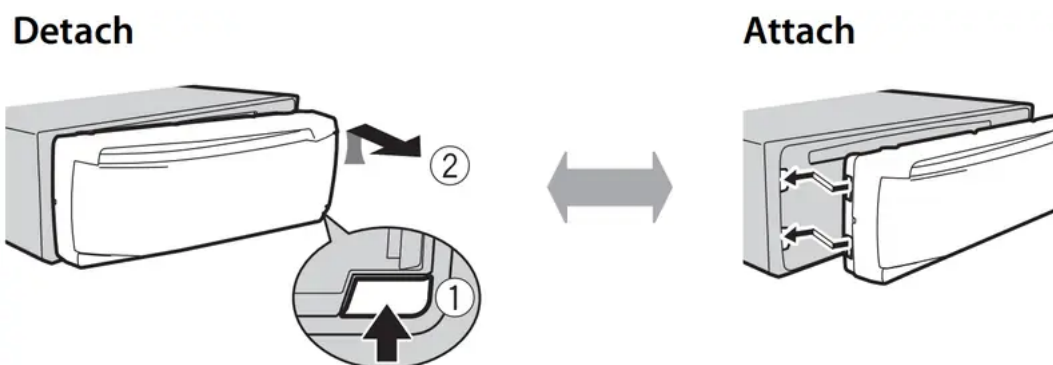


Important

- Avoid subjecting the front panel to excessive shock.
 - Keep the front panel out of direct sunlight and high temperatures.
 - Always store the detached front panel in a protective case or bag.
-

Resetting the microprocessor

The microprocessor must be reset in the following situations:

- Before using this unit for the first time after installation
- If the unit fails to operate properly
- When strange or incorrect messages appear on the display
 1. Remove the front panel.
 2. Press the RESET button with a pointed instrument longer than 8 mm.

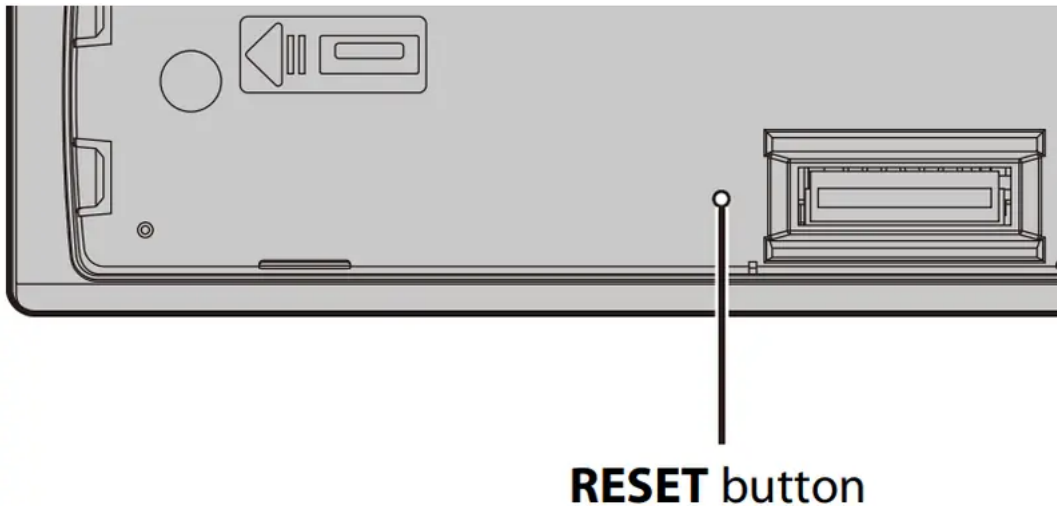

Setup menu

When you turn the ignition switch to ON after installation, the setup menu appears in the display.

1. Turn the **M.C. dial** to select the options, then press to confirm.

To proceed to the next menu option, you need to confirm your selection.

Menu Item	Description
LANGUAGE [ENG](English), [ESP](Spanish), [FRA] (Canadian)	Select the language to display the text information from a compressed audio file.
CLOCK SET	Set the clock. 1. Turn the M.C. dial to adjust the hour, then press to confirm. The indicator moves to the minute setting automatically. 2. Turn the M.C. dial to adjust the minute, then press to confirm.

2. **[QUIT :YES]** appears.

To return to the first item of the setup menu, turn the **M.C.** dial to select **[QUIT :NO]**, then press to confirm.

3. Press the M.C. dial to confirm the settings.

NOTE These settings can be made at any time from the SYSTEM settings (page 26).

Canceling the demonstration display (DEMO OFF)

1. Press the M.C. dial to display the main menu.
2. Turn the M.C. dial to select **[SYSTEM]**, then press to confirm.
3. Turn the M.C. dial to select **[DEMO OFF]**, then press to confirm.
4. Turn the M.C. dial to select **[YES]**, then press to confirm.

INITIAL settings

1. Press and hold SRC/OFF until the unit turns off.
2. Press the M.C. dial to display the main menu.
3. Turn the M.C. dial to select **[INITIAL]**, then press to confirm.
4. Turn the M.C. dial to select an option, then press to confirm.



NOTE The options vary depending on the unit.

Menu Item	Description
REAR-SP [FUL] [SW]	Select when there is a full-range speaker connected to the rear speaker output leads.
SP-P/O MODE [REAR/SUB.W] [SUB.W/SUB.W] [REAR/REAR]	Select when there is a full-range speaker connected to the rear speaker output leads and there is a subwoofer connected to the RCA output. Select when there is a passive subwoofer connected directly to the rear speaker output leads and there is a subwoofer connected to the RCA output. Select when there are full-range speakers connected to the rear speaker output leads and RCA output. If there is a full-range speaker connected to the rear speaker output leads, and the RCA output is not used, you may select either [REAR/SUB.W] or [REAR/REAR].
SYSTEM UPDATE [SYSTEM INFO], [S/W UPDATE]	Select [SYSTEM INFO] to confirm the latest system information on the unit. Select [S/W UPDATE] to update the unit to the latest software and initialize the unit settings. For details on the latest software and updating, visit our website.
SYSTEM RESET [YES], [NO]	Select [YES] to initialize the unit settings. The unit will be restarted automatically.


 
Radio

The tuner frequencies on this unit are allocated for use in North America. Use in other areas may result in poor reception.

Receiving preset stations


1. Press SRC/OFF to select [RADIO].
2. Press BAND/  to select the band from [FM1], [FM2], [FM3] or [AM].
3. Press a number button (1/ to 6/ ).



Best stations memory (BSM)

The six strongest stations are stored on the number buttons (1/  to 6/ ).

1. After selecting the band, press the M.C. dial to display the main menu.
2. Turn the M.C. dial to select [FUNCTION], then press to confirm.
3. Turn the M.C. dial to select [BSM], then press to confirm.



To seek a station manually

1. After selecting the band, press  to select a station.

Press and hold  then release to seek an available station. Scanning stops when the unit receives a station. To cancel seek tuning, press .

NOTE [SEEK] needs to be set to [MAN] in the FUNCTION settings.

To store stations manually

1. While receiving the station you want to store, press and hold one of the number buttons (1/ to 6/) until it stops flashing.

CD/USB/iPhone®/AUX

(iPhone source is not available when [USB MTP] is set to [ON] in the SYSTEM settings)

Playing back

Disconnect headphones from the device before connecting it to the unit.

CD

1. Insert a disc into the disc loading slot with the label side up.

To eject a disc, stop playback first then press .

USB devices (including Android™)/iPhone

1. Open the USB port cover.
2. Plug in the USB device/iPhone using an appropriate cable.

NOTE To automatically switch to USB source when a USB device/iPhone is connected to the unit, set [USB AUTO] to [ON] in the SYSTEM settings.

CAUTION Use a USB cable (sold separately) to connect the USB device as any device connected directly to the unit will protrude out from the unit, which could be dangerous.

Before removing the device, stop playback.

AOA connections

A device running Android OS 4.1 or later installed and also supports AOA (Android Open Accessory) 2.0 can be connected to the unit via AOA, using the cable supplied with the device.

NOTE If you use an AOA connection, [APP CONTROL] needs to be set to [WIRED] and [USB MTP] needs to be set to [OFF] (page 27) in the SYSTEM settings.

MTP connection

A device installed with Android OS 4.0 or most of later versions can be connected to the unit via MTP, using the cable supplied with the device. However, depending on the connected device, OS version or the numbers of the files in the device, audio files/songs may not be able to be played

back via MTP. Note that MTP connection is not compatible with WAV file formats and FLAC file formats, and cannot be used with the MIXTRAX function.

NOTE If you use an MTP connection, [USB MTP] needs to be set to [ON] in the SYSTEM settings

AUX

1. Insert the stereo mini plug into the AUX input jack.
2. Press SRC/OFF to select [AUX IN] as the source.

NOTE If [AUX] is set to [OFF] in the SYSTEM settings, [AUX IN] cannot be selected as a source

Operations

You can make adjustments in the FUNCTION settings (page 22) (except for AUX IN/CD/ USB source).

Note that the following operations do not work for an AUX device. To operate an AUX device, use the device itself.

Purpose	Operation
Select a folder*1	Press 1/▲ or 2/▼ .
Select a track/song (chapter)	Press ◀◀ or ▶▶ .
Fast forward or reverse*2	Press and hold ◀◀ or ▶▶ .
Search for a file from a list (CD/USB only)	<ol style="list-style-type: none"> 1 Press and hold ▲ to display the list. 2 Turn the M.C. dial to select the desired file (folder) name or category, then press to confirm. 3 Turn the M.C. dial to select the desired file, then press to confirm. Playback starts.
View a list of the files in the selected folder/category*1	Press the M.C. dial when a folder/category is selected.
Play a song in the selected folder/category*1	Press and hold the M.C. dial when a folder/category is selected.
Repeat play	Press 6/↺ .
Random/shuffle play	Press 5/↻ .
Pause/resume playback	Press 4/PAUSE .
Return to root folder (CD/USB only)*1	Press and hold 1/▲ .
Switch between compressed audio and CD-DA (CD only)	Press BAND/↶ .

*1 Compressed audio files only

*2 When you use the fast forward or reverse function while playing a VBR file, the playback time may be not correct.

About MIXTRAX (USB/iPhone only)

The MIXTRAX function creates a non-stop mix of your music library, accompanied by illumination effects. For details on MIXTRAX settings, see page 29.

NOTES

- iPhone needs to be connected with Pioneer Smart Sync via USB for using this function.
 - Depending on the file/song, sound effects may not be available.
 - Turn the MIXTRAX function off if the illumination effects it produces interfere with driving.
1. Press 3/MIX to turn MIXTRAX on/off.

Bluetooth


Bluetooth connection

Important If ten or more Bluetooth devices (e.g. a phone and separate audio player) are connected, they may not work properly.


TIP The next connection to the unit is performed automatically if the Bluetooth device has been connected previously in the following steps.

1. Turn on the Bluetooth function of the device.

If you make a Bluetooth connection from the device, proceed to step 4.

2. Press  to display the [ADD DEVICE] setting.

The unit starts to search for available devices, then displays them in the device list.

- To cancel searching, press the **M.C.** dial.
- If the desired device is not in the list, select [RE-SEARCH].
- If there is no device available, [NOT FOUND] appears in the display.
- If there is already a connected device, the phone menu appears by pressing .

3. Turn the M.C. dial to select a device from the device list, then press to confirm. Press and hold the **M.C.** dial to switch the displayed device information between the Bluetooth device address and device name.

If you make a Bluetooth connection from the unit, proceed to step 5.

4. Select the unit name shown in the device display.
 5. Make sure the same 6-digit number appears on this unit and the device, then select [YES] if the 6-digit numbers displayed on this unit and the device are the same.
-

Bluetooth telephone


First, make a Bluetooth connection with the Bluetooth telephone (page 11). Up to two Bluetooth telephones can be connected simultaneously.

Important

- Leaving the unit on standby to connect to your phone via Bluetooth while the engine is not running can drain the vehicle's battery.
- Be sure to park your vehicle in a safe place and apply the parking brake before operation.

To make a phone call

1. Press  to display the phone menu.

When two phones are connected, a phone name appears first then a phone menu will display. To switch to another phone, press  again.





2. Turn the M.C. dial to select [RECENTS] or [PHONE BOOK], then press to confirm. If you select [PHONE BOOK], proceed to step 4.
3. Turn the M.C. dial to select [MISSED], [DIALED] or [RECEIVED], then press to confirm.
4. Turn the M.C. dial to select a name or phone number, then press to confirm. The phone call starts.

To answer an incoming call

1. Press any button when a call is received.

TIP When two phones are connected to the unit via Bluetooth and there is an incoming call while one phone is being used for a call, a message will appear in the display. To answer that incoming call, you need to end the existing call.

Basic operations

Purpose	Operation
End a call	Press  .
Reject an incoming call	Press and hold  when a call is received.
Switch between the current caller and a caller on hold	Press the M.C. dial.
Cancel a caller on hold	Press and hold  .
Adjust the volume of the caller's voice (When private mode is on, this function is not available.)	Turn the M.C. dial during the call.
Turn the private mode on or off	Press BAND/  during the call.

To preset phone numbers


1. Select a phone number from a phone book or call history.

2. Press and hold one of the number buttons (1/∧ to 6/↩). The contact is stored in the selected preset number.

To make a call using a preset number, press one of the number buttons (1/∧ to 6/↩), then press the **M.C.** dial, while the phone menu is displayed.


Voice recognition

This function is only available when an iPhone/Android device equipped with voice recognition is connected to the unit via Bluetooth.

1. Press and hold  and then talk into the microphone to input voice commands.

To exit the voice recognition mode, press **BAND/↩**.

NOTE For details on the voice recognition features, refer to the manual supplied with your device.

TIP When a Pioneer Smart Sync connection is made, you can also use the voice recognition function from Pioneer Smart Sync installed on your iPhone/Android device by pressing and holding . For details on the voice recognition features, see the application's help section.

Phone menu


1. Press  to display the phone menu.

Menu Item	Description
RECENTS	Display the missed call history.
[MISSED]	
[DIALED]	Display the dialed call history.
[RECEIVED]	Display the received call history.
PHONE BOOK	Display the contacts in your phone.
PRESET 1-6	Recall the preset phone numbers. You can also recall the preset phone numbers by pressing one of the number buttons (1/∧ to 6/↩).
A.ANSR*	Select [ON] to answer an incoming call automatically.
[ON], [OFF]	
PB INVT	Invert the order of names in the phone book (name view).
DEVICELIST	Display the list of paired Bluetooth devices. "*" appears on the device name when the Bluetooth connection is established. When no device is selected in the device list, this function is not available.
DEL DEVICE	Delete the device information.
[DELETE YES], [DELETE NO]	
ADD DEVICE	Register a new device.
DEV. INFO	Switch the device information on the display between the device name and Bluetooth device address.

* If two phones are connected, this function does not work on incoming calls that are received while one of the phones is being used for a call.

Bluetooth audio

Important


 




- Depending on the Bluetooth audio player connected to this unit, the available operations will be limited to the following two levels:
 - A2DP (Advanced Audio Distribution Profile) can only play back songs on your audio player.
 - AVRCP (Audio/Video Remote Control Profile) can perform functions such as playback, pause, select song, etc.
 - The sound of the Bluetooth audio player will be muted when the phone is in use.
 - When the Bluetooth audio player is in use, you cannot connect to a Bluetooth telephone automatically.
 - Depending on the type of Bluetooth audio player you have connected to this unit, operation and information displayed may vary based on availability and functionality.
1. Make a Bluetooth connection with the Bluetooth audio player.
 2. Press SRC/OFF to select [BT AUDIO] as the source.
 3. Press BAND/  to start playback.

NOTE You must reconnect the Bluetooth connection when the source is switched or the unit is turned off.

TIP When more than two and up to five devices are registered to the unit via Bluetooth, you can switch the Bluetooth device by playing back songs on the device. By doing so, playing back a song from the Bluetooth device of each passenger is easily available. However, depending on the usage conditions, multiple connections may not be available and the audio files/songs may not be able to be played back properly.

Basic operations

 You can make various adjustments in the FUNCTION settings.

Purpose	Operation
Fast forward or reverse	Press and hold  or  .
Select a track	Press  or  .
Repeat play*	Press 6/  .
Random play*	Press 5/  .

Purpose	Operation
Pause/resume playback	Press 4/PAUSE .
Search for a file from a list	<ol style="list-style-type: none"> 1 Press and hold ▲ to display a list. 2 Turn the M.C. dial to select the desired folder name, then press to confirm. 3 Turn the M.C. dial to select the desired file, then press to confirm. Playback starts.

* Depending on the connected device, these operations may not be available.

Pandora®

(Not available when [USB MTP] is set to [ON] in the SYSTEM settings (page 27).) Pandora music is a music service not affiliated with Pioneer. More information is available at <http://www.pandora.com>.

The Pandora mobile application is available for iPhone and Android phones. Please visit www.pandora.com/everywhere/mobile for the latest compatibility information.

Listening to Pandora

Update the firmware of the Pandora application to the latest version before use.

1. Connect this unit with the mobile device.
 - iPhone via USB
 - iPhone/Android device via Bluetooth
2. Press SRC/OFF to select [PANDORA].
3. Press and hold 1/▲ to display [APP CONTROL].
4. Turn the M.C. dial to select one of the below.
 - Select [WIRED] for the USB connection.
 - Select [BLUETOOTH] for the Bluetooth connection.
5. Press SRC/OFF to select [PANDORA].
6. Launch the Pandora application on the mobile device and start playback.

NOTE

When you connect a mobile device other than an iPhone/Android device, it may not operate correctly depending on your mobile device.

Basic operations

You can make various adjustments in the FUNCTION settings.

Purpose	Operation
Skip a track	Press ▶▶ .
Switch between Shuffle and the station	Press and hold ▲ , then turn the M.C. dial to select the Shuffle or the desired station.
Change the sort order	Press and hold ▲ , then select one of the following. [ABC] : Sort the items in the list alphabetically. [DATE] : Sort the items in the list in order of the dates on which the items were created.
Play	When Shuffle or the station is selected, press the M.C. dial.
Delete a station	1 When the station is selected, press and hold the M.C. dial. [DELETE YES] appears. 2 Press the M.C. dial. To cancel, press BAND/↶ in step 1.
Pause/resume playback	Press 4/PAUSE .
Thumbs Up	Press 1/▲ .
Thumbs Down	Press 2/▼ .
Create a new station based on the track currently being played	Press and hold 5/🔍 .
Create a new station based on the artist currently being played	Press and hold 6/↶ .
Store the track information currently being played in your Pandora account.	1 Press and hold 3/MIX . [BOOKMARK] appears. 2 Press the M.C. dial.

NOTE Some functions of Pandora may not be operated from the unit.

Spotify®

(Not available when [USB MTP] is set to [ON] in the SYSTEM settings.)

The Spotify application is available for compatible smartphones, please visit <https://support.spotify.com/> for the latest compatibility information.


To enjoy Spotify as you drive, first download the Spotify app to your iPhone or Android device. You can download it on the iTunes® App Store® or Google Play™. Choose a free account or a paid Premium account, either in the app or at spotify.com. A Premium account gives you more features, like offline listening.

Important

- This product incorporates Spotify software which is subject to 3rd party licenses found here: www.spotify.com/connect/third-party-licenses.
- For information on the countries and regions where Spotify can be used, take a look at <https://spotify.com/us/select-your-country/>.

Listening to Spotify

Update the firmware of the Spotify application to the latest version before use.

1. Connect this unit with the mobile device.
2. Press SRC/OFF to select [SPOTIFY].
3. Press and hold 1/ to display [APP CONTROL].
4. Turn the M.C. dial to select one of the below.
 - Select [WIRED] for the USB connection.
 - Select [BLUETOOTH] for the Bluetooth connection.
5. Press SRC/OFF to select [SPOTIFY].
6. Launch the Spotify application on the mobile device and start playback.

 





 

NOTE When you connect a mobile device other than an iPhone/Android device, it may not operate correctly depending on your mobile device.

Basic operations

You can make various adjustments in the FUNCTION settings.

NOTE

The available operations may vary according to the type of contents (track/album/artist/playlist/radio) you want to play.

Purpose	Operation
Skip a track	Press  or  .
Search for a track from a list	<ol style="list-style-type: none"> 1 Press and hold  to display the list. 2 Turn the M.C. dial to select the desired category, then press to confirm. 3 Turn the M.C. dial to select the desired file, then press to confirm. Playback starts.
Pause/resume playback	Press 4/PAUSE .
Thumbs Up (Only for radio)	Press 1/ .
Thumbs Down (Only for radio)	Press 2/ .
Random play (Only for track/album/artist/playlist)	Press 5/ .
Repeat play (Only for track/album/artist/playlist)	Press 6/ .
Start a radio channel based on the song currently being played.	<ol style="list-style-type: none"> 1 Press and hold 5/ . 2 Press the M.C. dial. <ul style="list-style-type: none"> • This function may not be available depending on the selected song.

NOTE Some functions of Spotify may not be operated from the unit.

Using Pioneer Smart Sync/APP

Pioneer Smart Sync is the application that intelligently brings your maps, messages, and music together in the vehicle.

You can operate the unit from Pioneer Smart Sync installed on an iPhone/Android device. In some cases, you can control aspects of the application, such as source selection, pause, etc., by using the unit.

For details on what operations are available on the application, see the application's help section.

NOTE

The APP source is not available when a Pioneer Smart Sync connection is not made or [USB MTP] is set to [ON] in the SYSTEM settings.

WARNING Do not attempt to operate the application while driving. Make sure to pull off the road and park your vehicle in a safe location before attempting to use the controls on the application.

For iPhone users

This function is compatible with iOS 10.3 or later. You can download Pioneer Smart Sync on iTunes App Store.

For Android device users

For Bluetooth connections, this function is compatible with devices that have Android OS 5.0 or later installed.

For USB connections, this function is compatible with a phone that runs Android 5.0 or later up to 7.1.2 and also supports AOA (Android Open Accessory) 2.0. However, the compatibility depends on the smartphone.

You can download Pioneer Smart Sync on Google Play.

NOTE

Some Android devices connected via AOA 2.0 may not work properly or emit sounds due to their own software design, regardless of the OS version.

Making a connection with Pioneer Smart Sync

1. Press the M.C. dial to display the main menu.
2. Turn the M.C. dial to select [SYSTEM], then press to confirm.
3. Turn the M.C. dial to select [APP CONTROL], then press to confirm.
4. Turn the M.C. dial to select one of the below.
 - Select [WIRED] for the USB connection.
 - Select [BLUETOOTH] for the Bluetooth connection.

5. Turn the M.C. dial to select [AUTO APP CONN], then press to confirm. 6 Turn the M.C. dial to select [ON], then press to confirm.

7. Connect this unit with the mobile device.

NOTE

Regardless of whether the [AUTO APP CONN] setting is set to [ON] or [OFF], you can also perform the following to start Pioneer Smart Sync.

- For devices other than the USB-connected Android device, press **SRC/OFF** to select any source and press and hold the **M.C.** dial.
- For iPhone, launch Pioneer Smart Sync on the mobile device.

NOTES

- When you connect a mobile device other than an iPhone/Android device, it may not operate correctly depending on your mobile device.
- If Pioneer Smart Sync has not been installed on your iPhone/Android device yet, a message that prompts you to install the application will appear on your iPhone/Android device (except for the Android device connected via Bluetooth). Select [OFF] in [AUTO APP CONN] to clear the message

Listening to music on your device

1. Press SRC/OFF to select [APP].
-

Audio Adjustments

Adjusting the cut-off frequency value and the slope value

You can adjust the cut-off frequency value and the slope value of each speaker. The following speakers can be adjusted.

[FRONT], [REAR], [SUBWOOFER]

NOTE [SUBWOOFER] can only be selected when [ON] is selected in [SUBWOOFER].

1. Press the M.C. dial to display the main menu.
2. Turn the M.C. dial to select [AUDIO], then press to confirm.
3. Turn the M.C. dial to select [CROSSOVER], then press to confirm.
4. Turn the M.C. dial to select the speaker unit (filter) to be adjusted, then press to confirm.
5. Turn the M.C. dial to select [HPF] or [LPF] according to the speaker unit (filter), then press to confirm.

6. Turn the M.C. dial to select an appropriate cut-off frequency for the speaker unit (filter) selected in step 4, then press to confirm.

[25HZ] to [250HZ]

7. Turn the M.C. dial to select an appropriate slope for the speaker unit (filter) selected in step 4.

- [-6] to [-24] (if you choose [FRONT] or [REAR])
 - [-6] to [-36] (if you choose [SUBWOOFER])
-

Troubleshooting

The display automatically returns to the normal display.

- No operations have been made for about 30 seconds.
 - Perform an operation.
-

The repeat play range changes unexpectedly.

- Depending on the repeat play range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing. – Select the repeat play range again.
-

A subfolder is not played back.

- Subfolders cannot be played when [FLD] (folder repeat) is selected.
 - Select another repeat play range.
-

The sound is intermittent.

- You are using a device, such as a cellular phone, that may cause audible interference.
 - Move electrical devices that may be causing the interference away from the unit.
-

The sound from the Bluetooth audio source is not played back.

- There is a call in progress on a Bluetooth-connected cellular phone. – The sound will be played back when the call is terminated.
 - A Bluetooth-connected cellular phone is currently being operated.
 - Stop using the cellular phone.
 - The connection between the unit and the cellular phone is not established correctly after a call made by a Bluetooth-connected cellular phone.
 - Make a Bluetooth connection between the unit and the cellular phone again.
-

Error messages

Common

AMP ERROR

- This unit fails to operate or the speaker connection is incorrect.
- The protective circuit is activated.
- Check the speaker connection.
 - Turn the ignition switch OFF and back to ON again. If the message remains, contact your dealer or an authorized Pioneer Service Station for assistance.

NO XXXX (NO TITLE, for example)

- There is no embedded text information.
 - Switch the display or play another track/file.
-

CD player

ERROR-07, 11, 12, 17, 30

- The disc is dirty.
 - Clean the disc.
- The disc is scratched.
 - Replace the disc.

ERROR-07, 10, 11, 12, 15, 17, 30, A0

- There is an electrical or mechanical error.
 - Turn the ignition switch OFF and back to ON, then back to the CD player.

ERROR-15

- The inserted disc is blank.
 - Replace the disc.

ERROR-23

- Unsupported CD format.
 - Replace the disc.

FORMAT READ

- Sometimes there is a delay between the start of playback and when you start to hear any sound.

- Wait until the message disappears and you hear sound.

NO AUDIO

→ The inserted disc does not contain any playable files.

- Replace the disc.

SKIPPED

→ The inserted disc contains DRM protected files.

- The protected files are skipped.

PROTECT

→ All the files on the inserted disc are embedded with DRM.

- Replace the disc.
-

USB device/iPhone

FORMAT READ

→ Sometimes there is a delay between the start of playback and when you start to hear any sound.

- Wait until the message disappears and you hear sound.

NO AUDIO

→ There are no songs.

- Transfer the audio files to the USB device and connect.

→ The connected USB device has security enabled.

- Follow the USB device instructions to disable the security.

SKIPPED

→ The connected USB device contains DRM protected files.

- The protected files are skipped.

PROTECT

→ All the files on the connected USB device are embedded with DRM.

- Replace the USB device.

N/A USB

→ The connected USB device is not supported by this unit.

- Disconnect your device and replace it with a compatible USB device.

HUB ERROR

→ The USB device connected via a USB hub is not supported by this unit.

– Connect the USB device directly to this unit using a USB cable.

CHECK USB

→ The USB connector or USB cable has short-circuited.

– Check that the USB connector or USB cable is not caught in something or damaged.

→ The connected USB device consumes more than maximum allowable current. – Disconnect the USB device and do not use it. Turn the ignition switch OFF and back to ACC or ON. Connect only compliant USB devices.

ERROR-19

→ Communication failed.

– Perform one of the following operations, then return to the USB source.

- Disconnect the USB device.
- Change to a different source.

→ iPhone failure.

– Disconnect the cable from the iPhone. Once the iPhone's main menu is displayed, reconnect the iPhone and reset it.

ERROR-23

→ USB device was not formatted properly.

– Format the USB device with FAT12, FAT16 or FAT32.

ERROR-16

→ The iPhone firmware version is old.

– Update the iPhone version.

→ iPhone failure.

– Disconnect the cable from the iPhone. Once the iPhone's main menu is displayed, reconnect the iPhone and reset it.

STOP

→ There are no songs in the current list.


– Select a list that contains songs.

NO BT DEVICE GO TO BT MENU TO REGISTER

→ No Bluetooth device found.

– Connect the unit and iPhone via Bluetooth.

CONN. FAILED PRESS BAND KEY TO RETRY

- Bluetooth connection with iPhone failed.
- Press **BAND/**  to make a connection again.

DISCONNECTED PRESS BAND KEY TO RETRY

- Bluetooth connection lost.
 - Press **BAND/** to make a connection again.
-

Bluetooth device

ERROR-10

- The power failed for the Bluetooth module of the unit.
 - Turn the ignition switch OFF and back to ACC or ON.
-

Pandora

ERROR-19

- Communication failed.
- Disconnect the cable from the device. Once the device's main menu is displayed, reconnect the device and reset it.

NOT FOUND

- The Pandora application has not started running yet.
- Start up the Pandora application.

RATING ERROR

- The thumb rating operation was disabled.
- Run the same command for another track.

CAN'T SKIP

- The skip operation was disabled.
- Run the same command for another track.

THUMB ERROR

- Unable to save thumb rating.
- Try again later.

BOOKMARK ERR

- Unable to save BookMark.
- Try again later.

INOPERABLE

→ The operation to save BookMark or add station was disabled.

- Run the same command for another track.

UNABLE TO ADD

→ Unable to add station.

- Try again later.

SKIP LIMIT

→ Due to music licensing restrictions, Pandora limits the total number of skips per hour.

- Wait until Pandora allows you to skip again.

UPDATE APP

→ This version of the Pandora application is not supported.

- Connect a device that has a compatible version of the Pandora application installed.

LOG IN ERROR

→ Your Pandora account is not logged in. – Disconnect the cable from the device, and log in to your Pandora account. Then reconnect the device.

ERROR

→ Device error message displayed in the Pandora application.

- Check the connected device.

→ Pandora system is undergoing maintenance.

- Try again later.

NO STATIONS

→ No station found.

- Create a station in the Pandora application on your connected device.

NO BT DEVICE GO TO BT MENU TO REGISTER

→ No Bluetooth device found.

- Connect the unit and the device via Bluetooth.

CONN. FAILED PRESS BAND KEY TO RETRY

→ Bluetooth connection failed.

- Press **BAND/** to make a connection again.

CHECK APP PRESS BAND KEY TO RETRY → Connection to the Pandora application failed.

- Press **BAND/** to make a connection again.

DISCONNECTED PRESS BAND KEY TO RETRY

- Bluetooth connection lost.
- Press **BAND/** to make a connection again.

STATION LIMIT

- A new station cannot be added.
- Delete an old station to open a spot for a new one.

CAN NOT DELETE

- The station could not be deleted.
- Run the same command for another station.

BAD NETWORK

- The connected device is out of area. – Connect the device to a network.

UNAVAILAVLE

- The connected device is out of area.
- Connect the device to a network.
- The operation was disabled.
- Run the same command for another station.

CHECK APP

- An unknown error (including communication error) has occurred.
- Follow the instructions that appear on the screen.

APP

CONNECT APP

- Pioneer Smart Sync connection is not made.
- Make a connection with Pioneer Smart Sync (page 18).

Spotify

NOT FOUND

- The Spotify application has not started running yet.
- Start up the Spotify application.

NO BT DEVICE GO TO BT MENU TO REGISTER

- No Bluetooth device found.
- Connect the unit and the device via Bluetooth (page 11).

CONN. FAILED PRESS BAND KEY TO RETRY

→ Bluetooth connection failed.

– Press **BAND/** to make a connection again.

CHECK APP PRESS BAND KEY TO RETRY

→ Connection to the Spotify application failed.

– Press **BAND/** to make a connection again.

DISCONNECTED PRESS BAND KEY TO RETRY

→ Bluetooth connection lost.

– Press **BAND/** to make a connection again.

CHECK APP

→ An unknown error (including communication error) has occurred. – Follow the instructions that appear on the screen.

Handling guidelines

Discs and player



- Use only discs that feature either of the following two logos.
- Use 12-cm discs.
- Use only conventional, fully circular discs.
- The following types of discs cannot be used with this unit:
 - DualDiscs
 - 8-cm discs: Attempts to use such discs with an adaptor may cause the unit to malfunction.
 - Oddly shaped discs
 - Discs other than CDs

- Damaged discs, including discs that are cracked, chipped or warped
 - CD-R/RW discs that have not been finalized
 - Do not write on or apply chemicals to the surface of the discs.
 - To clean a CD, wipe the disc with a soft cloth outward from the center.
 - Condensation may temporarily impair the player's performance. Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth.
 - When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment.
 - Do not attach commercially available labels or other materials to the discs. – The discs may warp making the disc unplayable.
 - The labels may come off during playback and prevent ejection of the discs, which may result in damage to the equipment.
-

USB storage device

- Connections via USB hubs are not supported.
 - Firmly secure the USB storage device before driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal.
 - Depending on the USB storage device, the following problems may occur.
 - Operations may vary.
 - The storage device may not be recognized.
 - Files may not be played back properly.
 - The device may cause audible interference when you are listening to the radio.
-

iPhone

- Do not leave the iPhone in places with high temperatures.
 - Firmly secure the iPhone when driving. Do not let the iPhone fall onto the floor, where it may become jammed under the brake or accelerator pedal.
 - Incompatible text saved on the iPhone will not be displayed by the unit.
-

Compressed audio compatibility

- Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name.

- The unit may not work properly depending on the application used to encode WMA files.
- There may be a slight delay at the start of the playback of audio files embedded with image data, or audio files stored on a USB device with numerous folder hierarchies.

CAUTION

- Pioneer cannot guarantee compatibility with all USB mass storage devices, and assumes no responsibility for any loss of data on media players, smartphones, or other devices while using this product.
 - Do not leave discs or a USB storage device in any place that is subject to high temperatures.
-

iPhone compatibility

This unit supports only the following iPhone models. Older versions may not be supported. Made for

- iPhone XR
- iPhone XS Max
- iPhone XS
- iPhone X
- iPhone 8
- iPhone 8 Plus
- iPhone 7
- iPhone 7 Plus
- iPhone SE
- iPhone 6s
- iPhone 6s Plus
- iPhone 6
- iPhone 6 Plus
- iPhone 5s

- Operations may vary depending on the generation and/or software version of the iPhone.
- Users of iPhone with the Lightning® Connector should use the Lightning to USB Cable (supplied with iPhone).
- Refer to the iPhone manuals for information about the file/format compatibility.
- Audiobook, Podcast: Compatible

CAUTION


Pioneer accepts no responsibility for data lost on the iPhone, even if that data is lost while this unit is used.

Sequence of audio files

The user cannot assign folder numbers and specify playback sequences with this unit. Sequence of audio file depends on the connected device.

Note that the hidden files in a USB device cannot be played back.

Example of a hierarchy

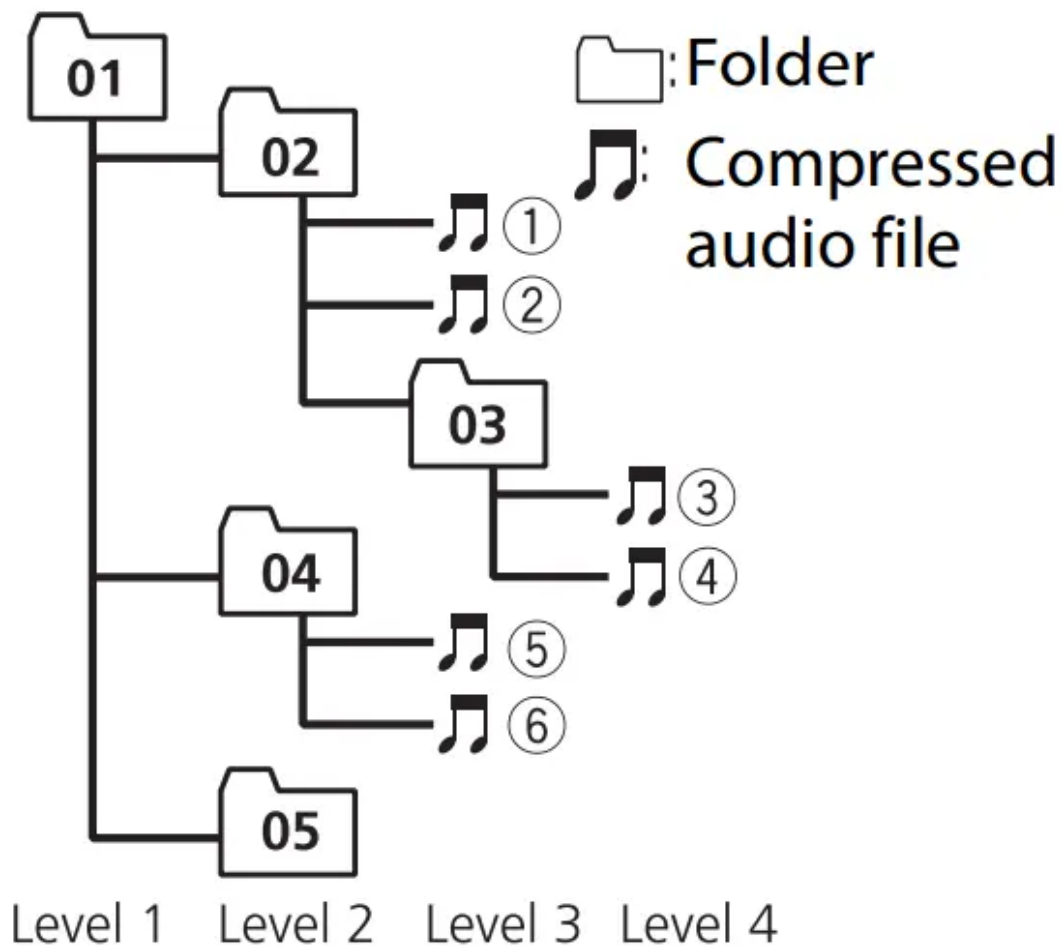

01 to 05: Folder number

① to ⑥: Playback sequence

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

