

CLEANING/ MAINTENANCE INSTRUCTION:

During Season Care:

- Before cleaning, be sure to turn off and unplug the heater.
- Carefully wipe the unit with a soft, damp cloth. Please be very cautious near the motor and heating elements.
- Do not immerse the heater in water.
- Never use gasoline, benzene or thinner. This will damage the surface of the heater
- After cleaning, be sure to completely dry the unit with a cloth or towel.

After Season Care:

- Store heater in a cool and dry location with power cord properly secured.
- Please store the unit in its original carton or suitable container.



OPERATING INSTRUCTIONS:

PRE-OPERATING INSTRUCTIONS:

- Carefully remove your heater from the box (please save the carton for off-season storage).
- Make sure the unit is in the OFF position before plugging the heater into the outlet.
- Place heater on a firm level surface.

OPERATING INSTRUCTIONS:

- Plug the power cord into a wall outlet (110-120V AC, 60Hz).
- Turn the Power Knob to desired heat setting (LOW or HI)
- Turn the selector control to the FAN setting to achieve fan-only operation without any heat output.
- For Thermostat Knob to adjust desired temperature. Turn the knob clockwise to the highest setting.
- When the unit is turned on the power indicator light will illuminate to tell you that the heater is functioning.

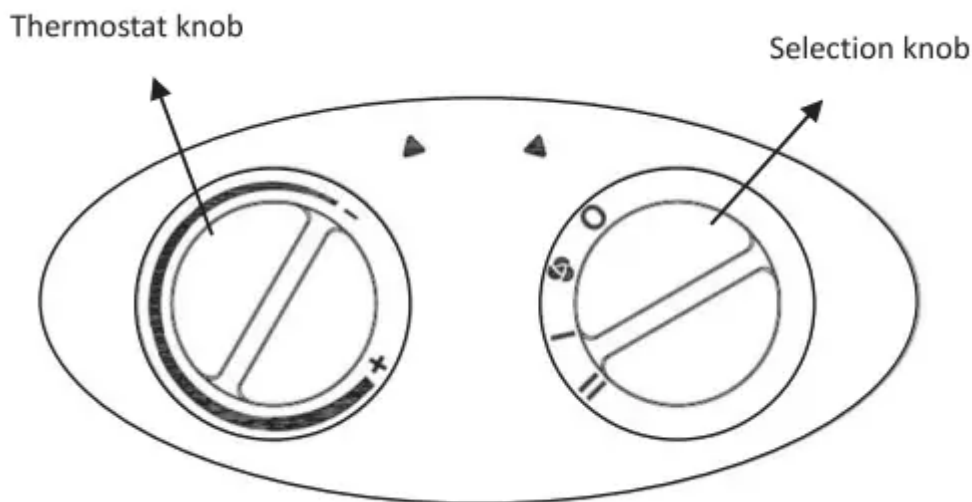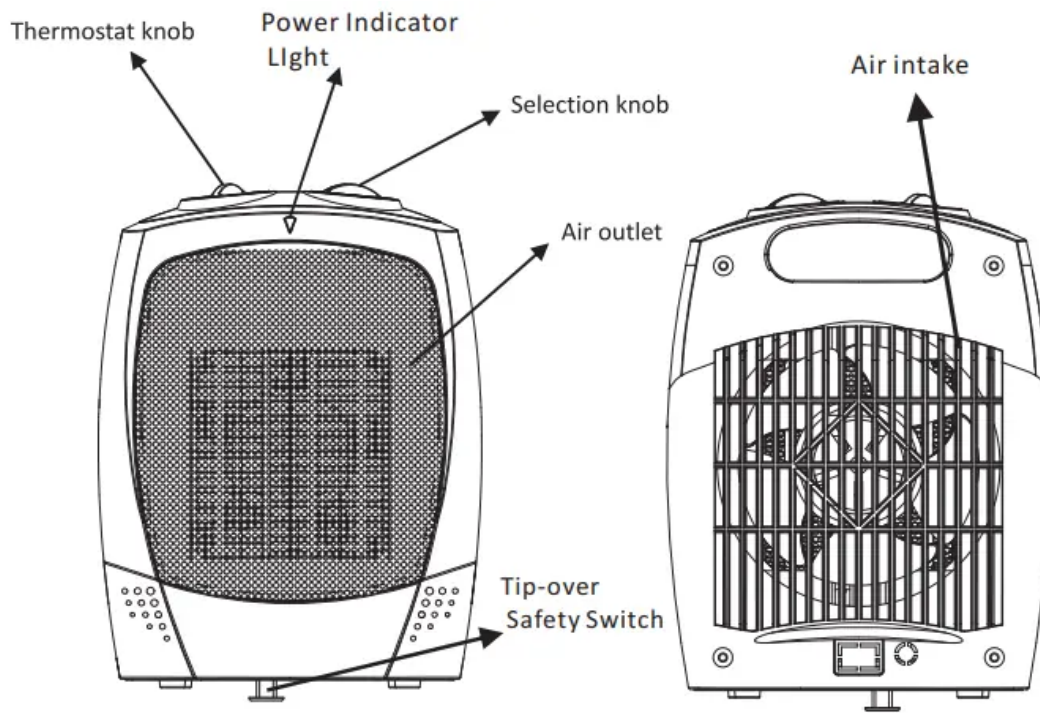

AUTOMATIC OVERHEAT SAFETY CONTROL DEVICE:

This heater is equipped with a patented, technologically-advanced safety internal heat limiting thermostat and overheat protection circuit. When a potential overheat temperature is reached, the system will automatically shut the heater off

TIP-OVER SWITCH:

This heater is equipped with a safety tip-over switch which automatically shuts off the heater element if the heater is not in the upright position. The heater will resume back to normal when the heater is returned to the upright position.

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been



given supervision or instruction.

Children should be supervised to ensure that they do not play with the appliance.

If the power supply is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Warning: In order to avoid overheating, do not cover the heater. The heater must not be located immediately below a socket outlet.

TROUBLESHOOTING

Problems	CAUSE	SOLUTION
Can't Turn on/ Stop working	Didn't turn on both knob	Turn on both knob for activating
	Place on a non-flat or soft surface such as carpet /blanket /bed	Place on the tough flat surface such as table/desk/ floor Make sure the tip-over button won't shut down heater
	The plug not be inserted into the socket	Make sure the product is in a power-on Status.
Auto off while lowing the temperature	Setting temperature lower than present temperature Therefore thermostat auto shut down	A. Take a higher temperature setting B. Use at a larger area
Heater smell like burnt	Poor cooling of the heating part	DO NOT place the heater at a corner or attaching to the wall Heating part might short out by no/poor cooling
	Something stuck in the heater	DO NOT put it near any feather material, feather that stuck in the heater might give out the brunt smell
Any product damage	Stop Use & Contact US	Contact Customer Service via email 【Support@trustechproducts.com】

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL APPLIANCES. BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE. ELECTRIC SHOCK AND INJURY TO PERSON. INCLUDING THE FOLLOWING:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use grip handle when provided.
- Keep combustible materials such as drapes, furniture, pillows, bedding, papers, clothes, or curtains at least three (3) feet (0.9m) away from the front of heater and keep them at least 1 foot (0.3m) away from the sides and rear of the heater.
- Extreme caution is necessary when heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not use heater in the situations including cord damaged. heater malfunctions. heater dropped or damaged in any manner. Return heater to manufacturer for examination. electrical' mechanical adjustment. or repair. (See Warranty for information).
- Do not use outdoors.
- This heater is not to be used in bathrooms. laundry areas or other similar indoor locations
- Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- To disconnect heater, turn power knob to OFF then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock or fire or damage the heater.
- To prevent possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed. where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline. paint or flammable liquids are used or stored.
- Use this heater only as directed in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or redoadable power tap (outlet/power strip).

- If the heater will not operate: See specific instructions in Safety Feature explained in this manual.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.