

Owner 's Manual for LG Electronics 39LY560H

Table of Contents

- IMPORTANT SAFETY INSTRUCTIONS
- LICENSES
- OPEN SOURCE SOFTWARE NOTICE
- ASSEMBLING AND PREPARING
- Unpacking
- Parts and Buttons
- Using the Joystick Button
- Lifting and Moving the TV
- Setting up the TV
- Attaching the Stand
- Mounting on a Table
- Mounting on a Wall
- MAKING CONNECTIONS
- Connecting to an Antenna or Cable
- Other Connections
- REMOTE CONTROL
- MAINTENANCE
- Cleaning your TV
- Screen, Frame, Cabinet, and Stand
- Power Cord
- TROUBLESHOOTING
- SPECIFICATIONS

MAKING CONNECTIONS

- Image shown may differ from your TV. You can connect various external devices to the TV. Supported external devices are: HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, gaming devices, and other external devices. For more information on external device's connection, refer to the manual provided with each device.

NOTE

- If you record a TV program on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information about recording, refer to the manual provided with the connected device.
- The external device connections shown may differ slightly from illustrations in this manual.
- Connect external devices to the TV regardless about the order of the TV port.
- If you connect a gaming device to the TV, use the cable supplied with the gaming device.
- Refer to the external equipment's manual for operating instructions.
- Using a DVI to HDMI cable may cause compatibility issues.

Connecting to an Antenna or Cable

Connect an antenna, cable, or cable box to watch TV. The illustrations may differ from the actual items and an RF cable is optional.

CAUTION

- Make sure not to bend the copper wire of the RF cable.
- Complete all connections between devices, and then connect the power cord to the power outlet to prevent damage to your TV.

NOTE

- Use a signal splitter to use 2 TVs or more.
- DTV Audio Supported Codec: MPEG, Dolby Digital

Other Connections

Connect your TV to external devices. For the best picture and audio quality, connect digital devices using an HDMI cable. Any separate cable is not provided.

REMOTE CONTROL

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly. To install batteries, open the battery cover, replace batteries (1.5 V AAA) matching the and ends to the label inside the compartment, and close the battery cover. Failure to match the correct polarities of the battery may cause the battery to burst or leak, resulting in fire, personal injury, or ambient pollution. To remove the batteries, perform the installation actions in reverse.

CAUTION

- Do not mix old and new batteries, as this may damage the remote control.

This remote uses infrared light. When in use, it should be pointed in the direction of the TV's remote sensor.

- (POWER) Turns the TV on or off.
- Q.MENU Not functional
- TV Selects the remote's operating mode: TV.
- DVD Selects the remote's operating mode: DVD.
- INPUT Changes the input source.
- MARK Not functional
- Number button Enters numbers. Also supports characters.
- Dash) Inserts a dash between numbers such as 2-1 and 2-2.
- FLASHBK Tunes to the last channel or input viewed.
- VOL Adjusts the volume level.
- CHAR/NUM Switches between Letter and Number input modes.
- CC Selects a closed caption.
- TIMER Turns the TV off in a set amount of time.
- DELETE Deletes letters and numbers.
- MUTE Mutes all sounds.
- CH Scrolls through the saved channels.
- PAGE Moves to the previous or next screen.
- PORTAL Displays and removes Pro:Centric Application.
- INFO Views the information list of the Pro:Centric Application.
- GUIDE Displays and removes the electronic program guide.
- Navigation buttons (up/down/left/right) Scrolls through menus or options.
- OK/ENTER Selects menus or options and confirms your input.
- BACK) Returns to the previous level.
- MENU/SETTINGS Accesses the main menu.
- EXIT I Clears all on-screen displays and returns to TV viewing.
- Color buttons (: Red, : Green, : Yellow, : Blue) These access special functions in some menus.
- Control buttons (, , , ,) Controls the MY MEDIA menus or the
- SIMPLINK compatible devices (USB, SIMPLINK).
- Accesses the AV devices connected to the TV; Opens the
- SIMPLINK menu.

- PIP , PIP CH +/- , SWAP , PIP INPUT Not functional
- SAP Analog mode: Selects MTS sound (Mono, Stereo or SAP)
- DTV mode: Changes the audio language.

MAINTENANCE

Cleaning your TV

Clean your TV regularly to keep it at peak performance and to extend the product's lifespan.

CAUTION

- Before cleaning, turn the power off and disconnect the power cord and all other cables.
- When the TV is left unattended or unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges.

Screen, Frame, Cabinet, and Stand

To remove dust or light dirt, wipe the surface with a dry, clean, and soft cloth. To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent. Then wipe immediately with a dry cloth.

CAUTION

- Do not push, rub, or hit the surface with your fingernail or a sharp object, as this may result in scratches on the screen and image distortions.
- Do not use any chemicals, such as waxes, benzene, alcohol, thinners, insecticides, air fresheners, or lubricants, as these may damage the screen's finish and cause discoloration.
- Do not spray liquid onto the surface. If water enters the TV, it may result in fire, electric shock, or malfunction.

Power Cord

Remove the accumulated dust or dirt on the power cord regularly

ASSEMBLING AND PREPARING

Lifting and Moving the TV

When moving or lifting the TV, read the following to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size

CAUTION

- Avoid touching or applying pressure to the screen at all times, as this may result in damage to the screen.

- Do not place the product on the floor with its front facing down without padding. Failure to do so may result in damage to the screen.
- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- When holding the TV, the screen should face away from you to avoid damage.
- Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area.
- Use at least two people to move a large TV.
- When transporting the TV by hand, hold the TV as shown in the following illustration.
- When transporting the TV, do not expose the TV to jolts or excessive vibration.
- When transporting the TV, keep the TV upright; never turn the TV on its side or tilt towards the left or right.

Setting up the TV

Attaching the Stand

CAUTION

- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

NOTE

- Make sure to hold the stand when attaching it to the TV to prevent the stand or TV from falling.
- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- The cover will protect the opening from accumulating dust and dirt. When installing the wall mounting bracket, use the cover.

Mounting on a Table

1 Lift and tilt the TV into its upright position on a table.

- Leave a 10 cm (4 inches) (minimum) space from the wall for proper ventilation.

2 Connect the power cord to a wall outlet.

CAUTION Do not place the TV near or on sources of heat, as this may result in fire or other damage.

Adjusting the angle of the TV to suit view

Swivel 20 degrees to the left or right and adjust the angle of the TV to suit your view.

CAUTION

When adjusting the angle of the TV, watch out for your fingers. - Personal injury may occur if hands or fingers are pinched. If the product is tilted too much, it may fall, causing damage or injury.

Attaching the TV to a desk (optional)

(Depending upon model) The TV should be attached to a desk so it cannot be pulled in a forward/backward direction, potentially causing injury or damaging the product.

Securing the TV to a wall (optional)

1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV. - If there are bolts inserted at the eye-bolts position, remove the bolts first.

2 Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV.

3 Connect the eye-bolts and wall brackets tightly with a sturdy rope or cable. Make sure to keep the rope parallel to the flat surface.

CAUTION • Make sure that children do not climb on or hang on the TV.

NOTE

- Use a platform or cabinet that is strong and large enough to support the TV securely.
- Brackets, bolts, and ropes, are optional. You can obtain additional accessories from your local dealer.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.